



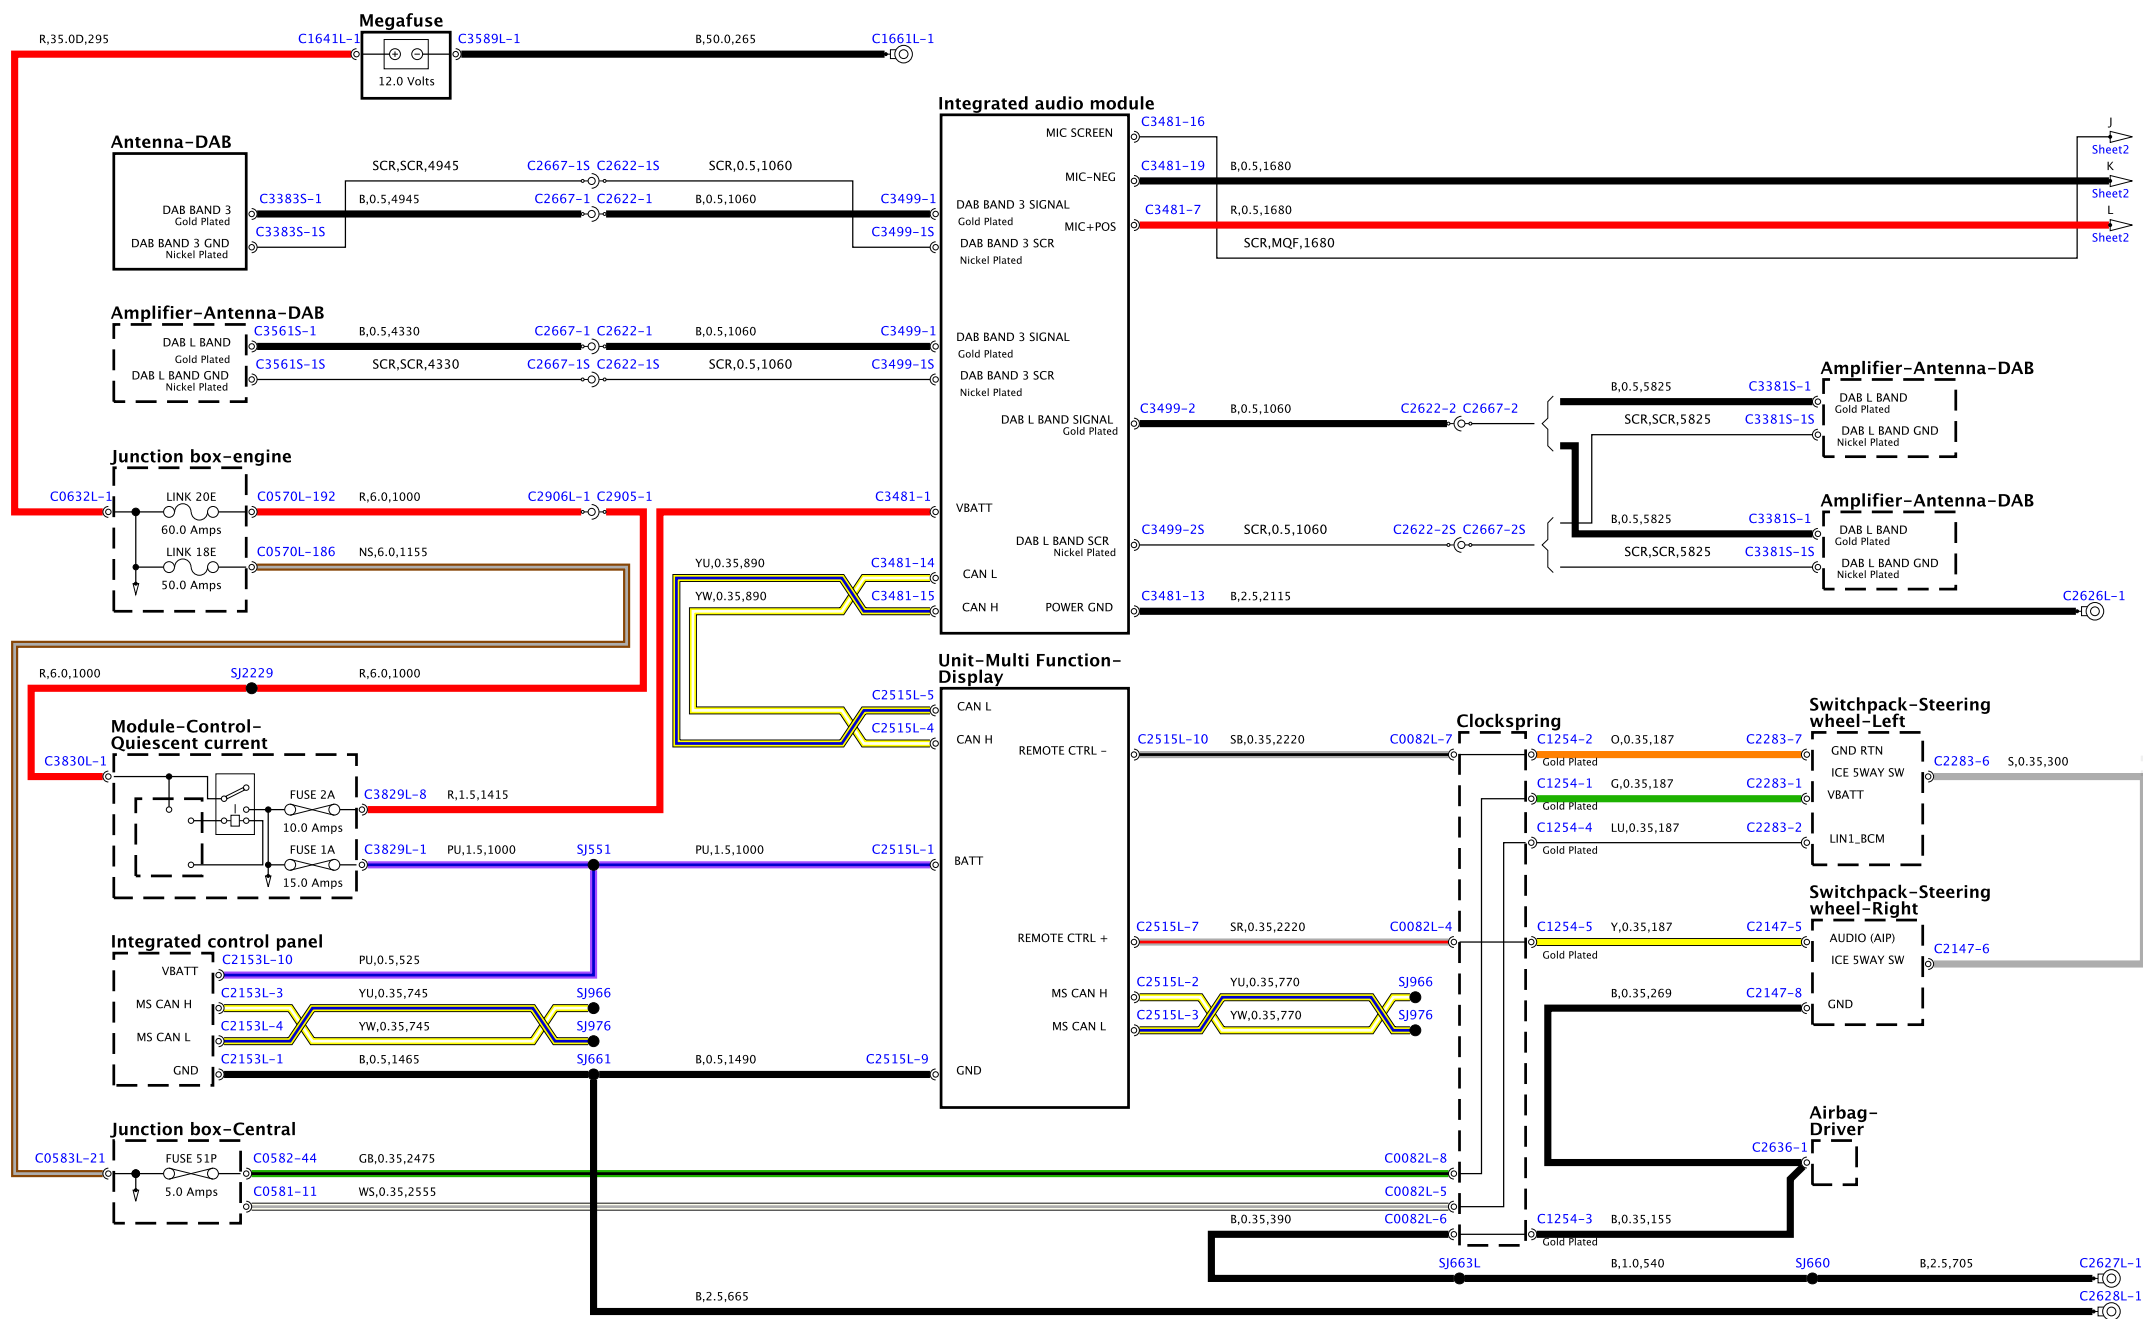



FIG22-70441-A-A-02-03-Service (0,319-15MY-RD)

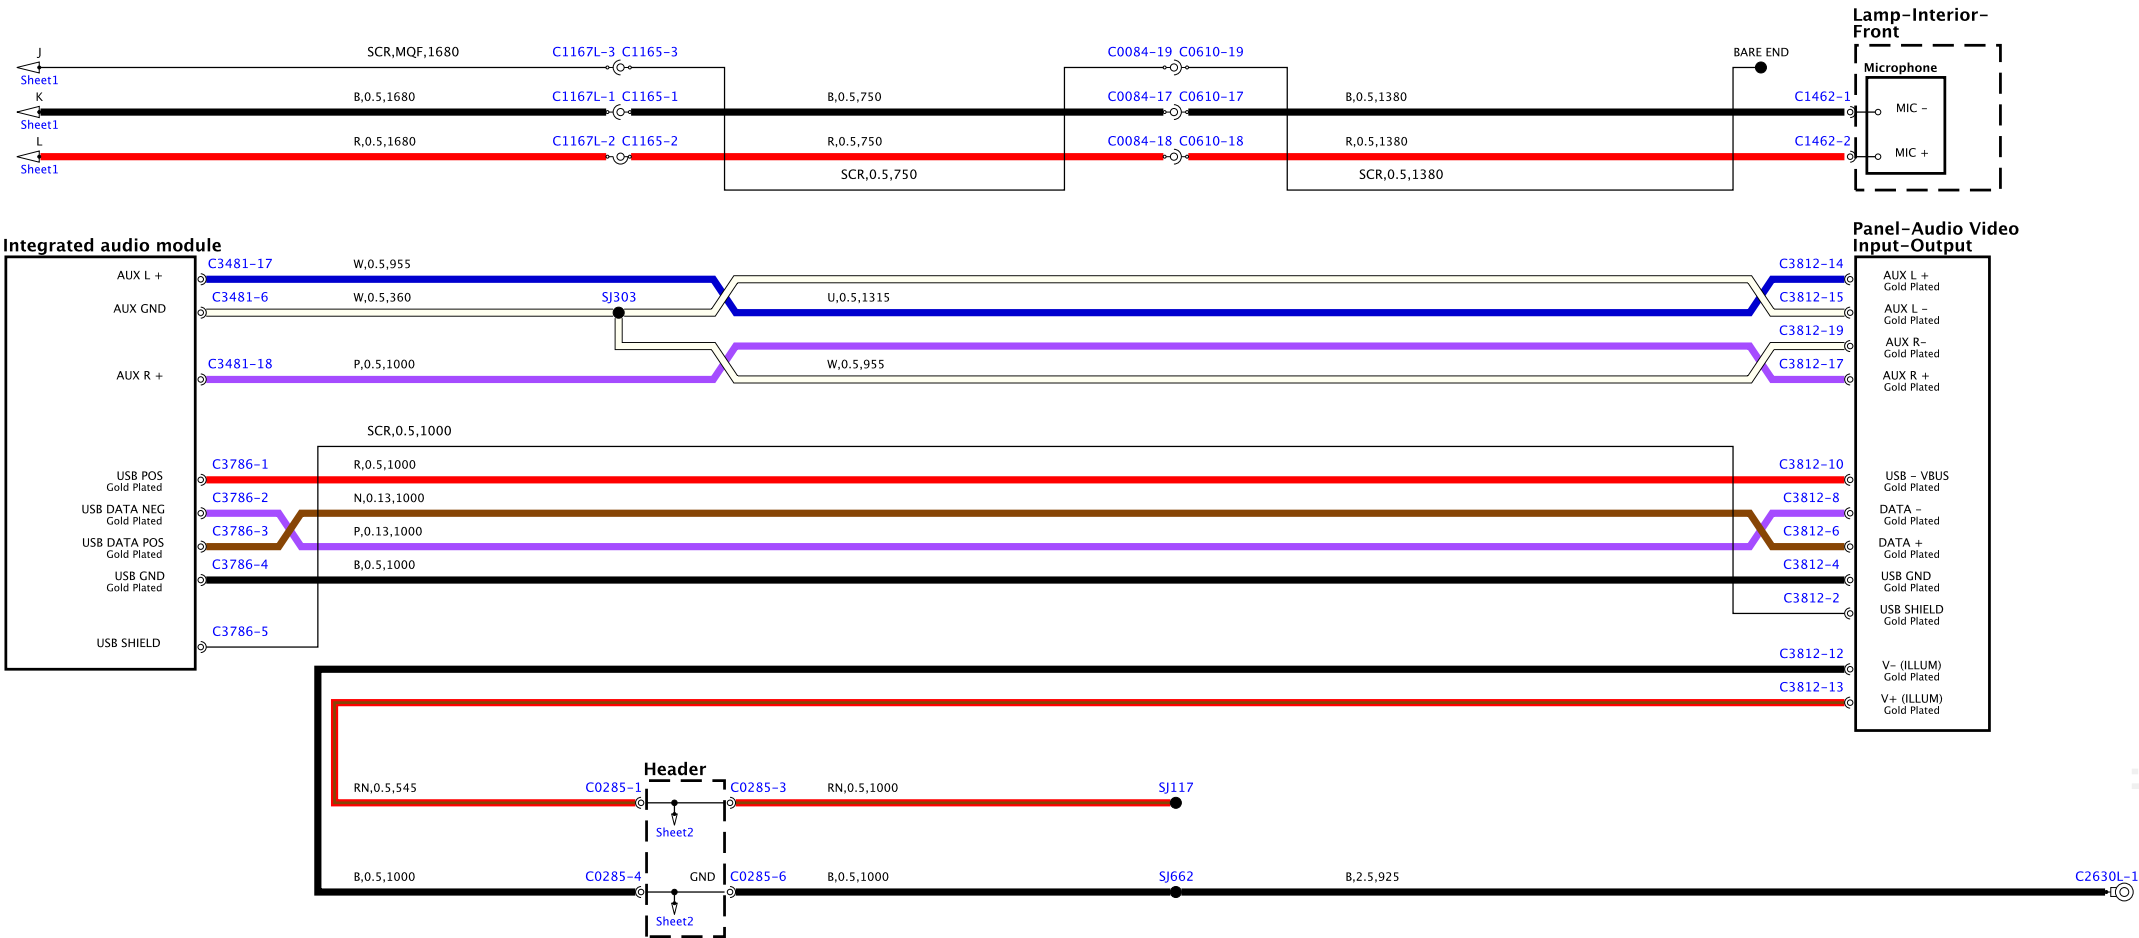



FD22-70441-A-A-03-03-Service 8,519-13MY-9D1


Integrated audio module

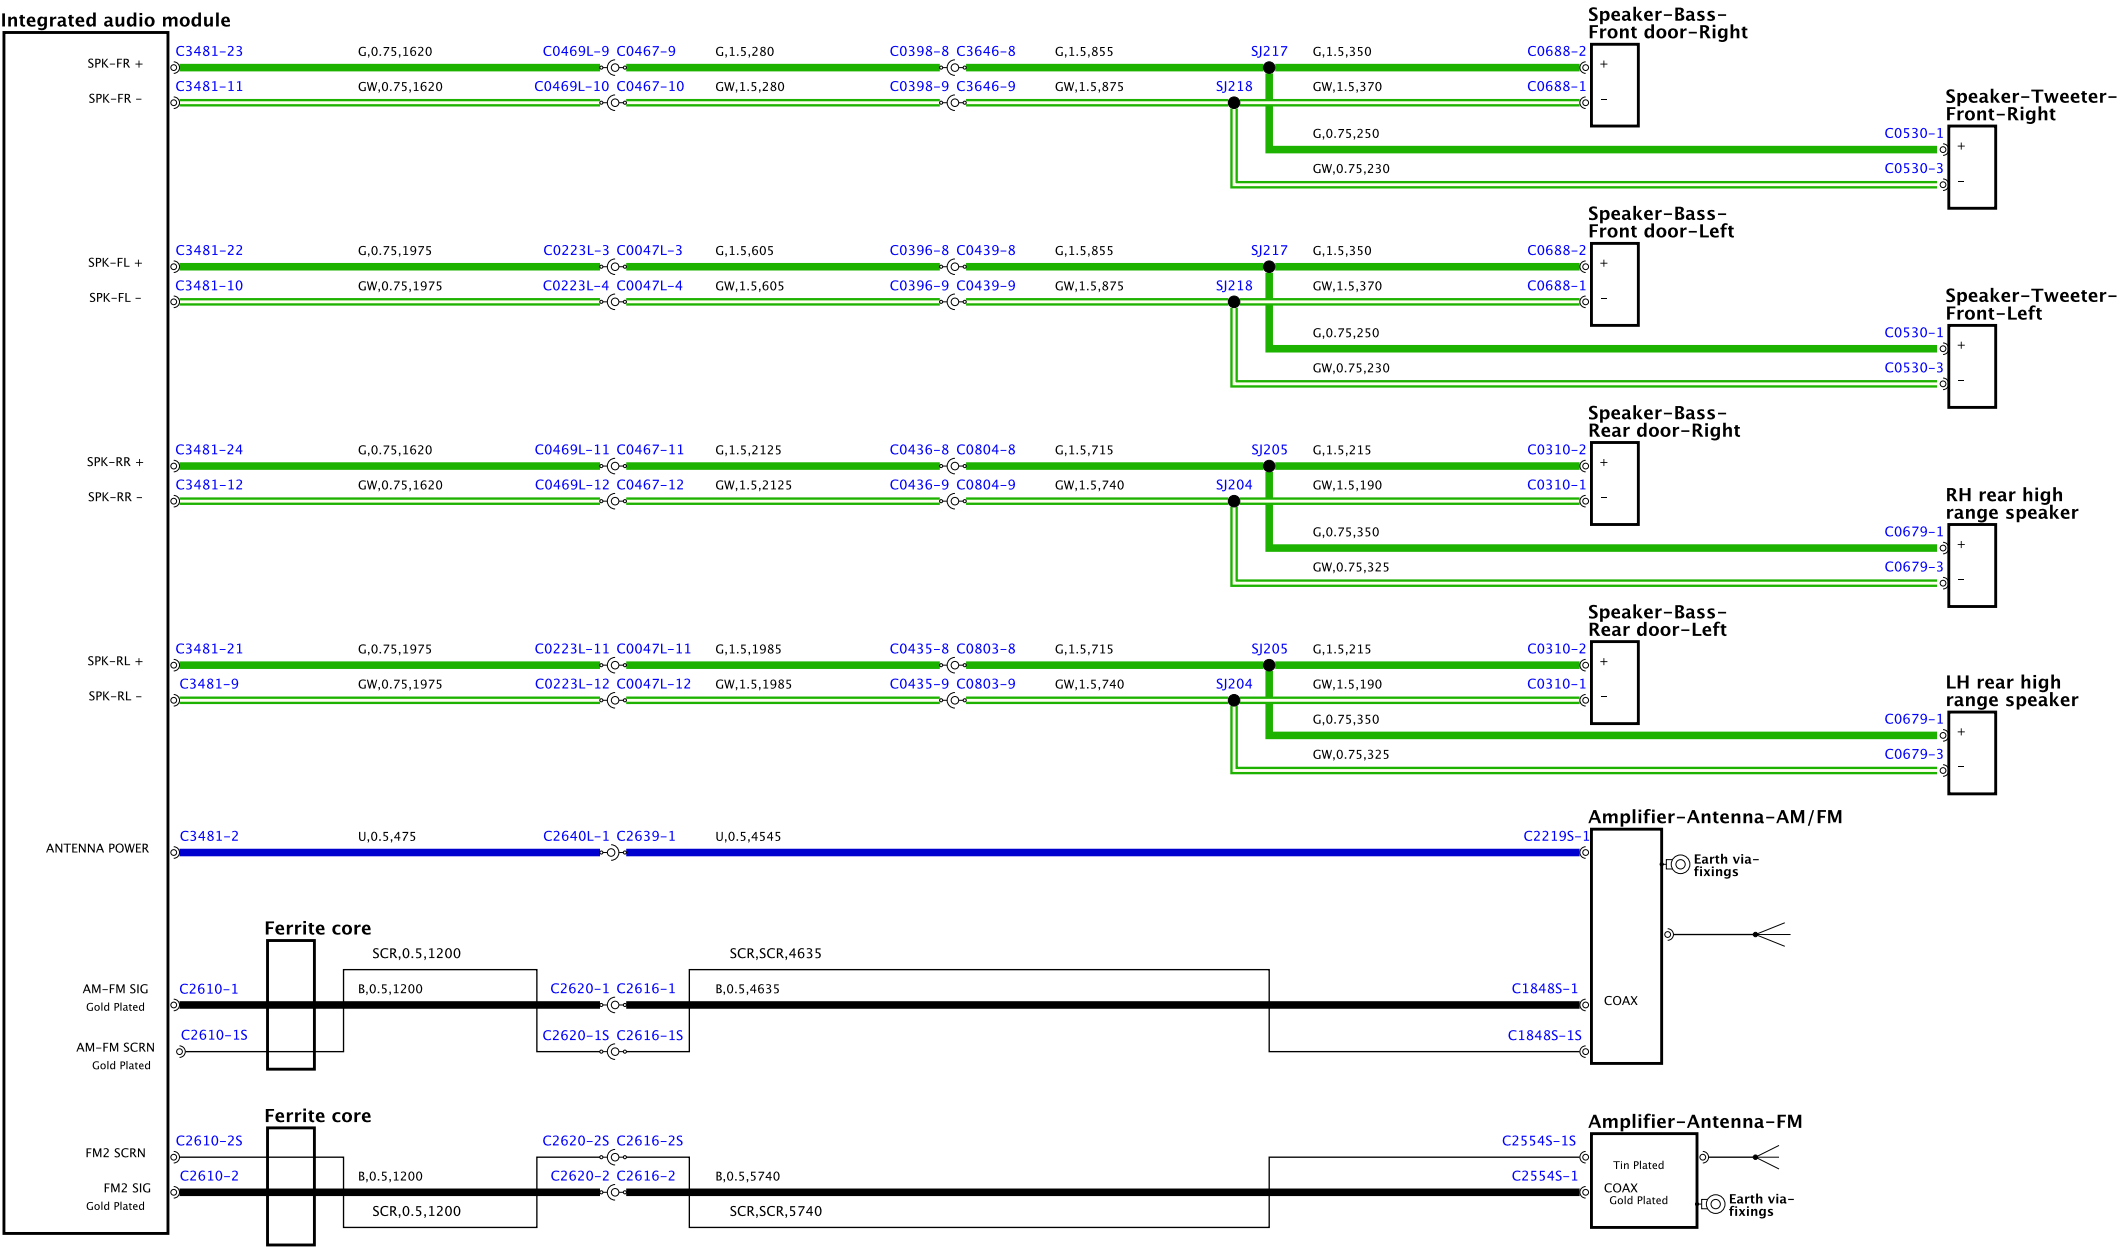


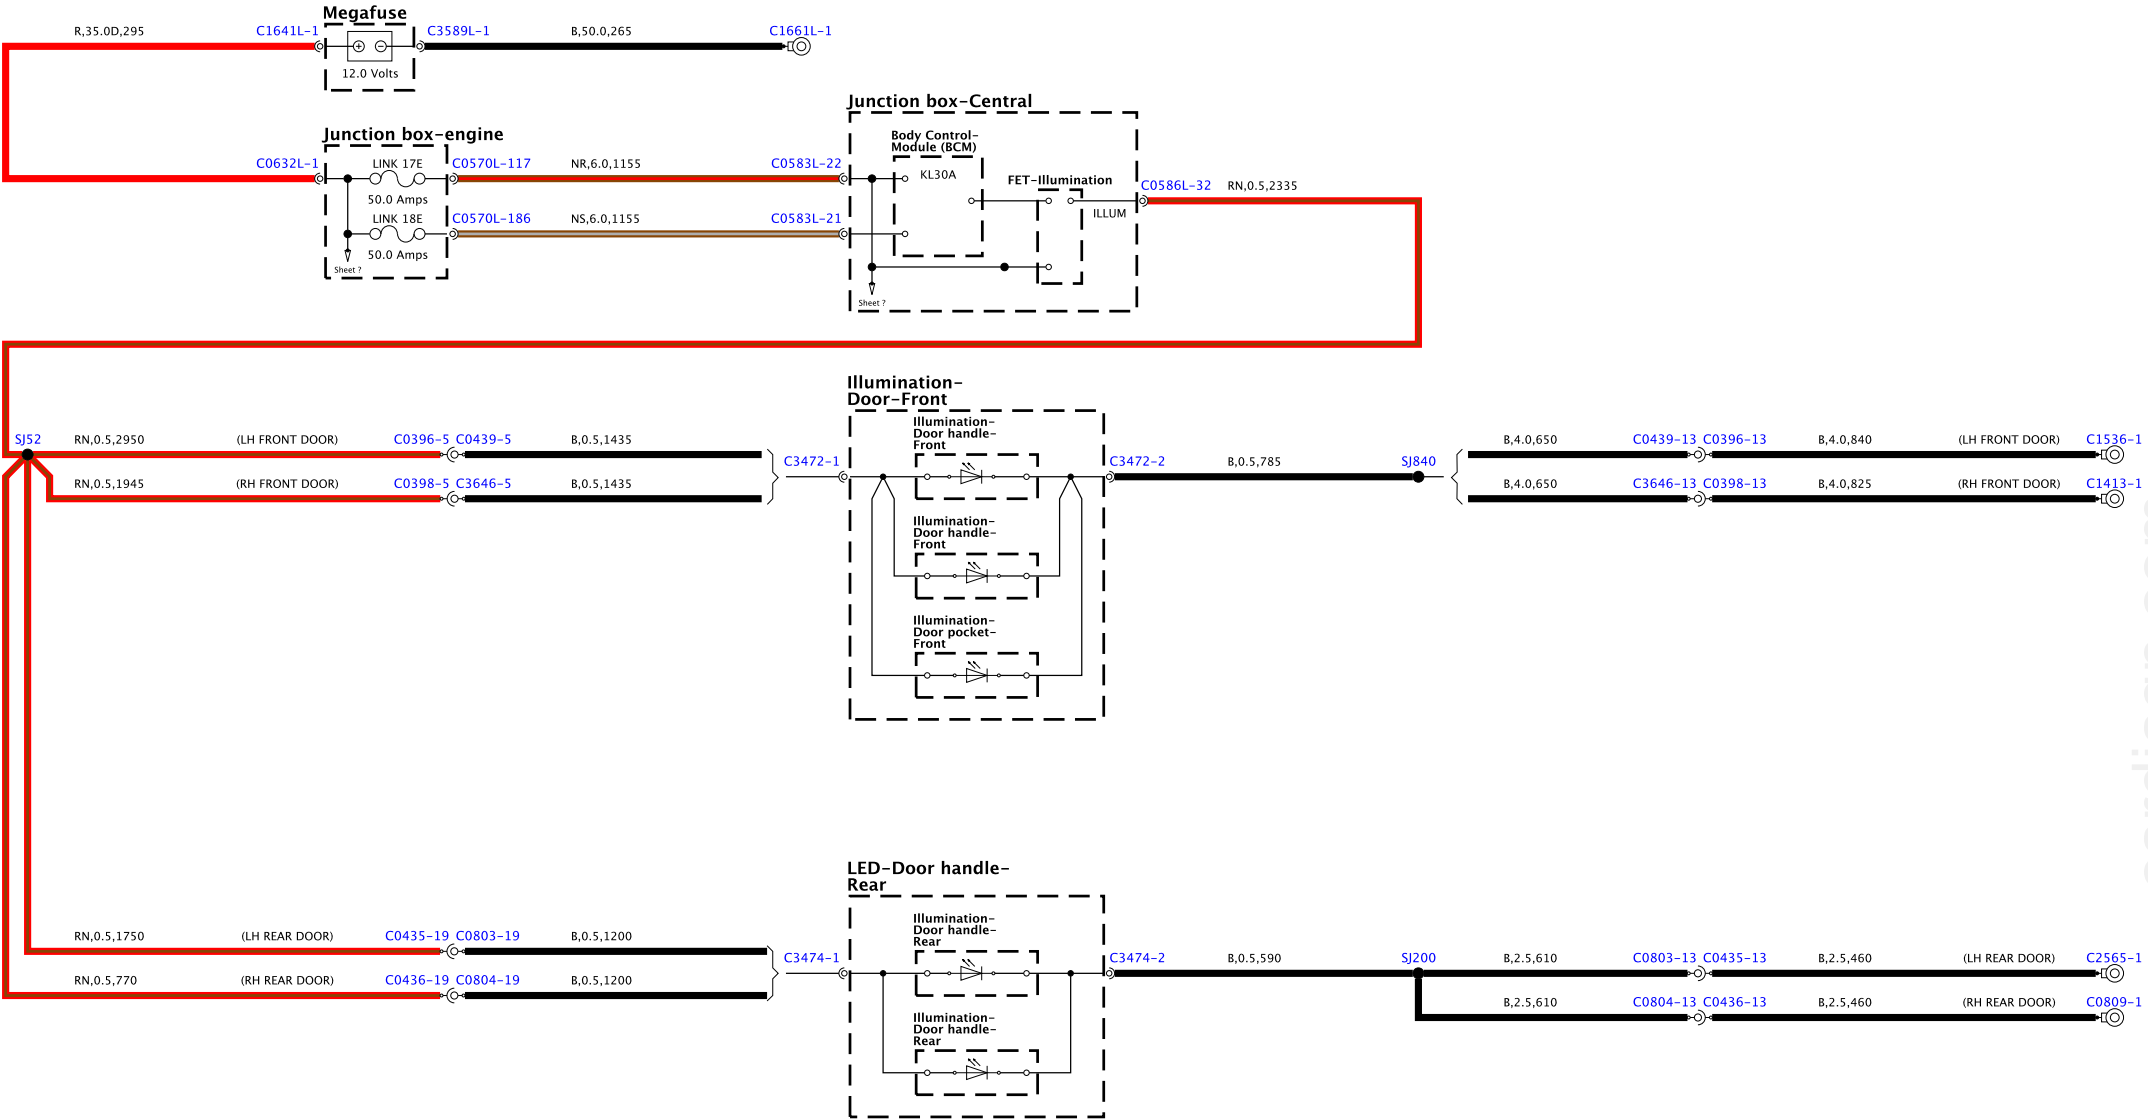


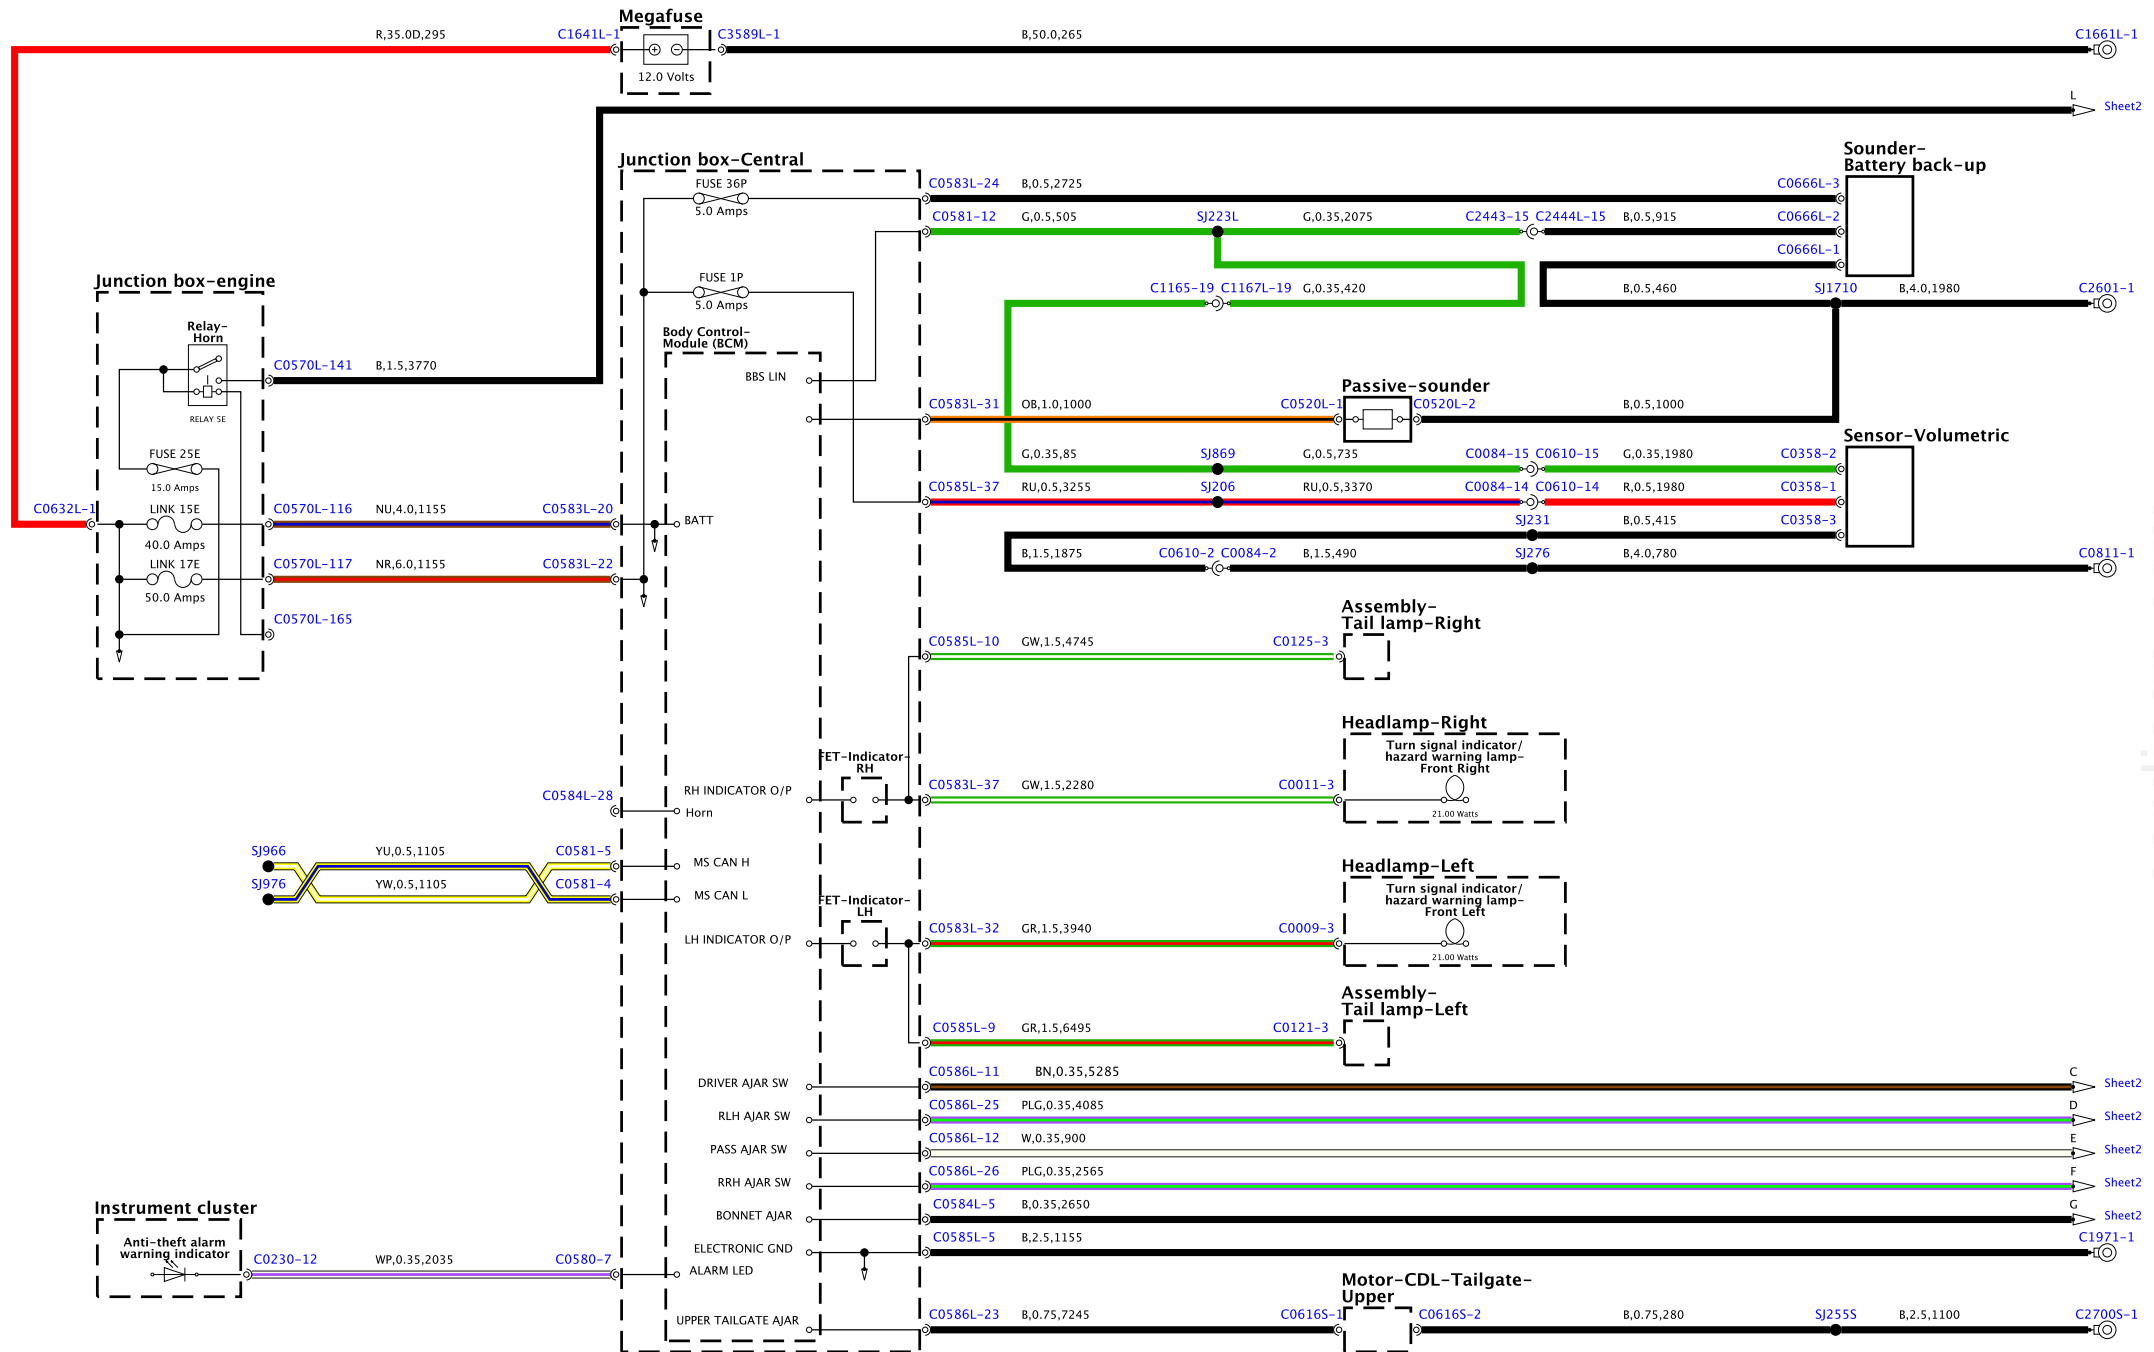

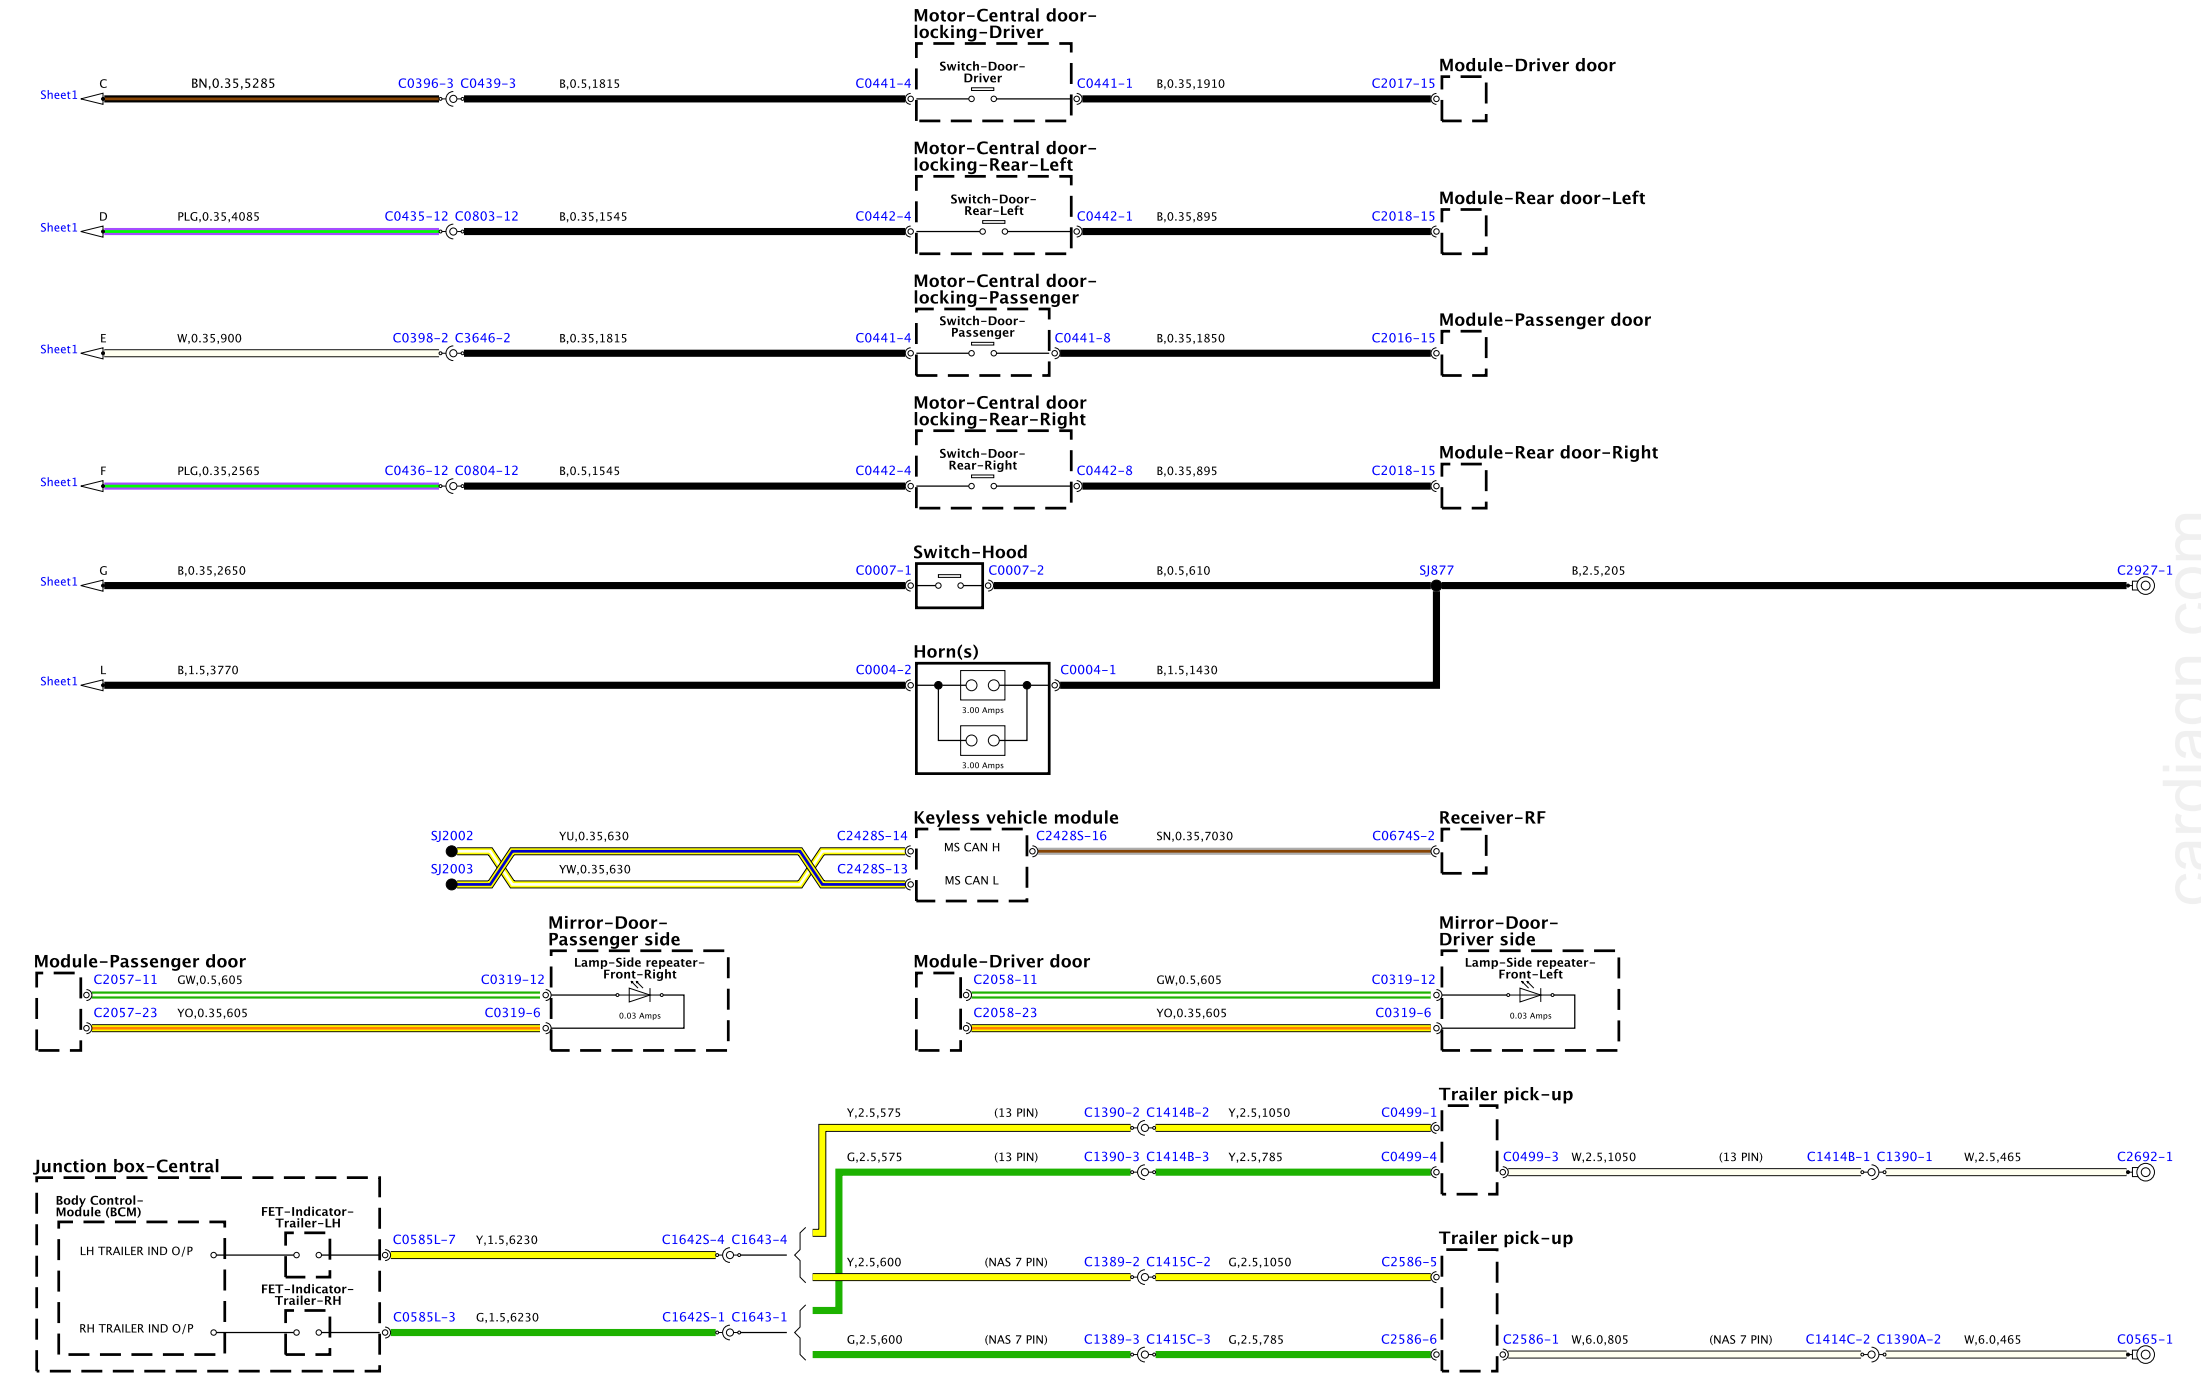

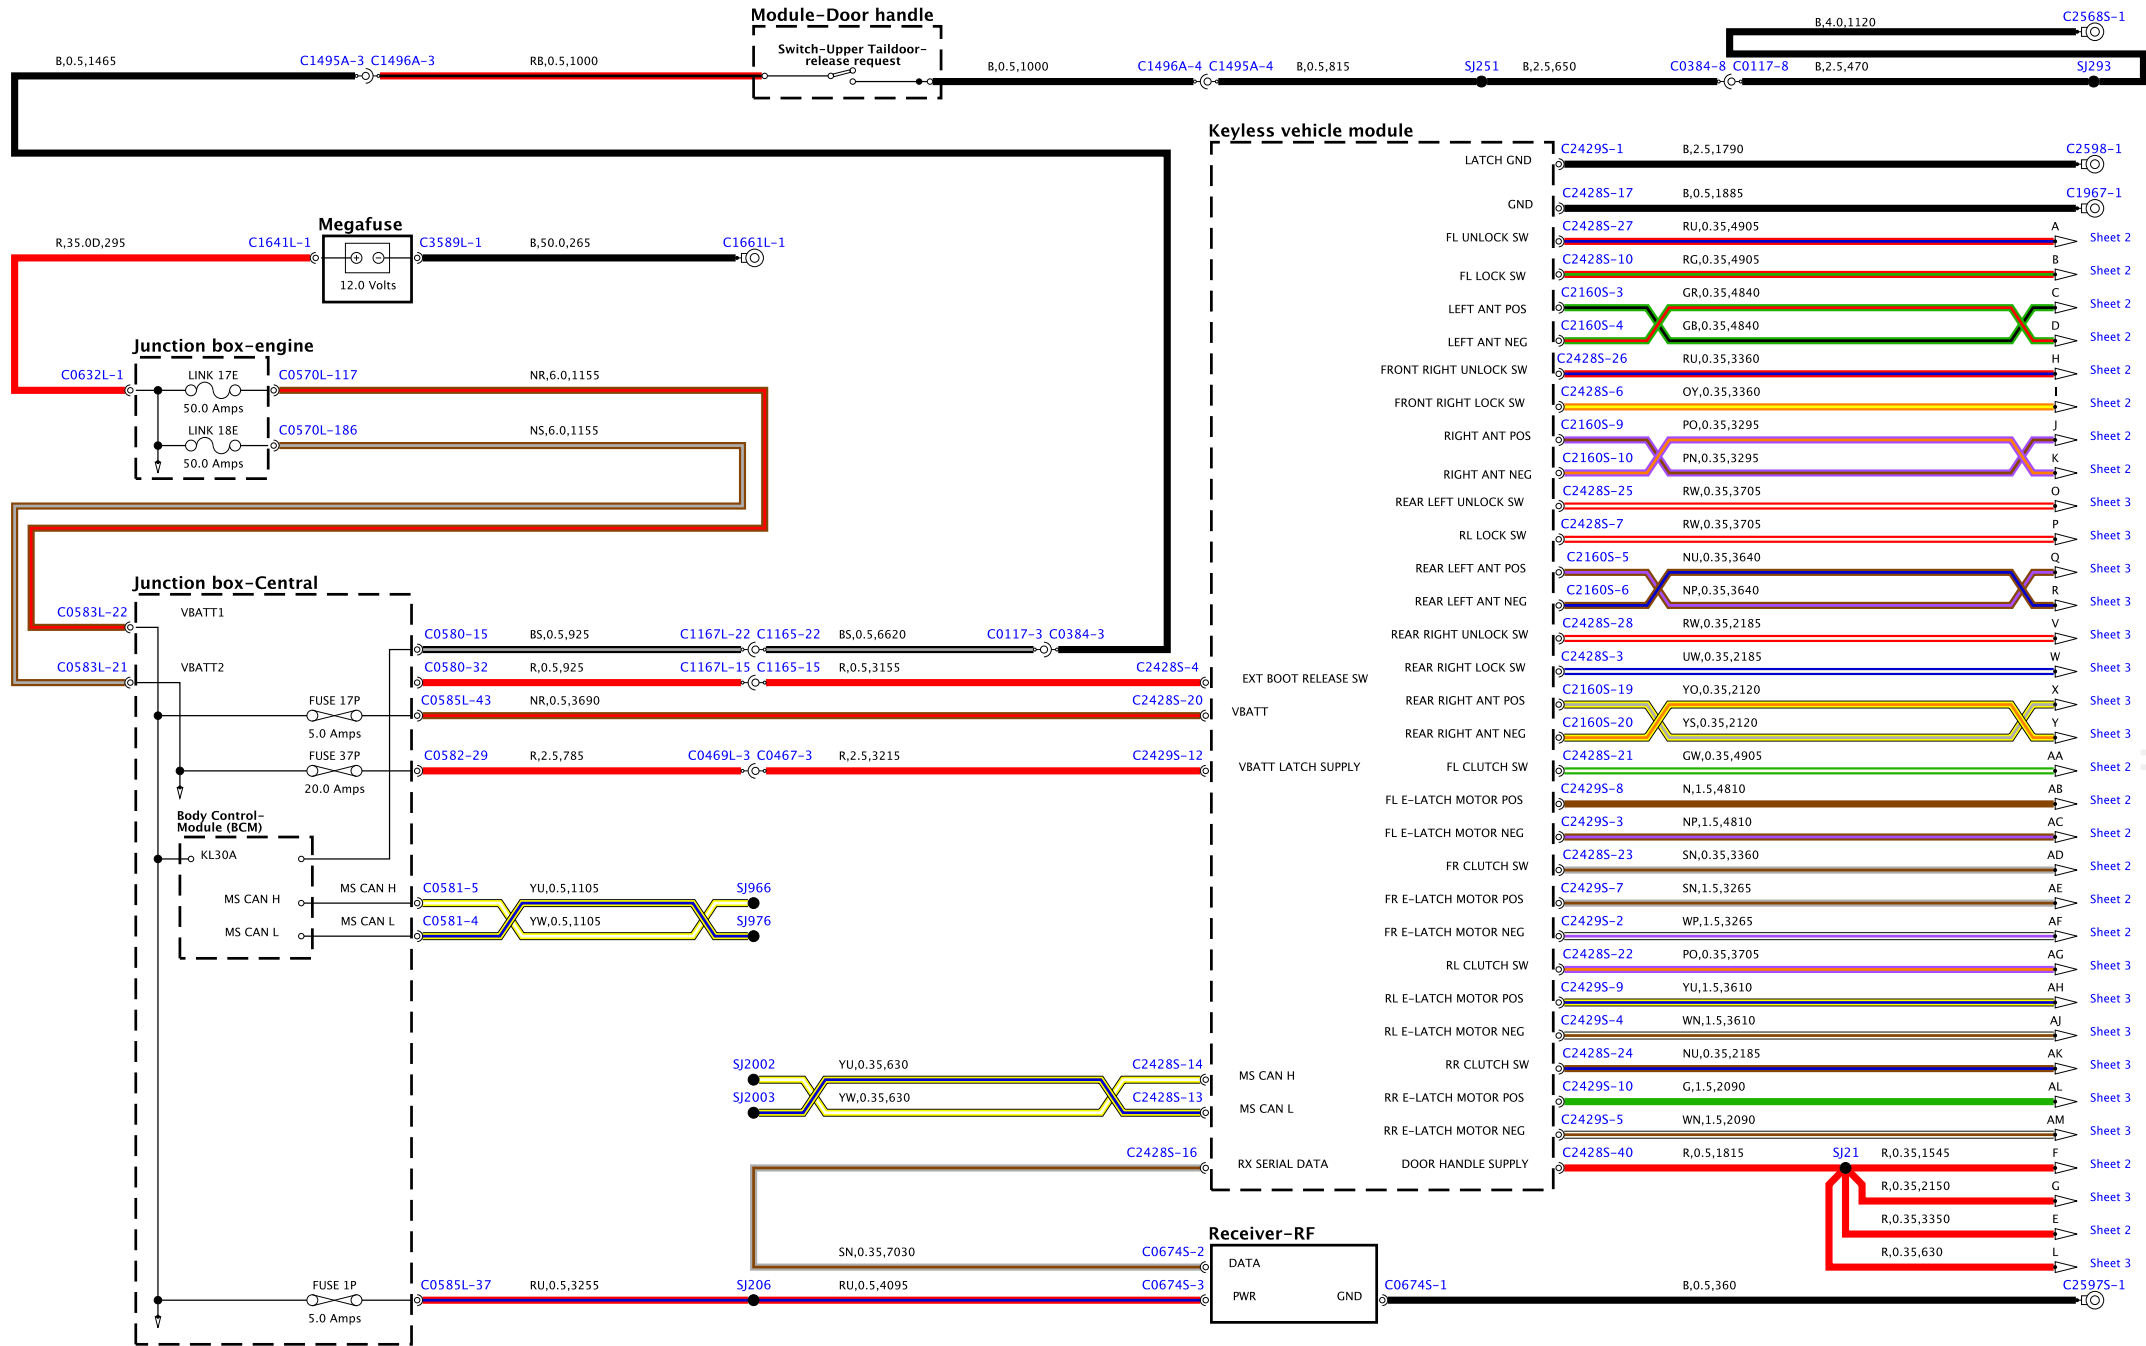

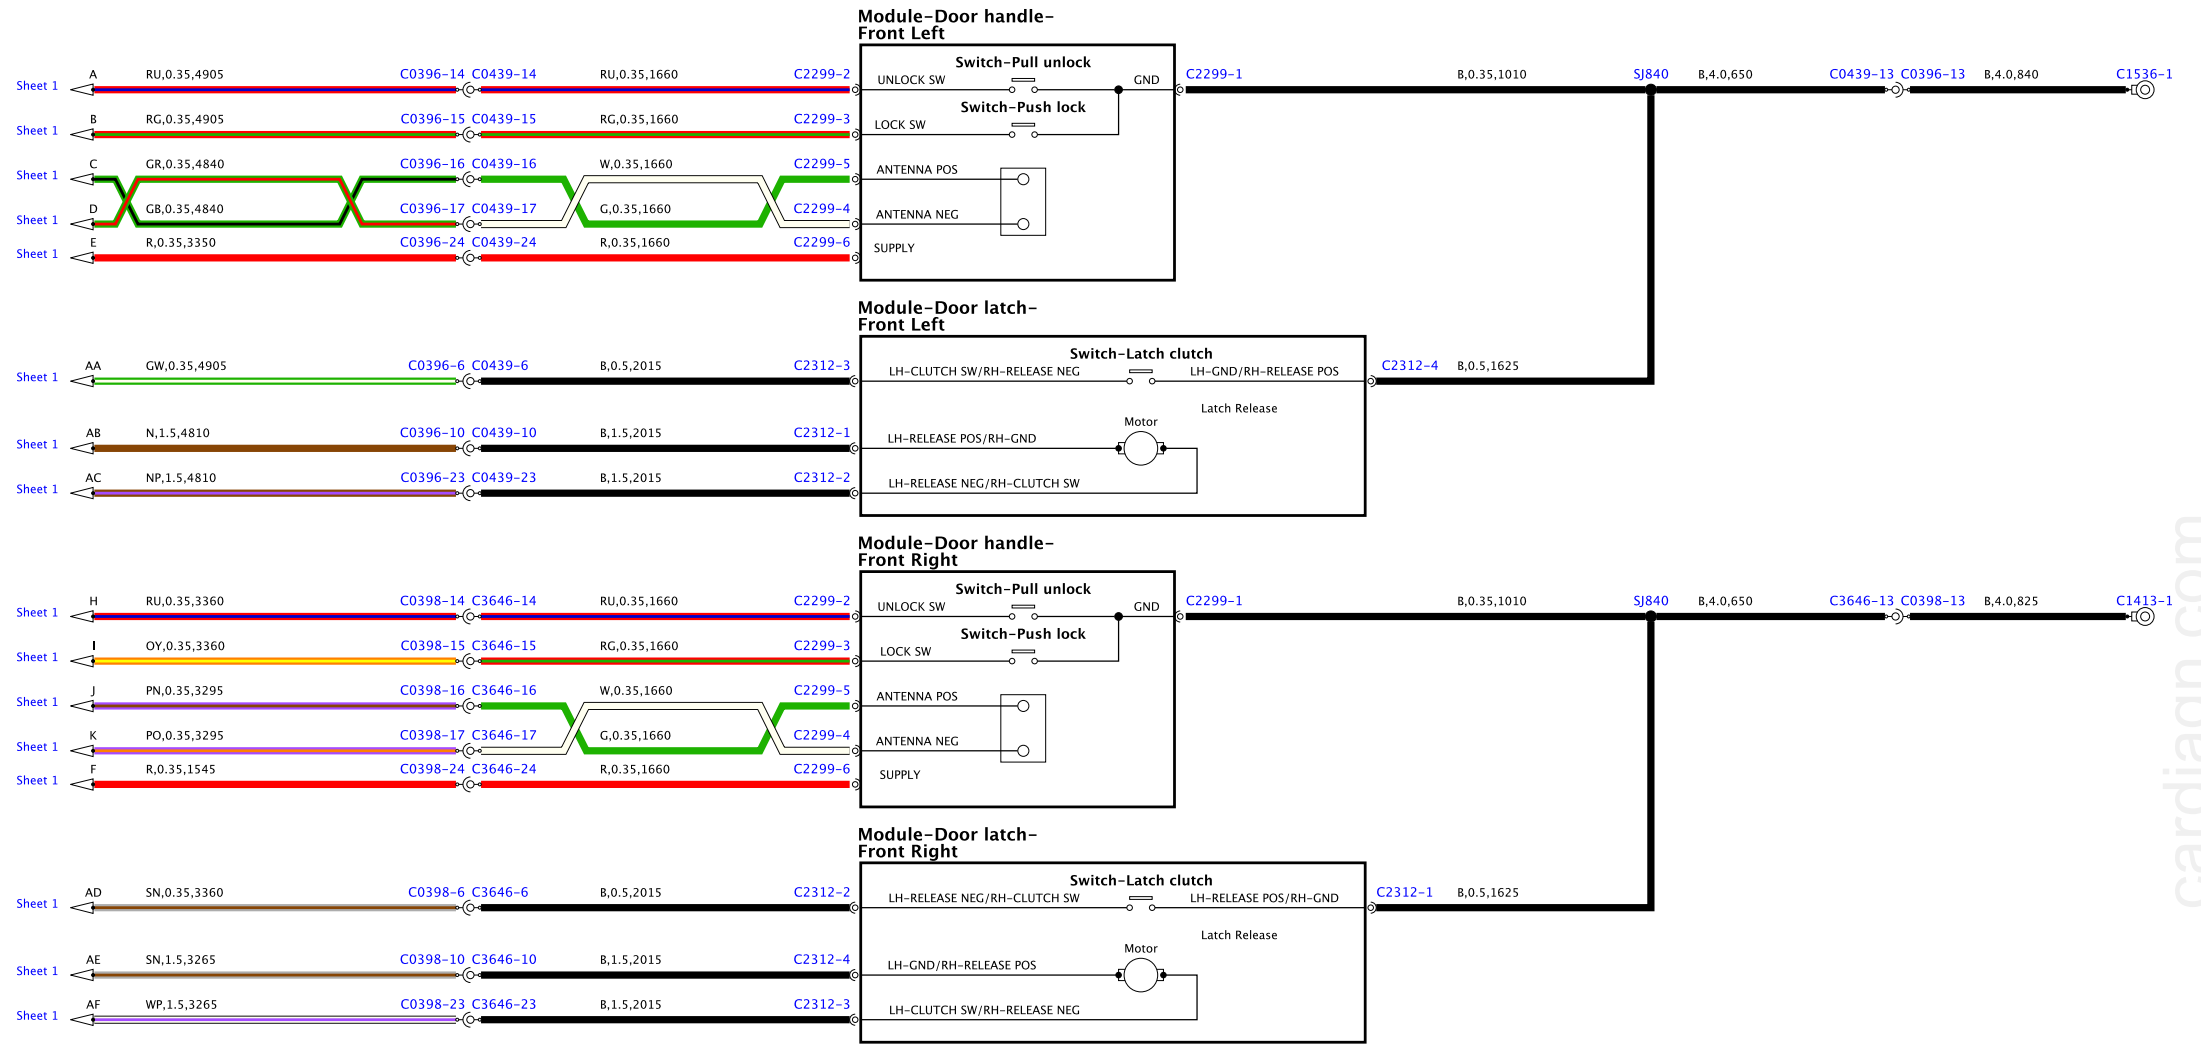

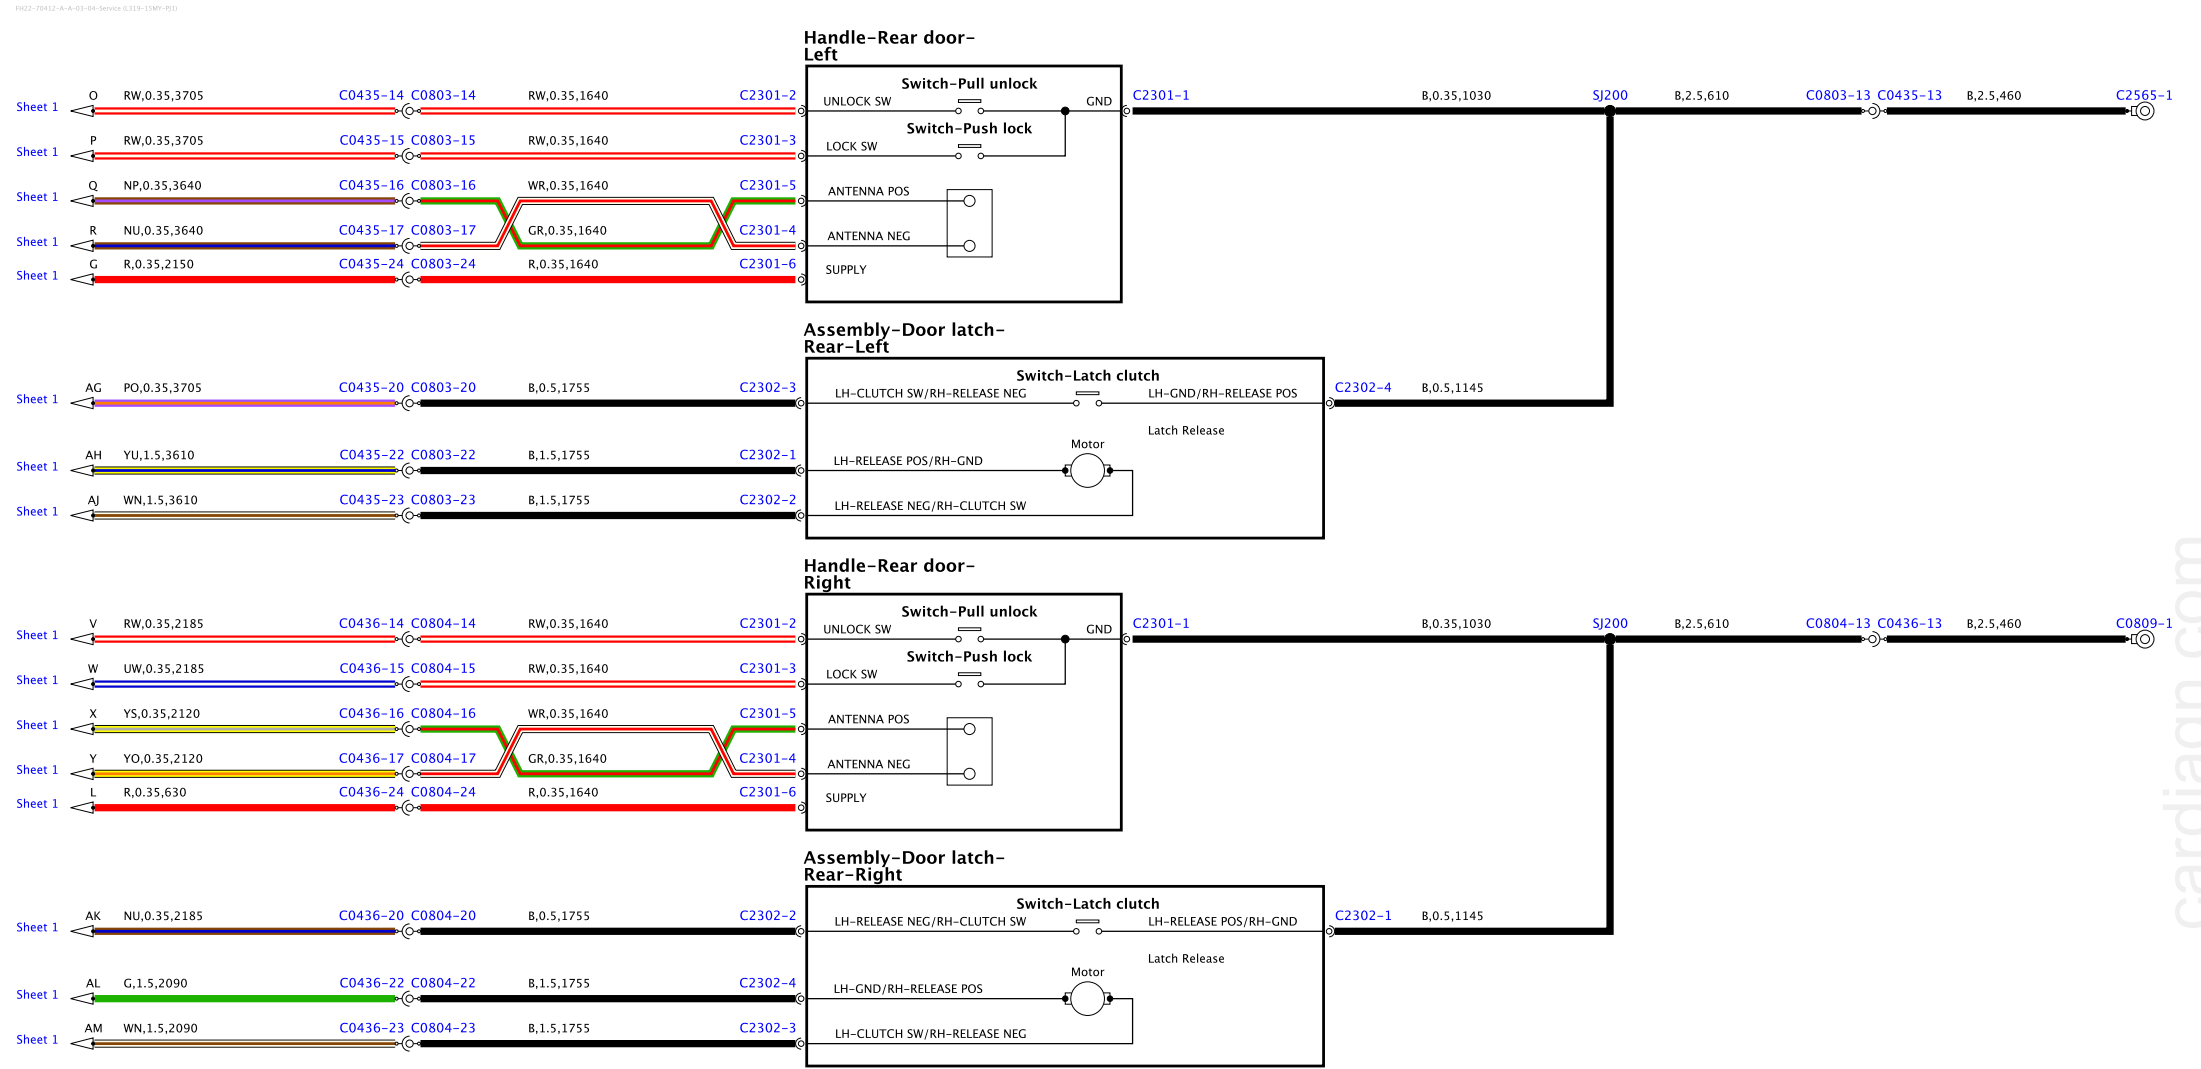


Keyless vehicle module

FRONT CABIN ANT POS
FRONT CABIN ANT NEG




Antenna-Front Cabin-Interior



LOADSPACE SKI SLOPE ANT POS
LOADSPACE SKI SLOPE ANT NEG




Antenna-Headliner-LHS




REAR CABIN ANT POS
REAR CABIN ANT NEG




Antenna-Headliner-RHS




Antenna-LF-Luggage compartment-Left




EXT TRUNK ANT POS
EXT TRUNK ANT NEG





Tailgate handle antenna



Antenna-LF-Luggage compartment-Right



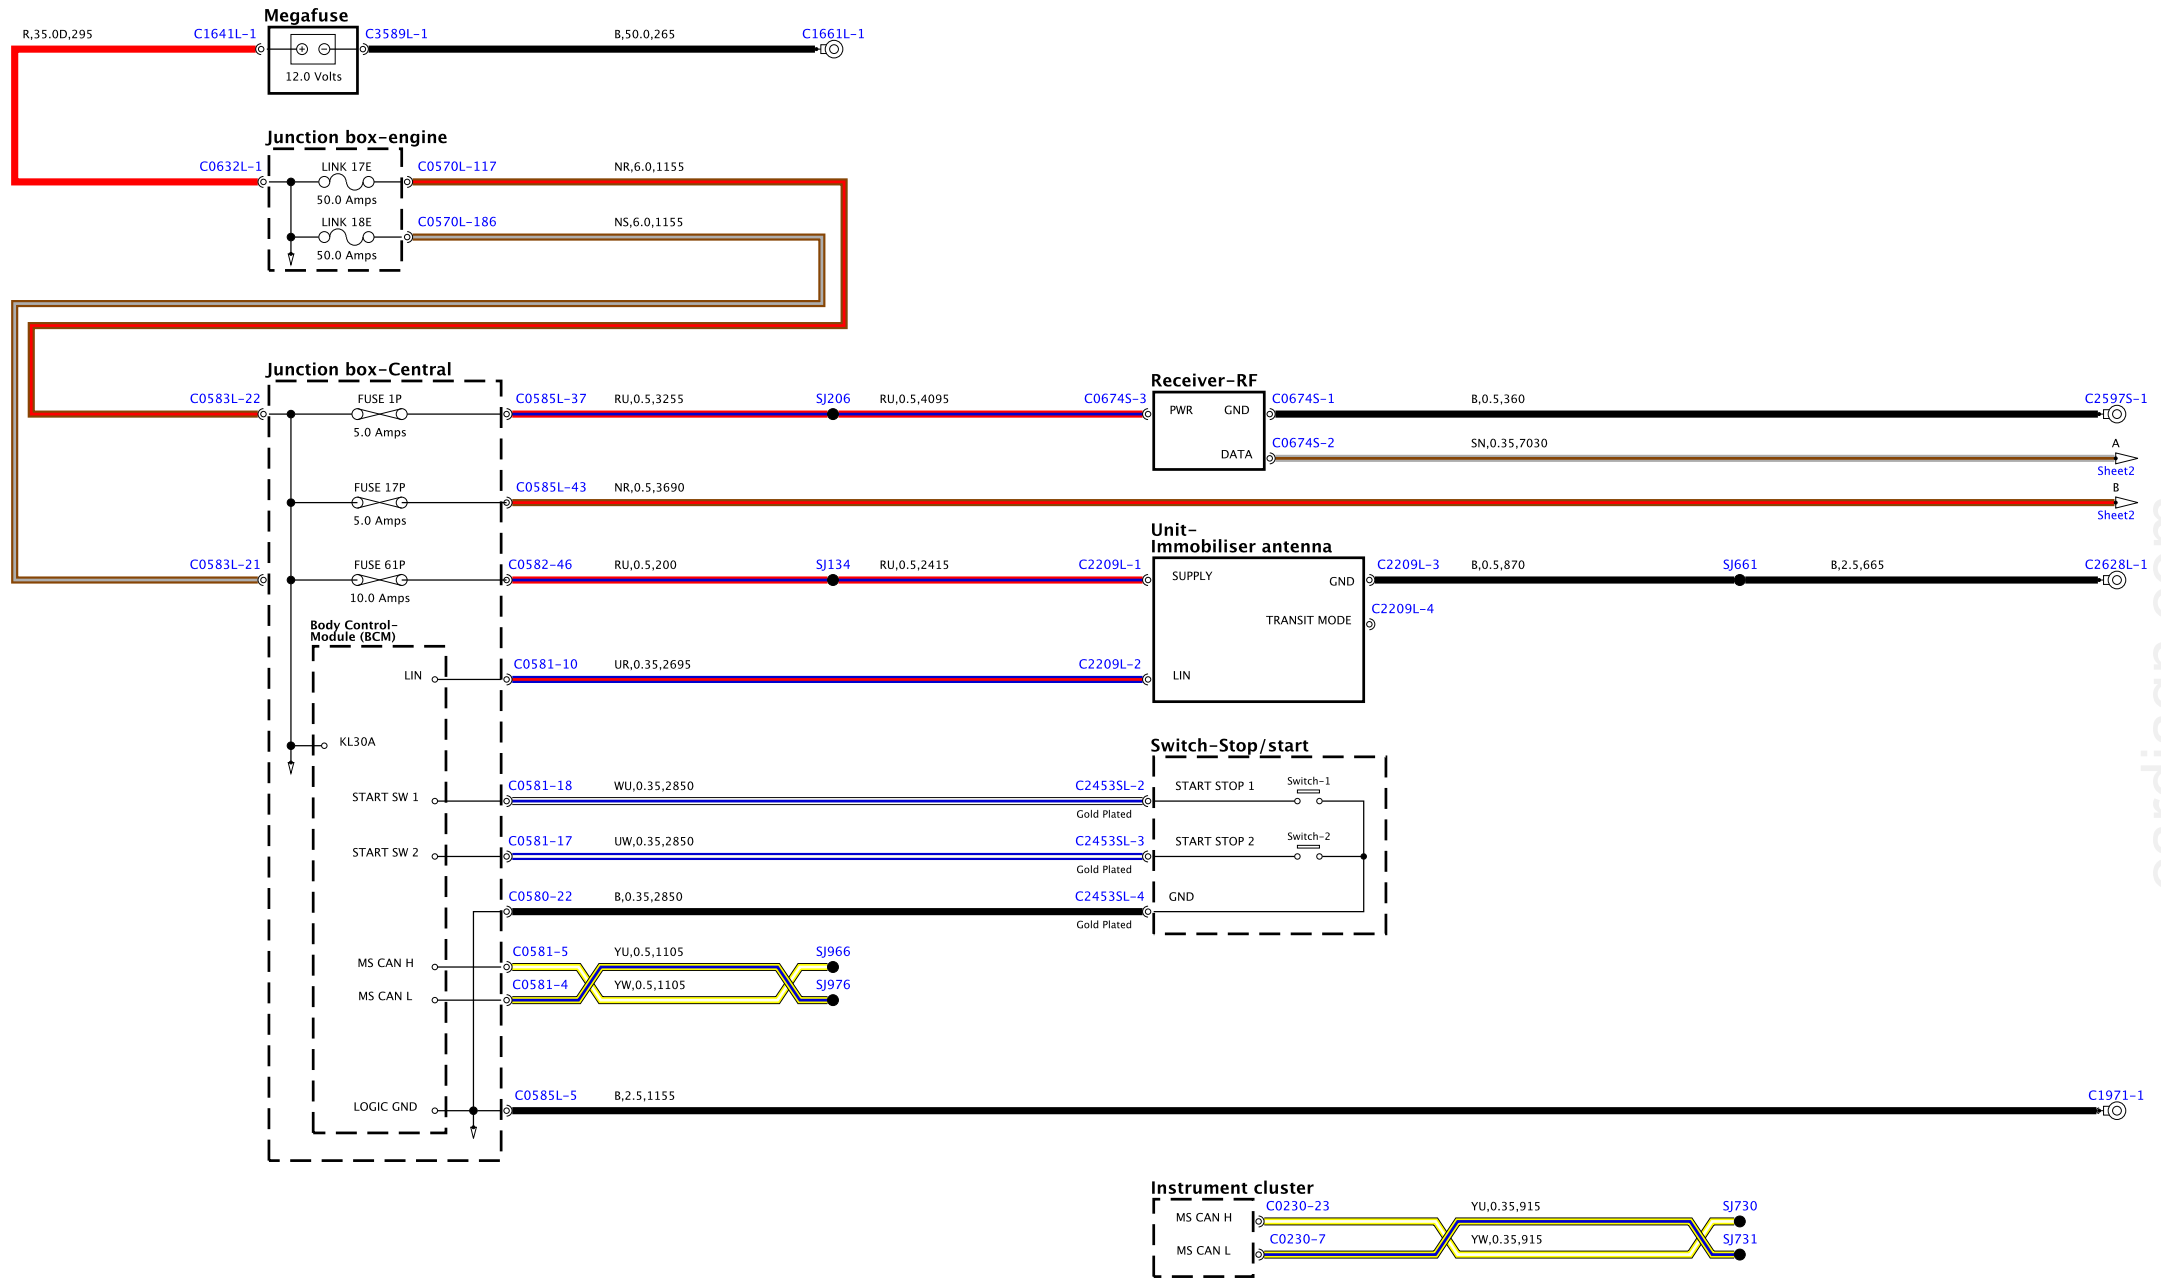

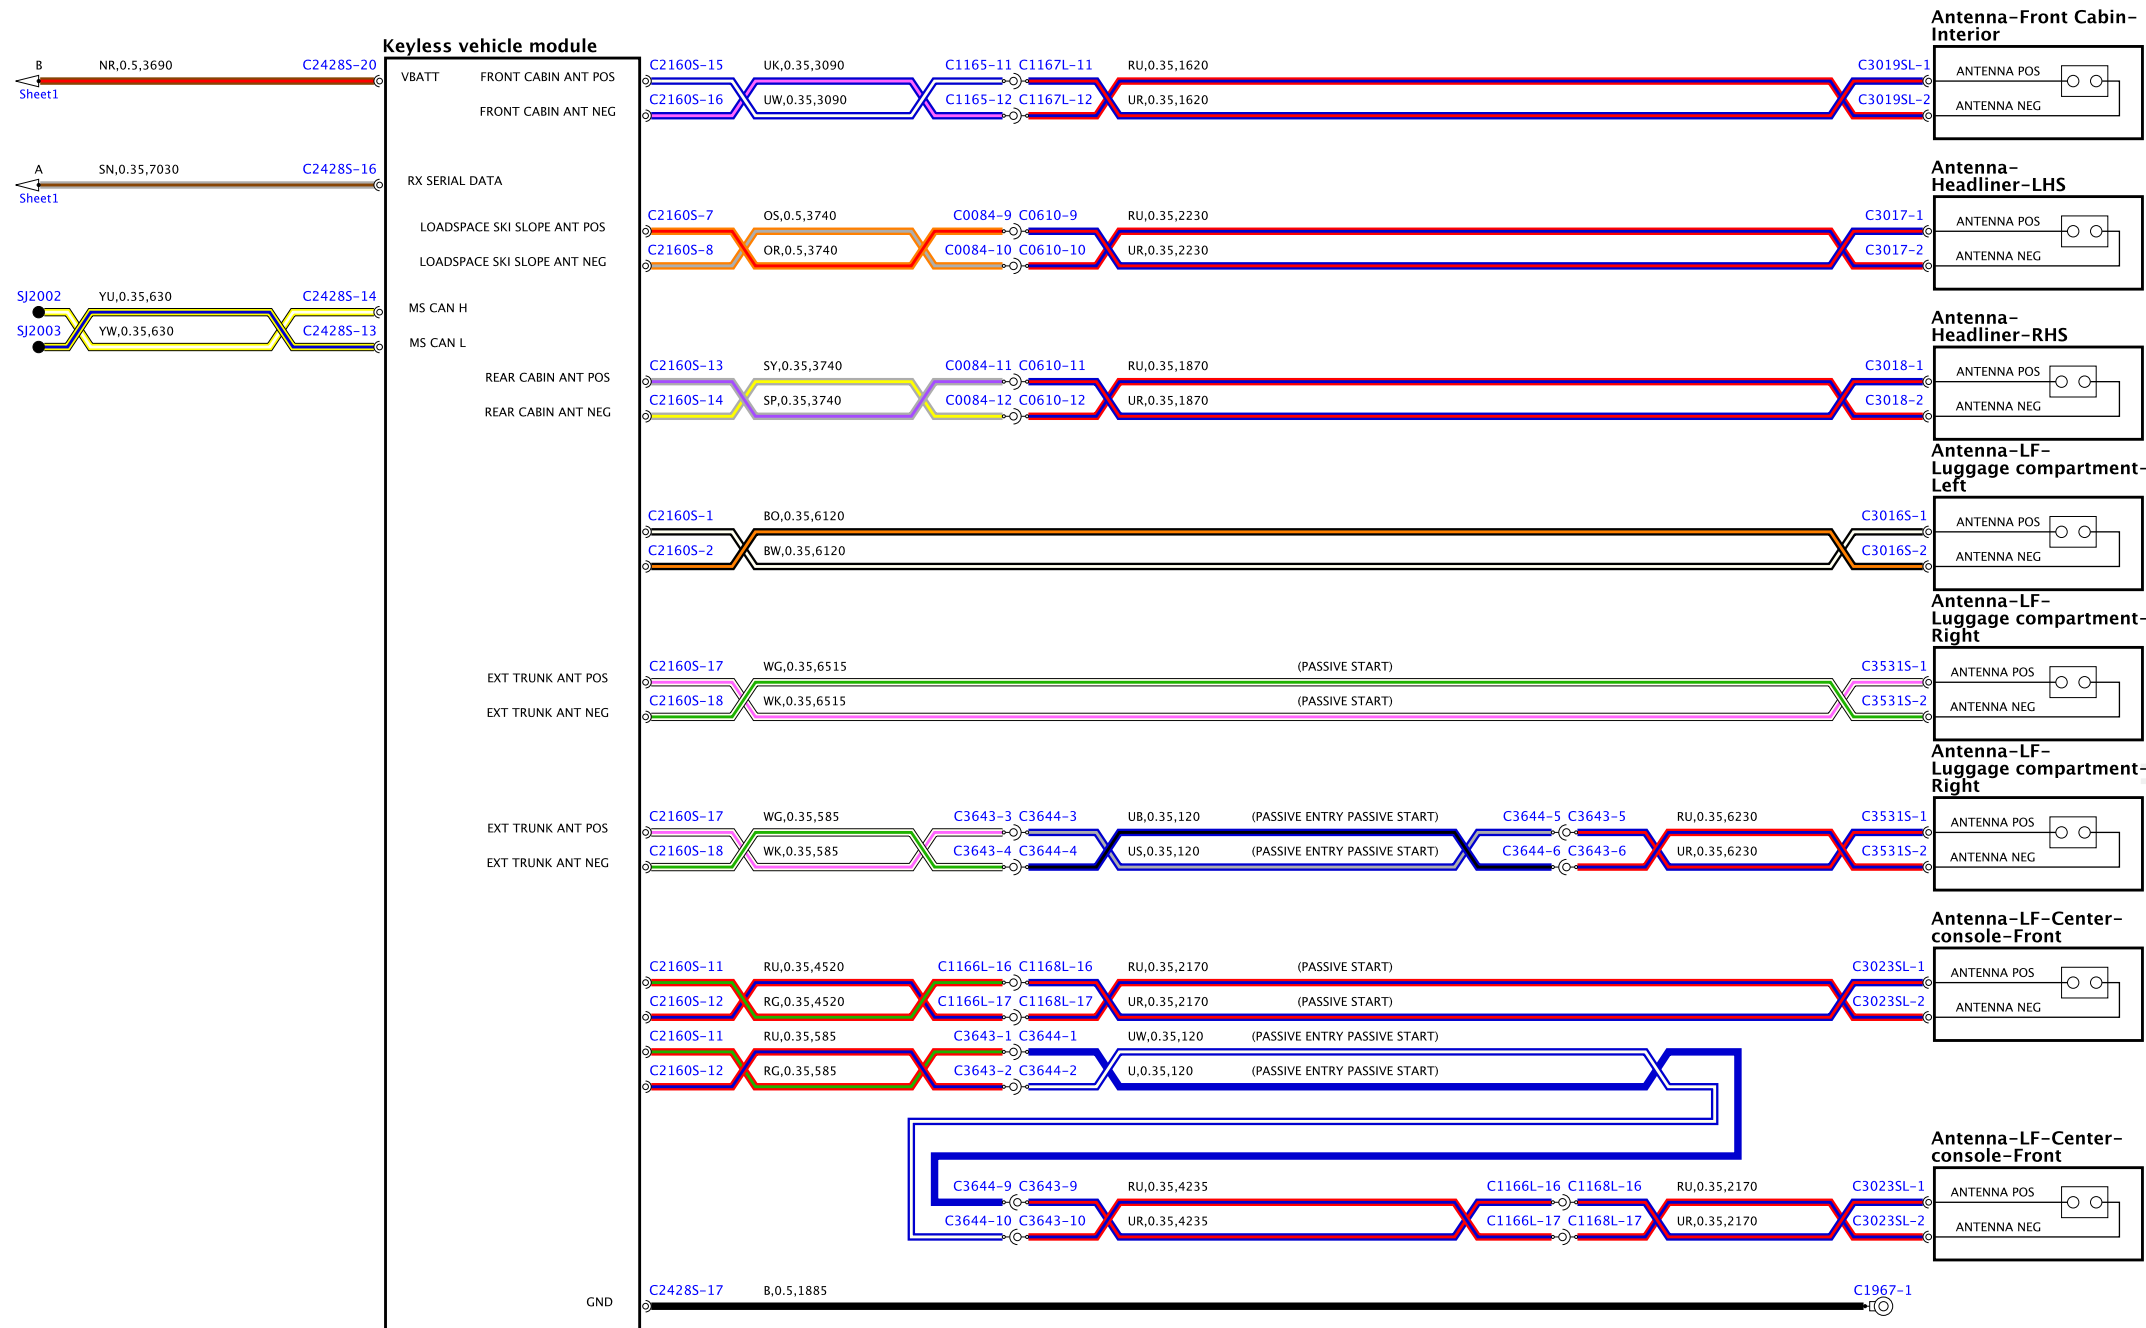


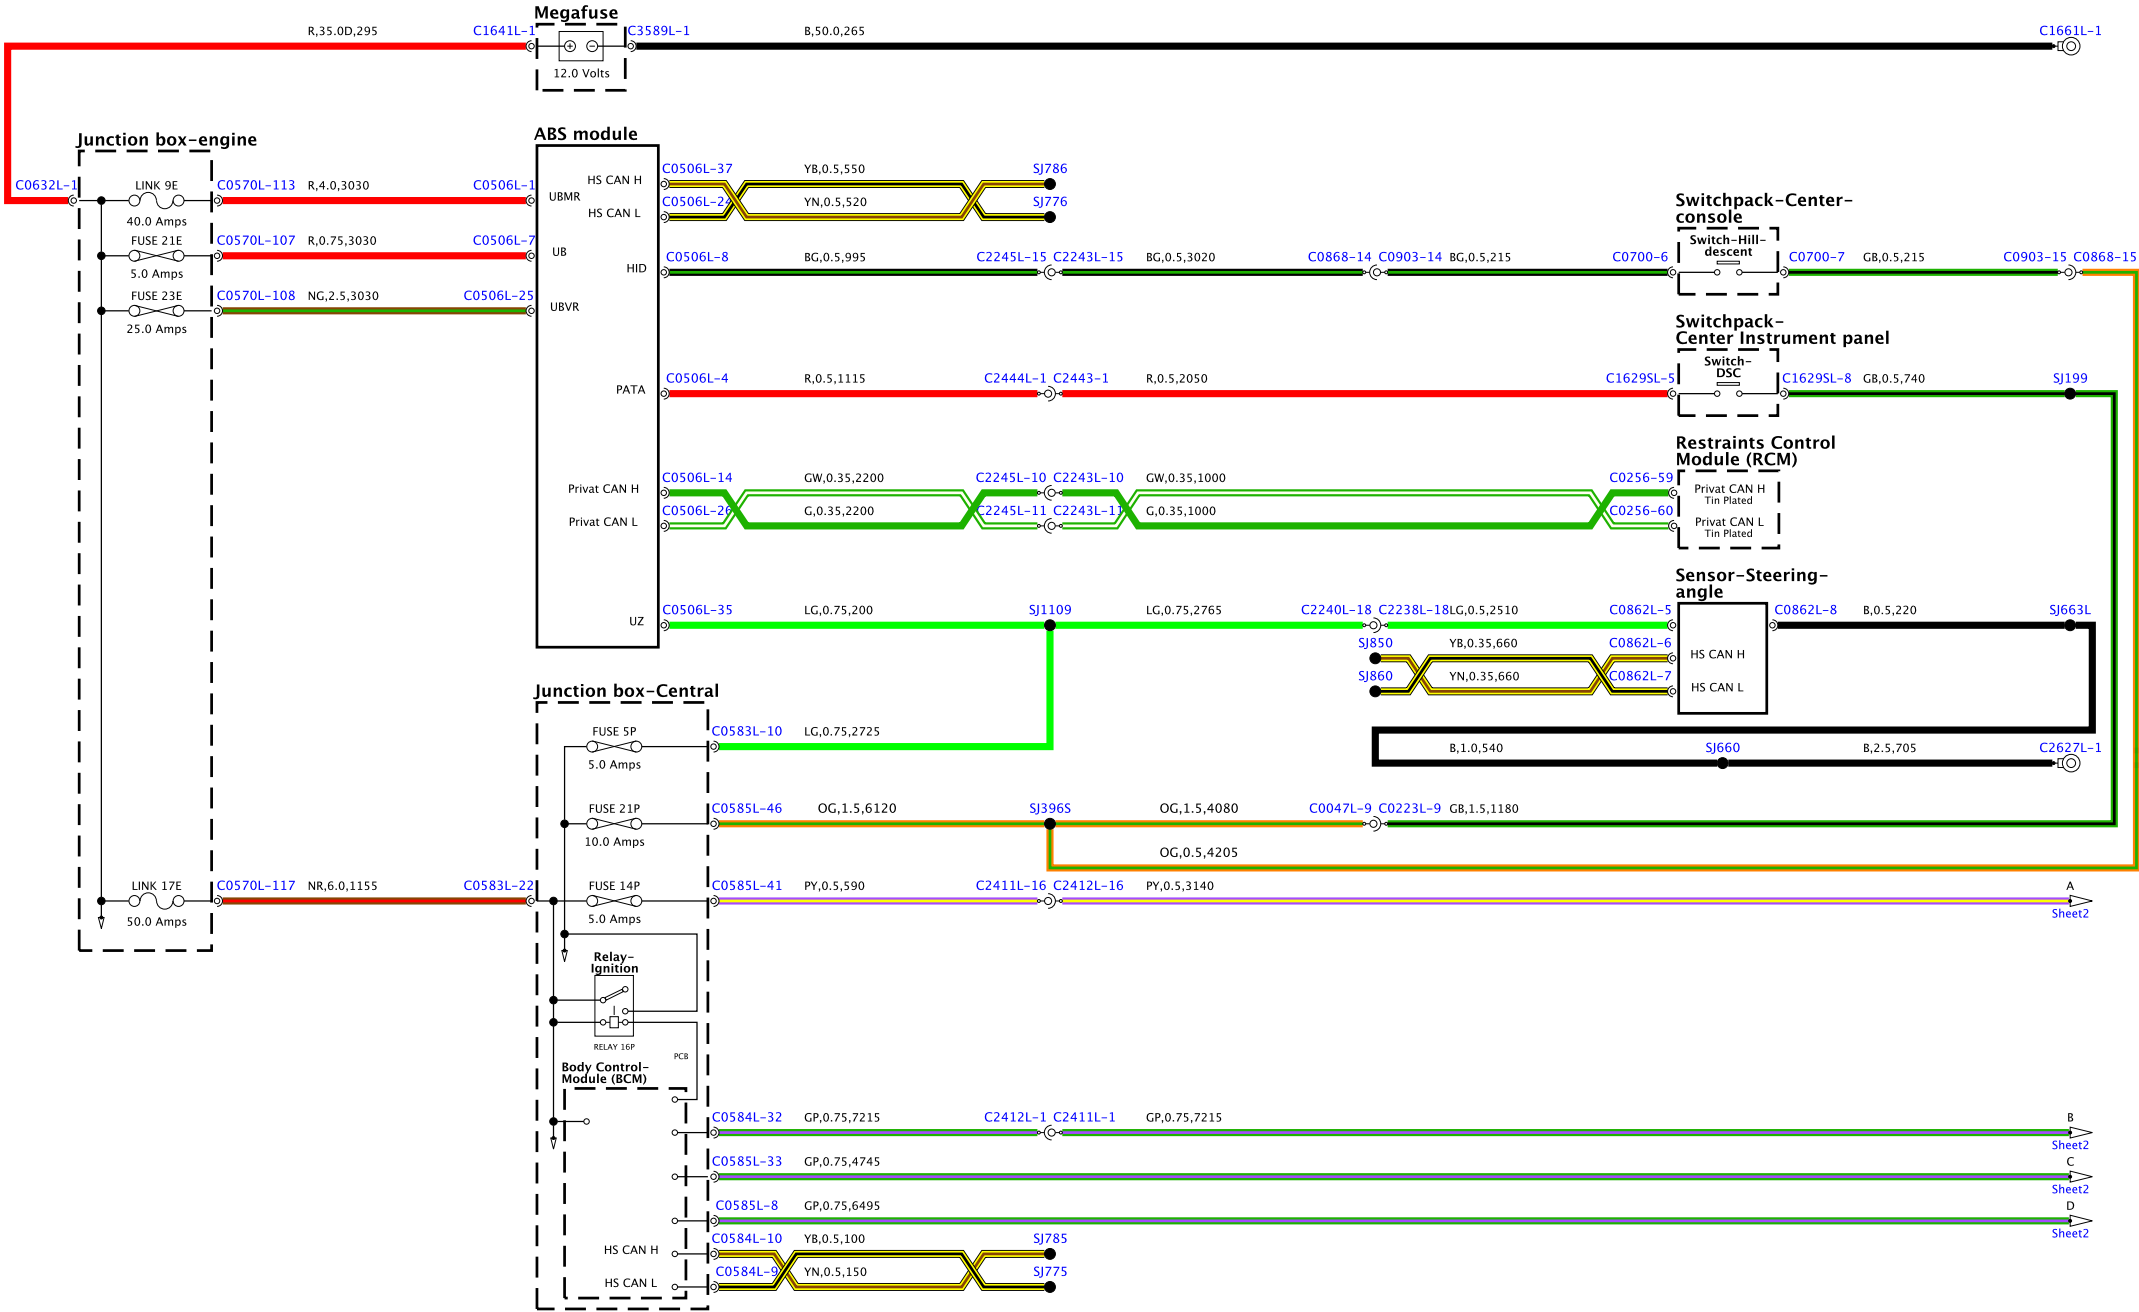


FIG22-70201-B-A-02-02-Service (0.119-15M9-051)


Sensor-Wheel speed-
Front-Left





Sensor-Wheel speed-
Rear-Left



Diagnostic connector



ABS module




Sensor-Wheel speed-
Front-Right




Sensor-Wheel speed-
Rear-Right




Lamp-High mounted stop




Assembly-
Tail lamp-Left



Assembly-
Tail lamp-Right



Switch-Brake pedal






Engine control
module (ECM)





Engine control
module (ECM)





Junction box-Central

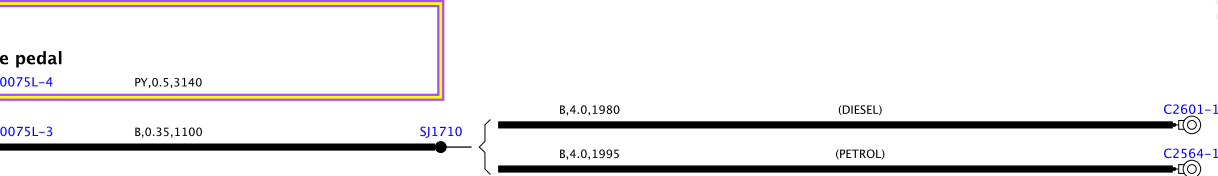


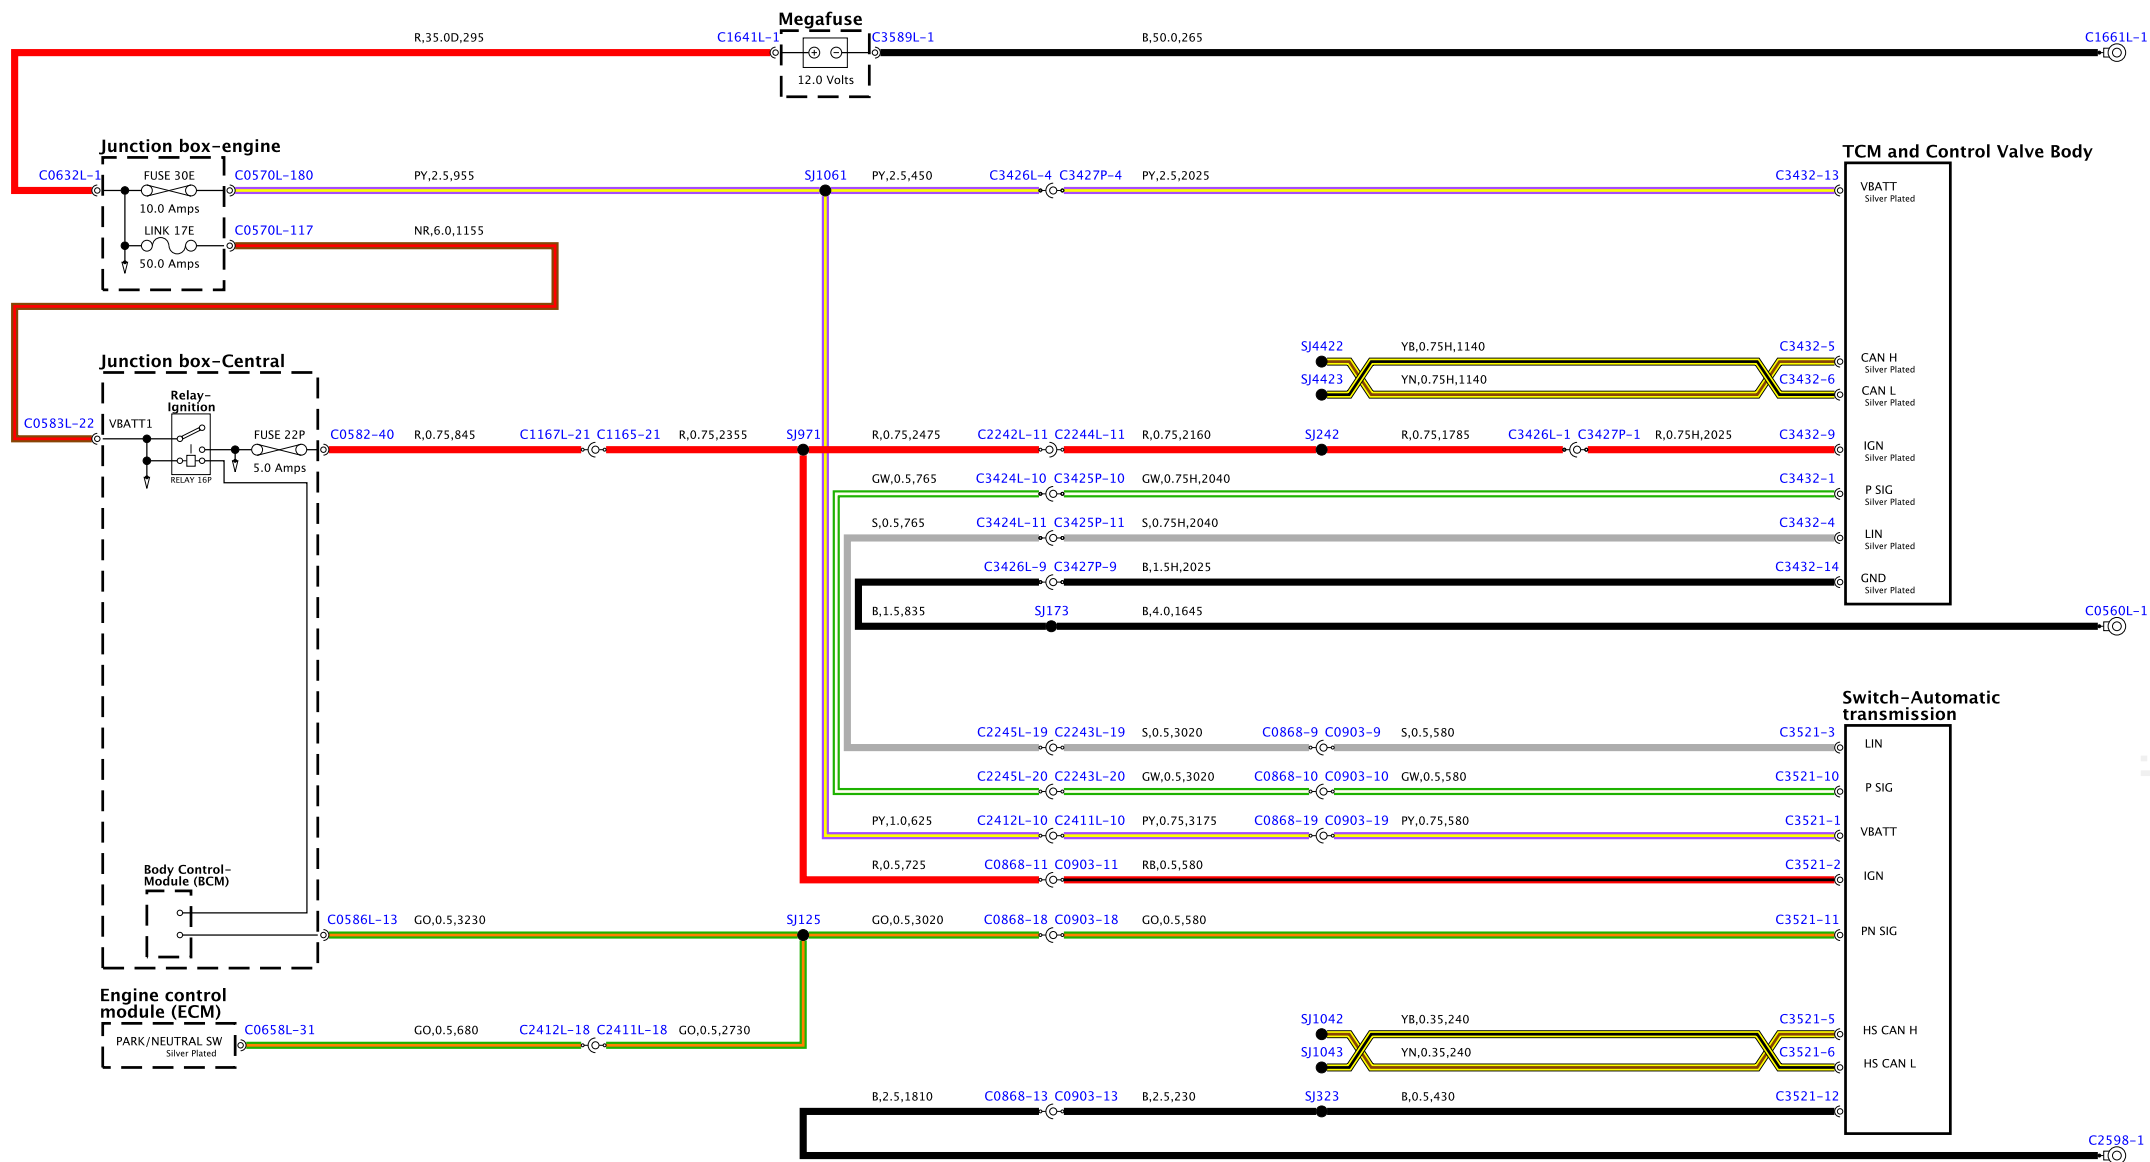


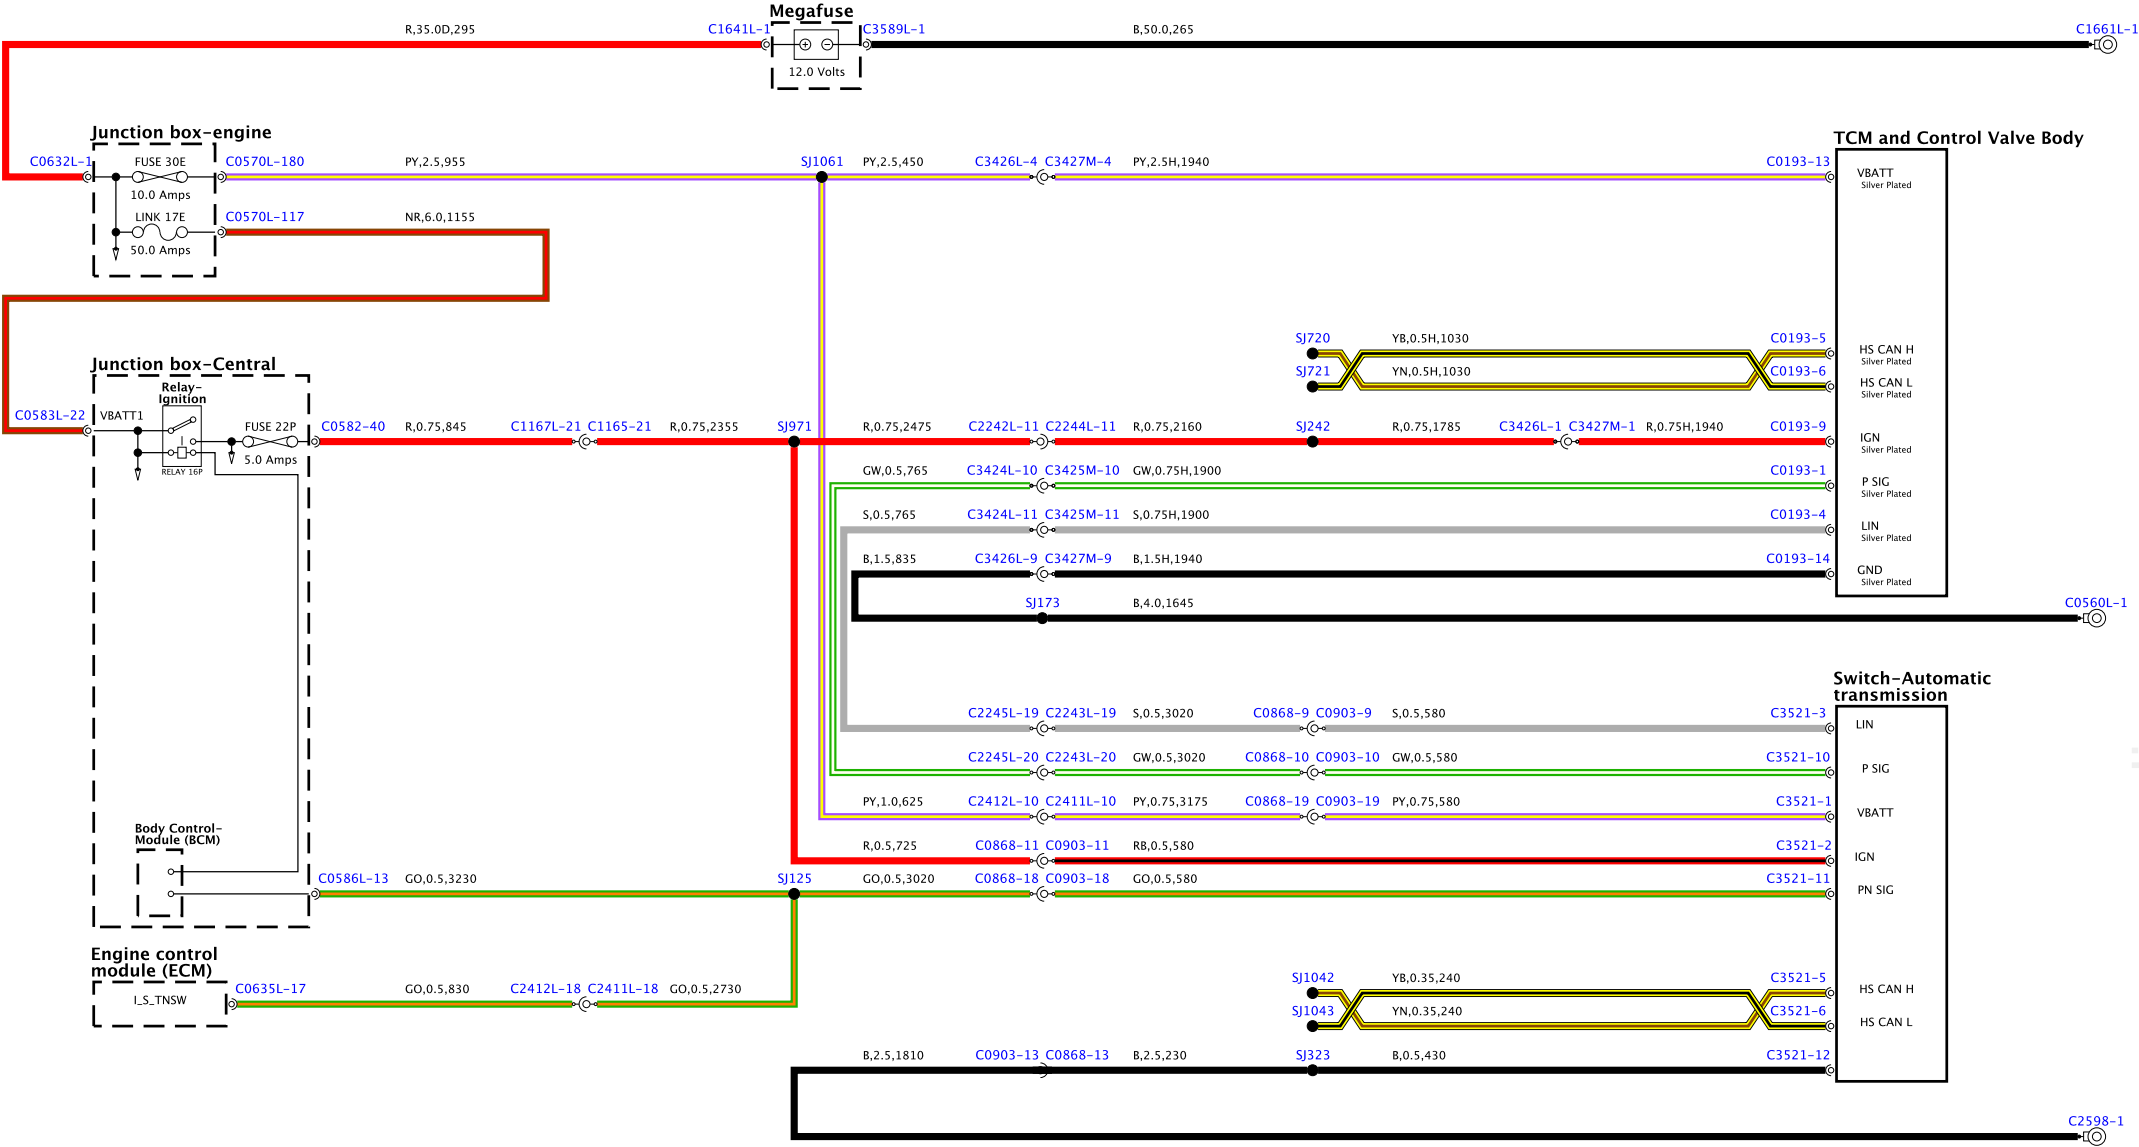

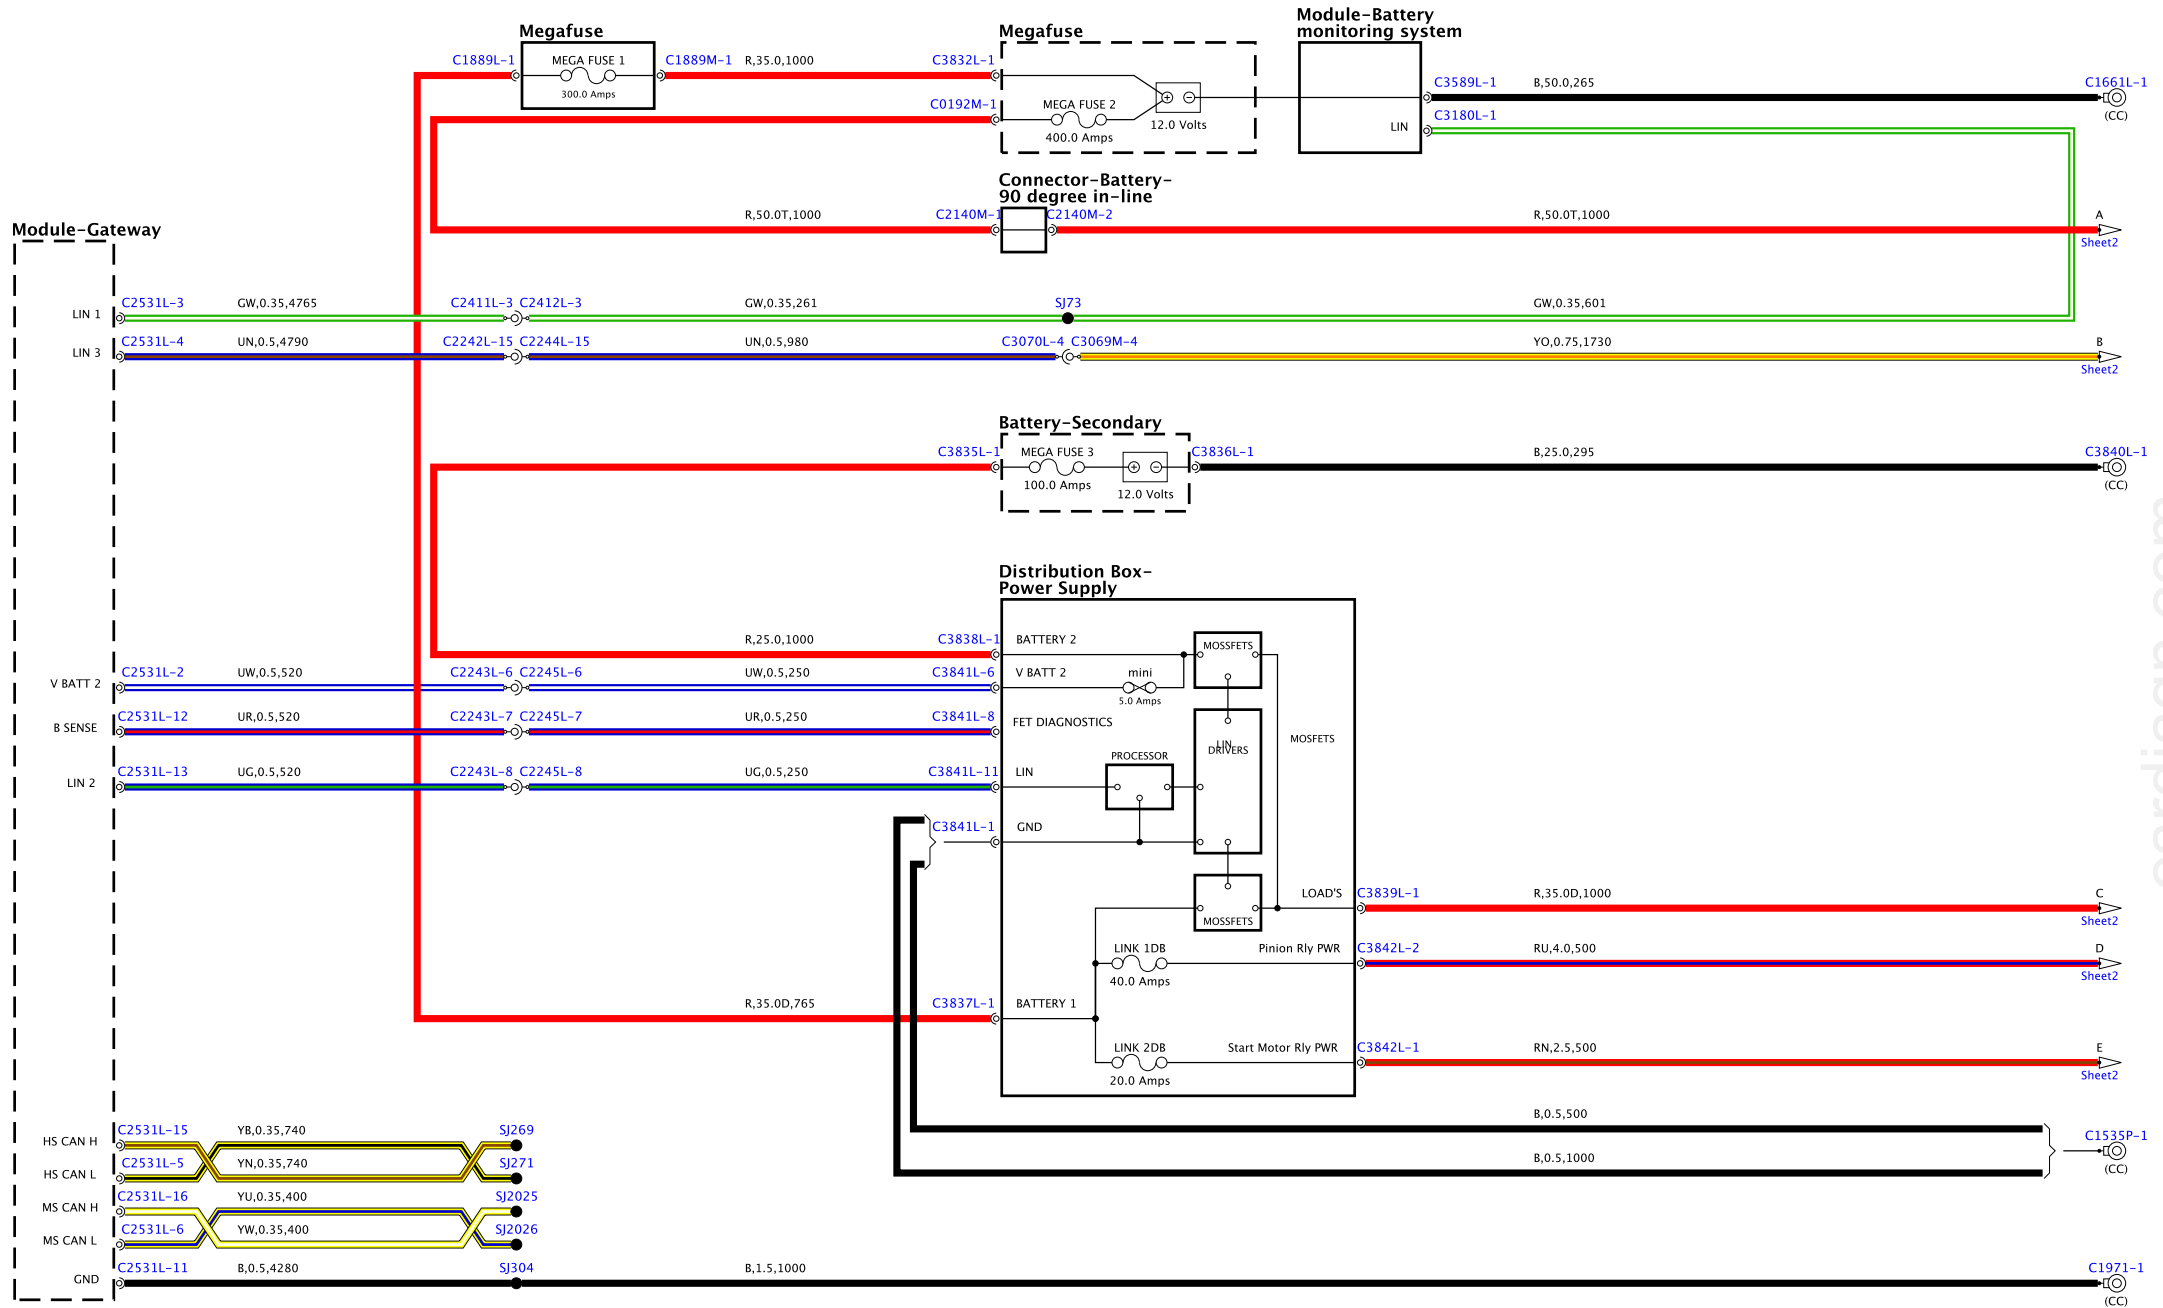

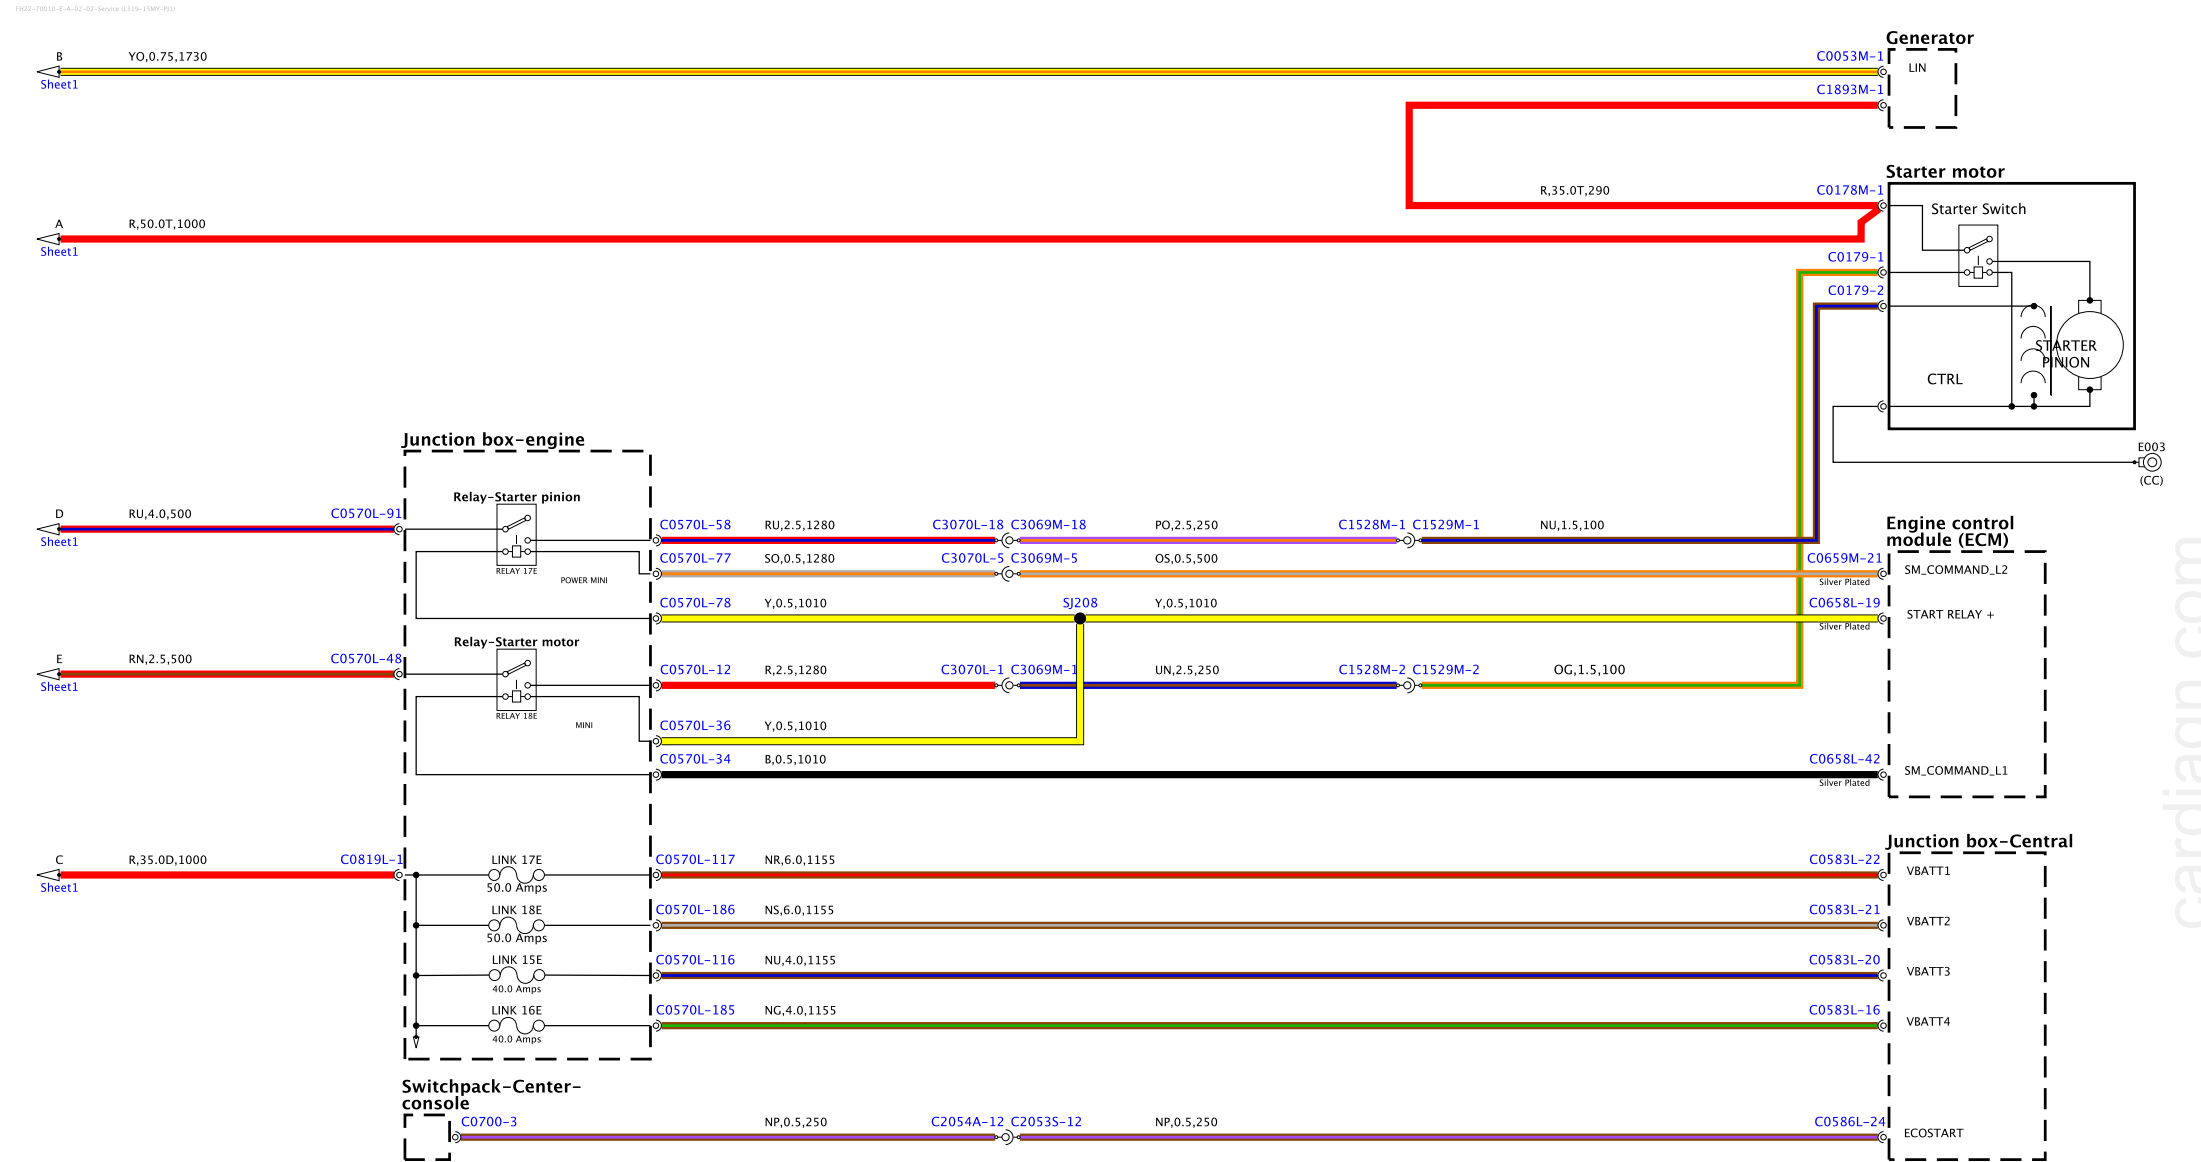

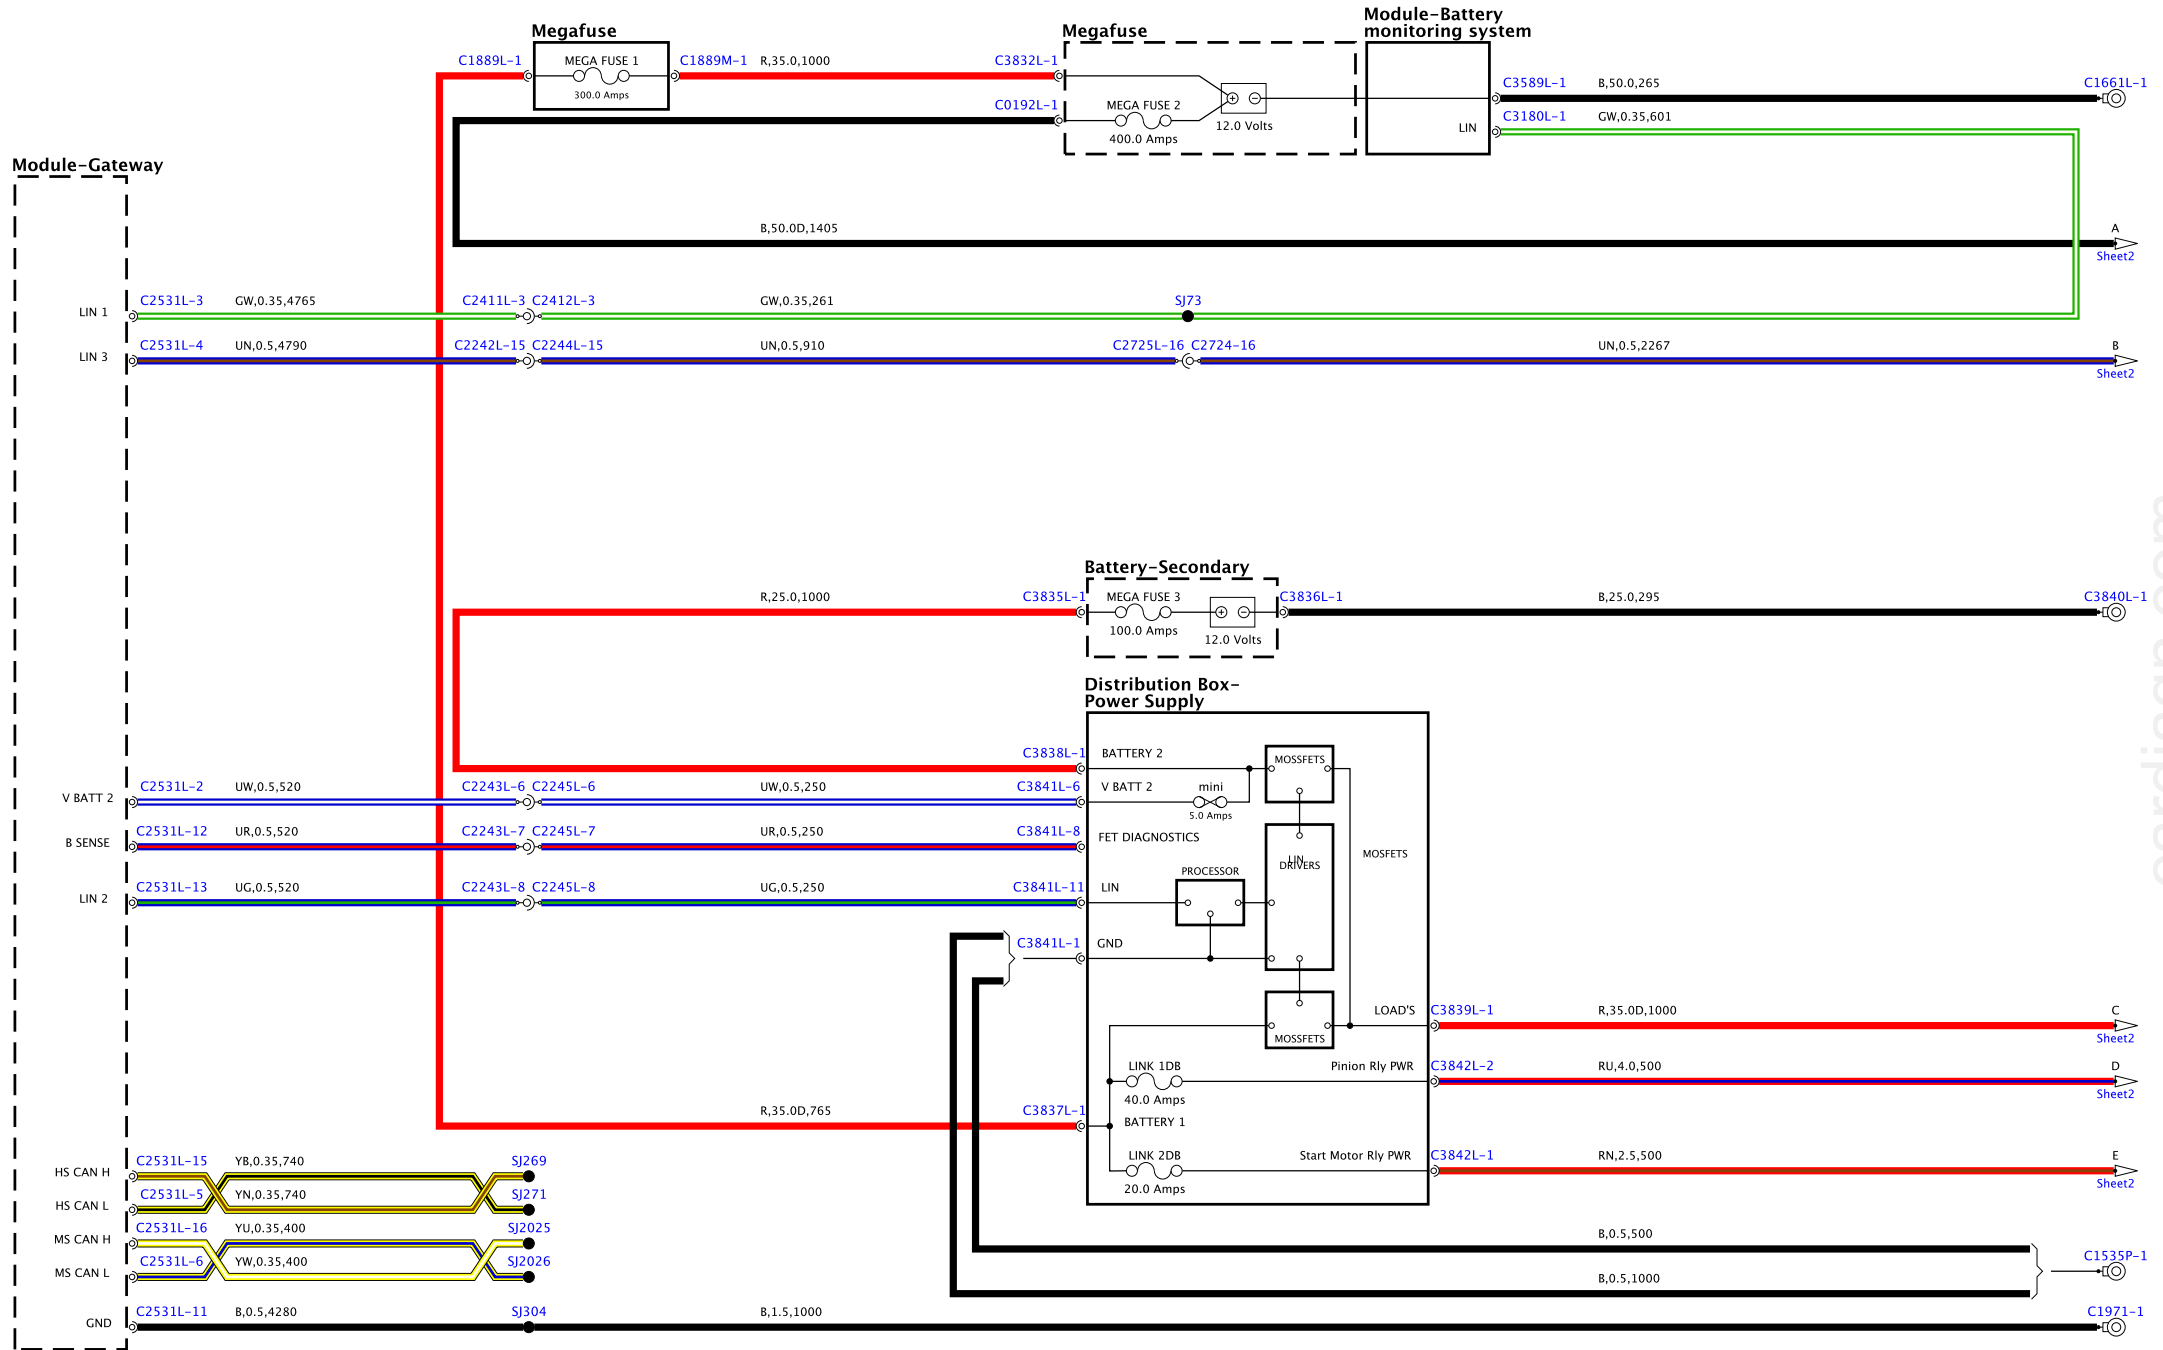

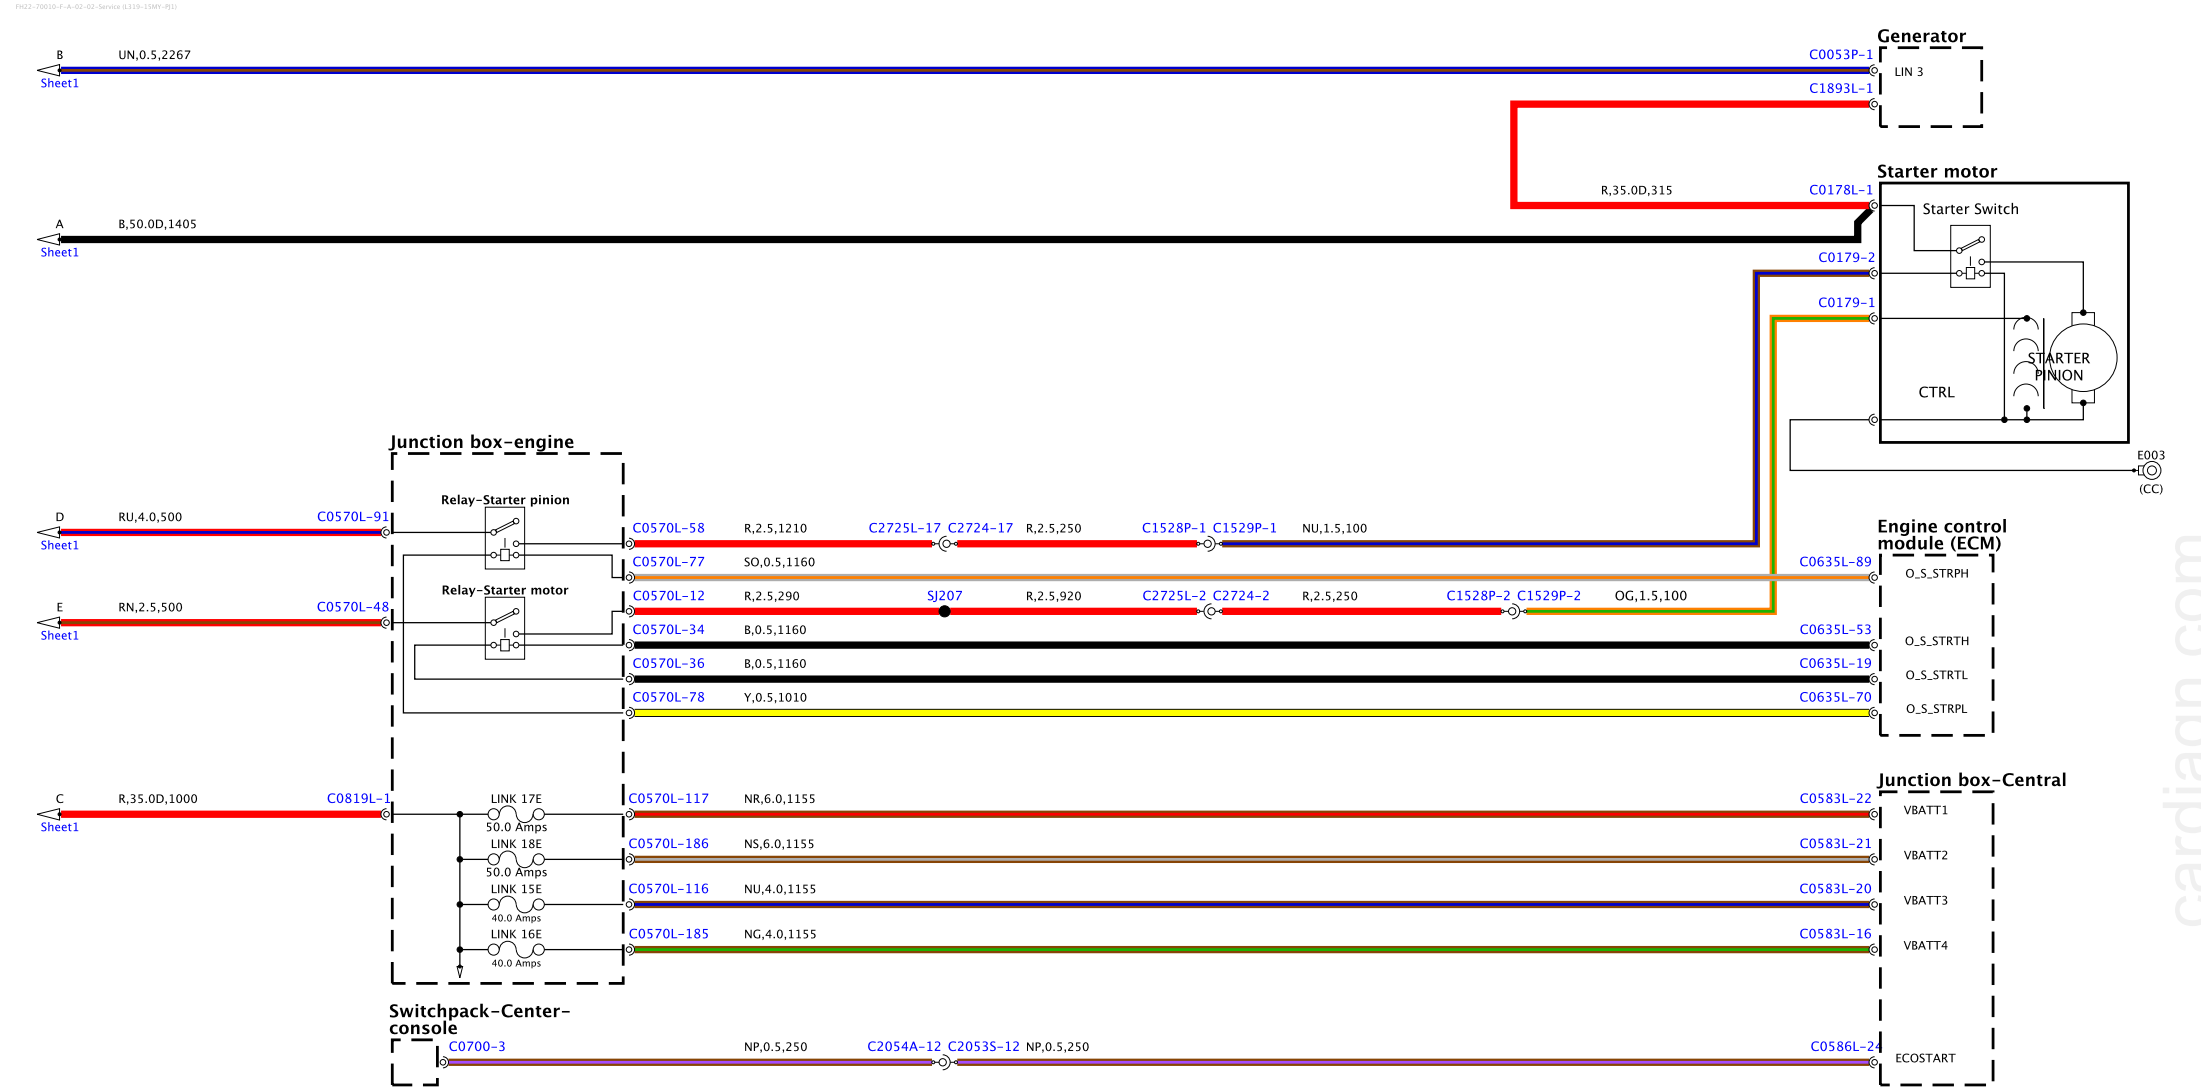

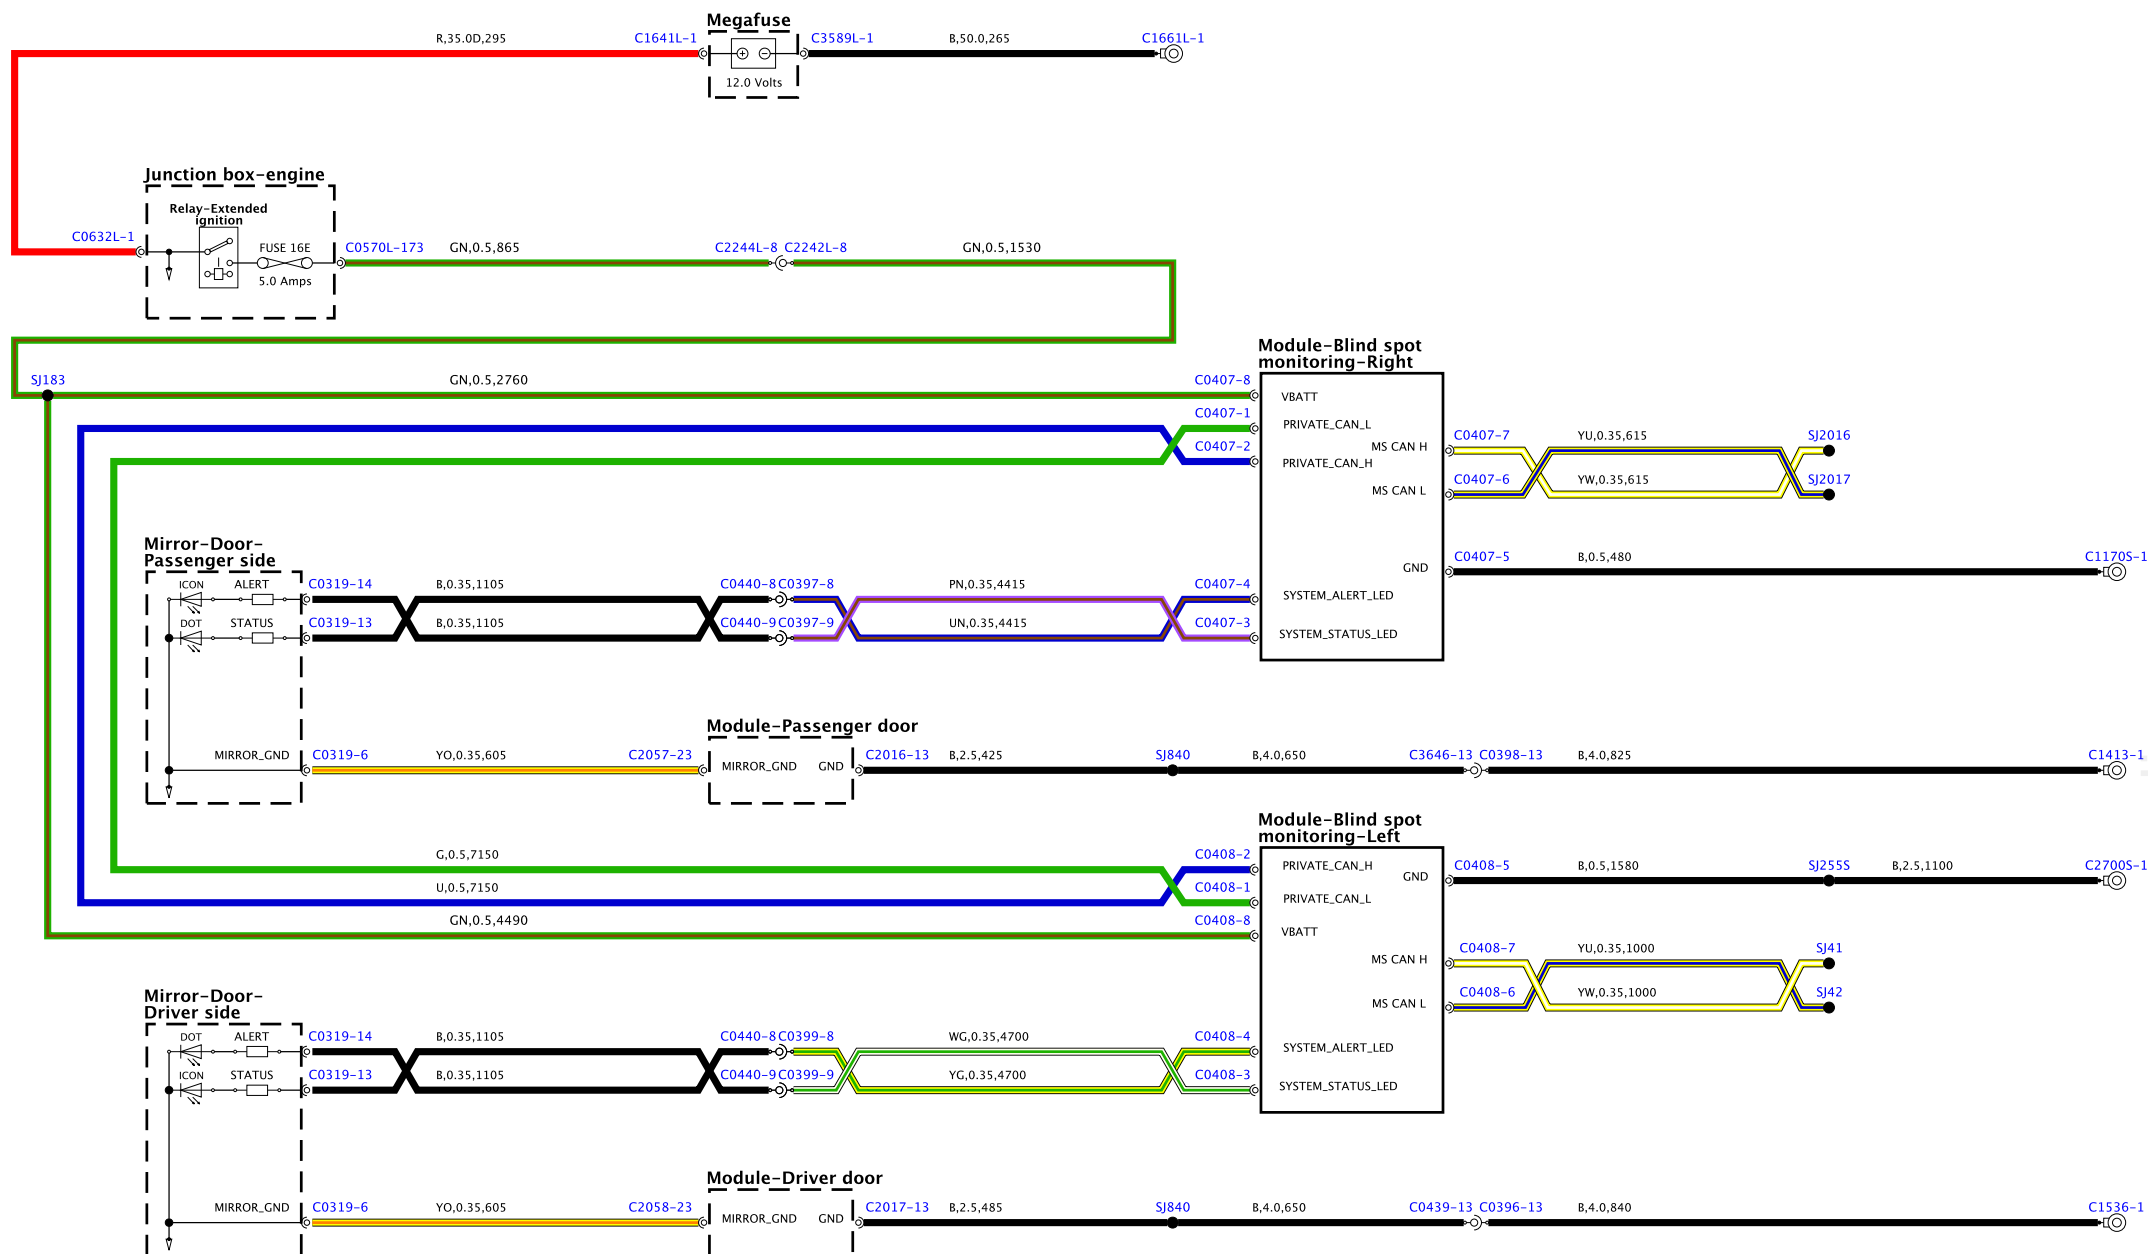


FIG 22-700116-E-A-03-04-Service 6.310-1300-PS1)

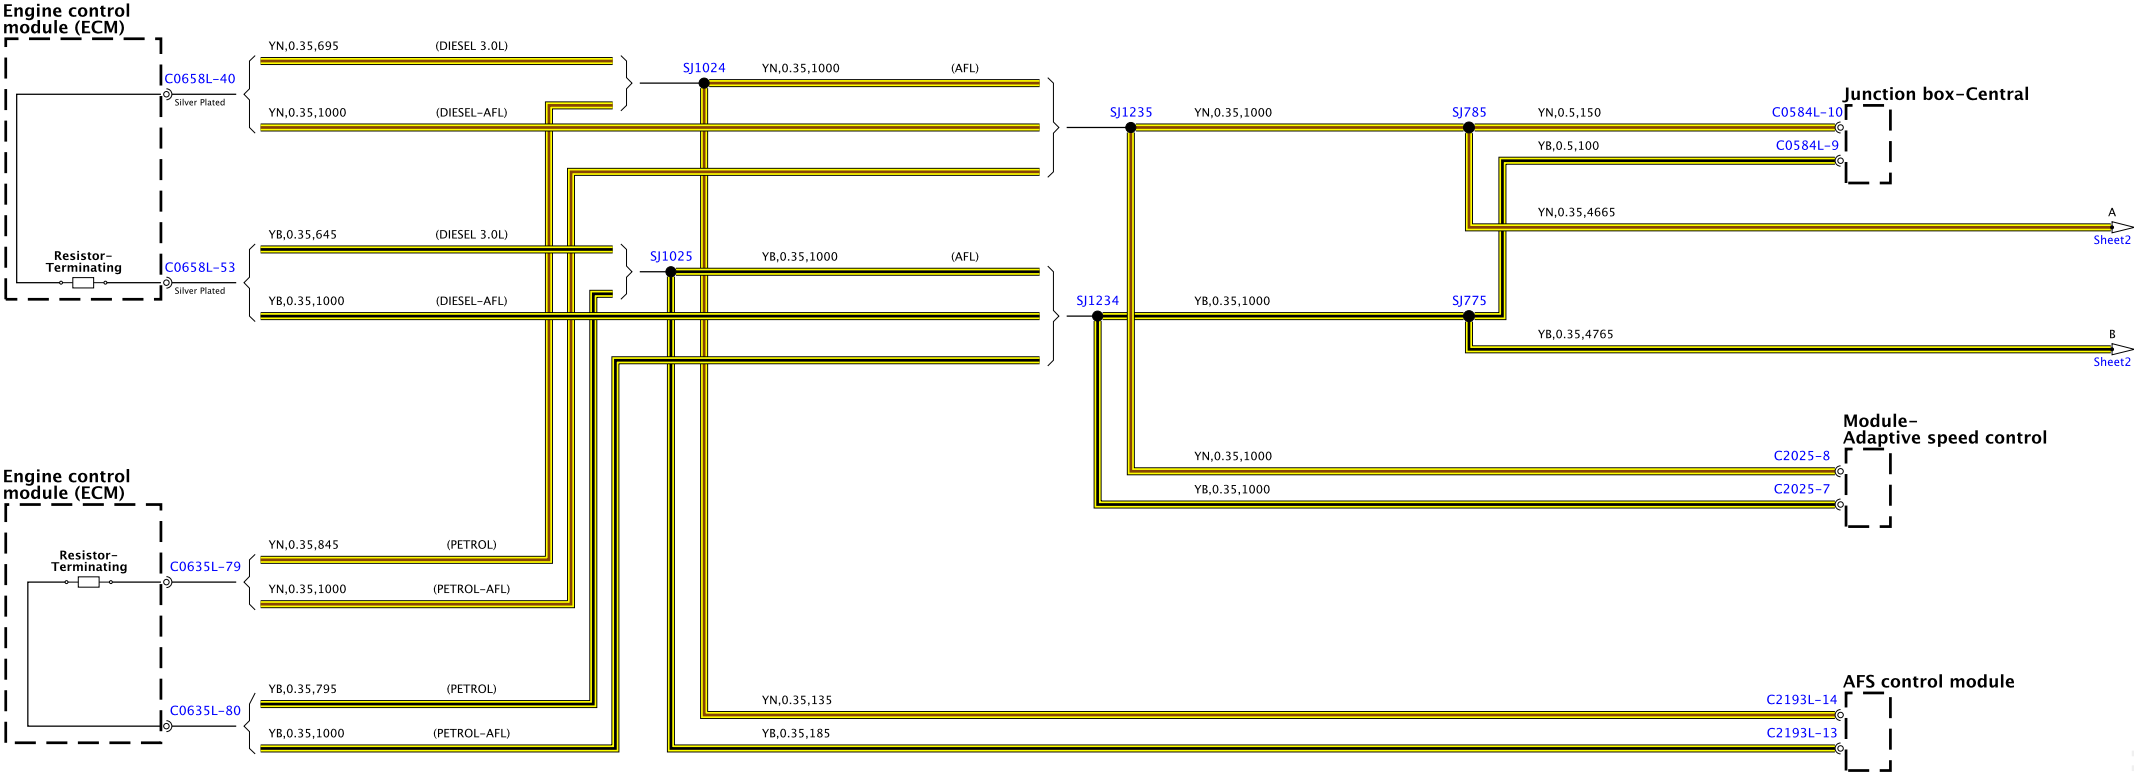


FIG22-70010-E-A-03-04-Service (3139-1500V-P31)

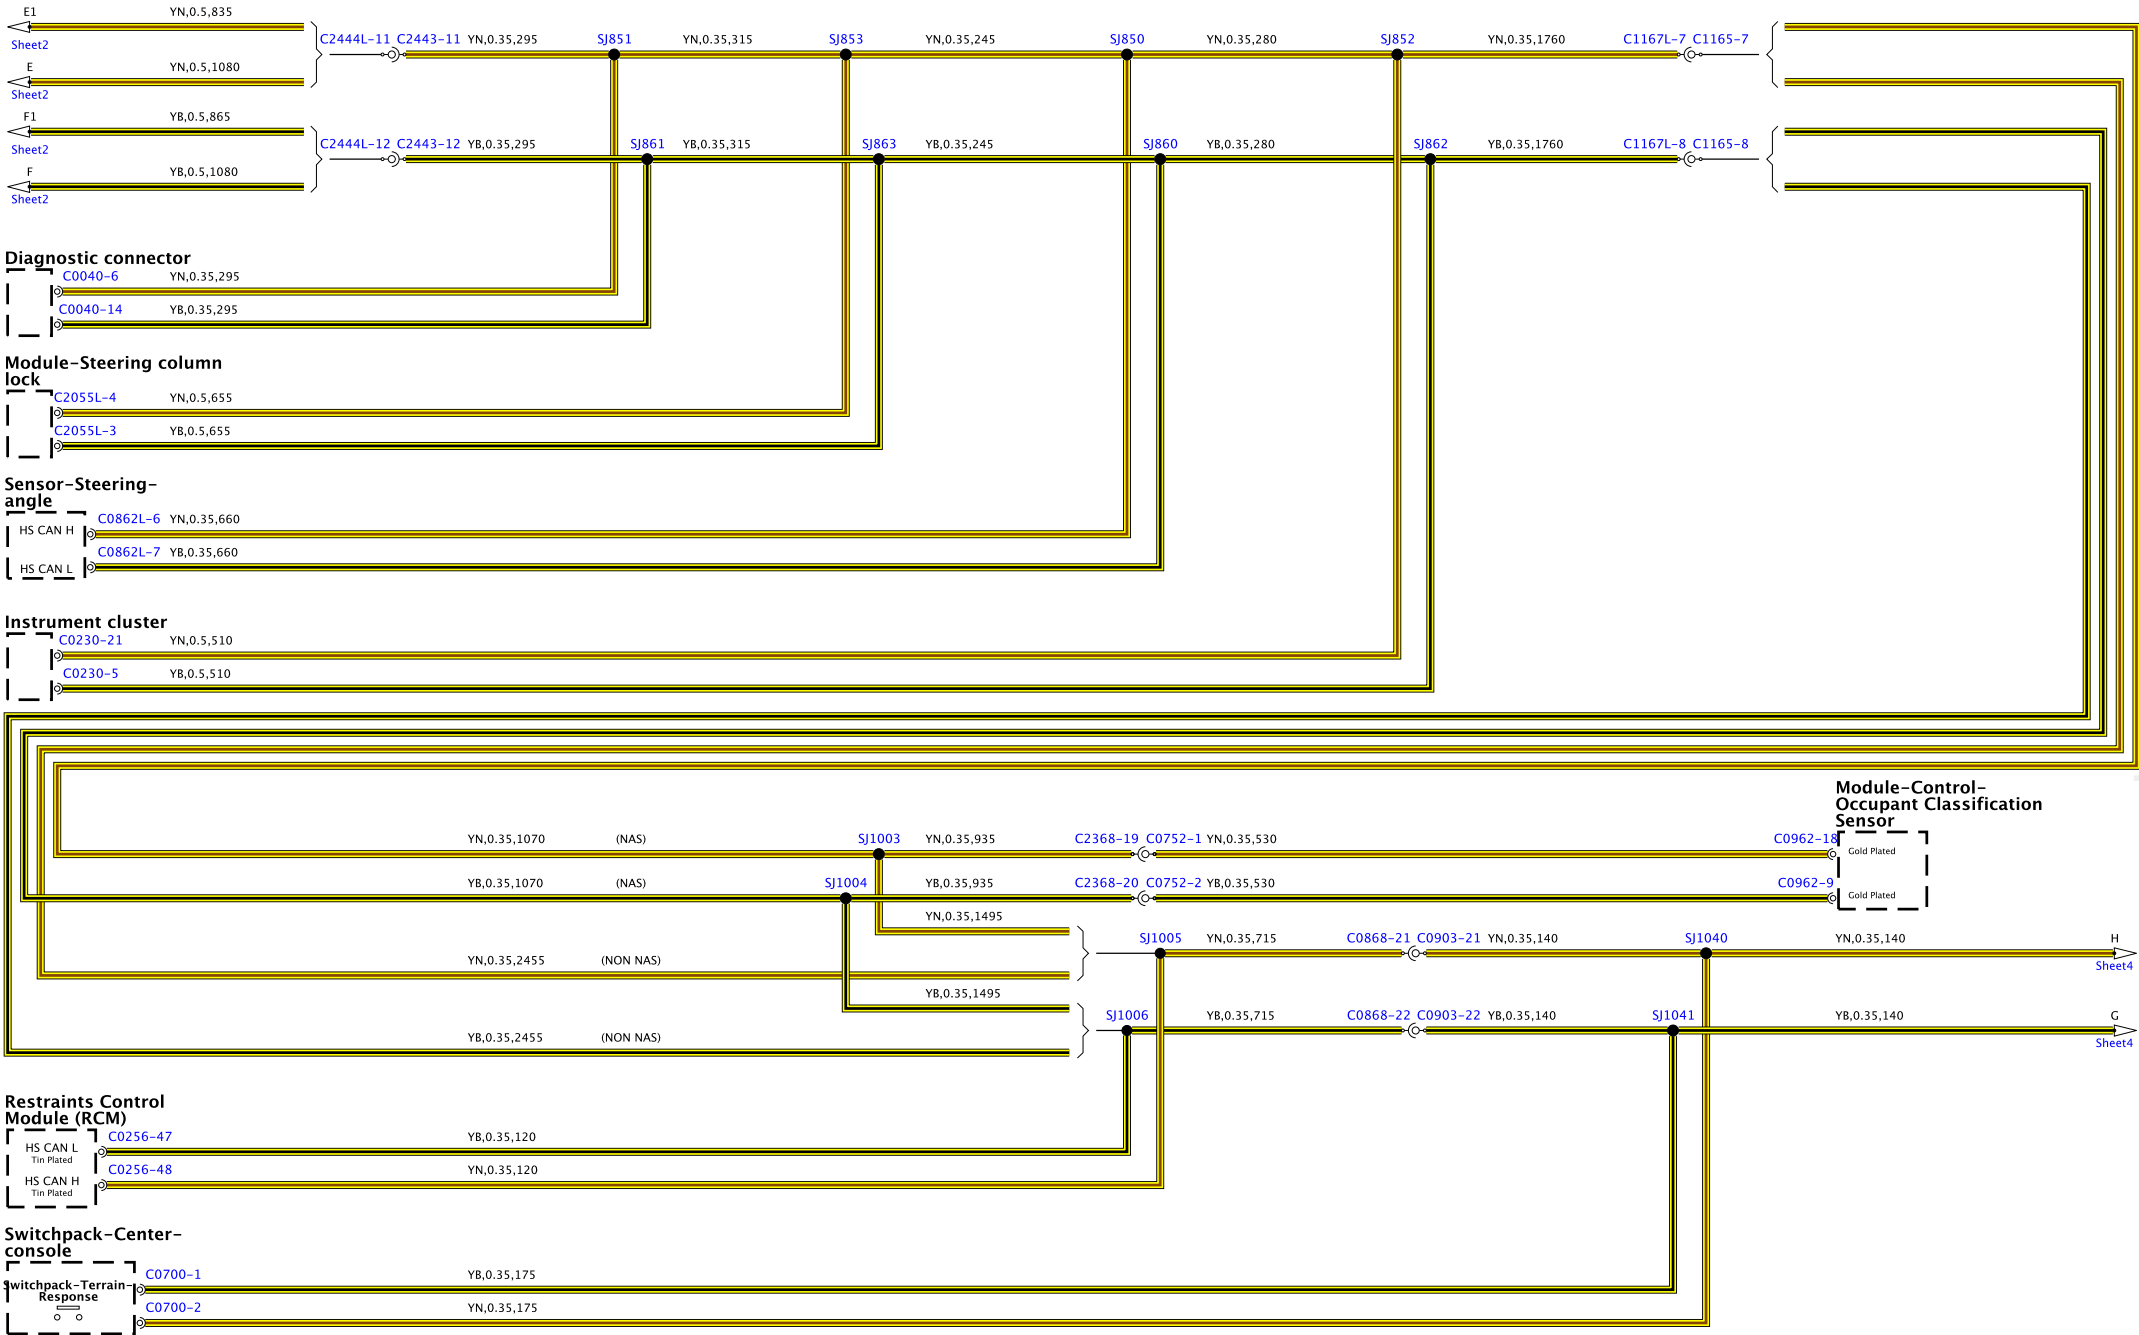


FIG22-70016-1-A-04-04-Service (3,319-15MY-03)

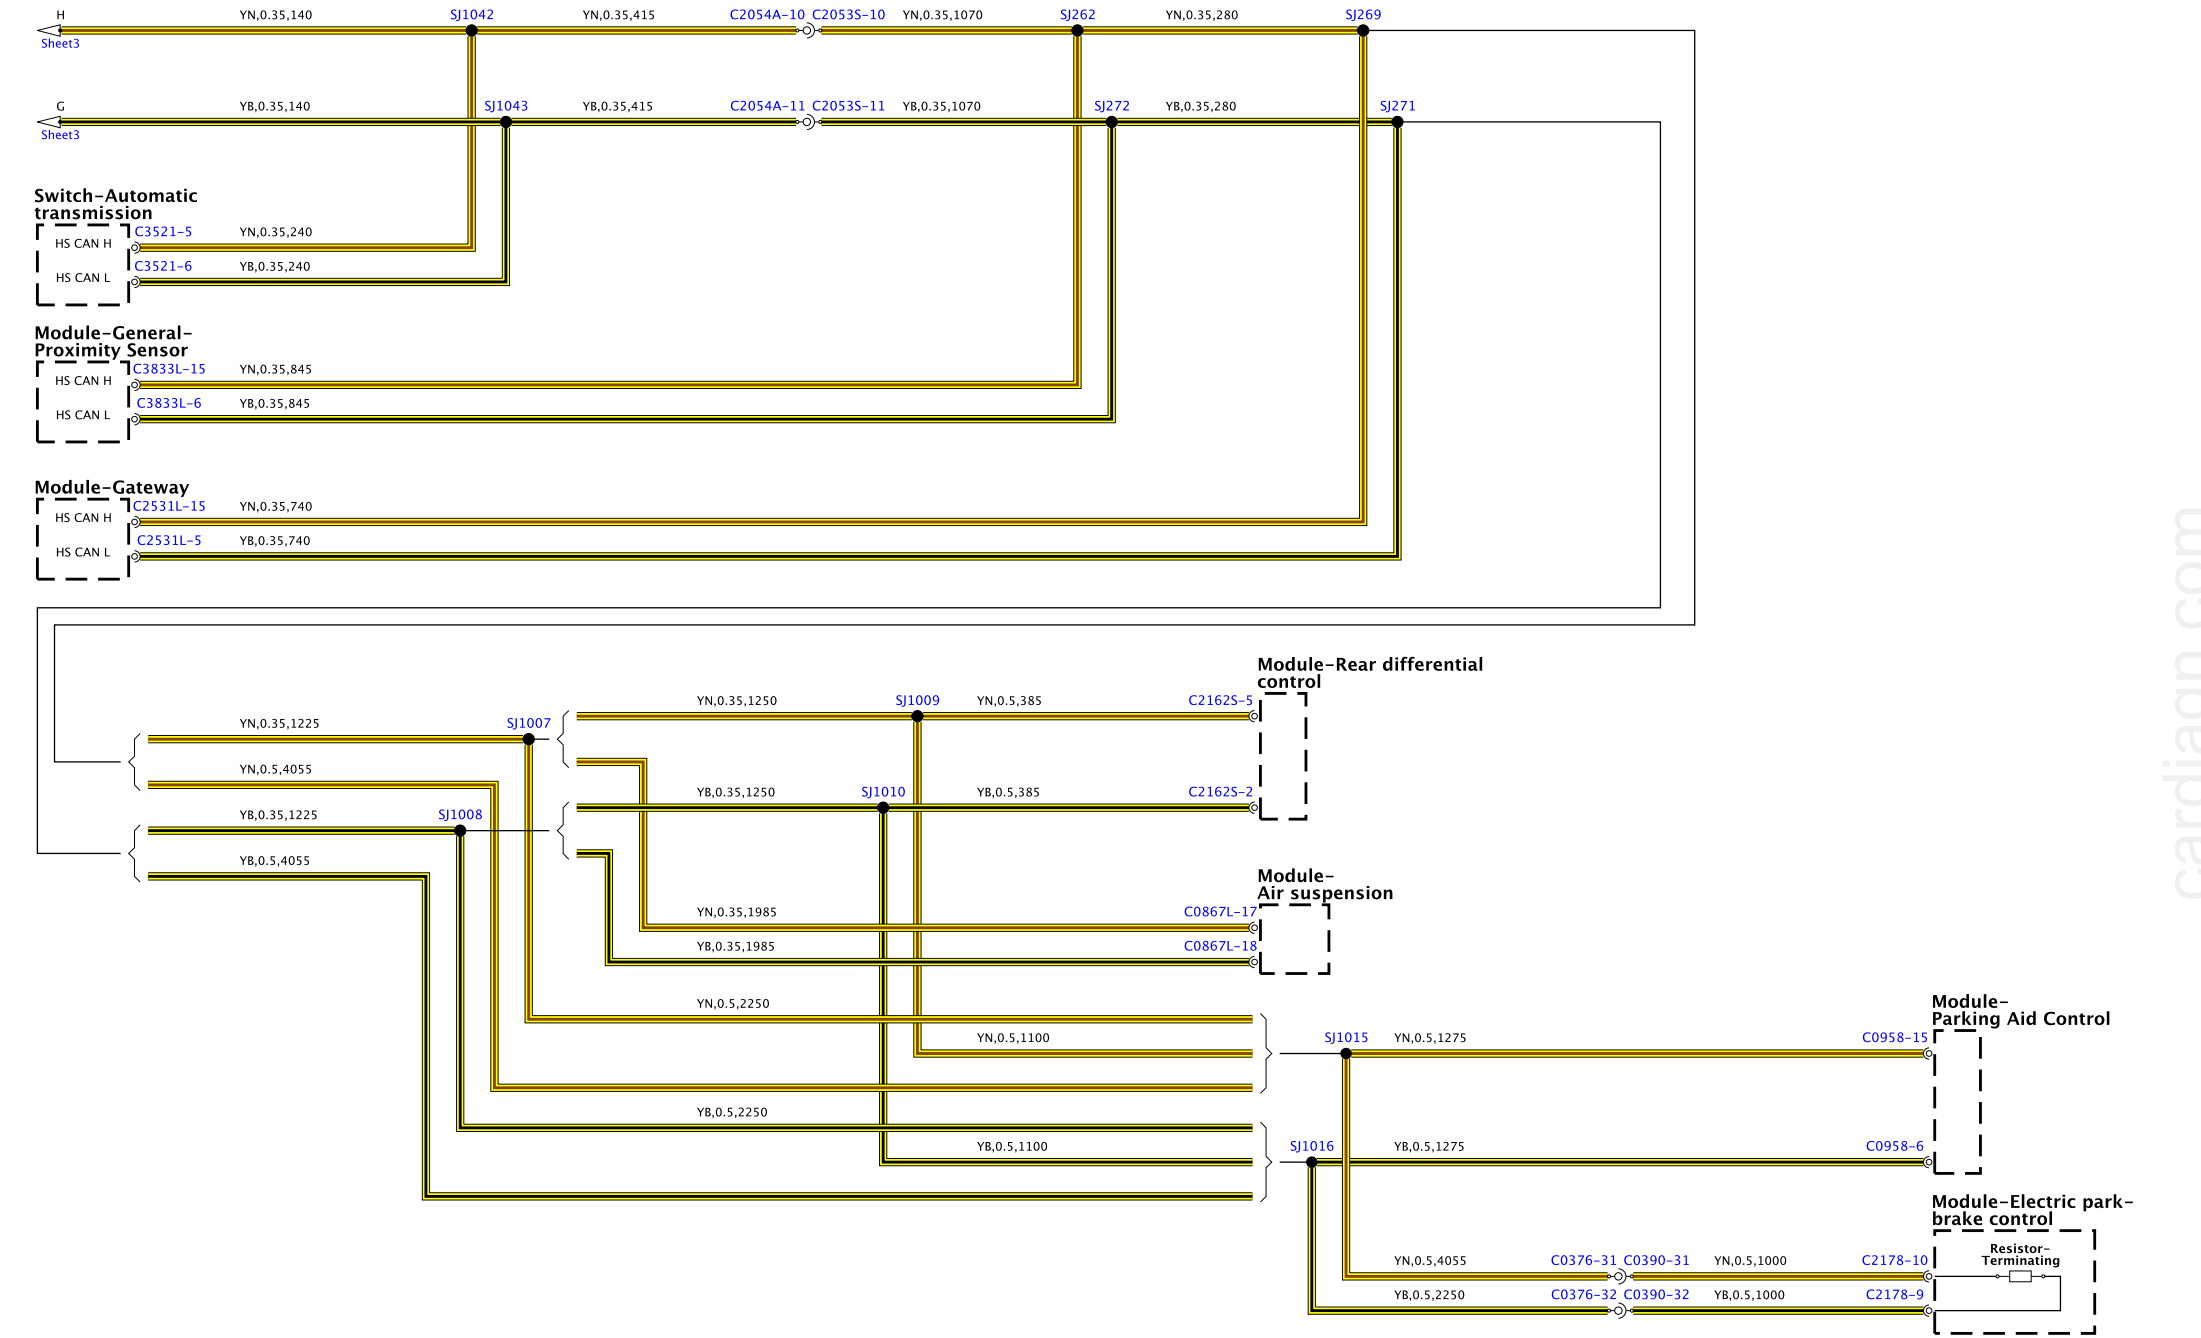


FIG22-70010-F-A-01-02-Service (3.130-1300-P01)



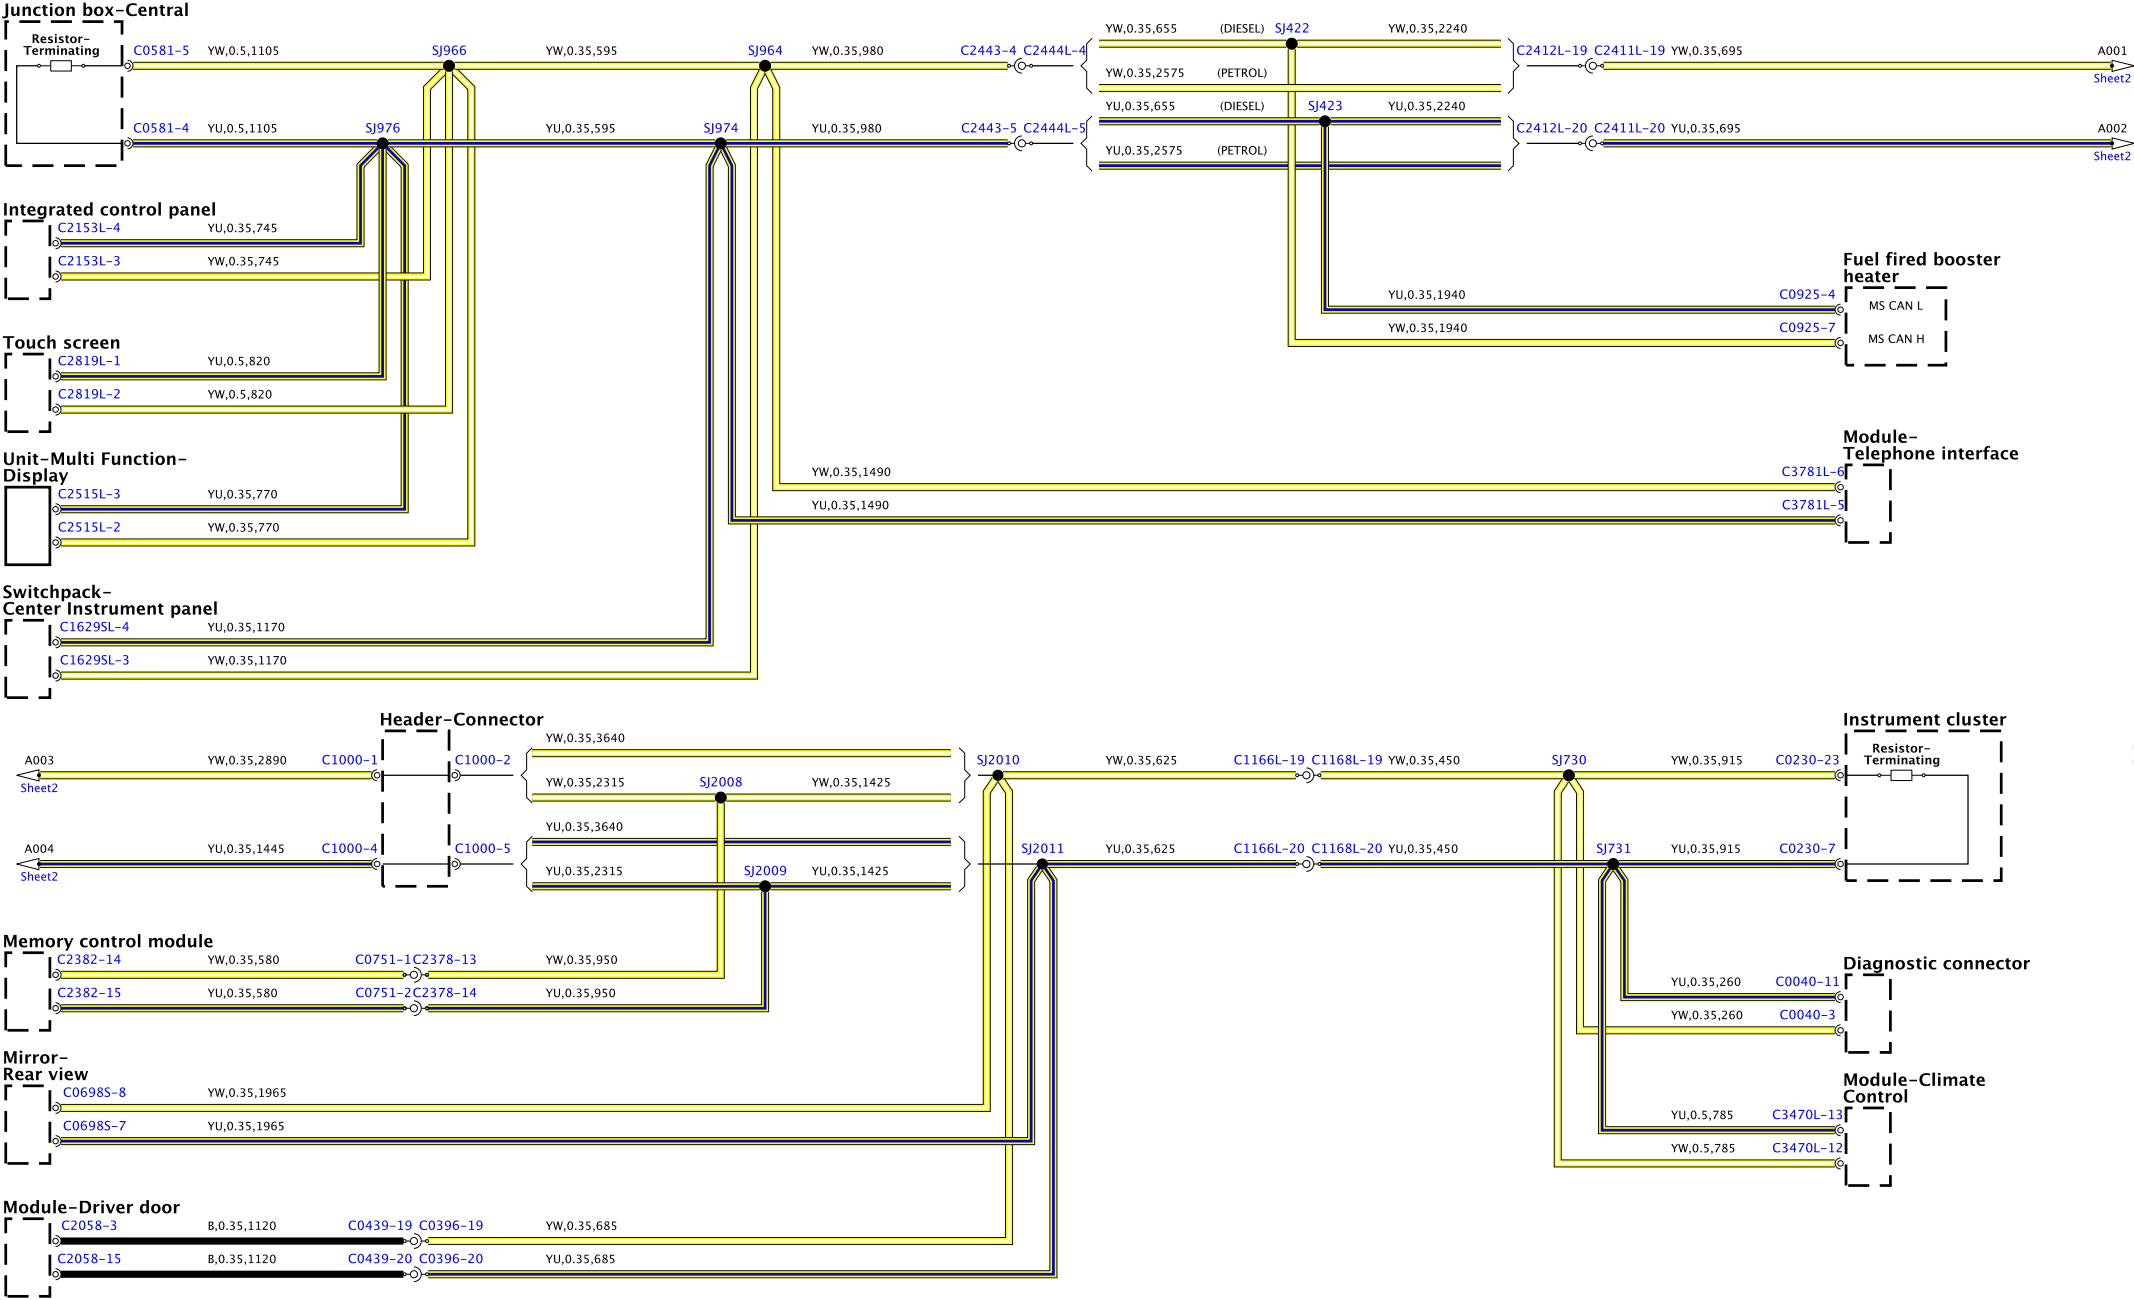





FIG2-70462-A-A-01-03-Service (339-15MY-R1)

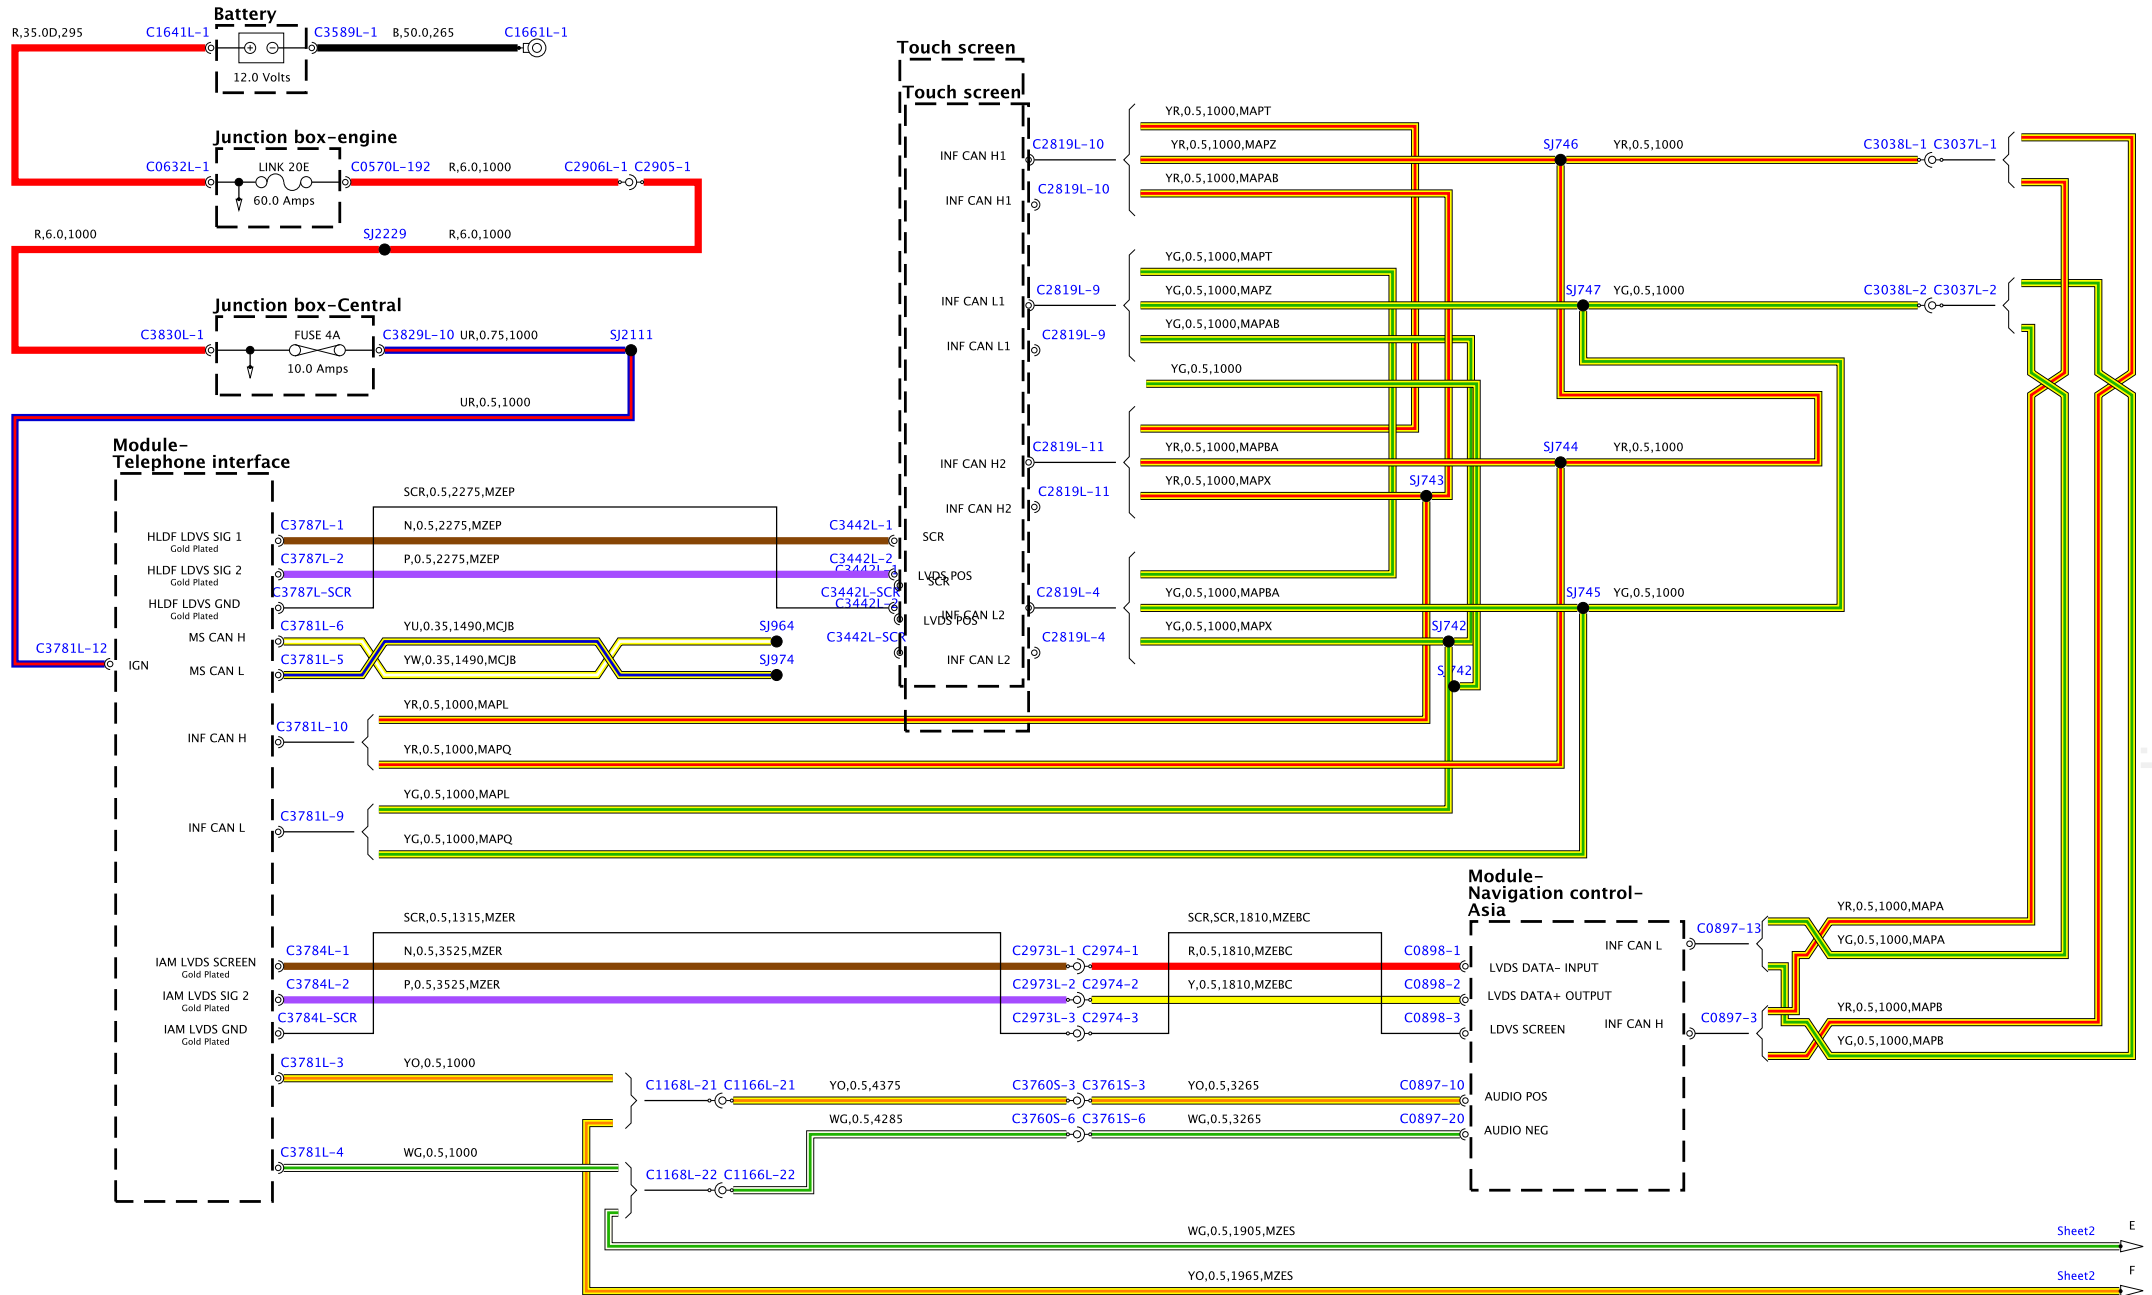

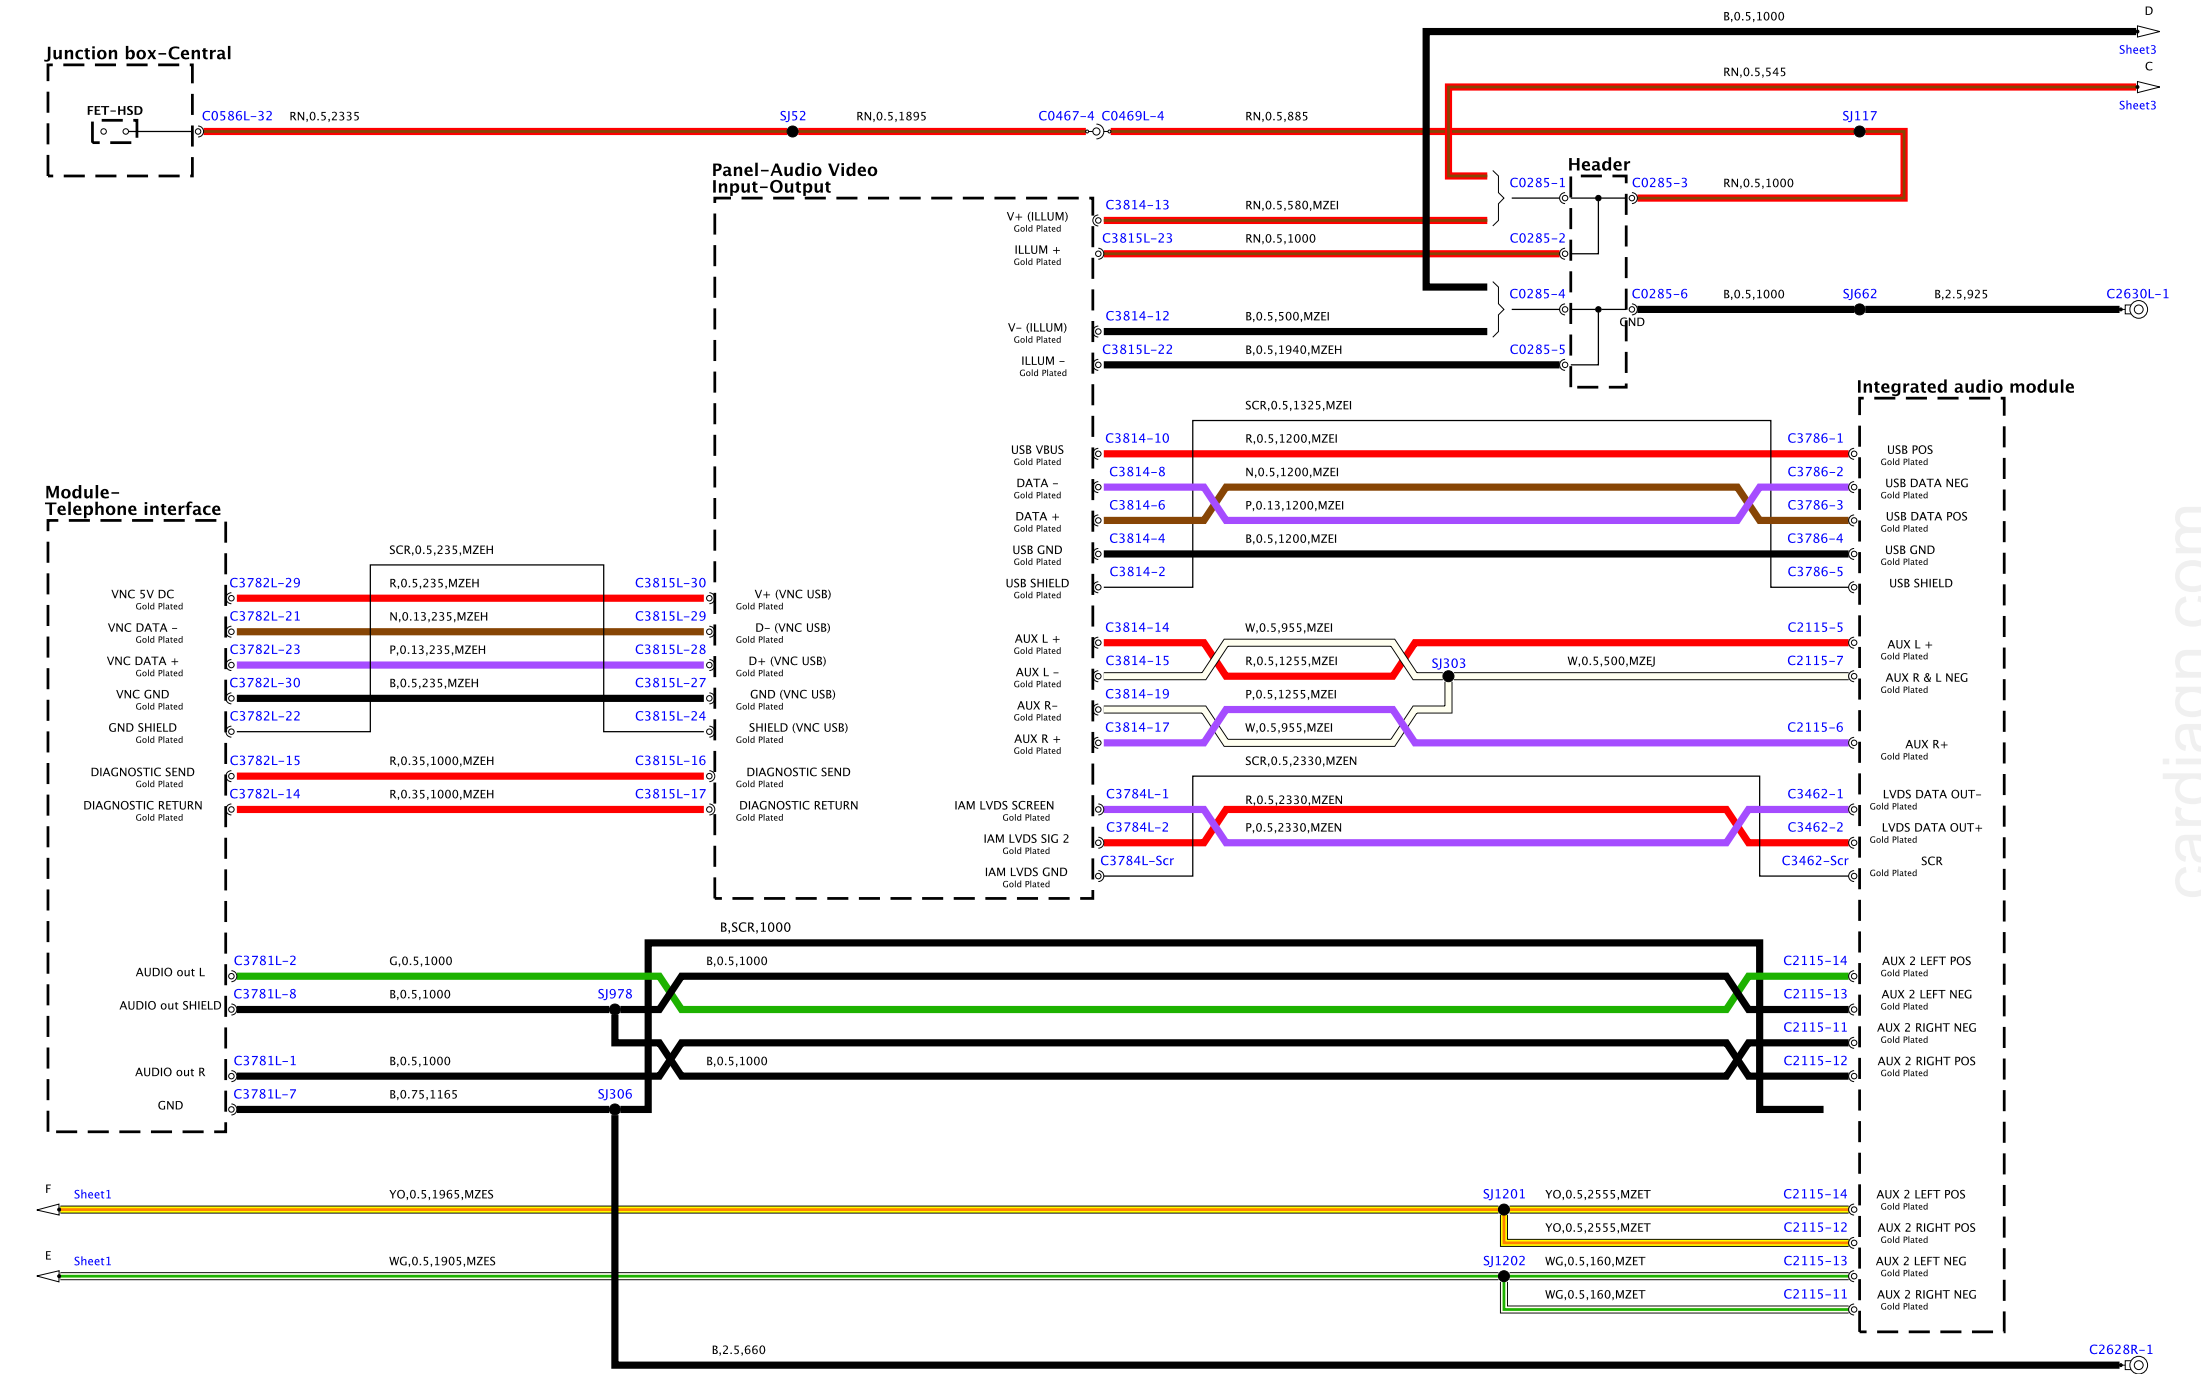

FH22-70462-A-A-03-03-Service (L319-15MY-PJ1)

Panel-Audio Video
Input-Output

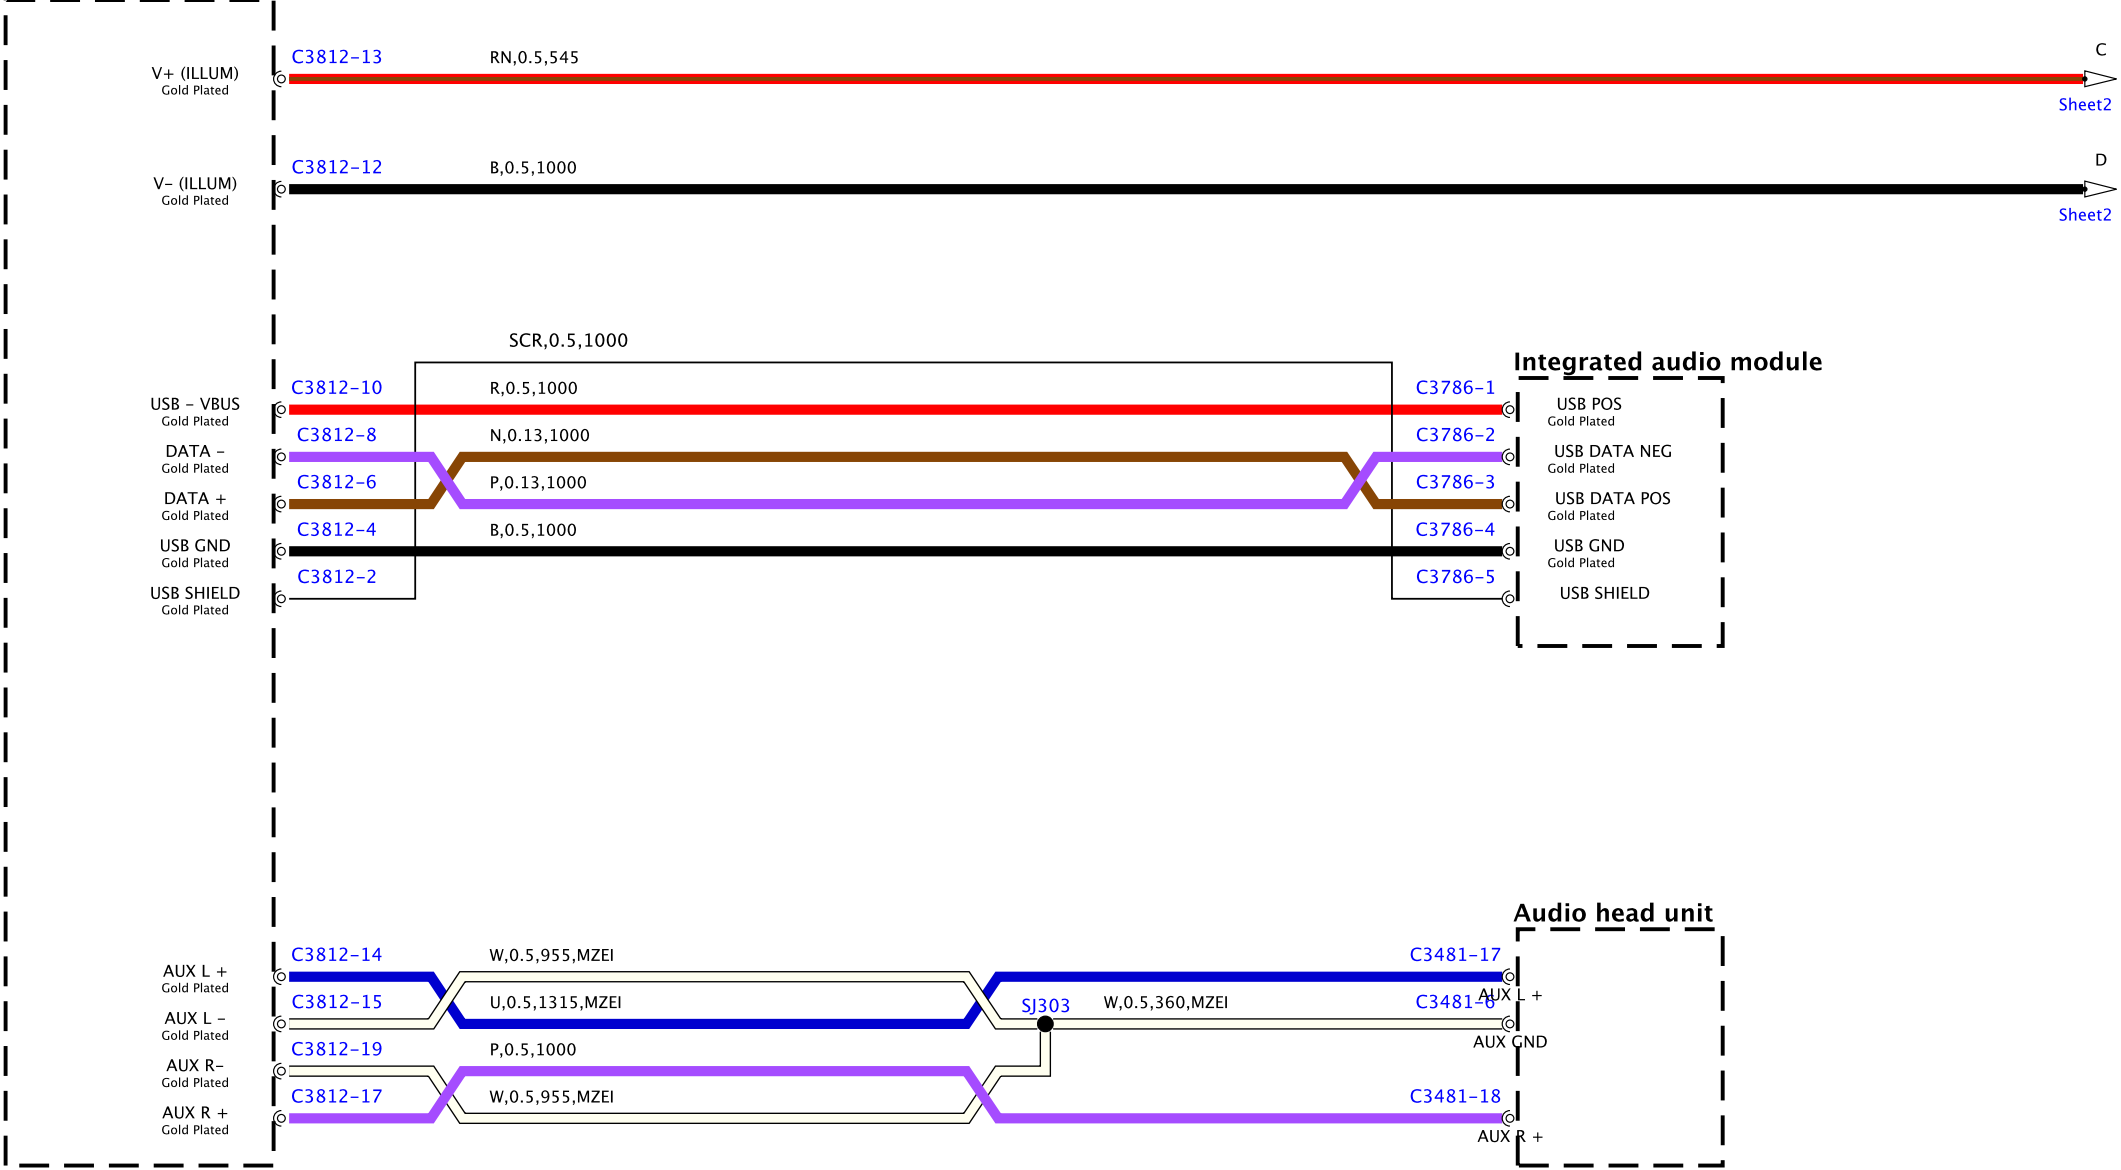

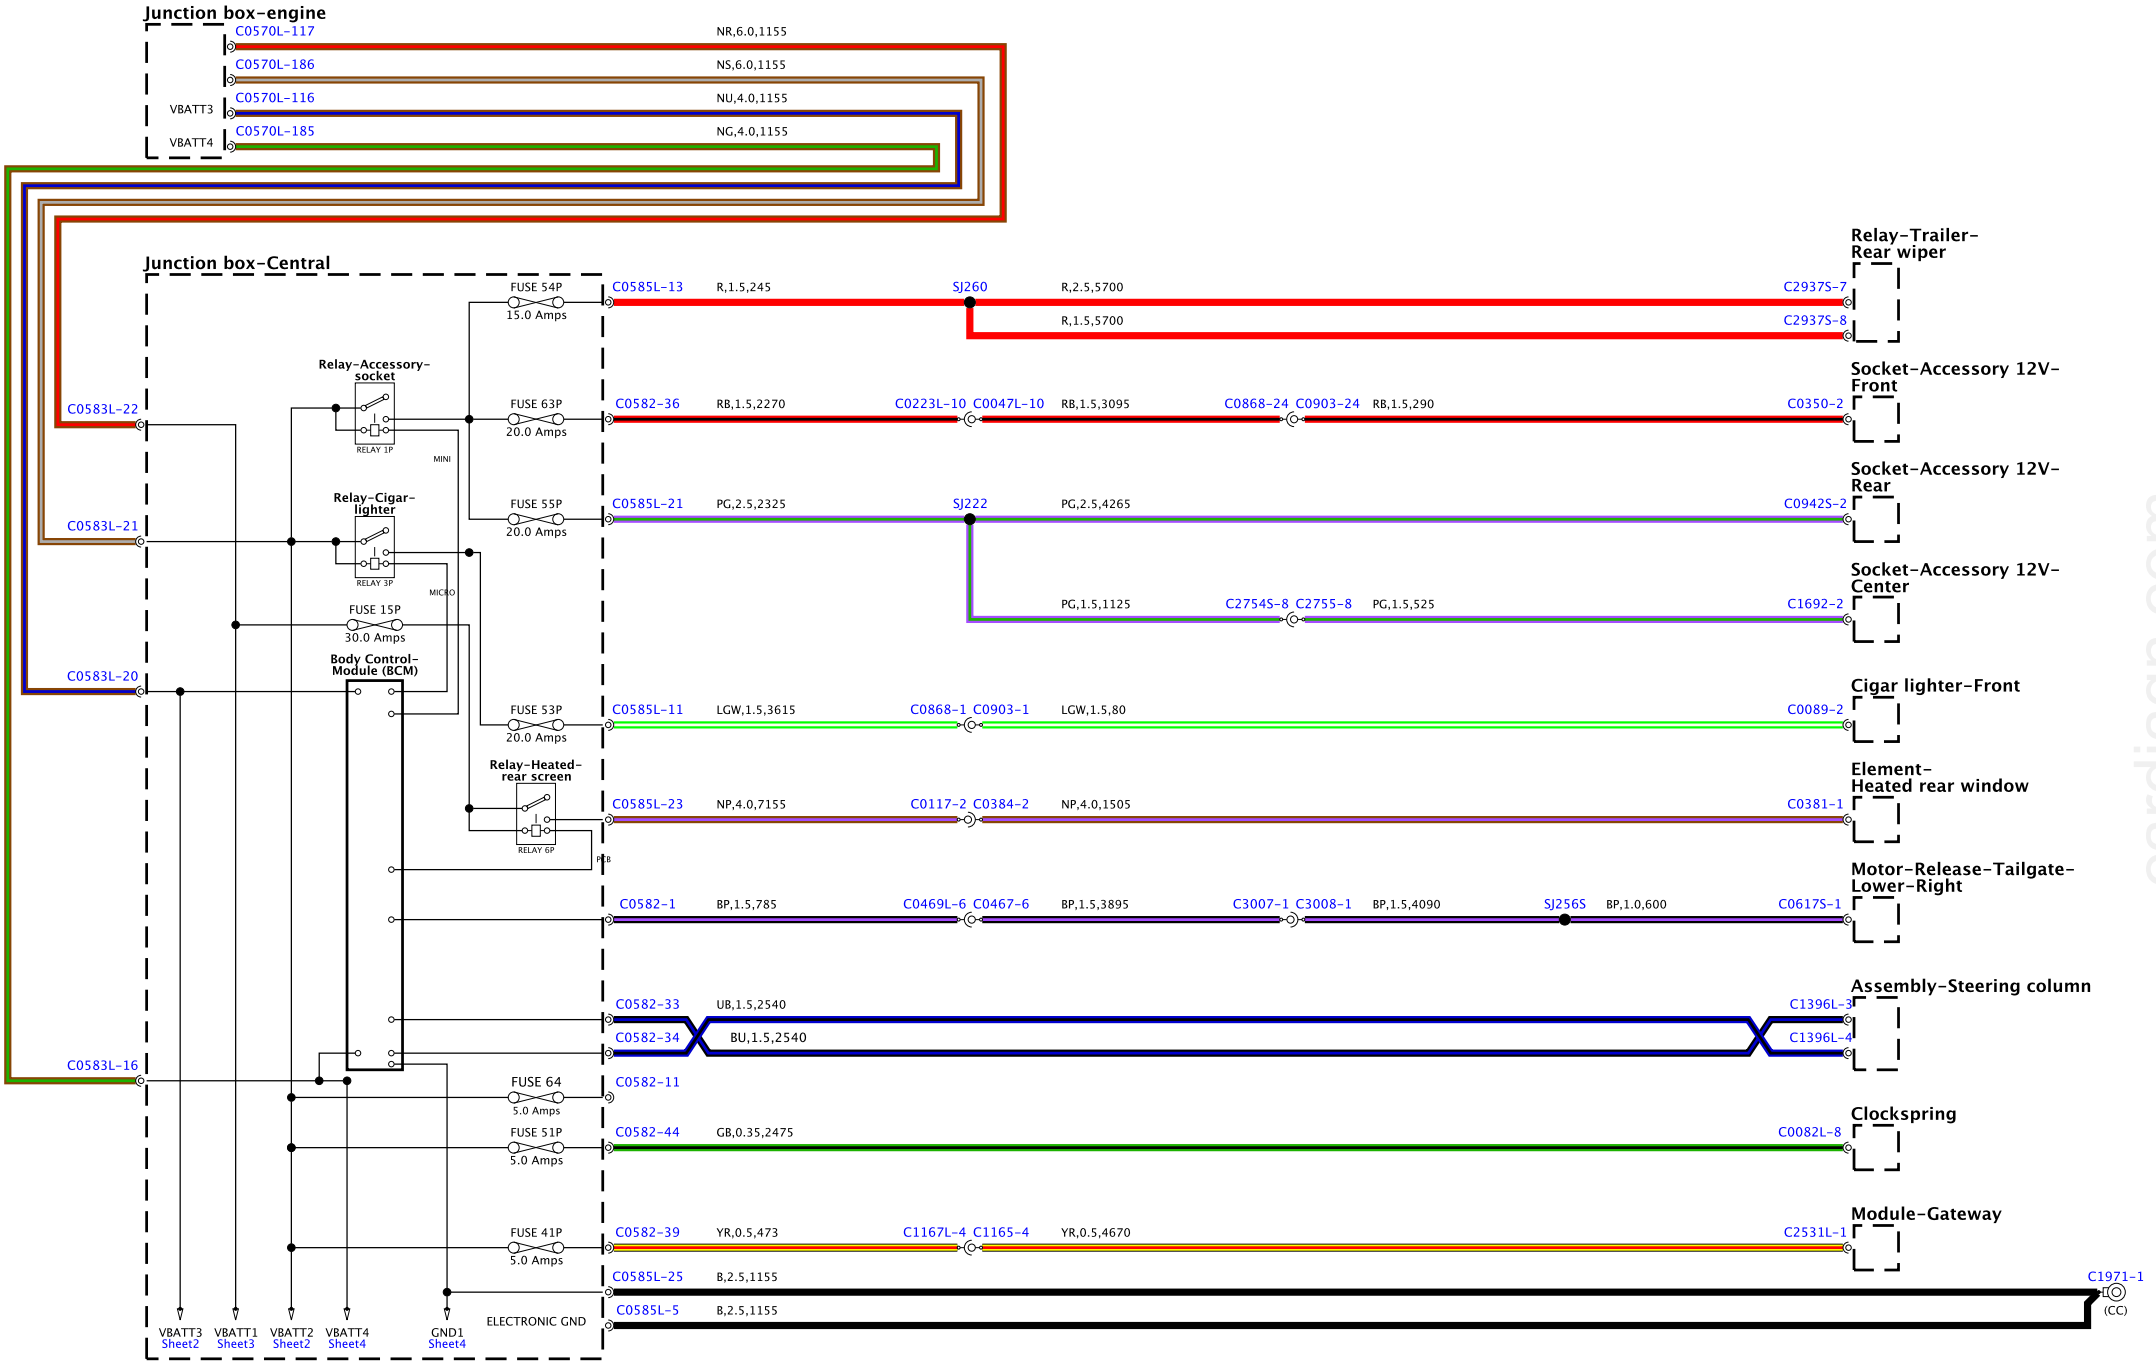


FIG2-70010-D-A-02-13-Service (3.19-13MY-PD)

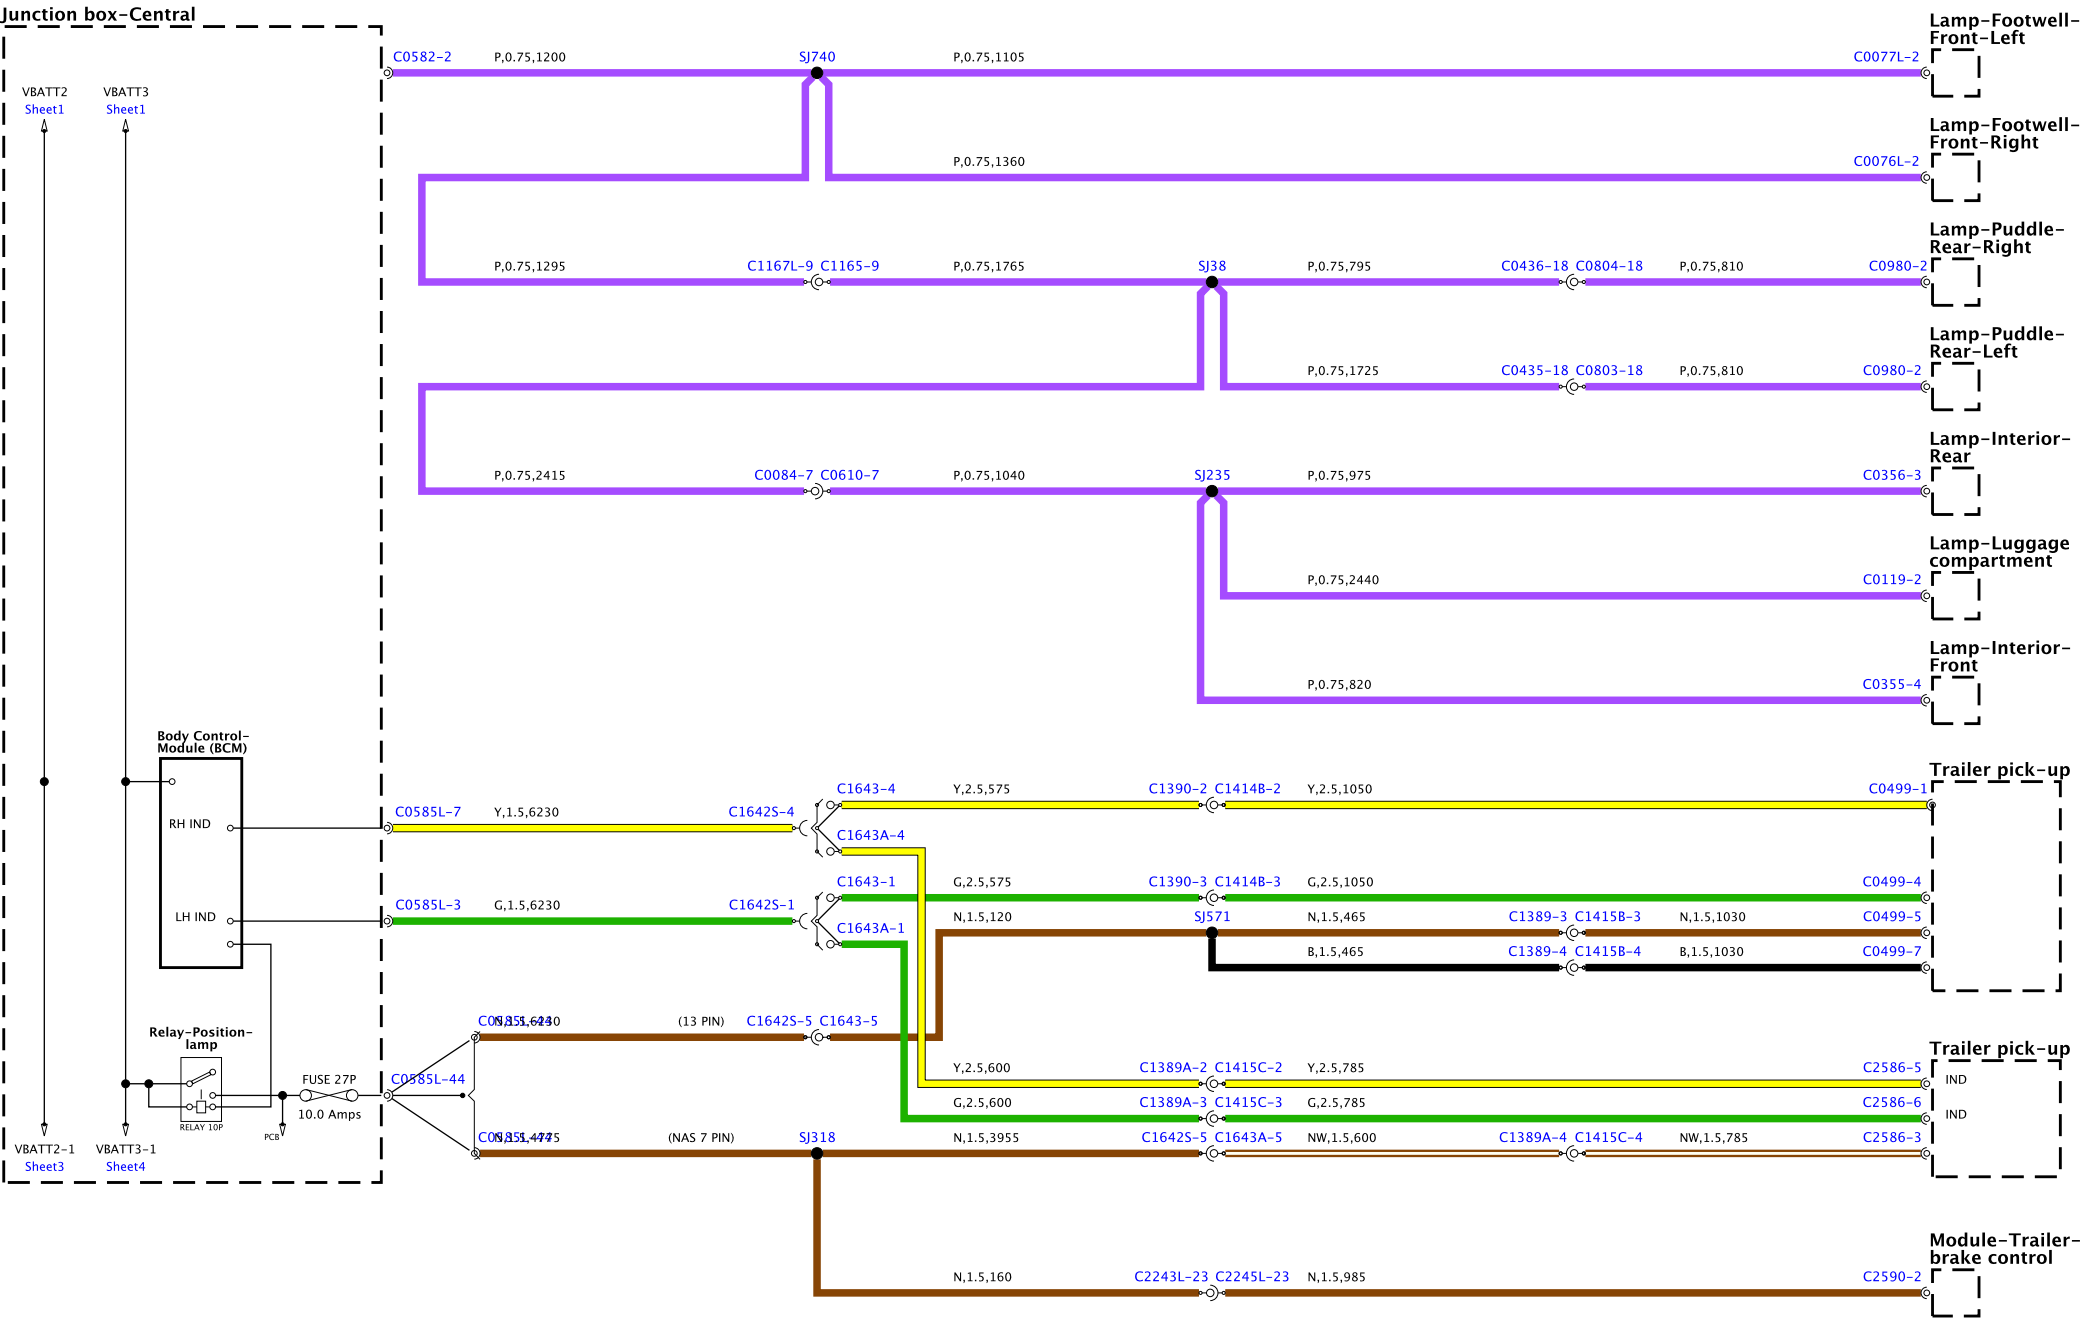


FIG22-70010-D-A-01-13-Service (0.310-150MY-01)




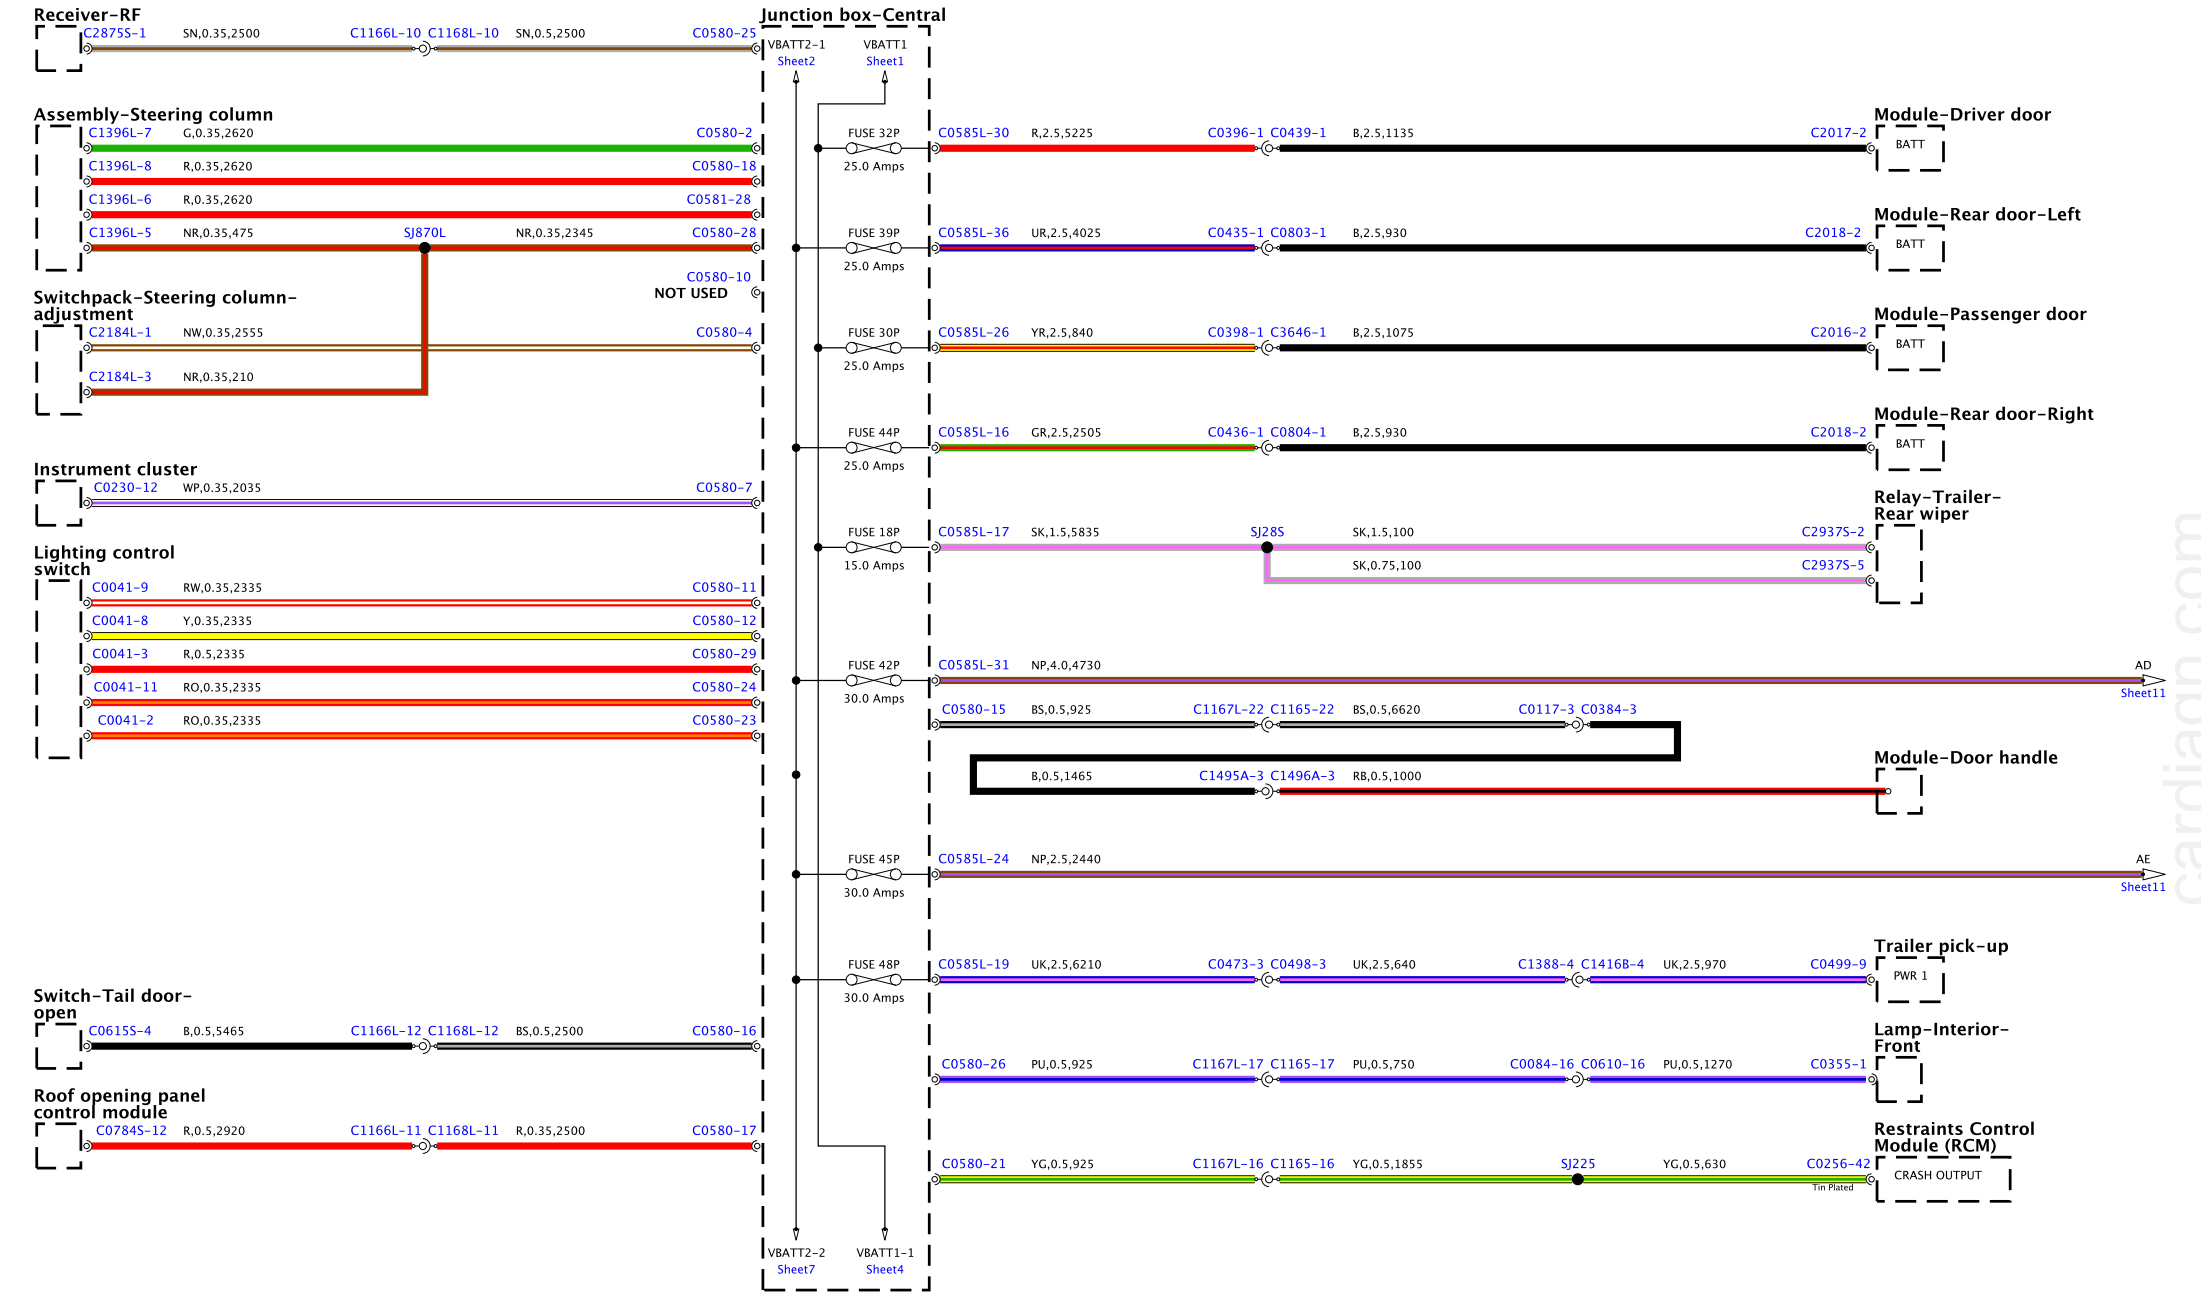



FIG22-70010-D-A-04-13-Service (0.319-15MY-03)

Junction box-Central

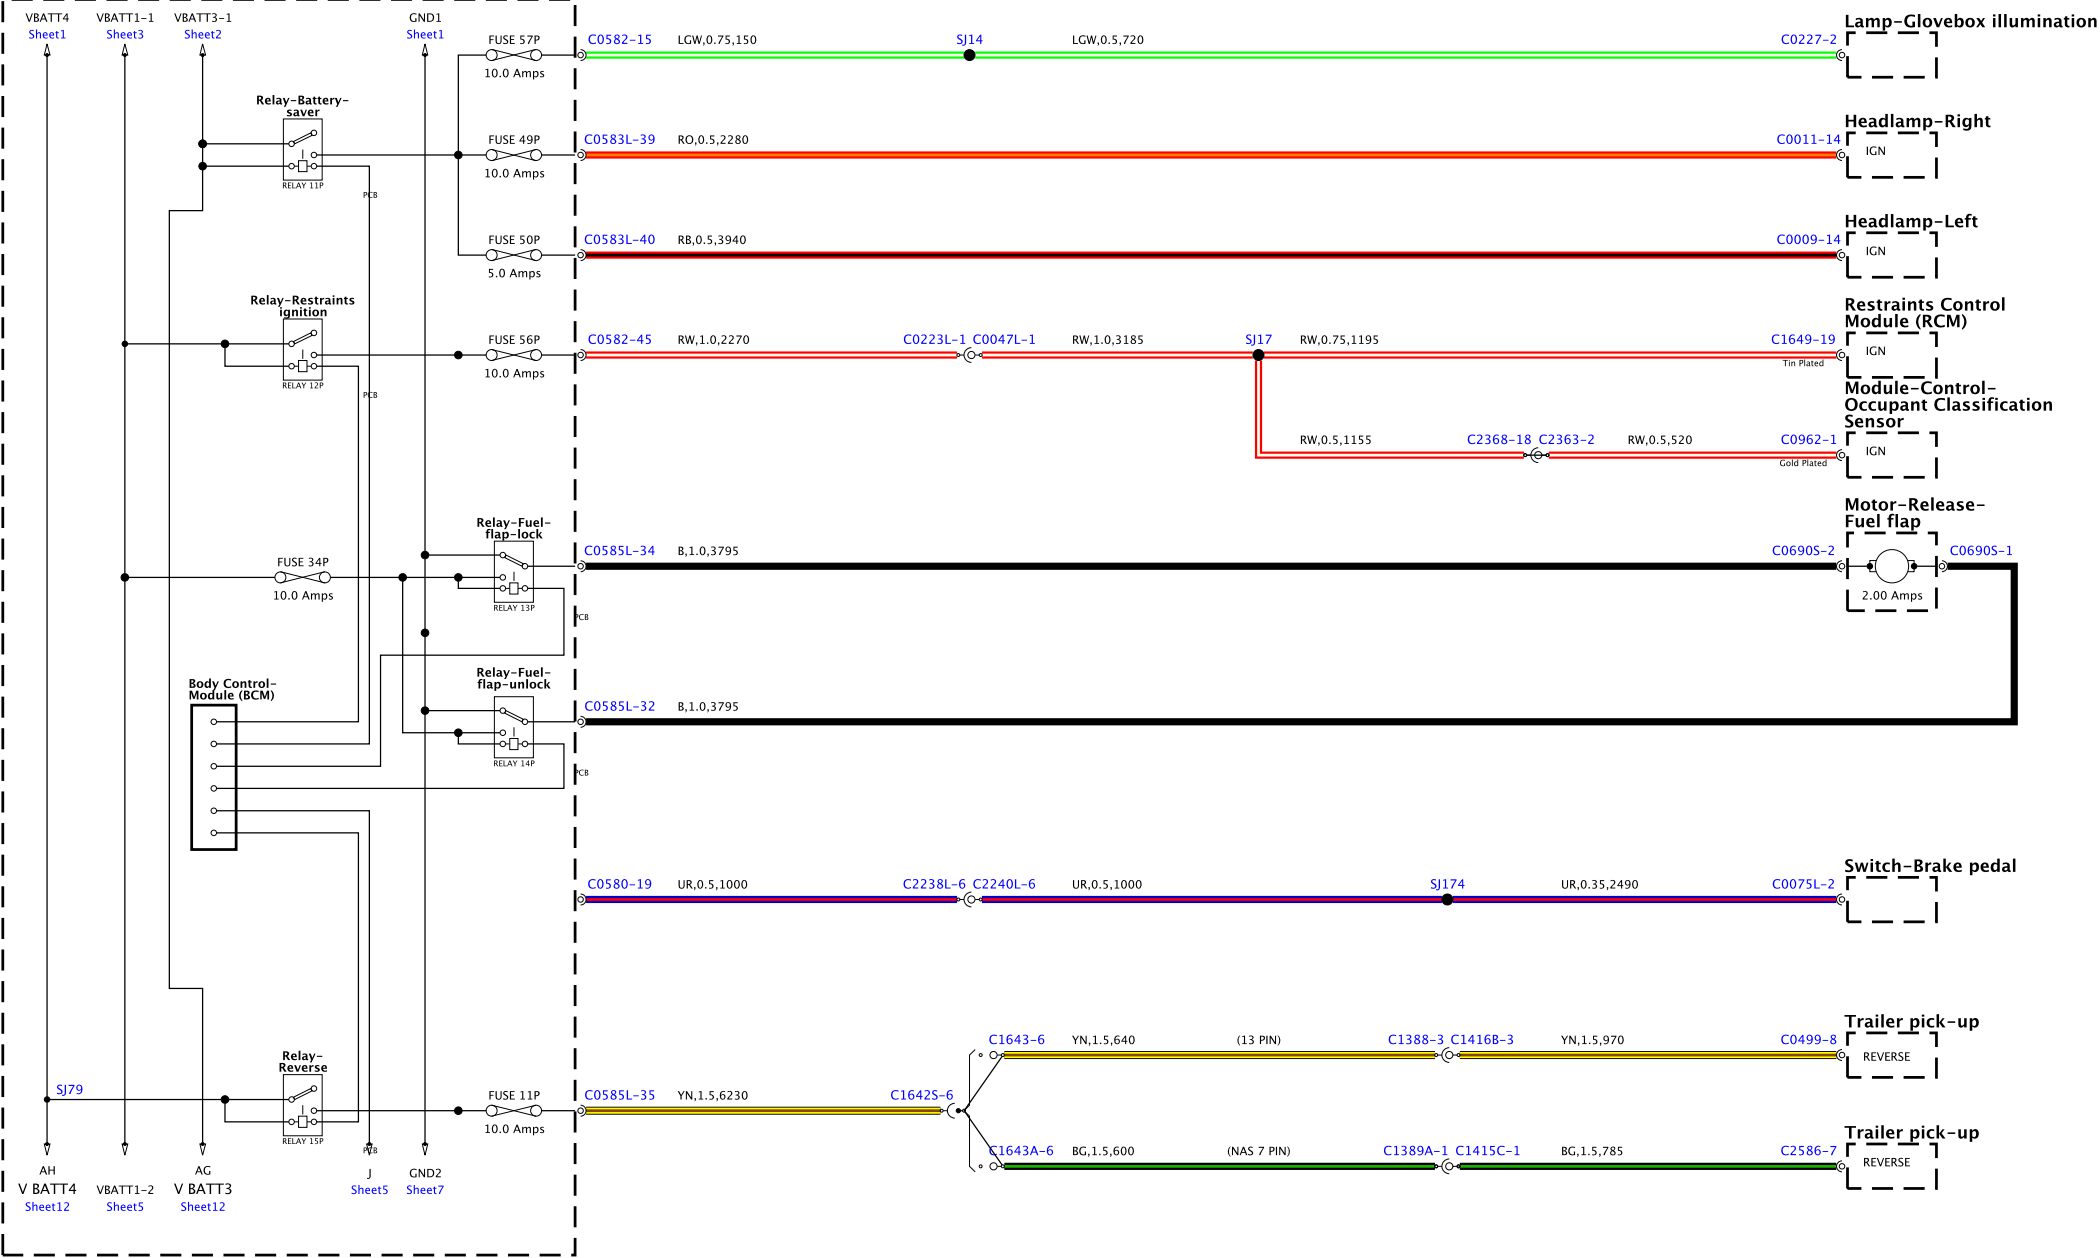

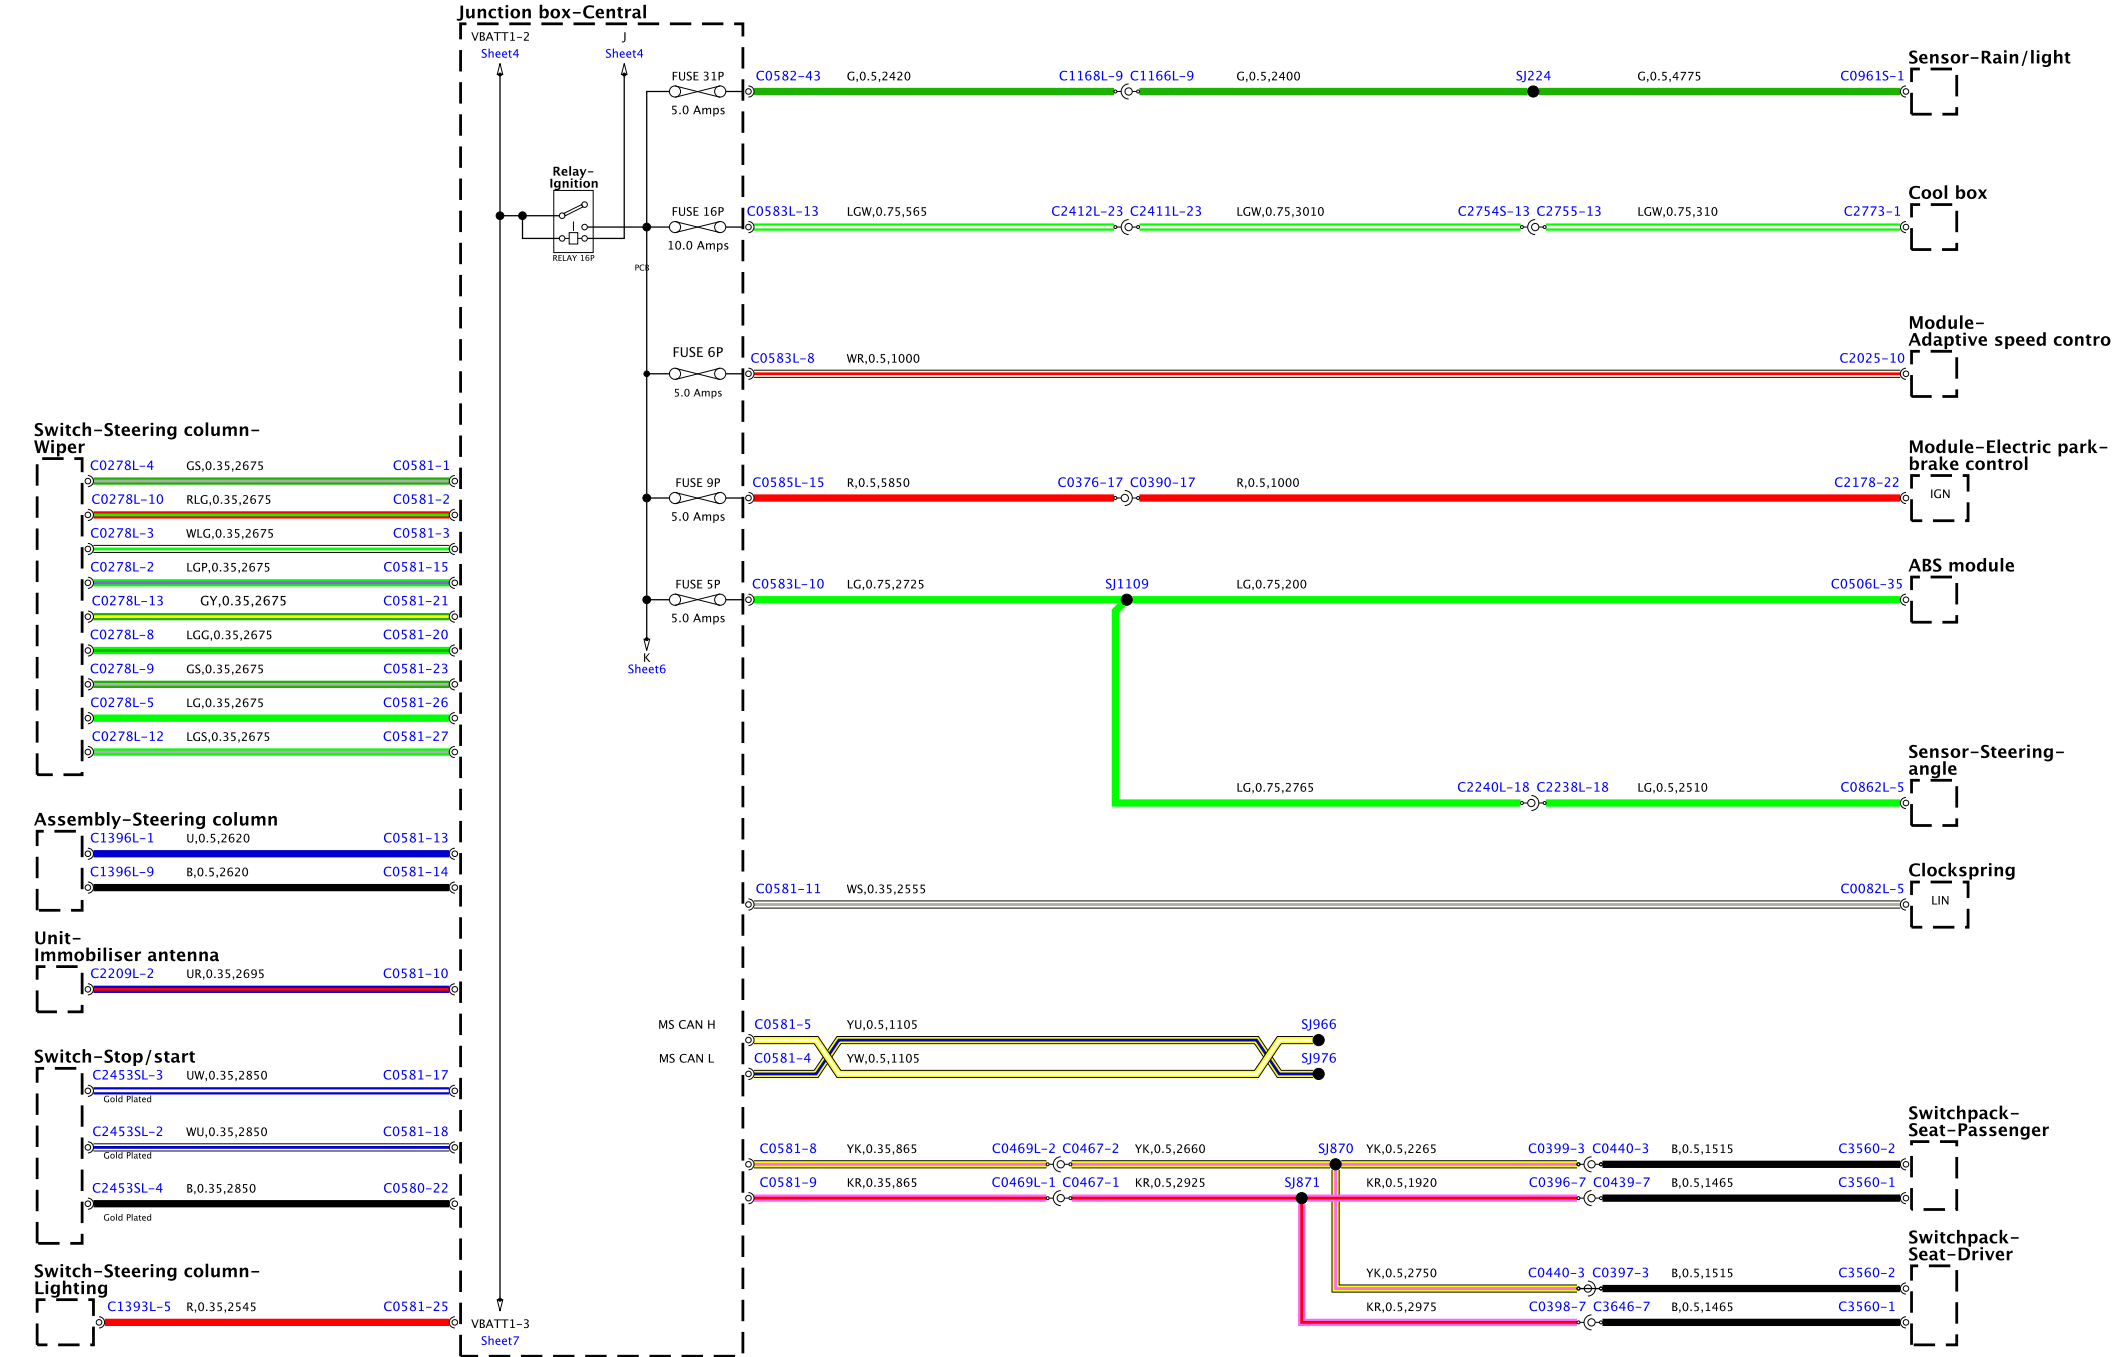

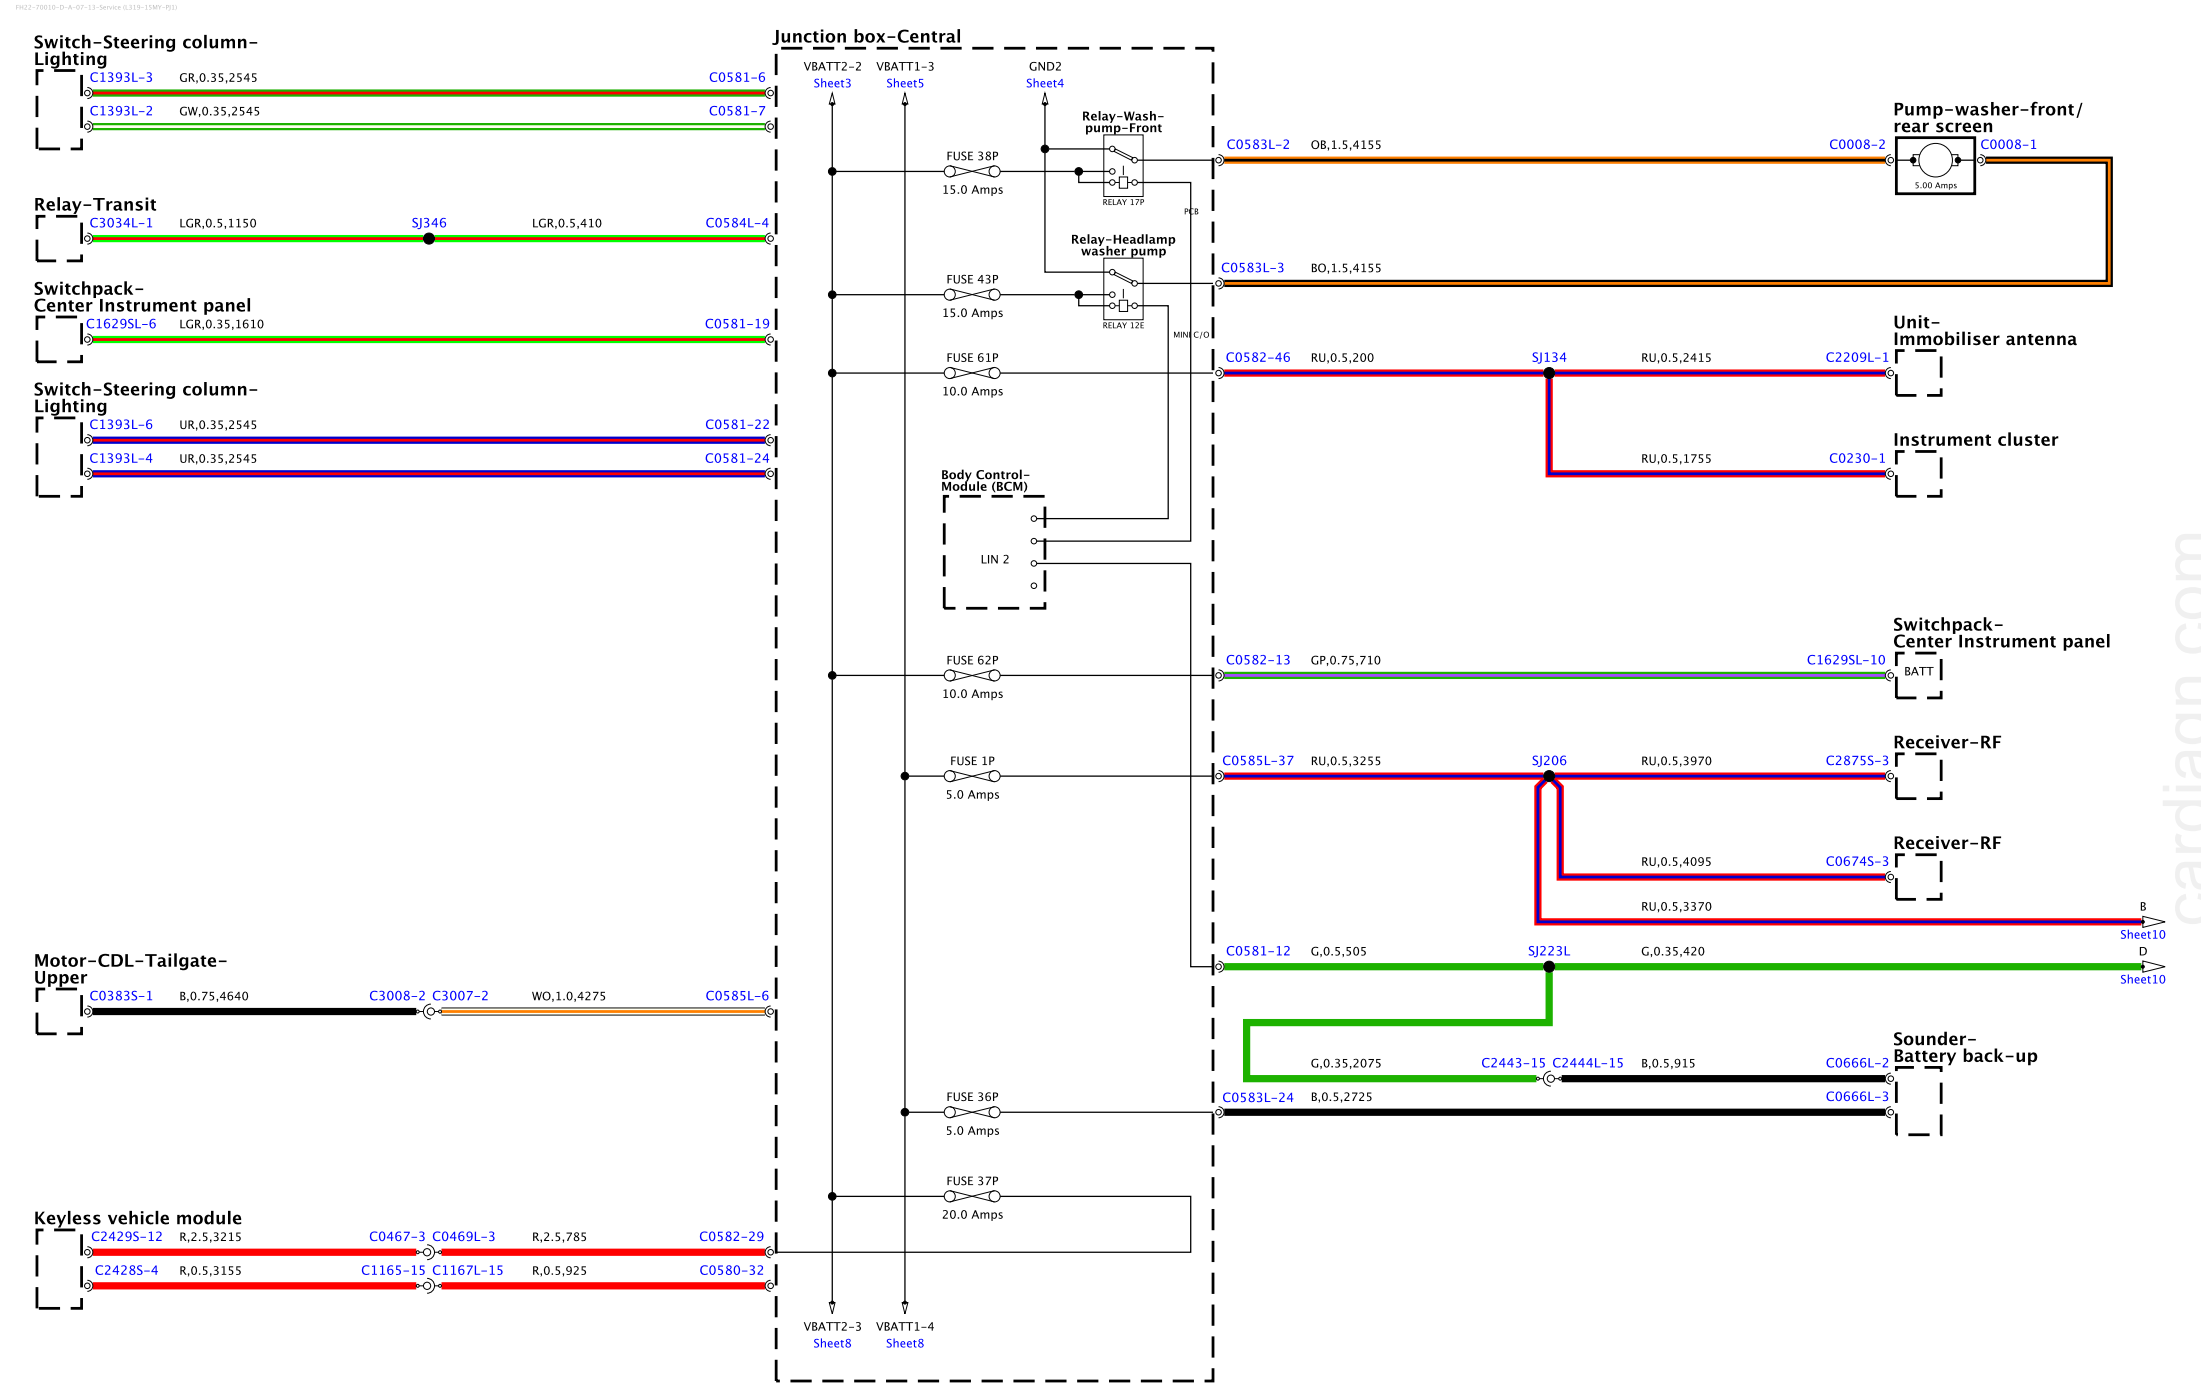

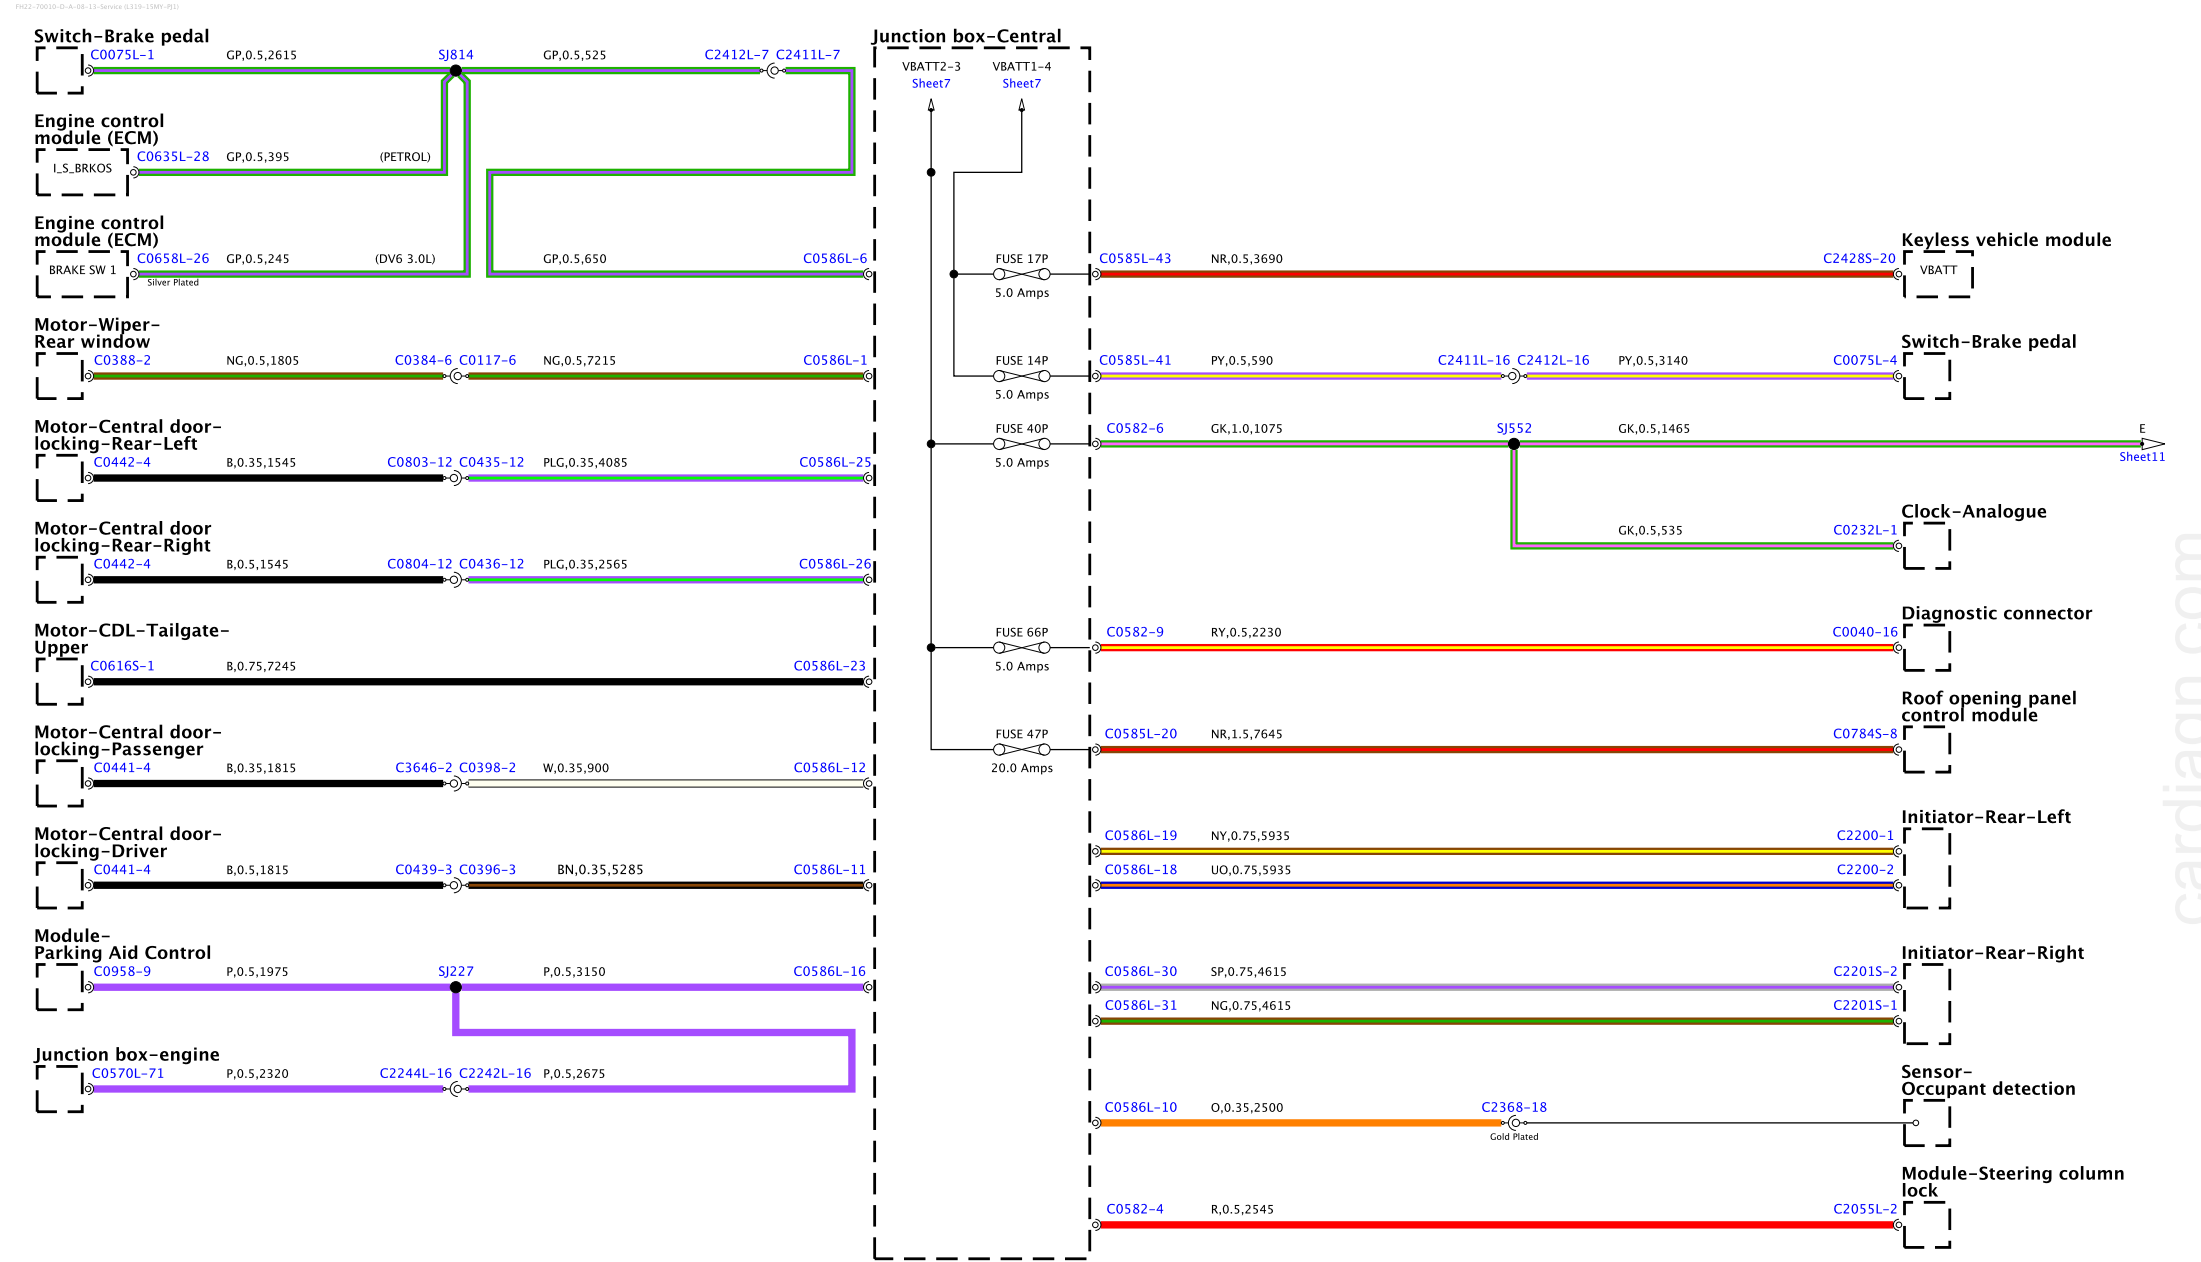

PH02-70010-D-A-09-13-Service 8,318-10MY-P01

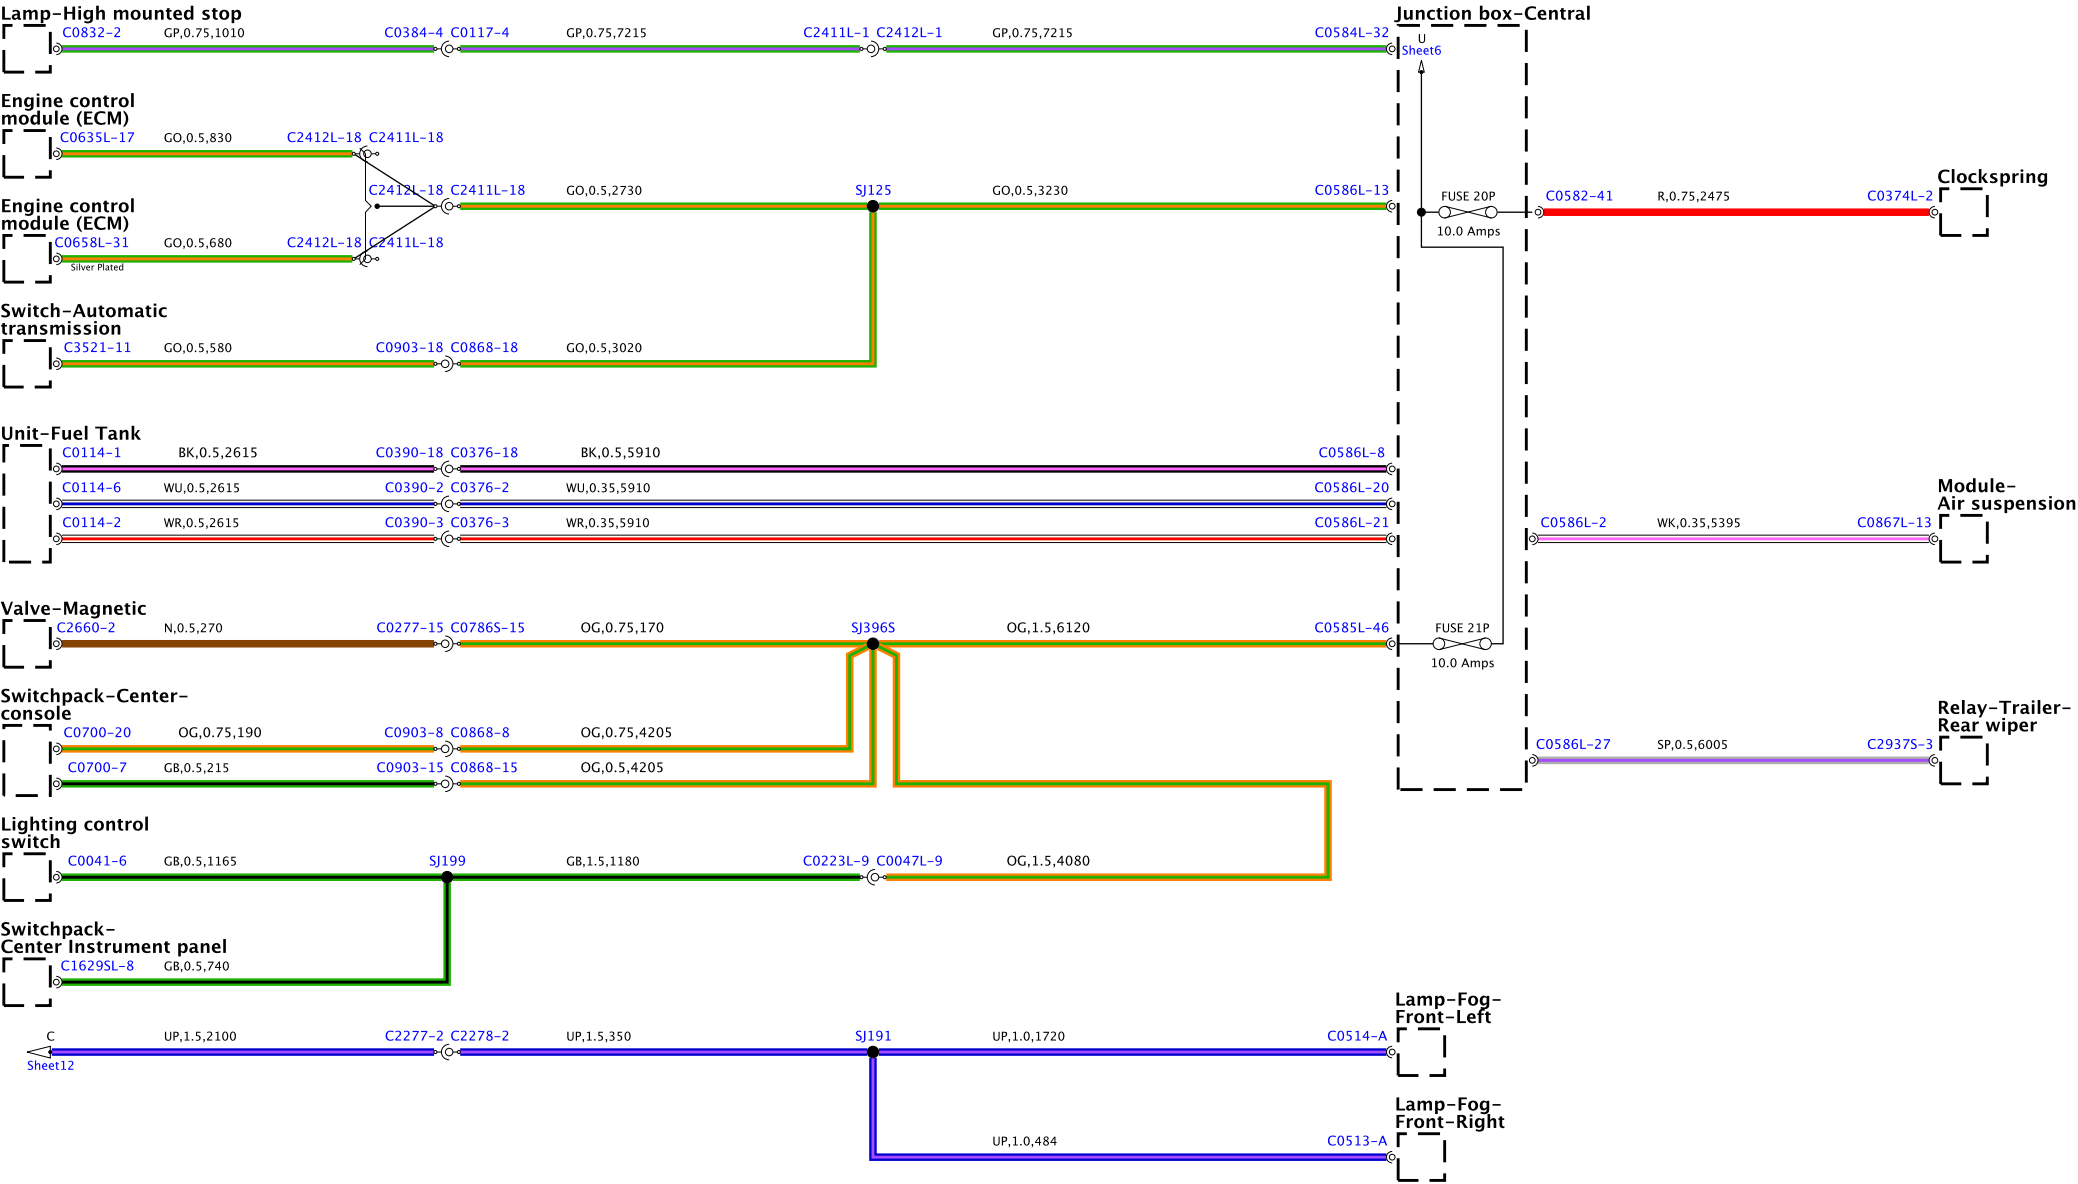
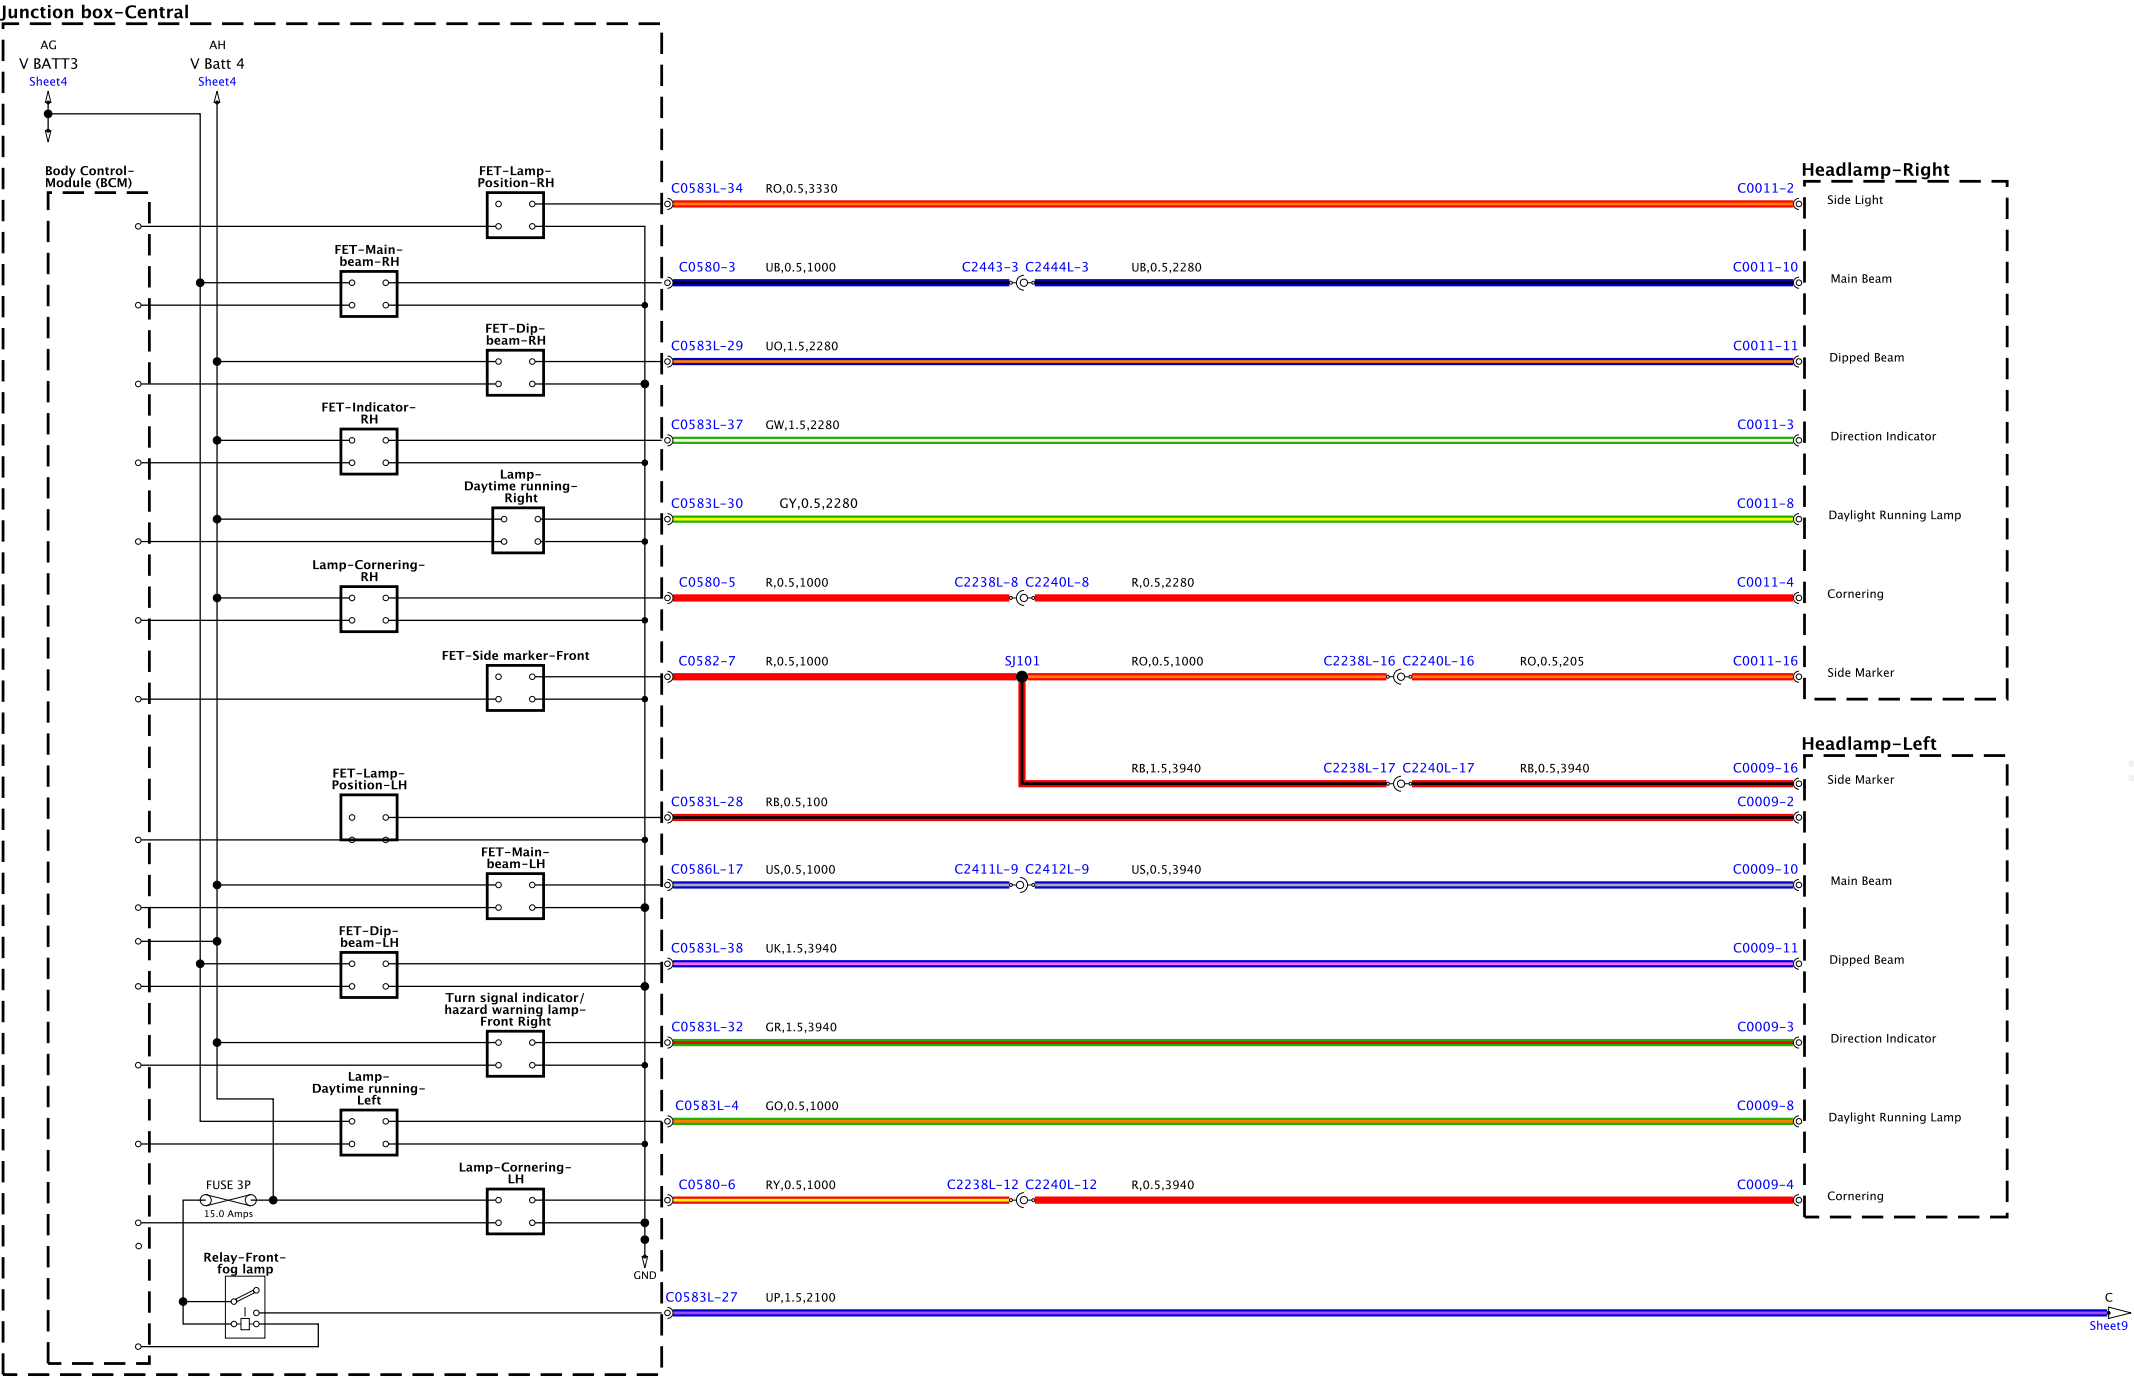
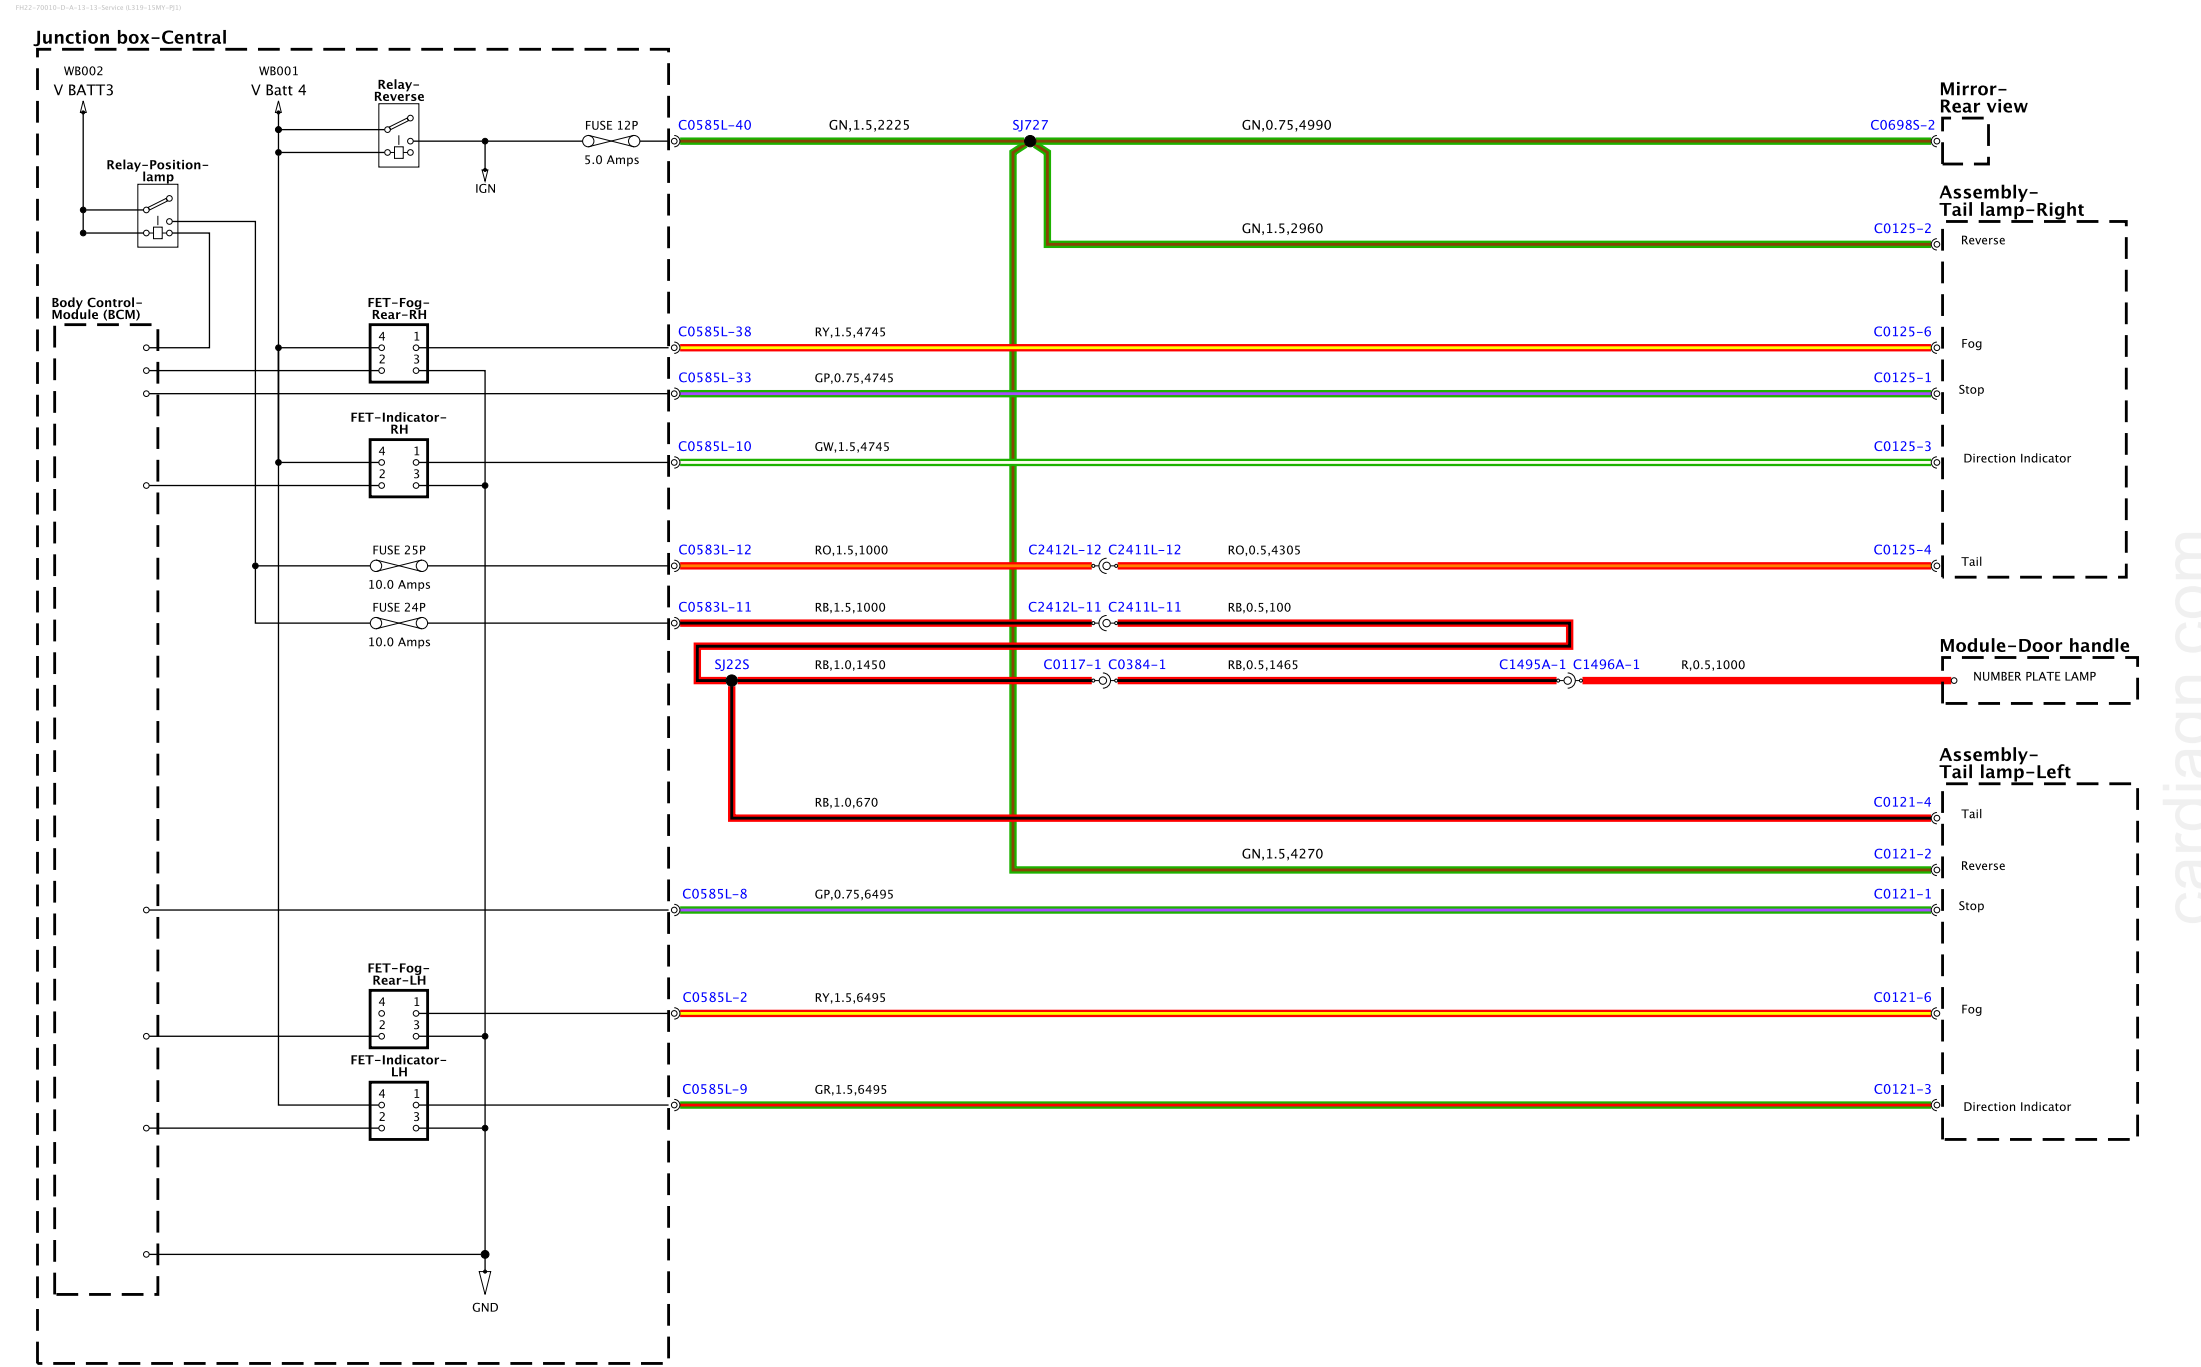
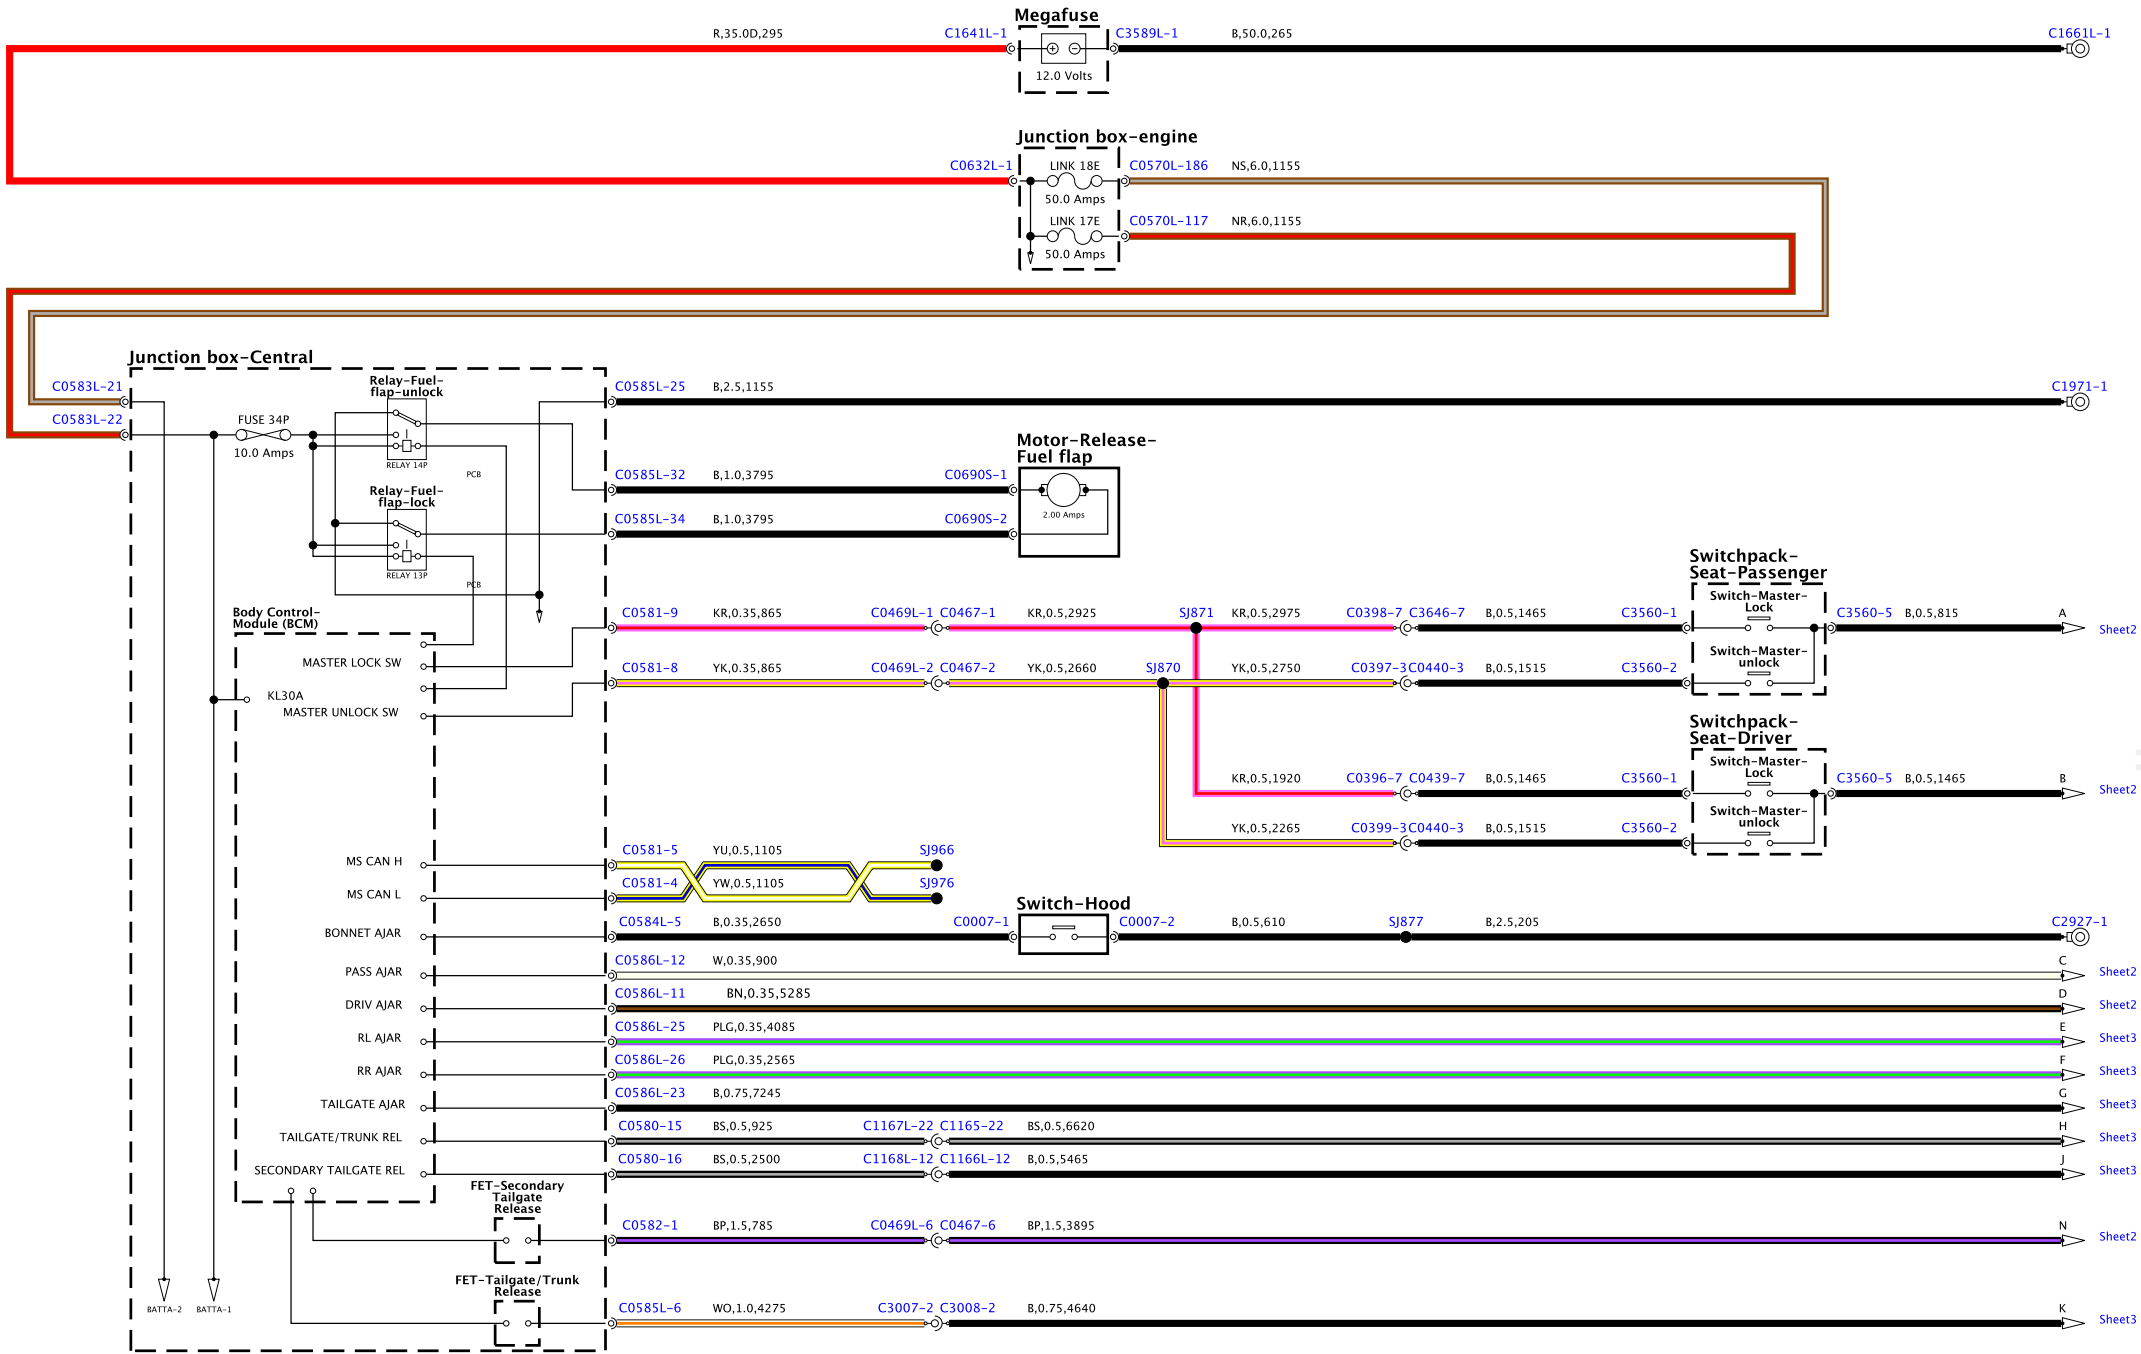


FIG21-70010-D-A-12-13-Service 6.319-15MP-R01









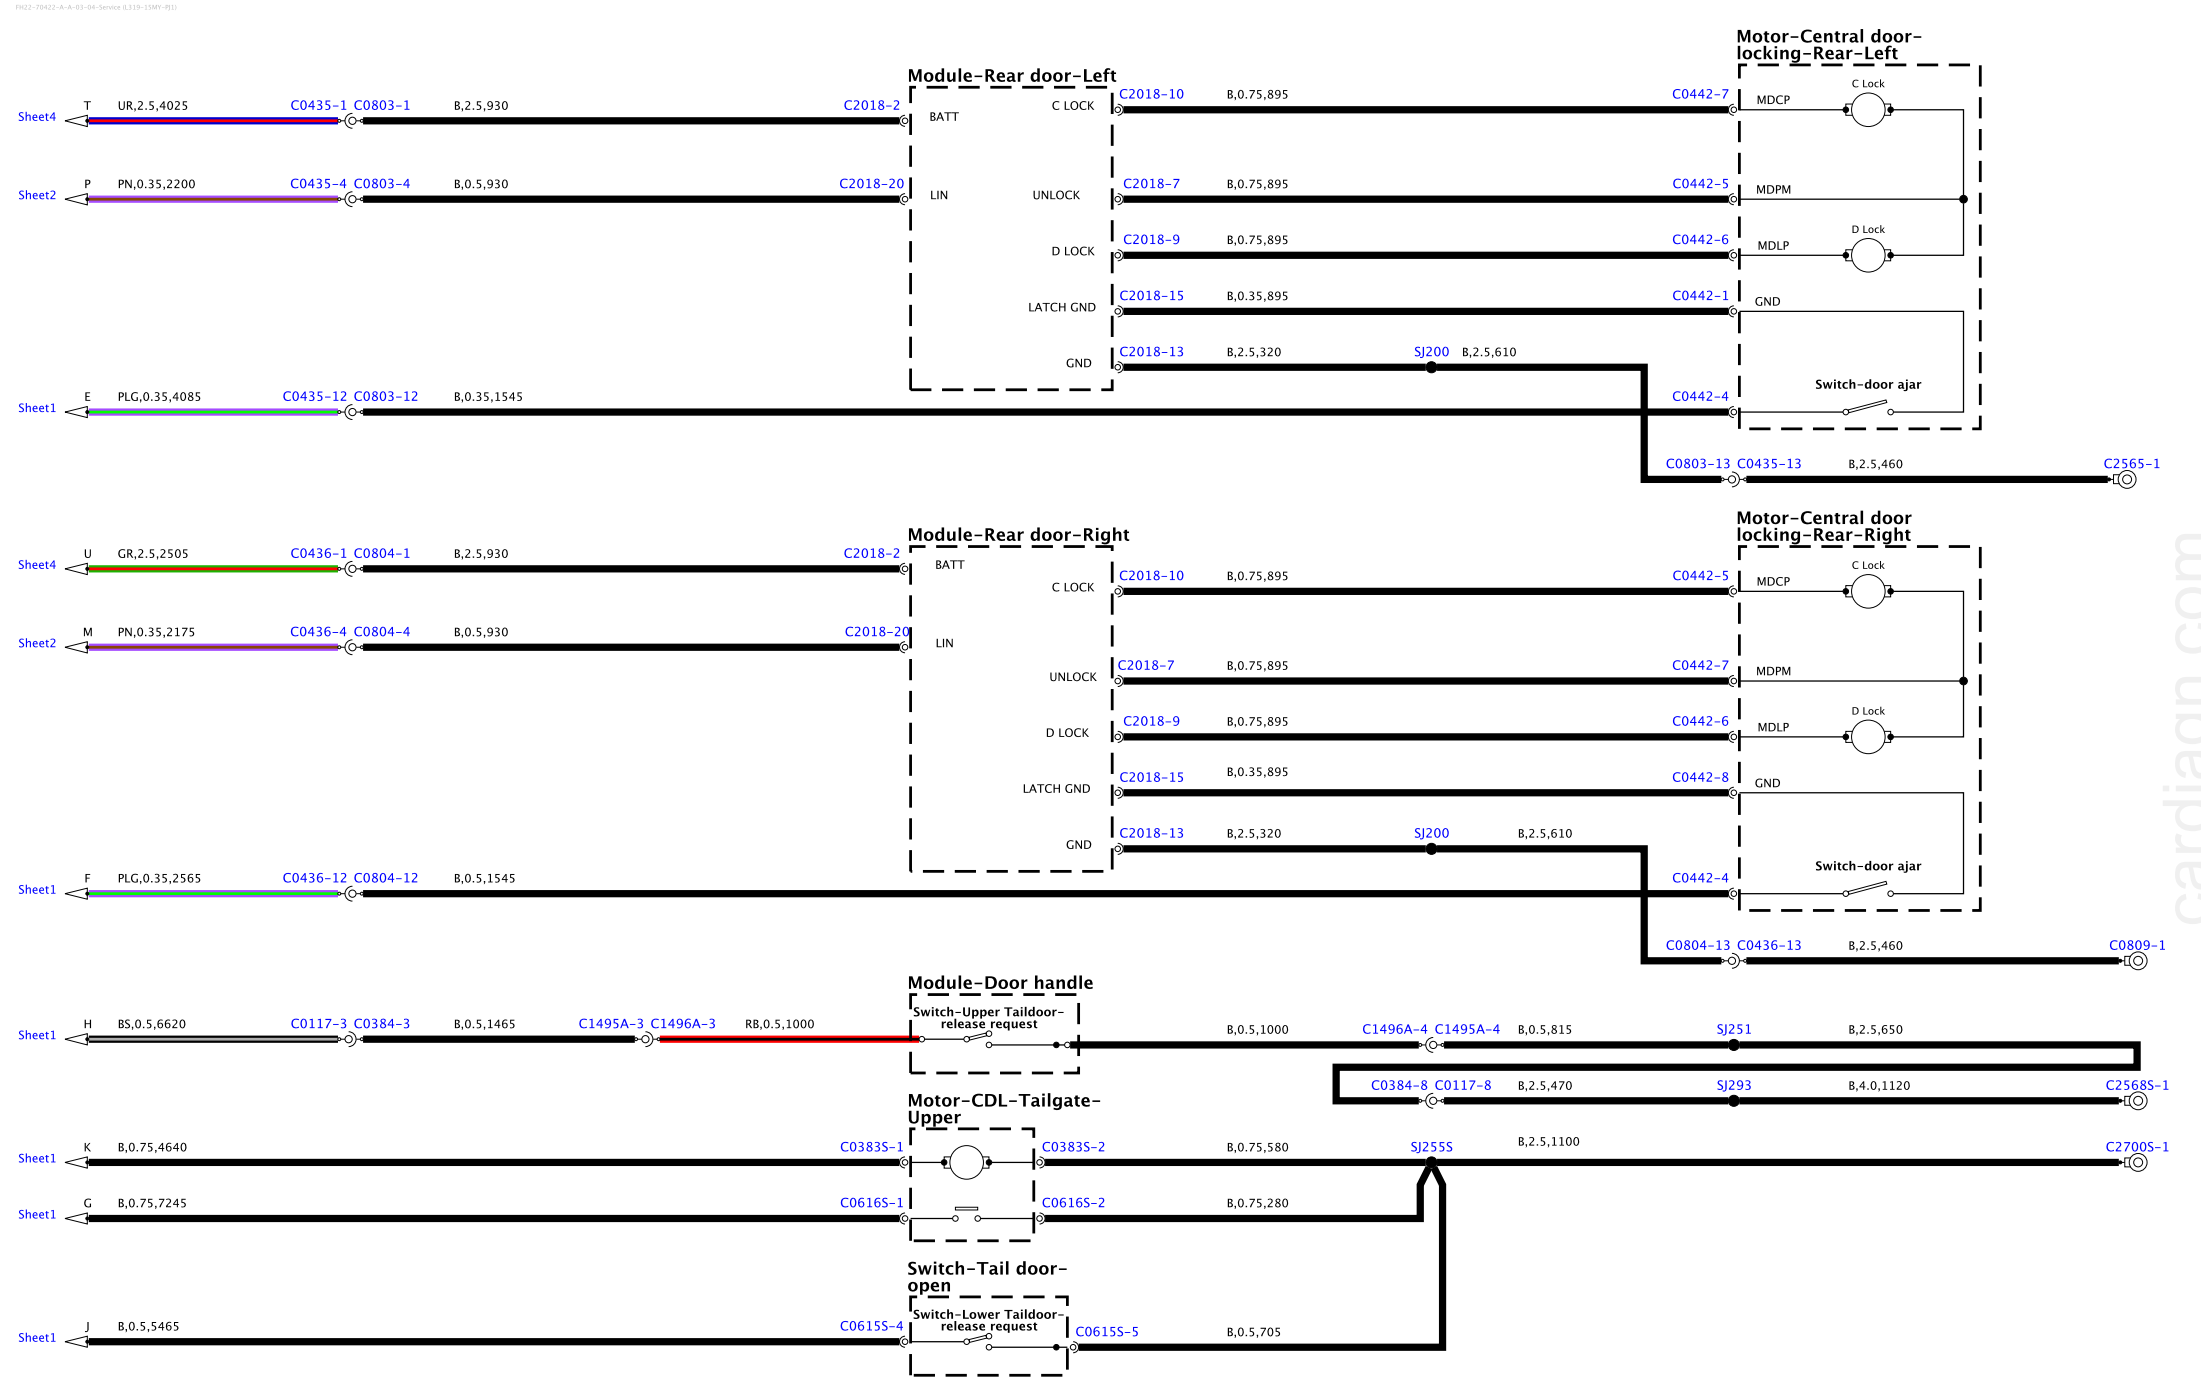
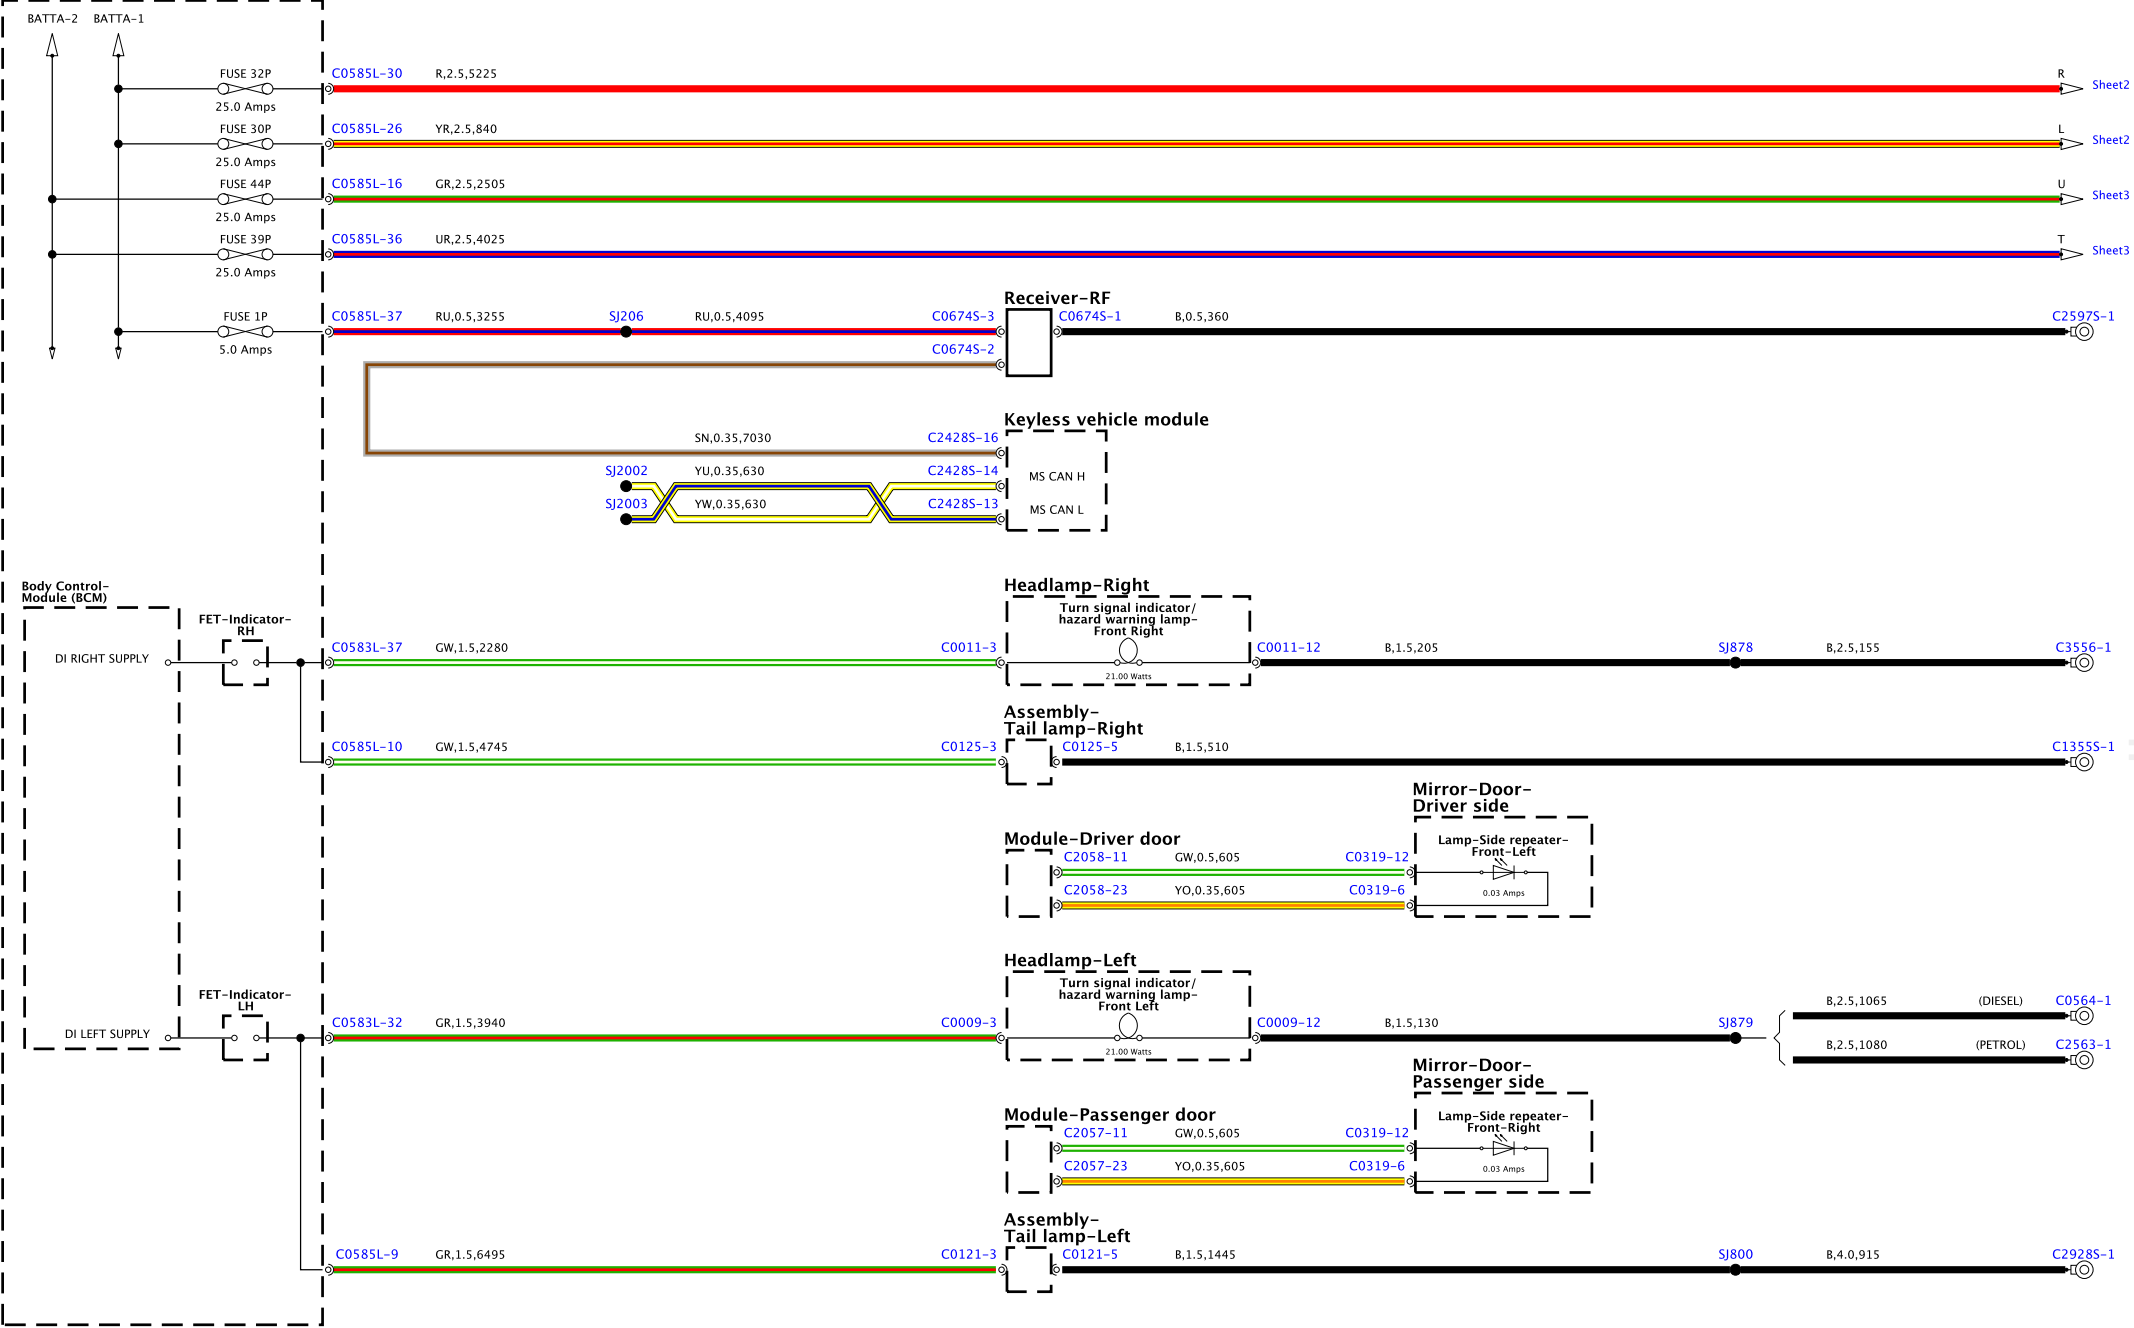
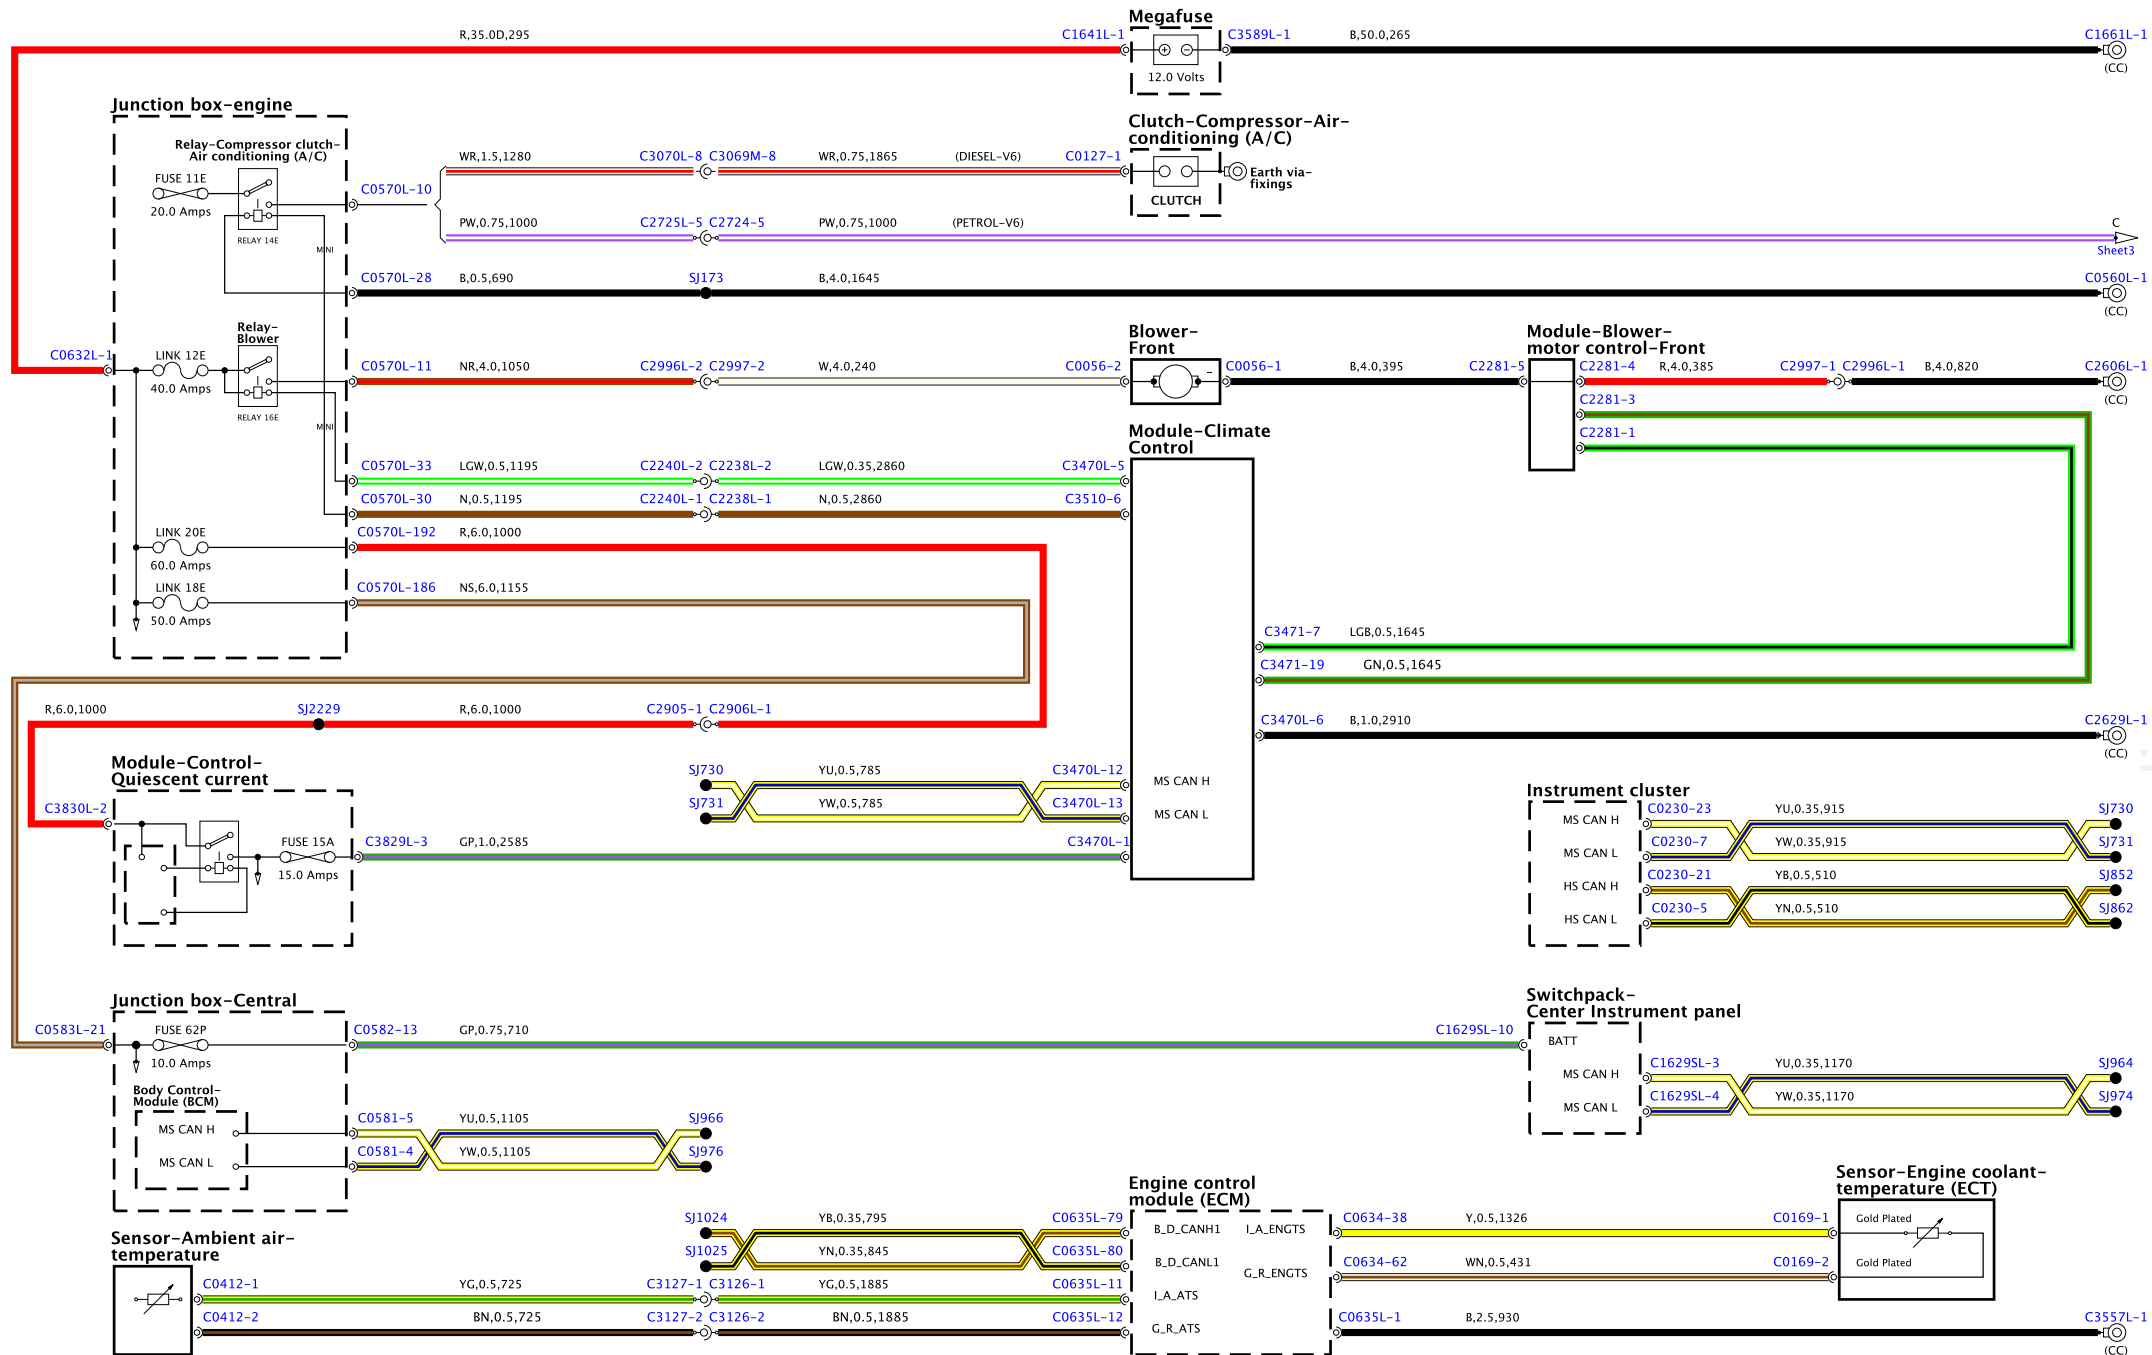


FIG22-70422-A-A-04-04-Service (0.319-13MY-P1)

Junction box-Central









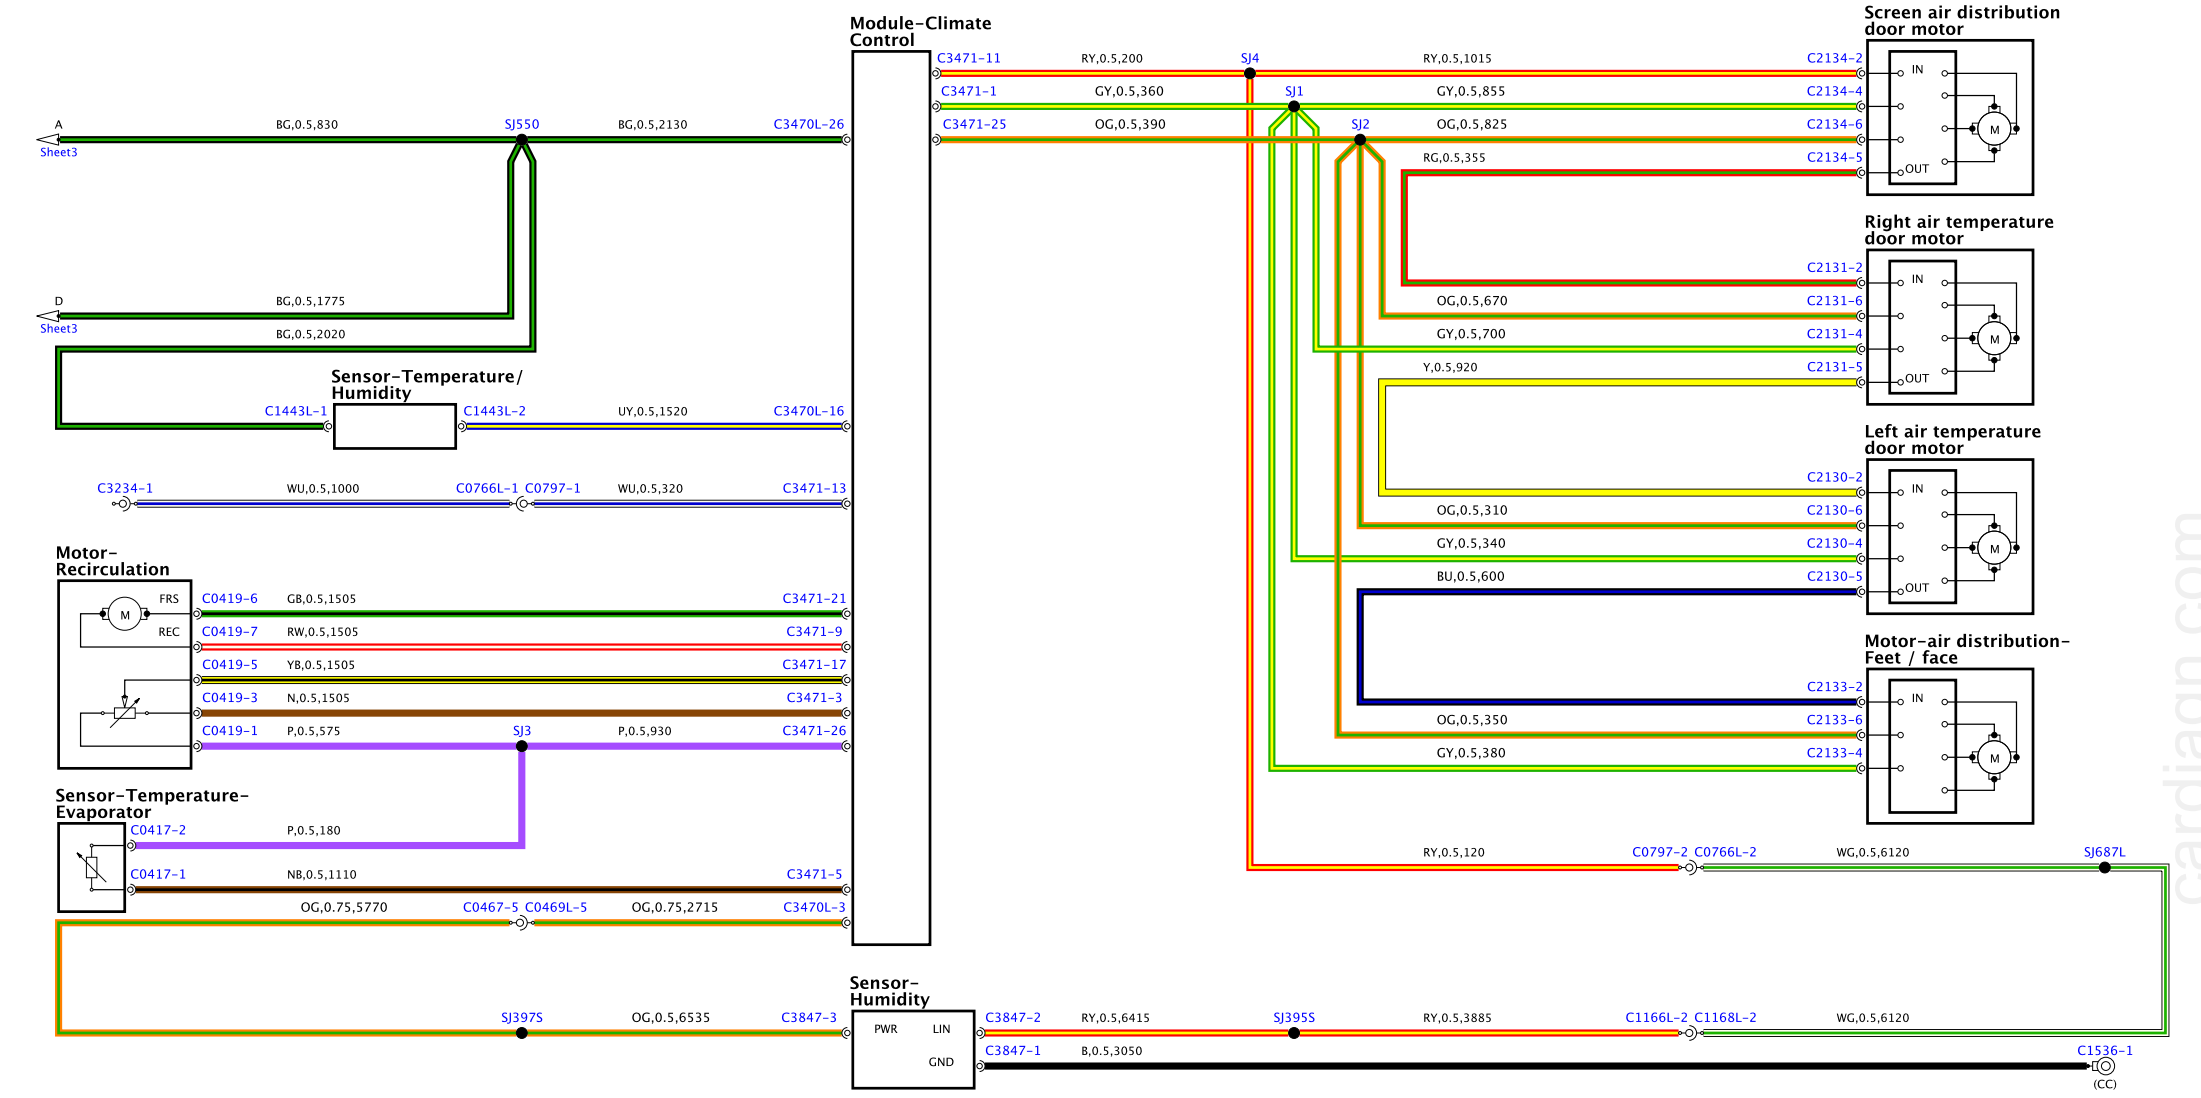



FIG22-70300-A-A-03-03-Service (3,310-150V-FS)

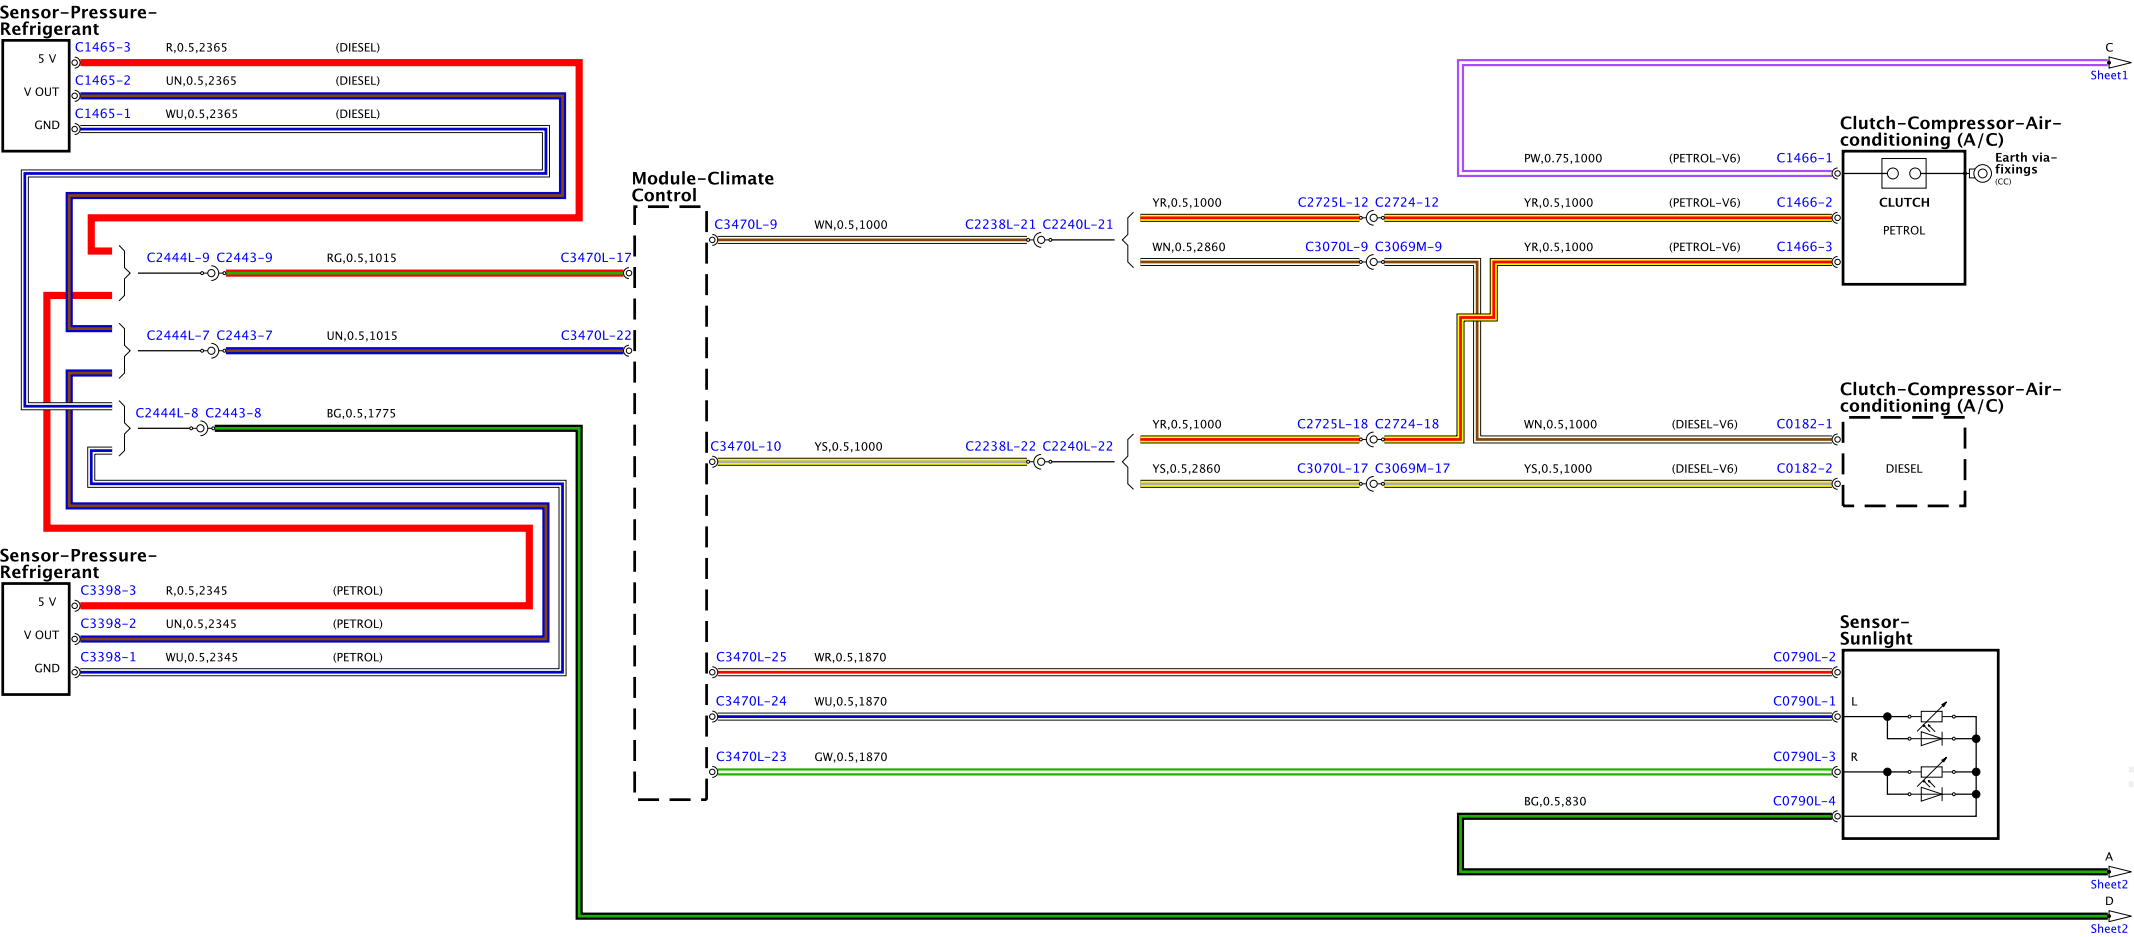


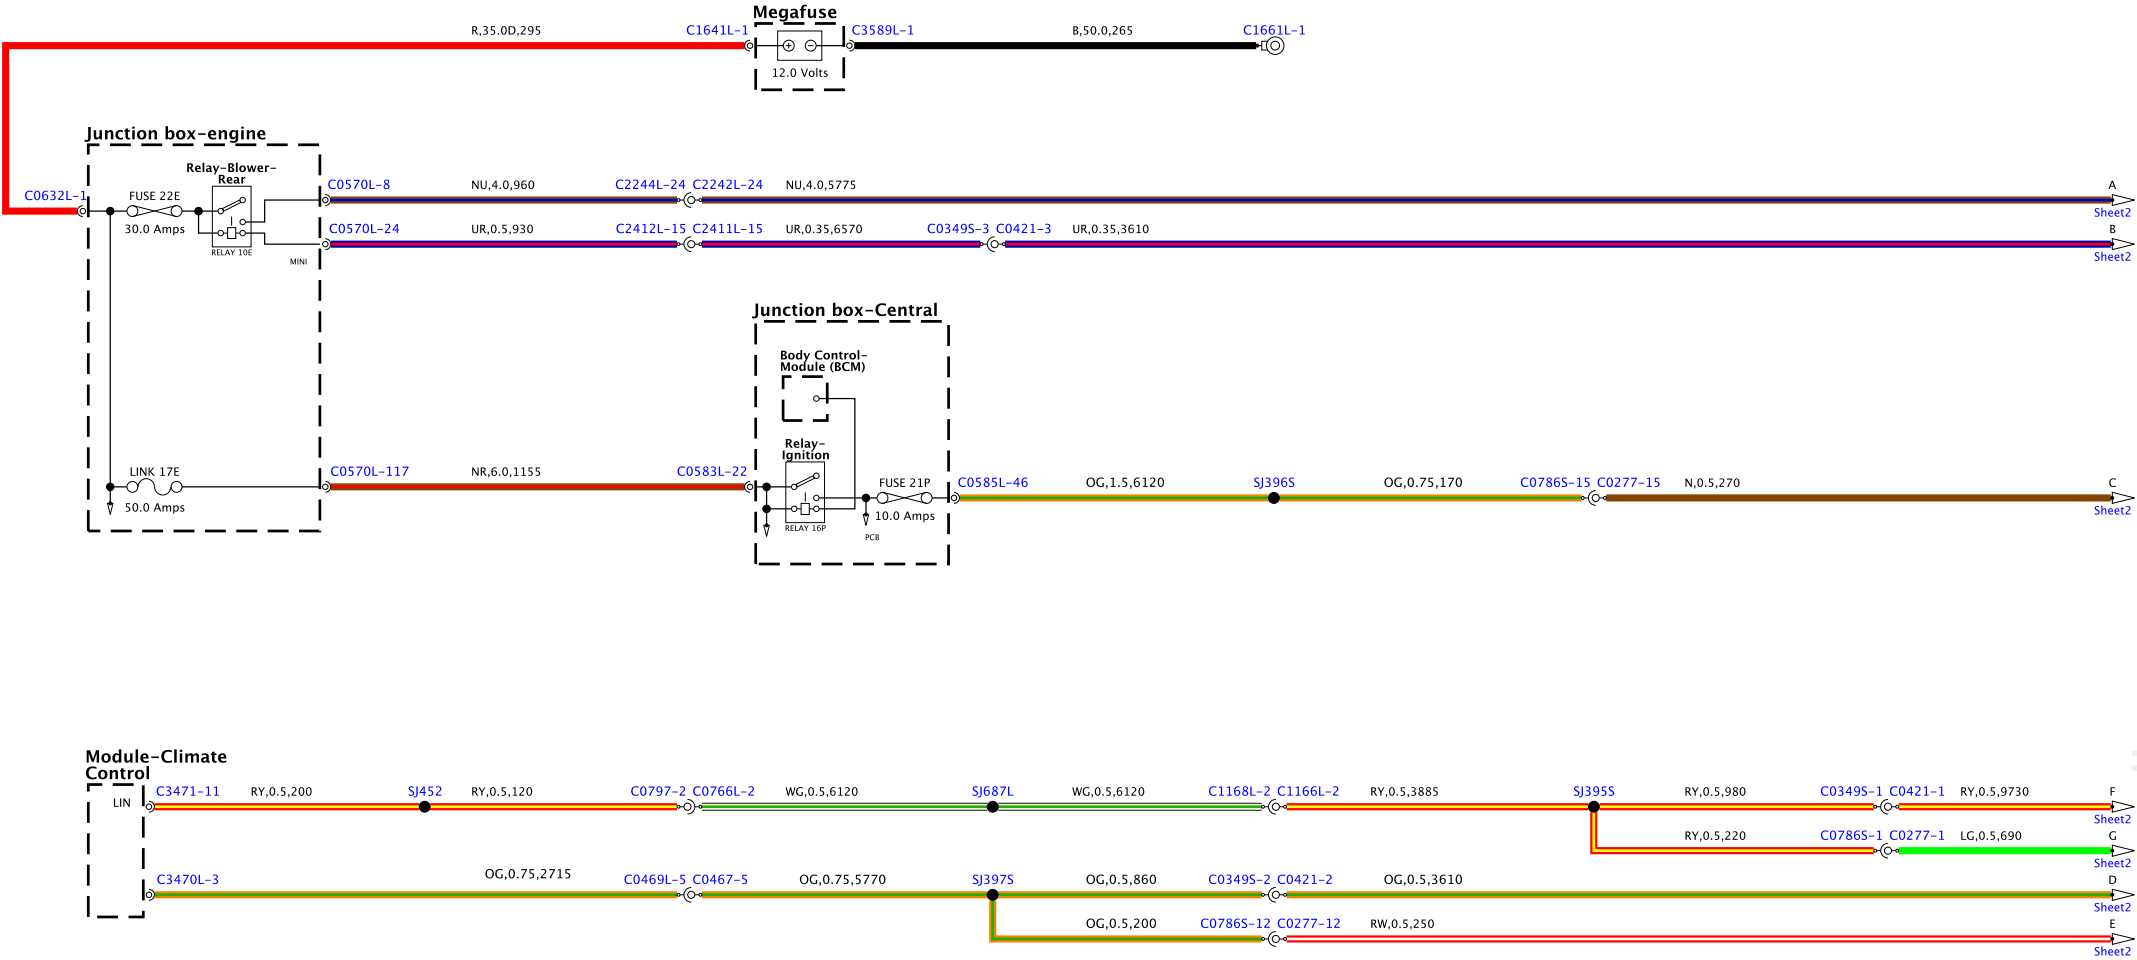

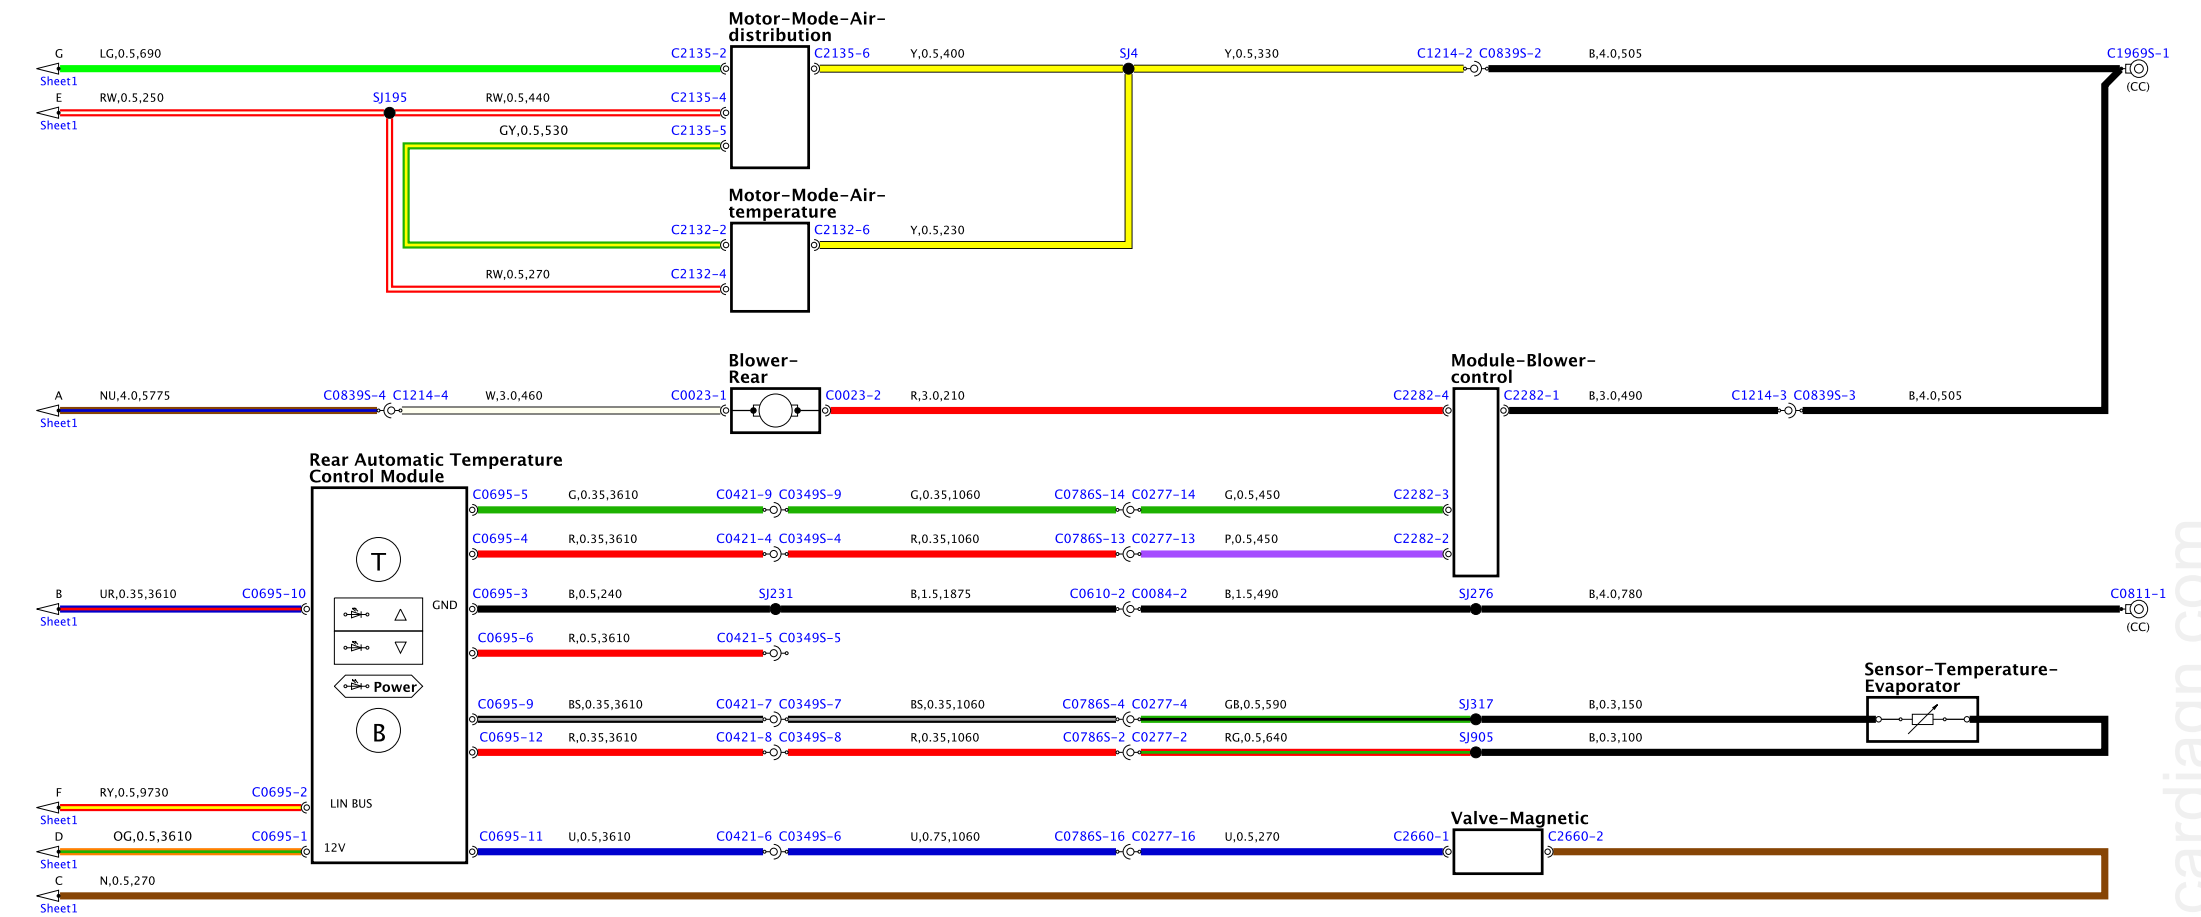


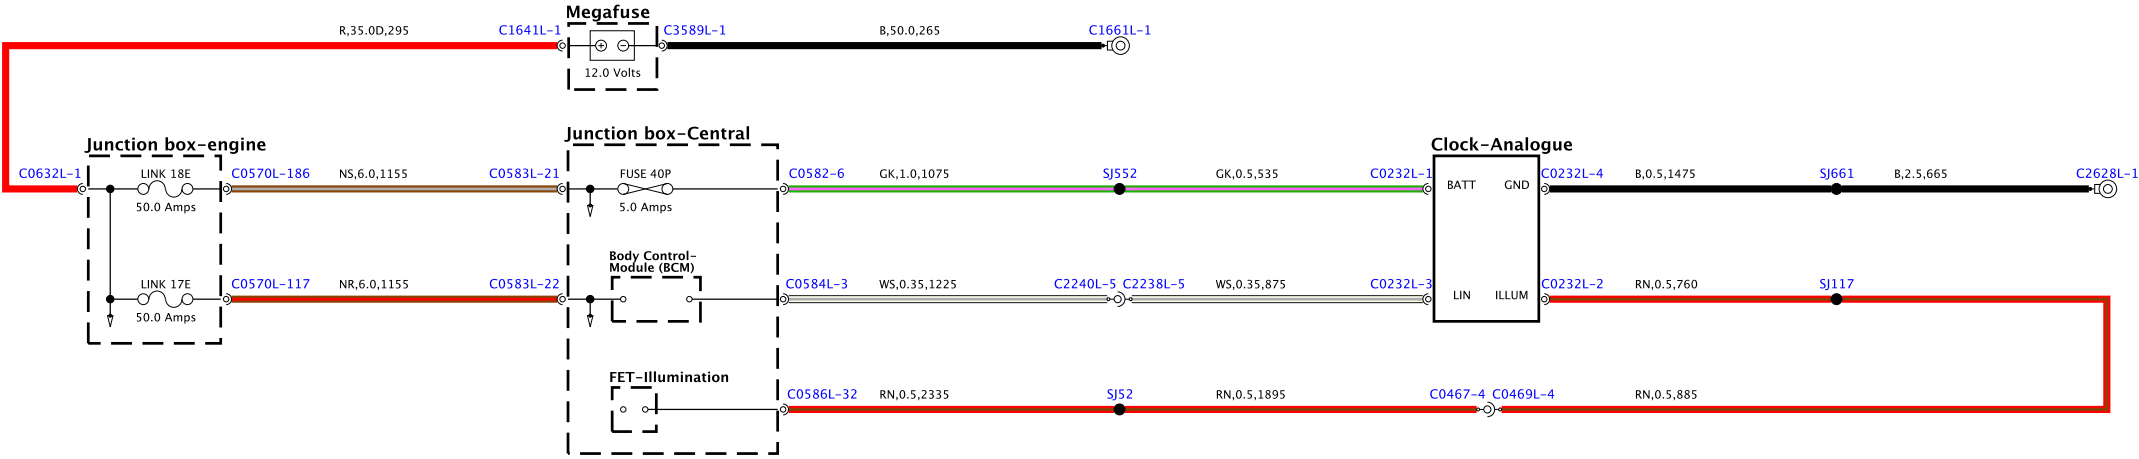

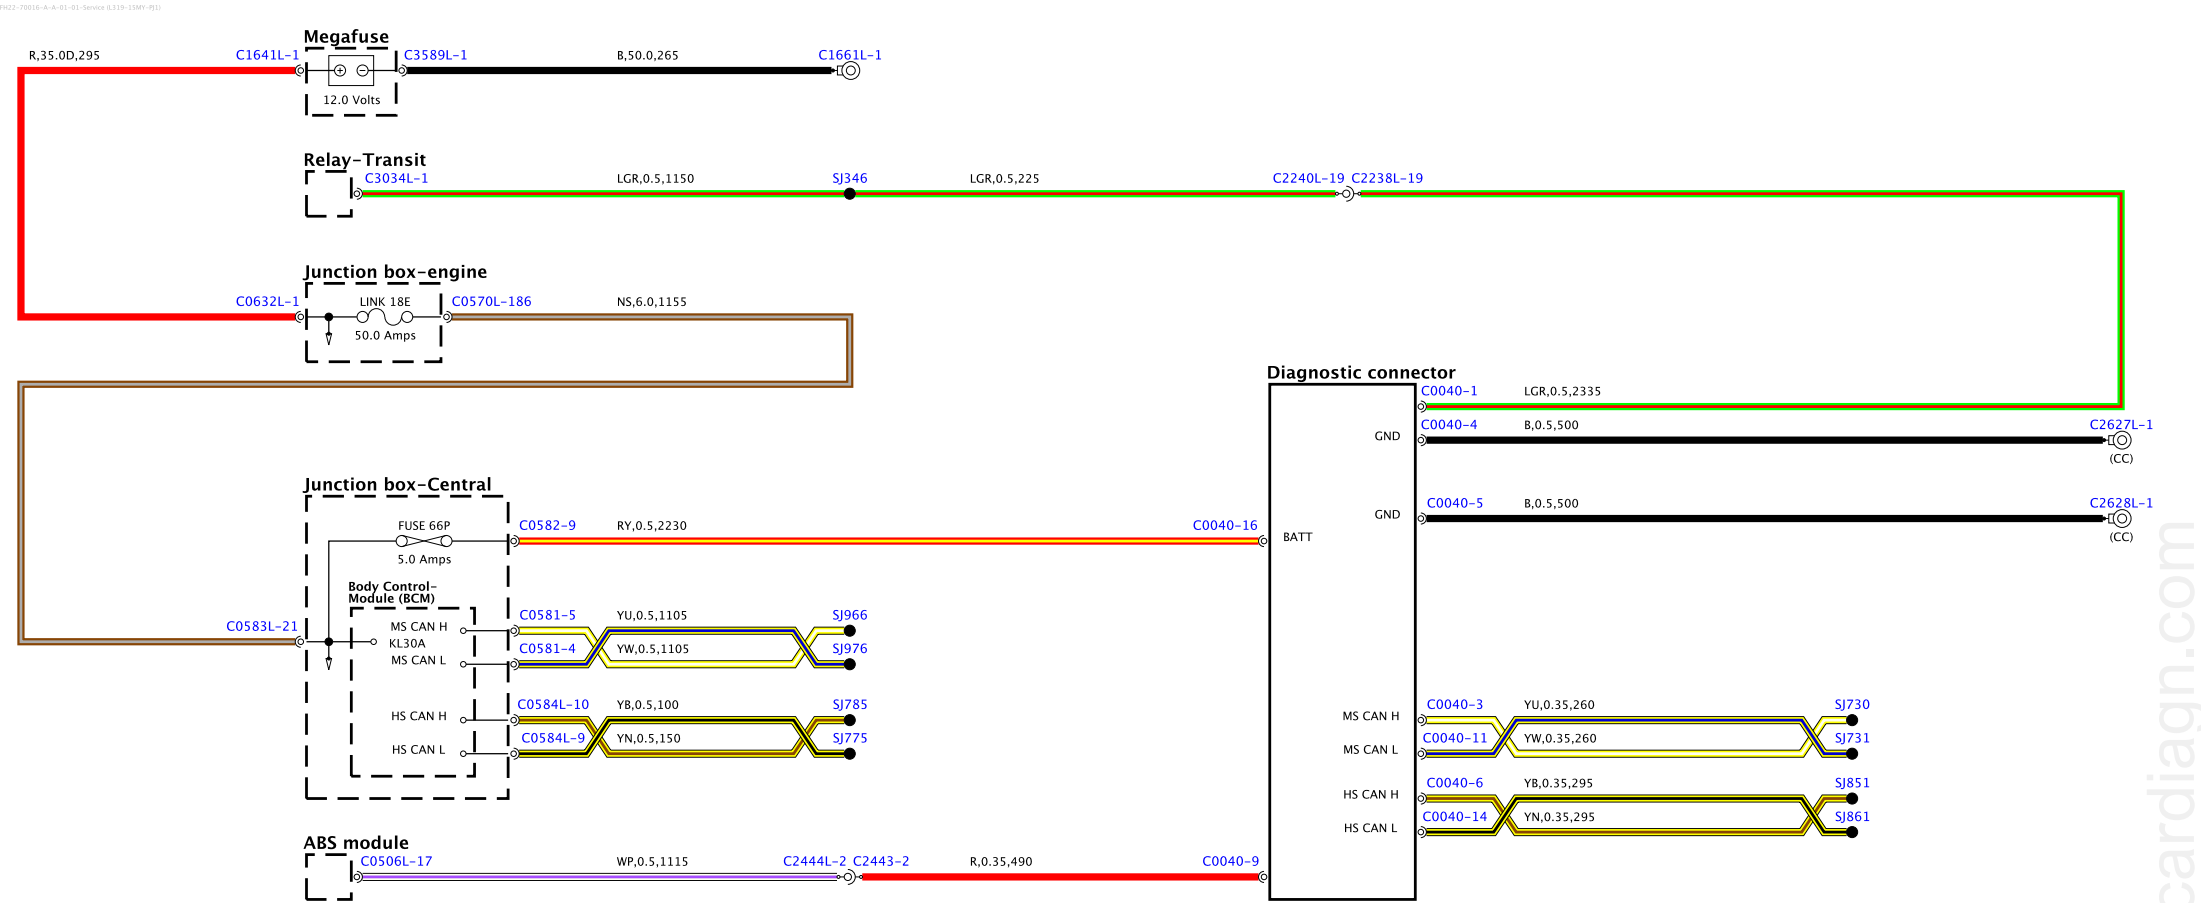


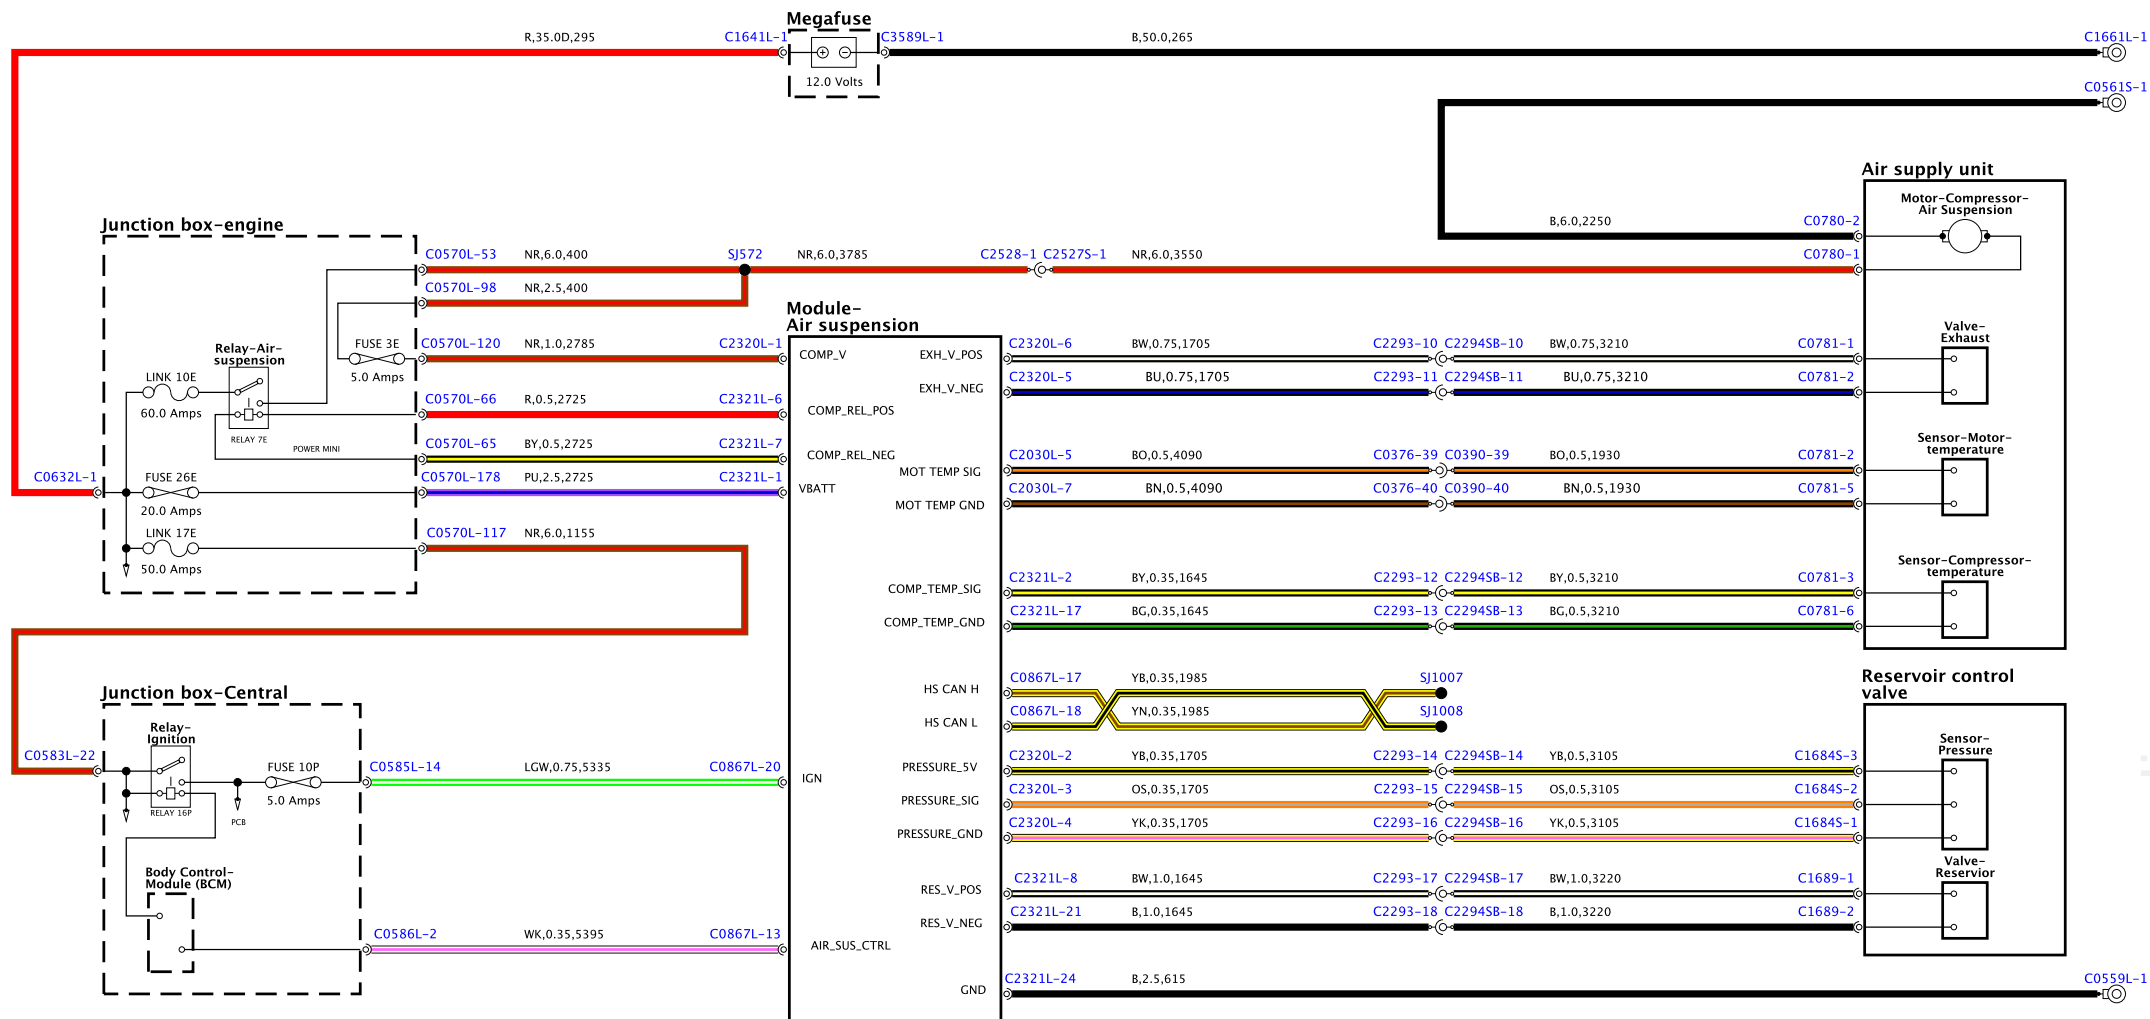


Switchpack-Center-console

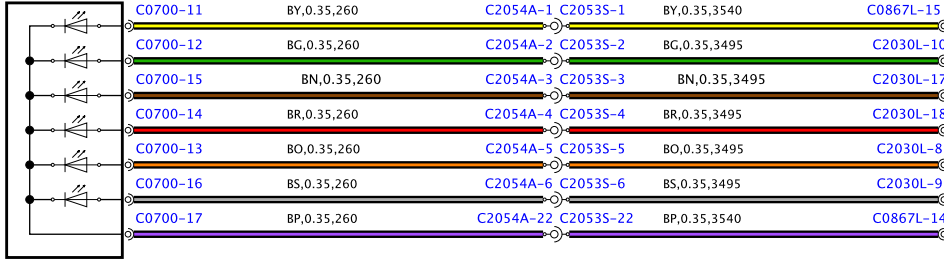


Valve block-Front

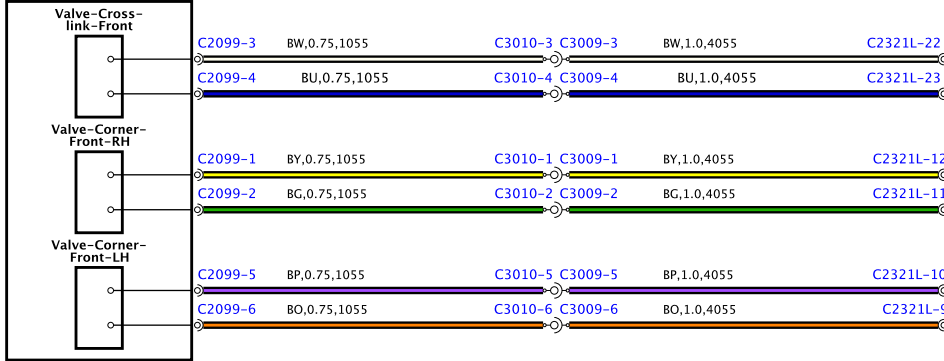


Sensor-Height-Front-Left




Sensor-Height-Rear-Left

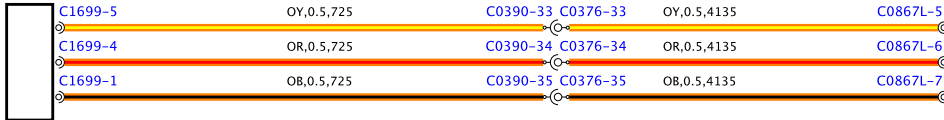


Module-Air suspension

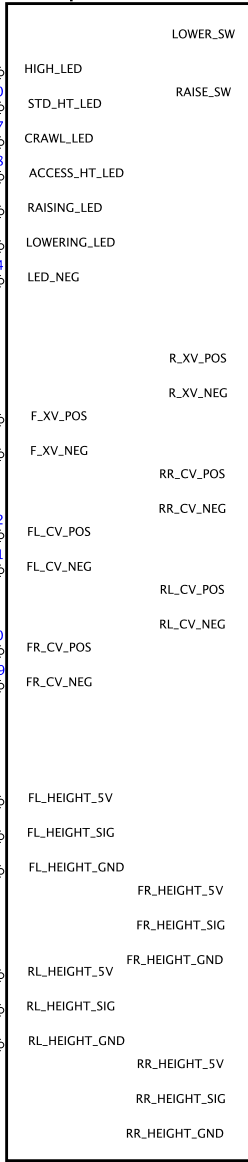


Switchpack-Center-console

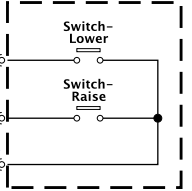

Valve block-Rear

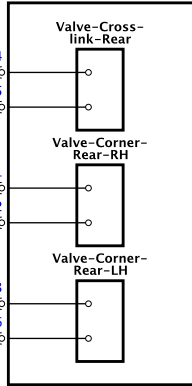



Sensor-Height-Front-Right

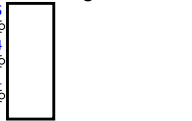



Sensor-Height-Rear-Right




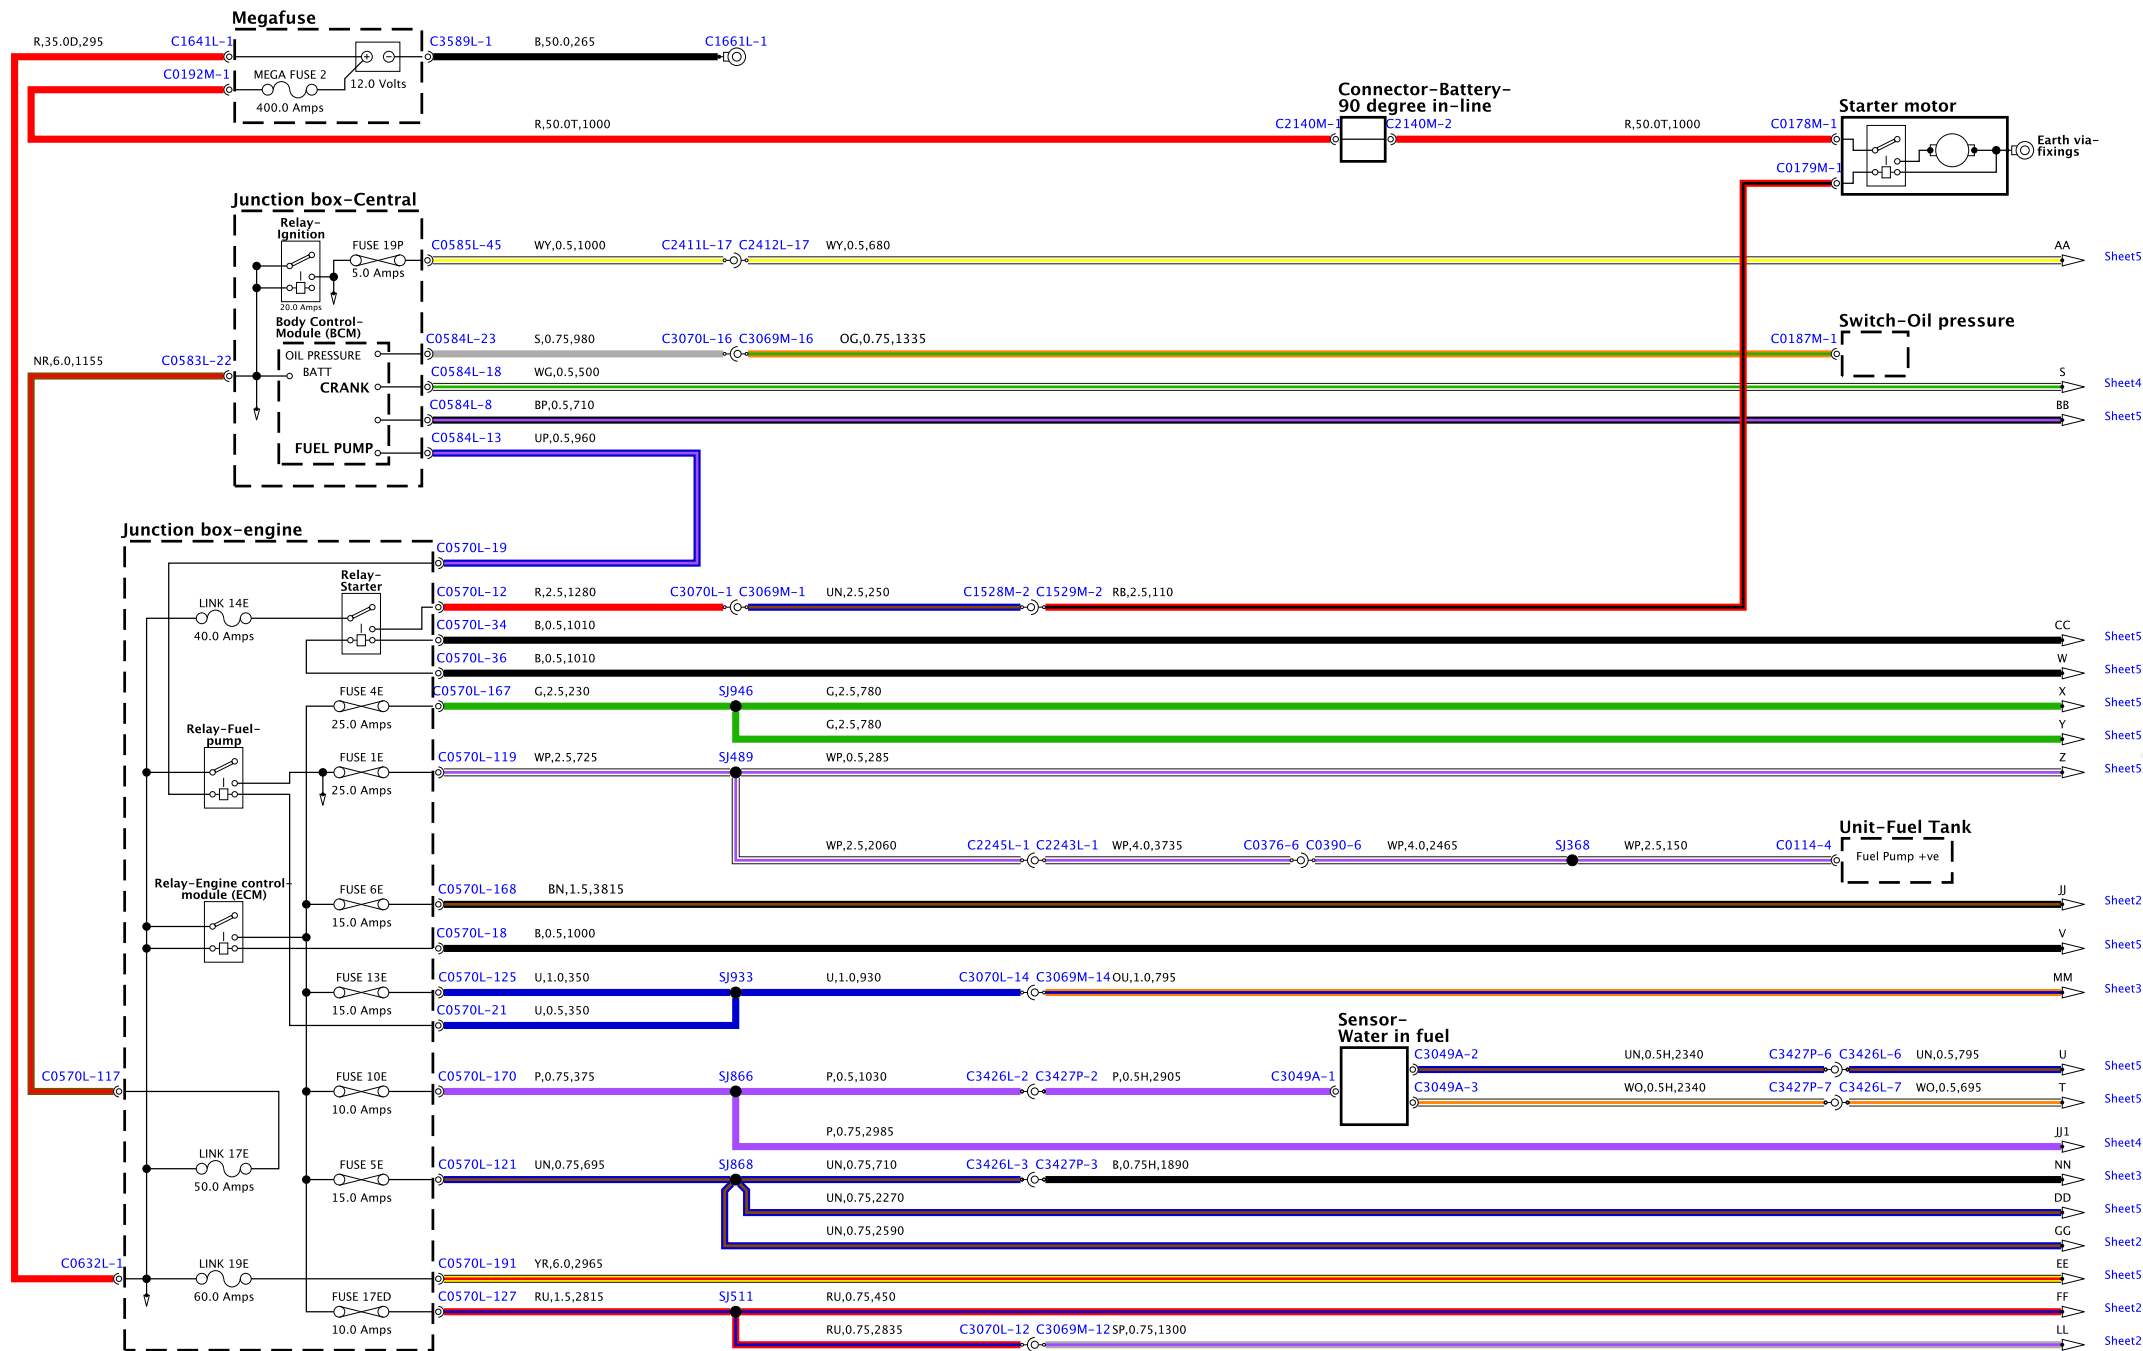


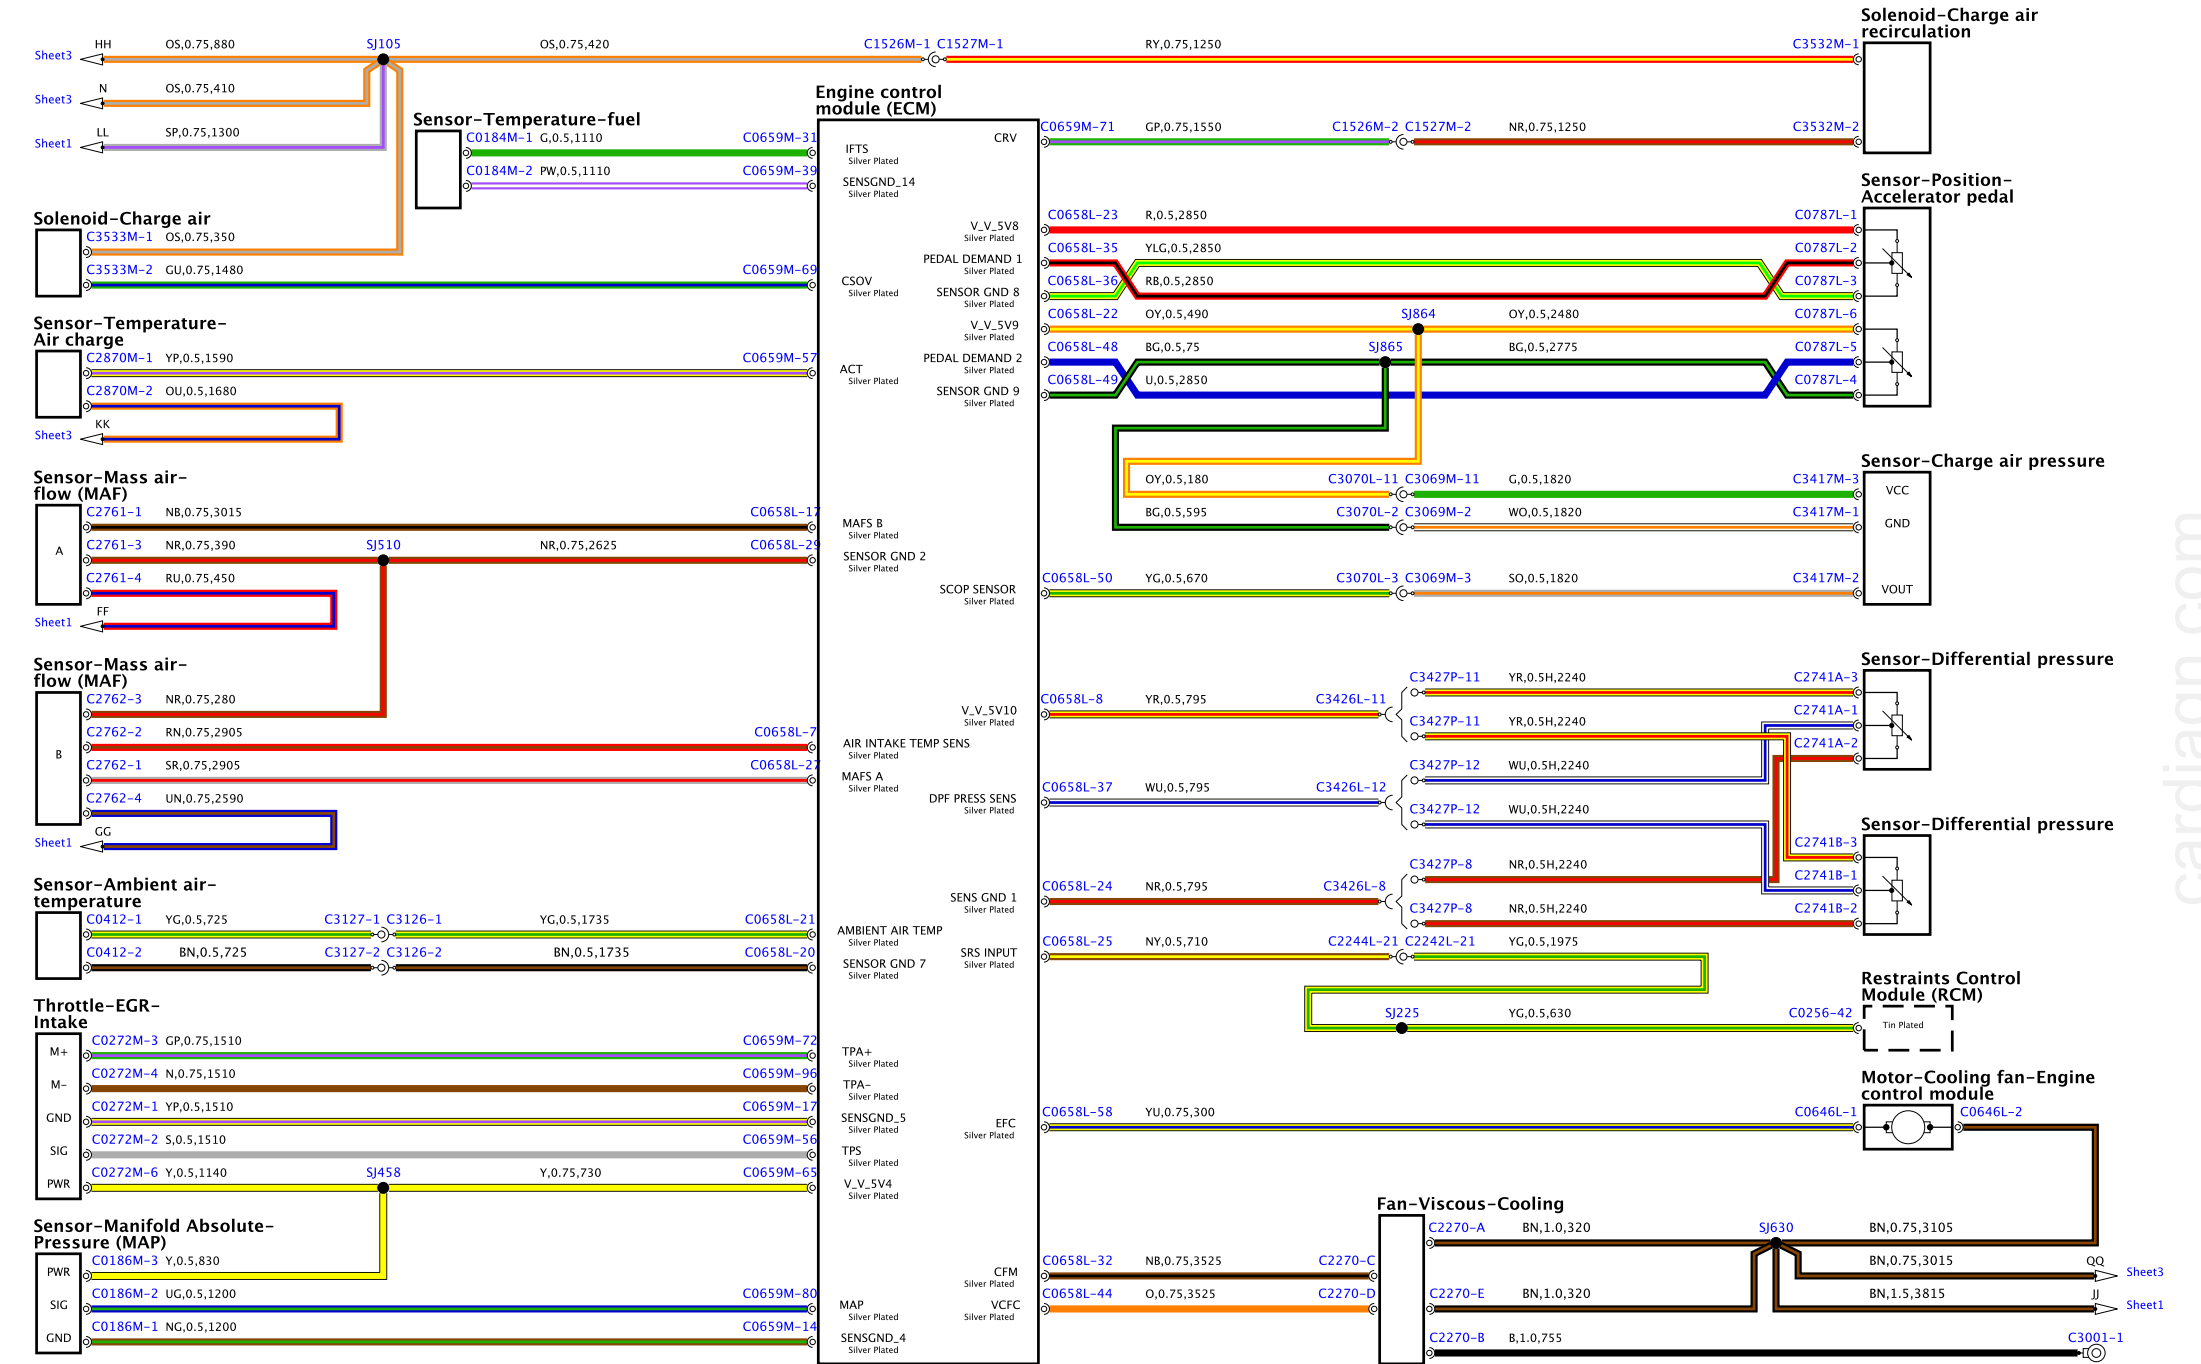

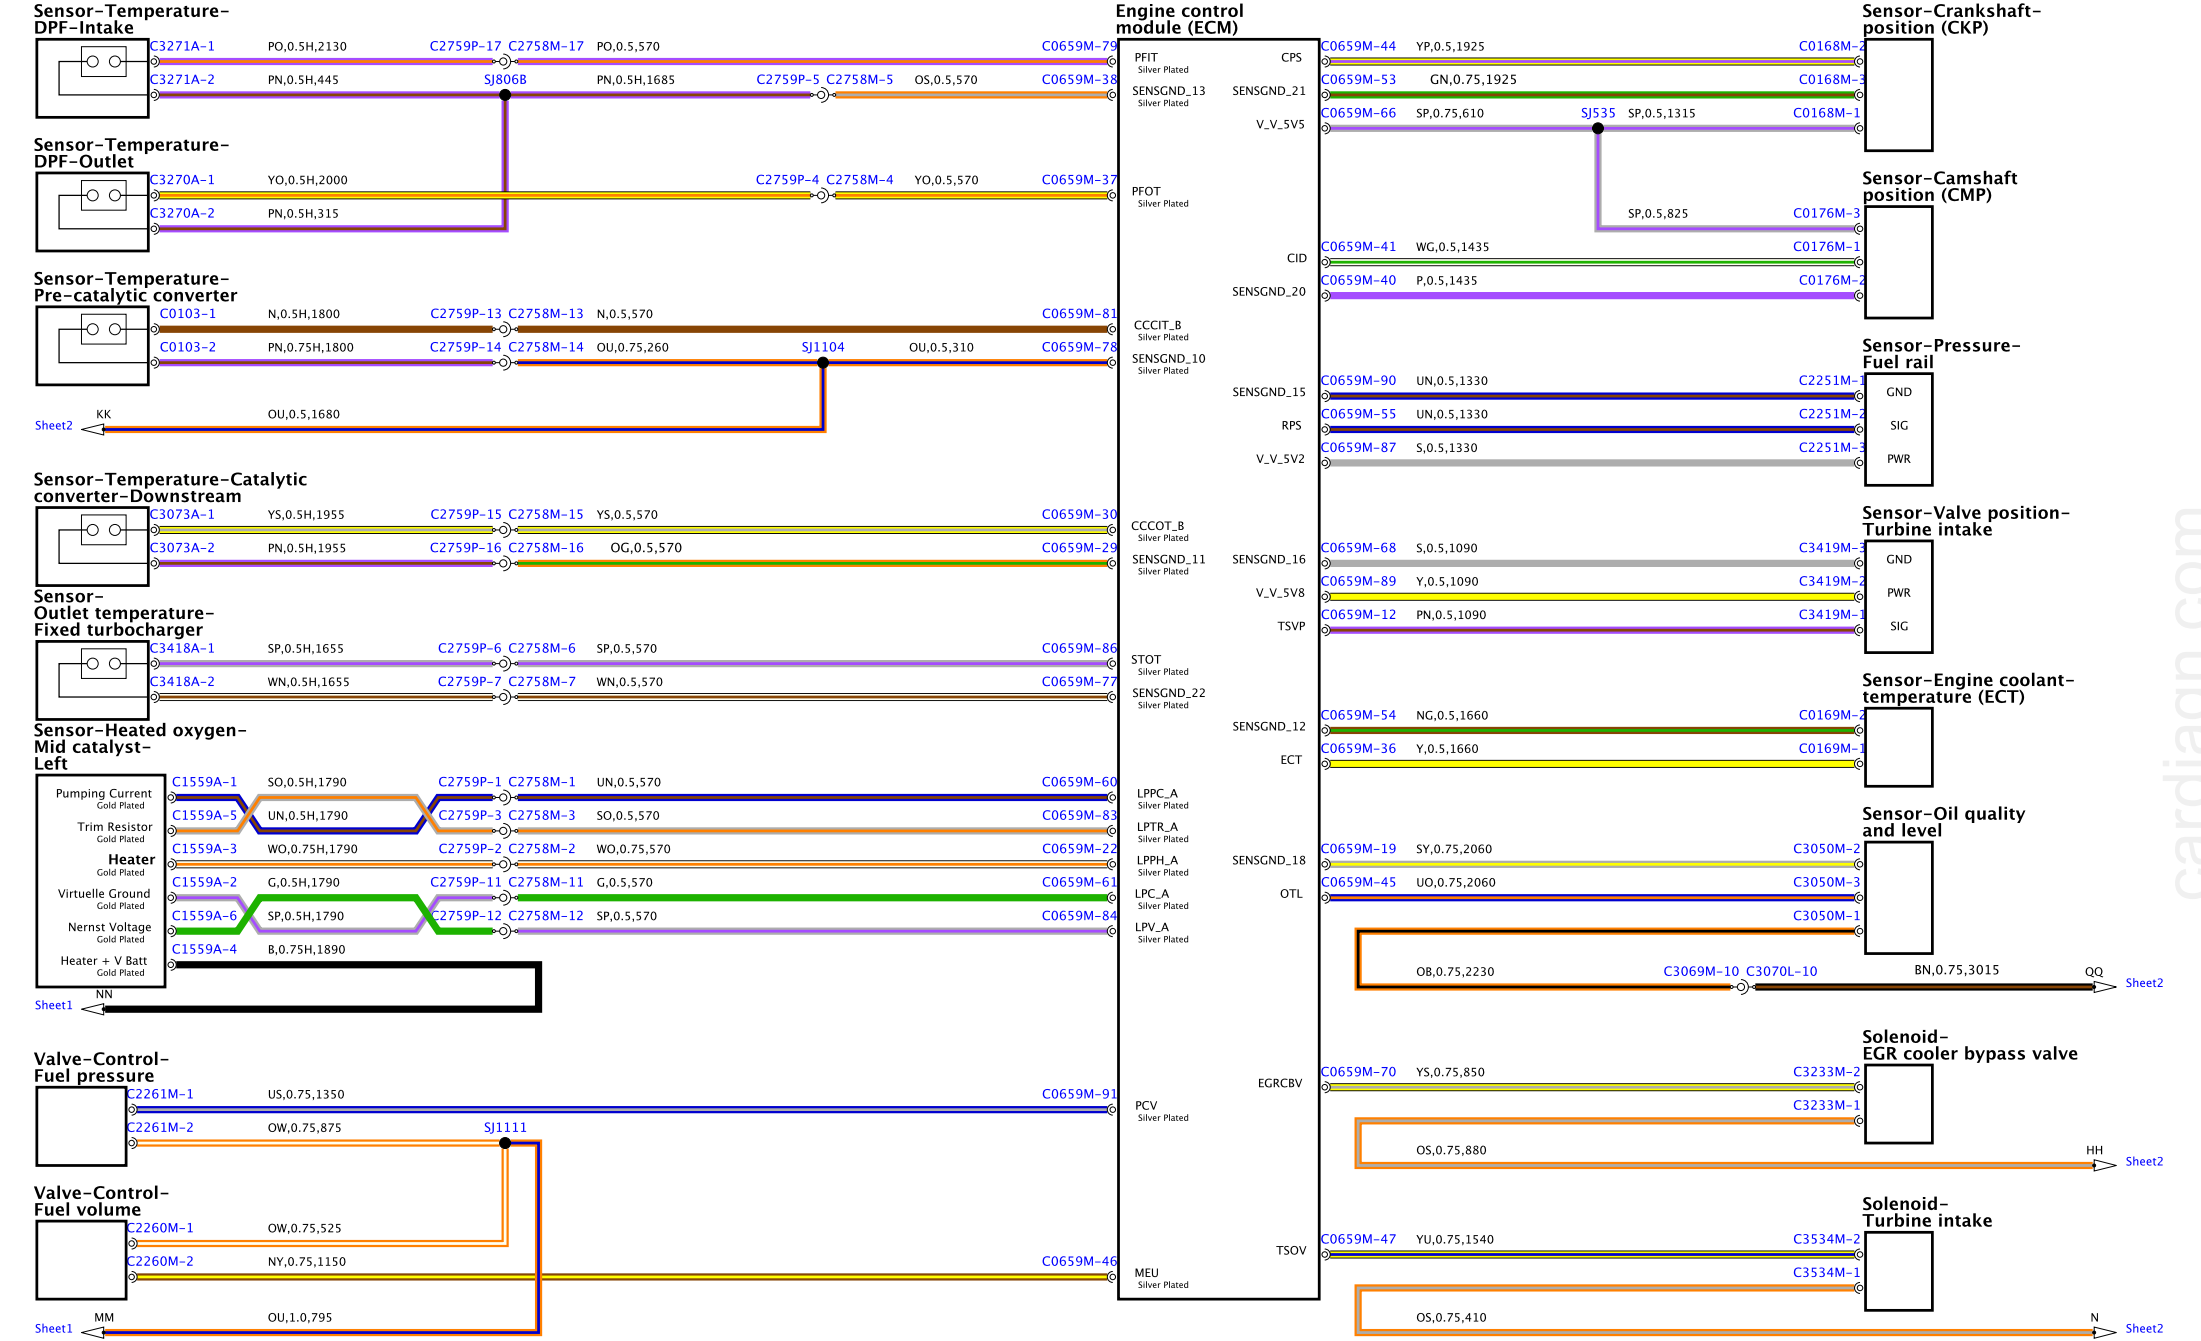

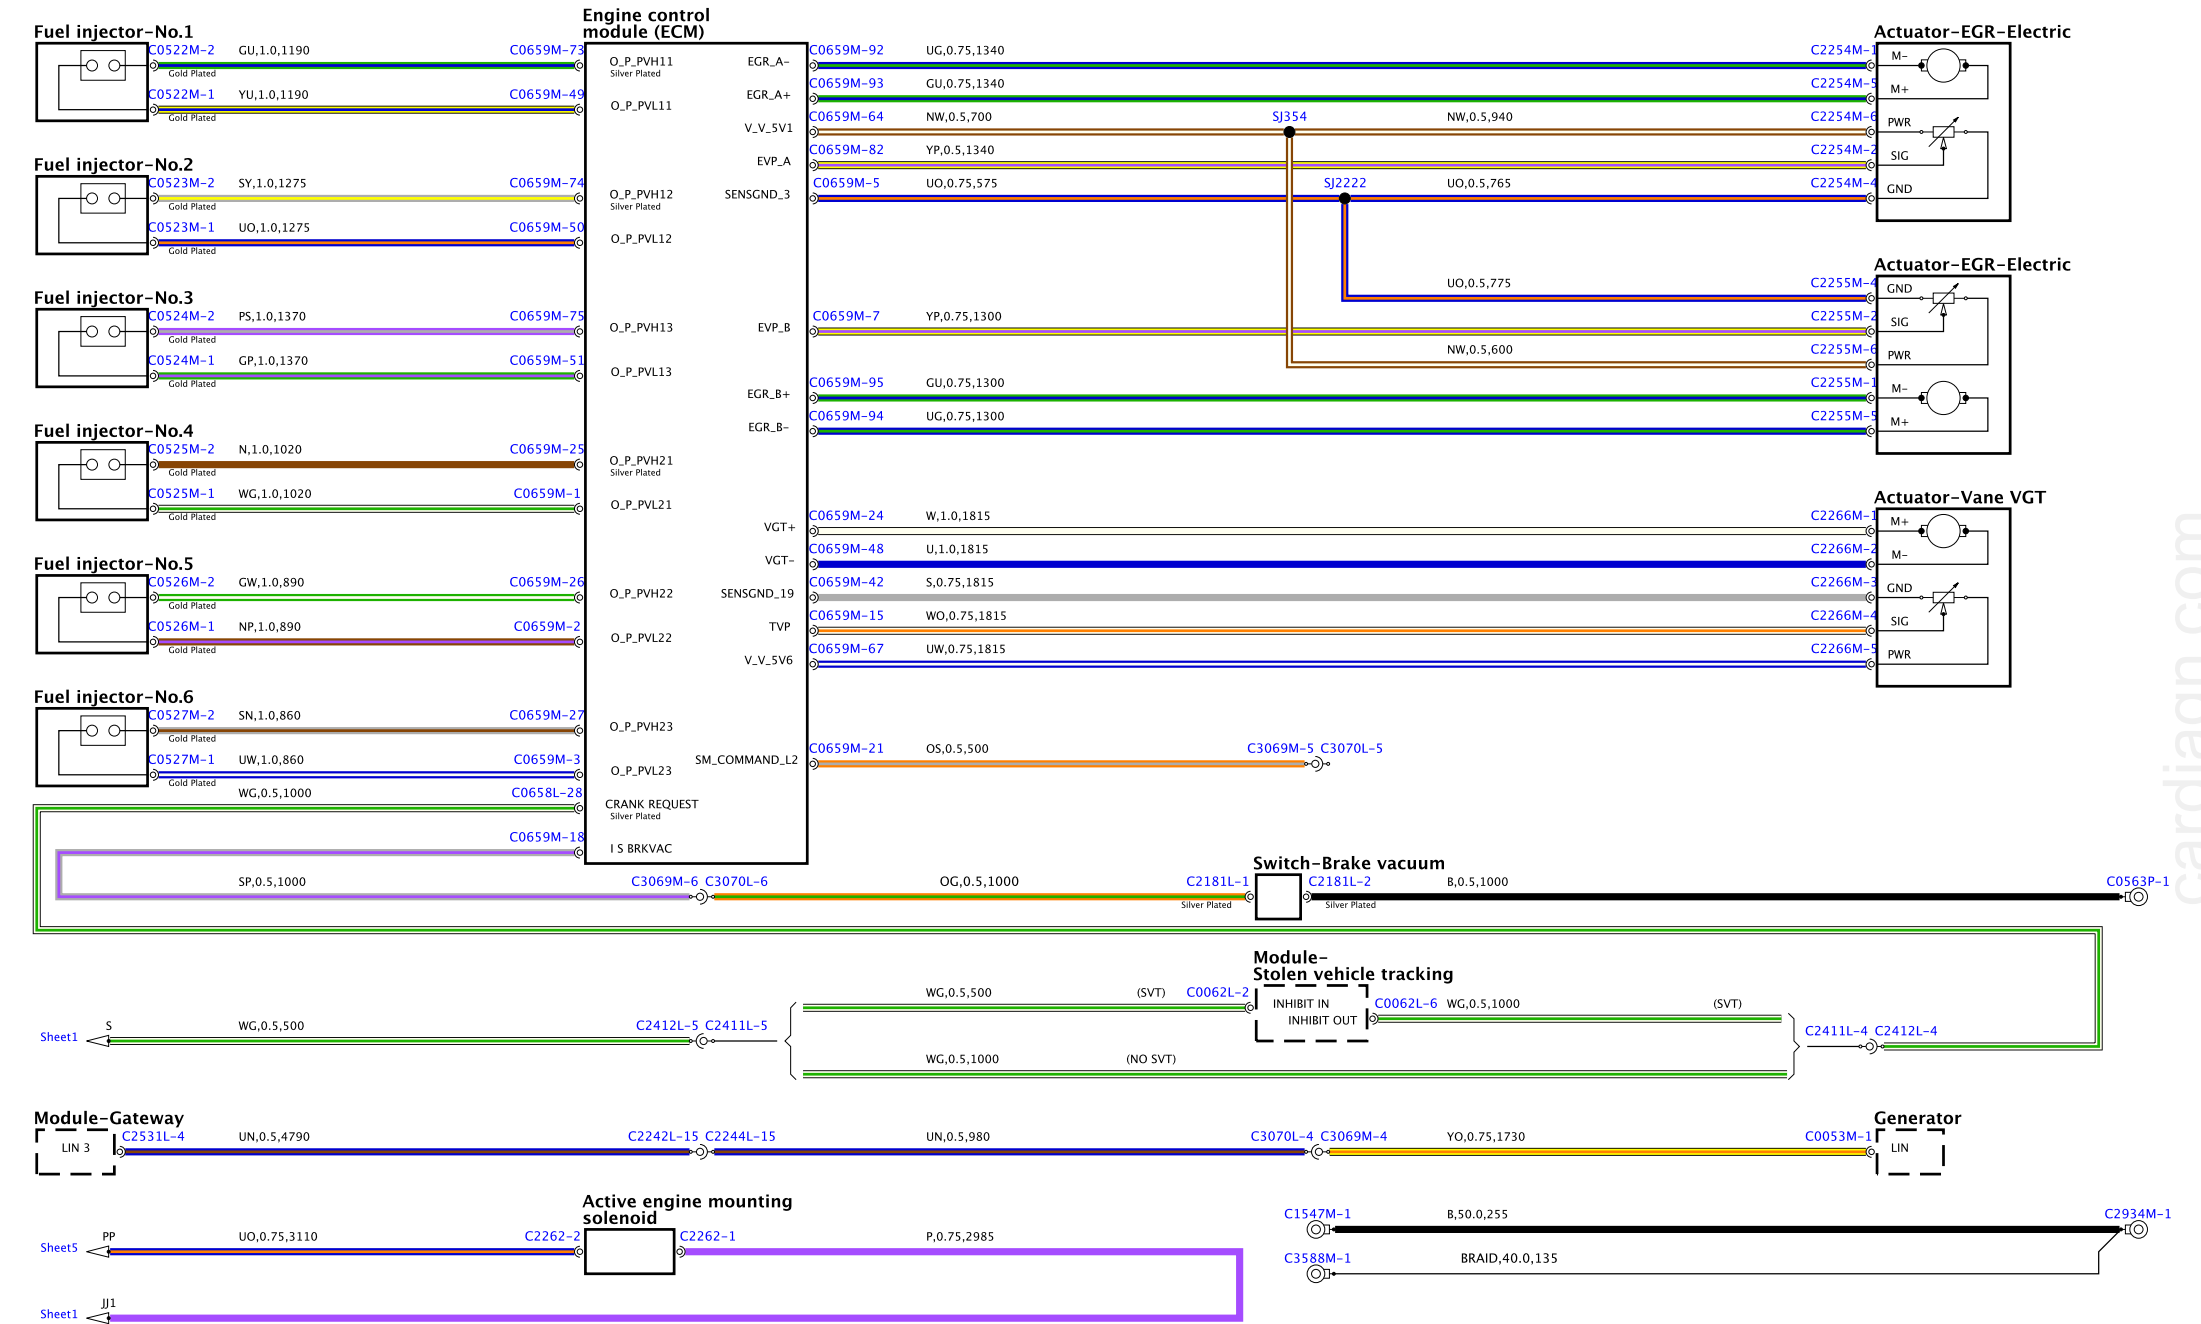

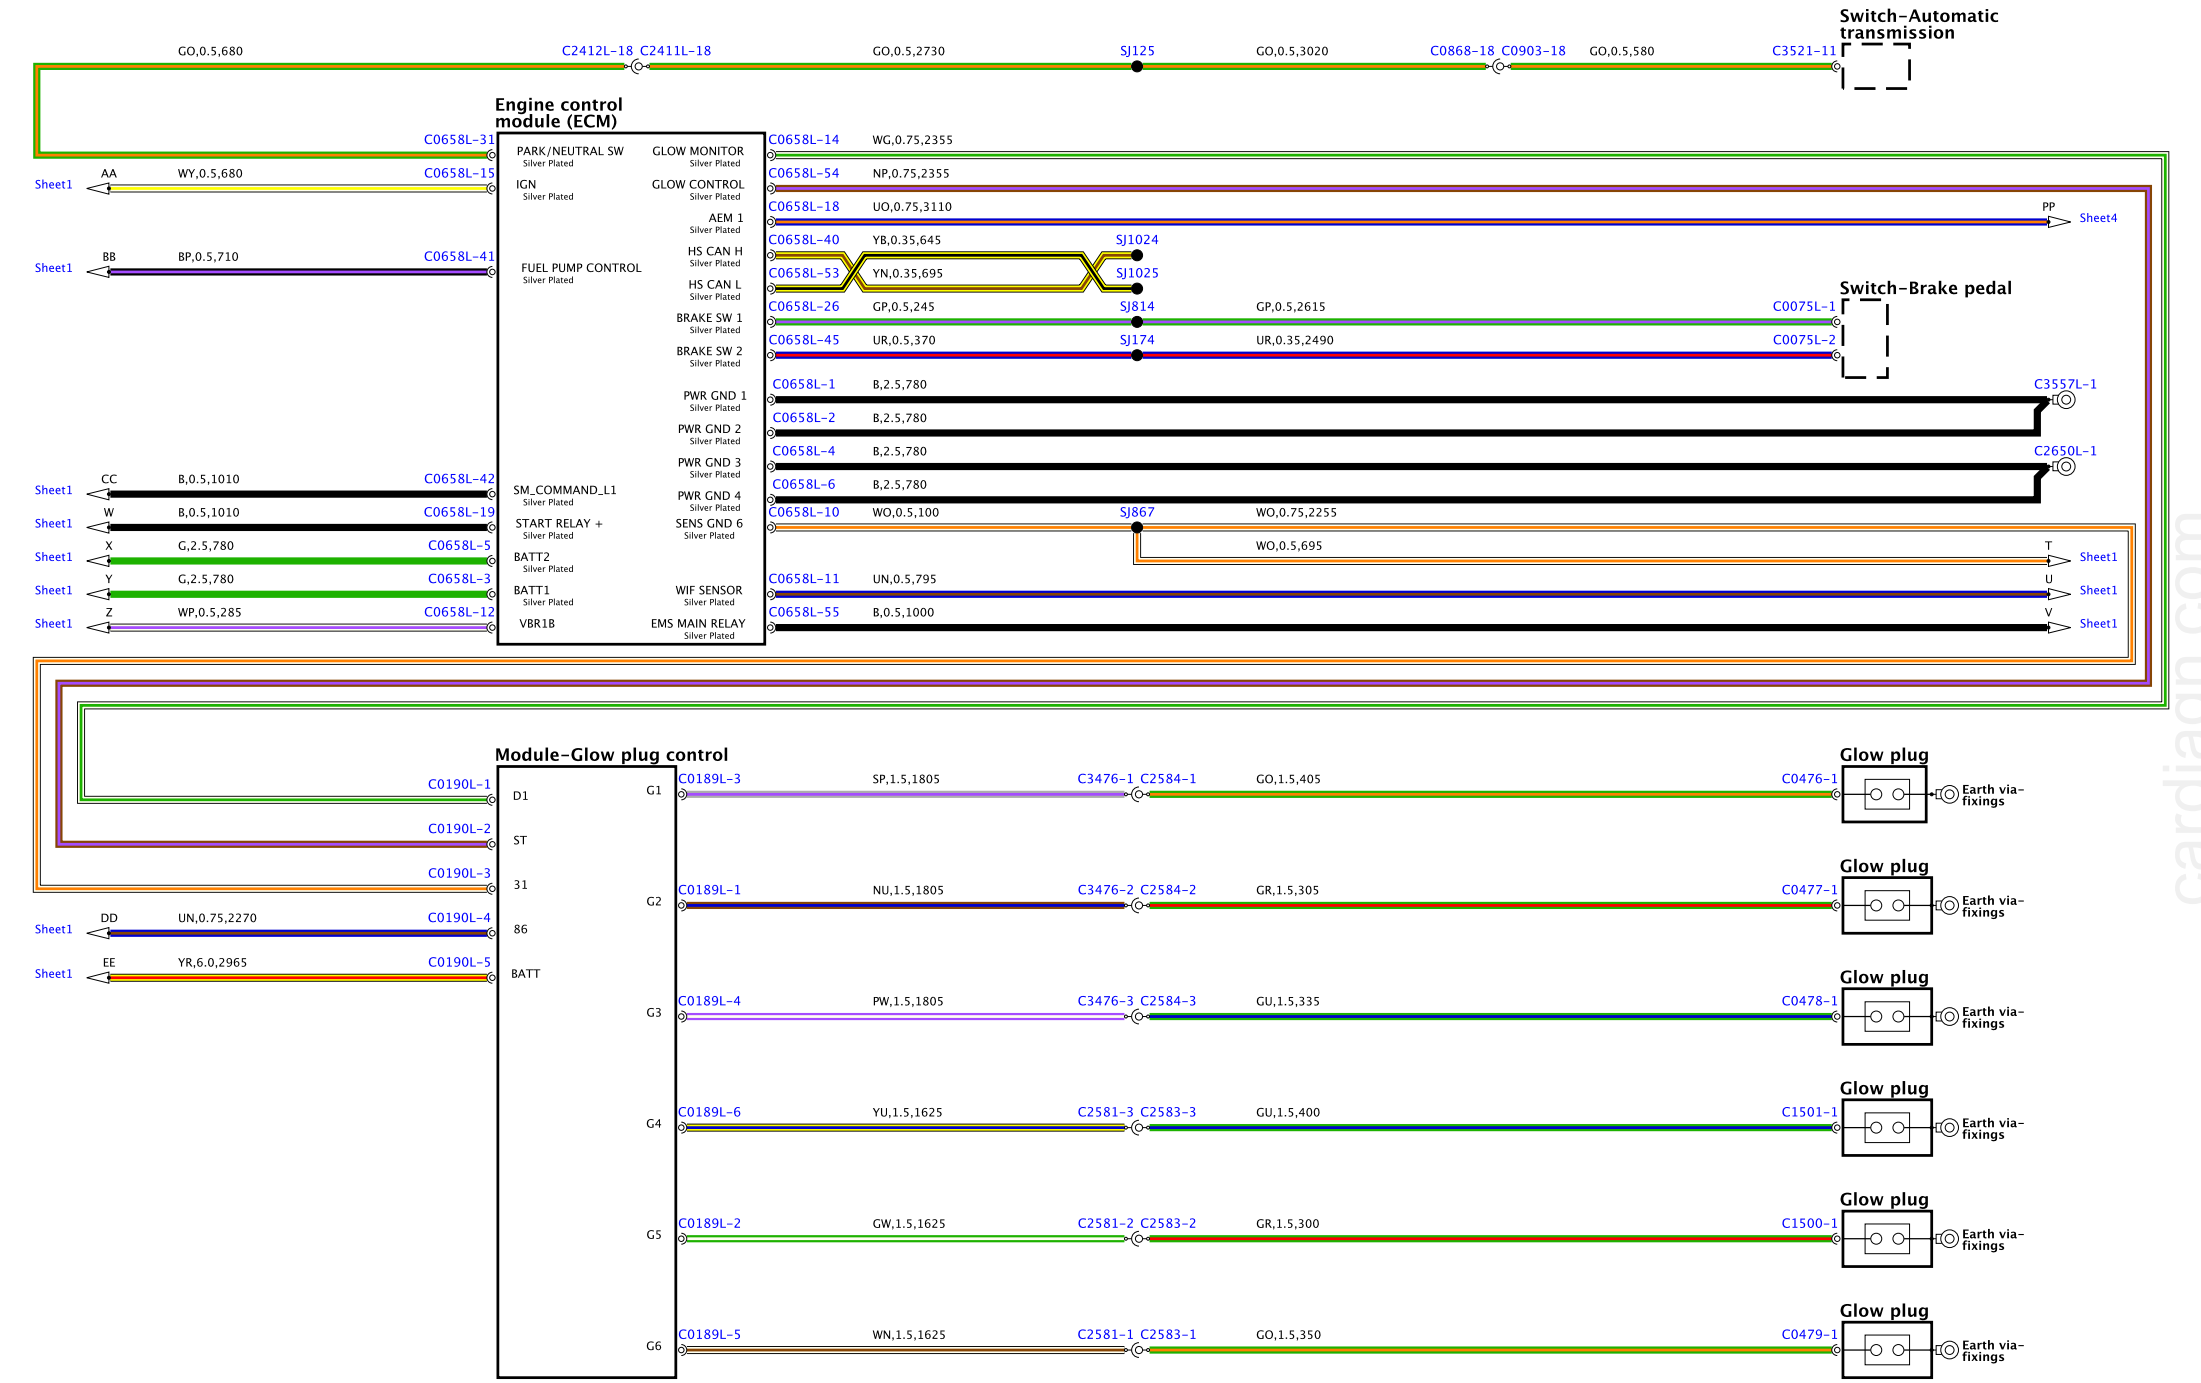

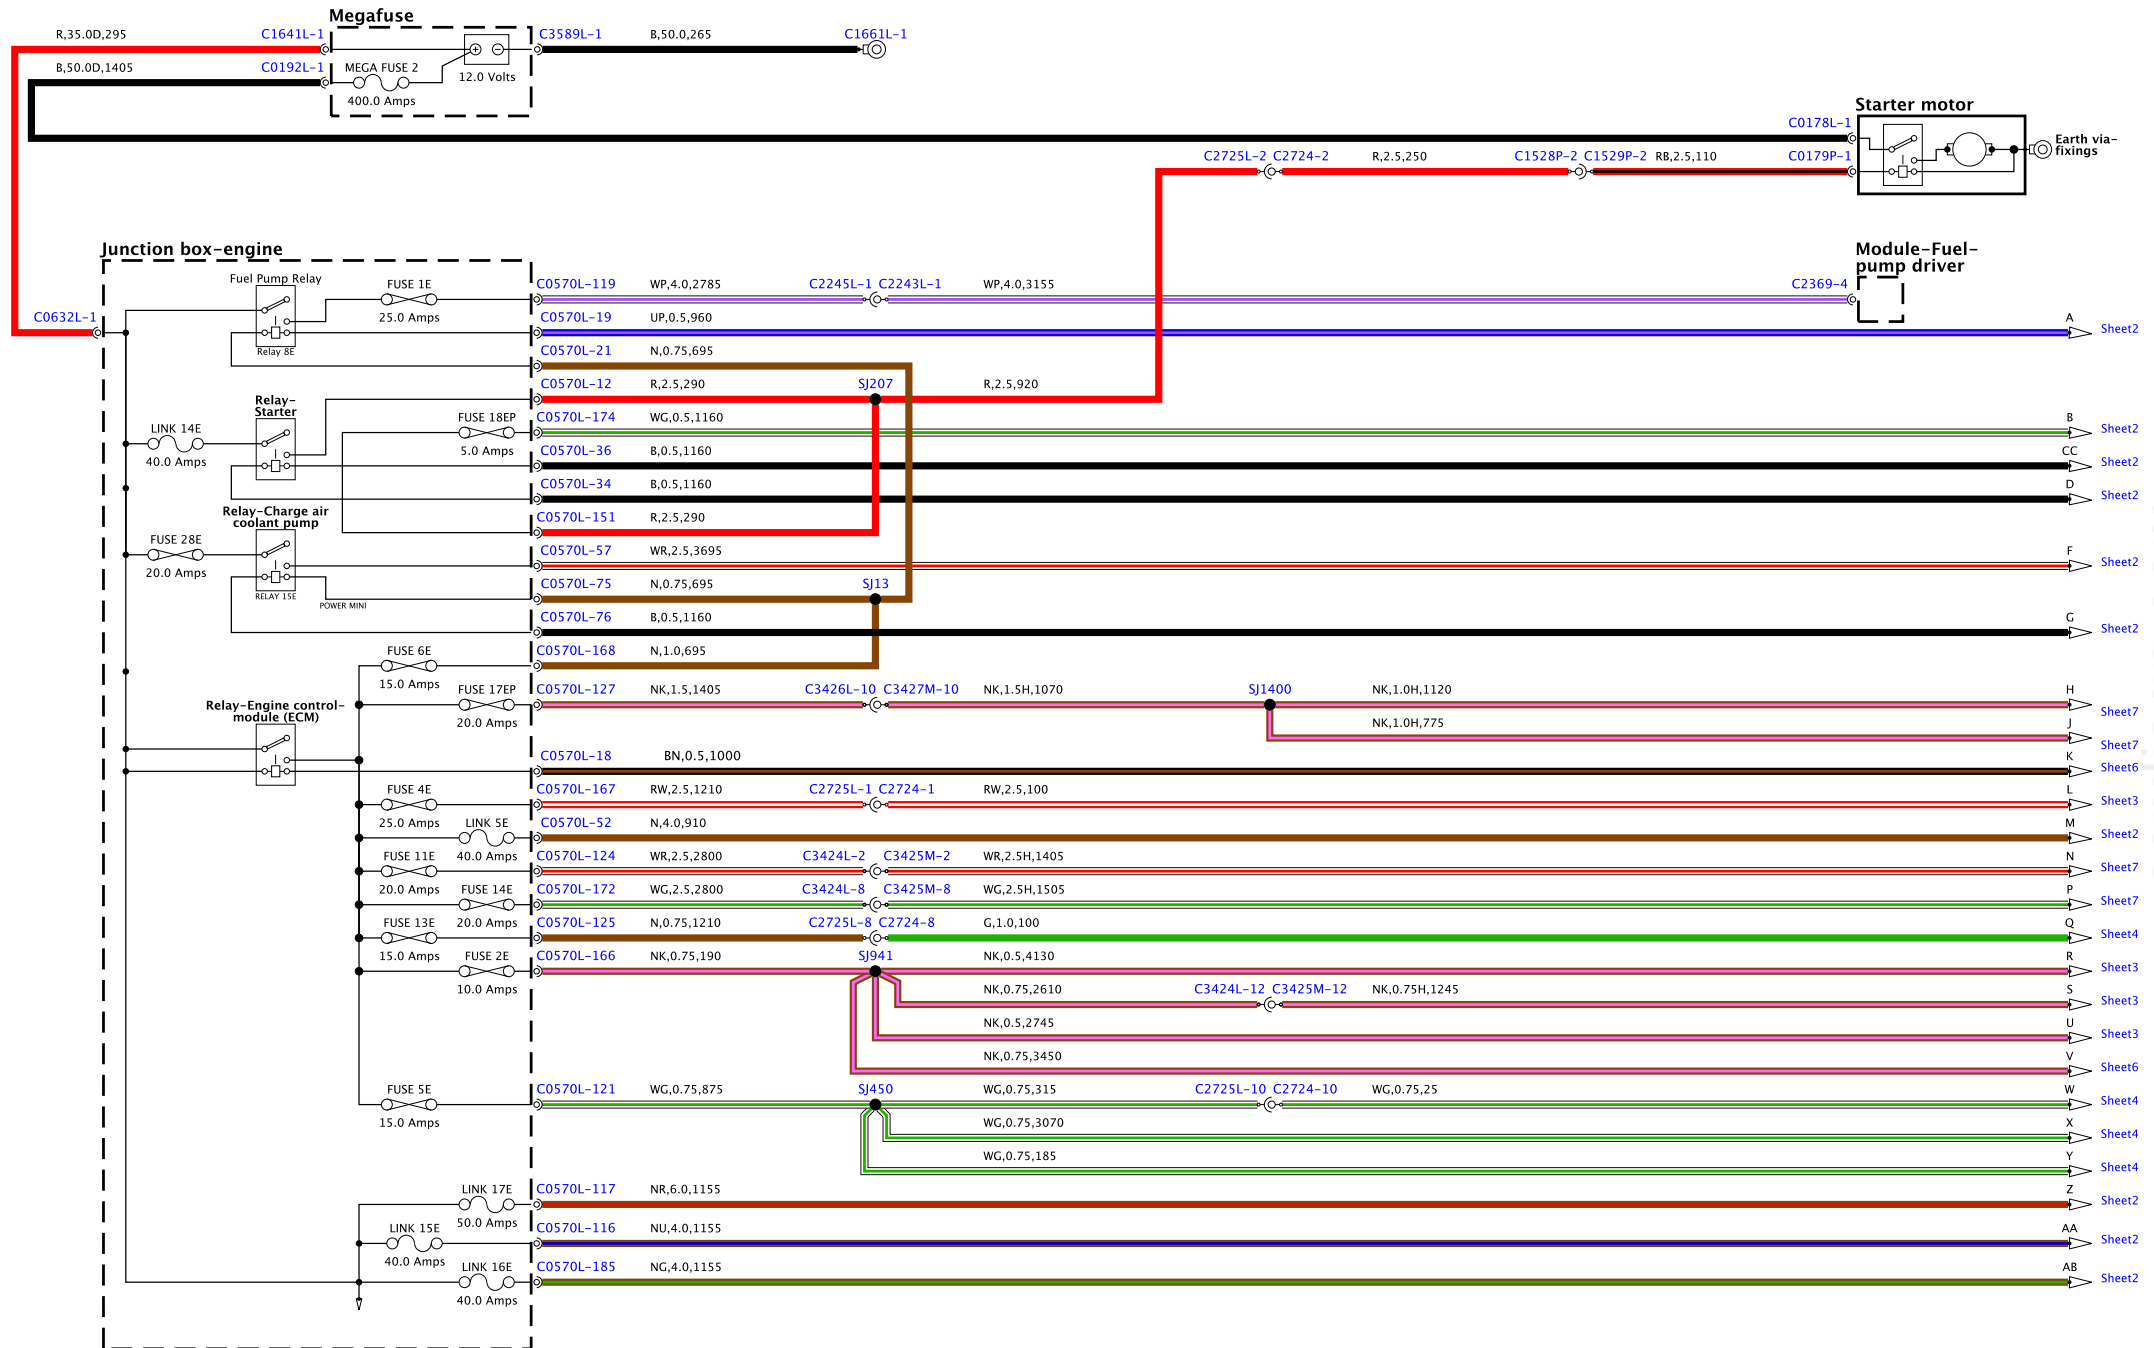

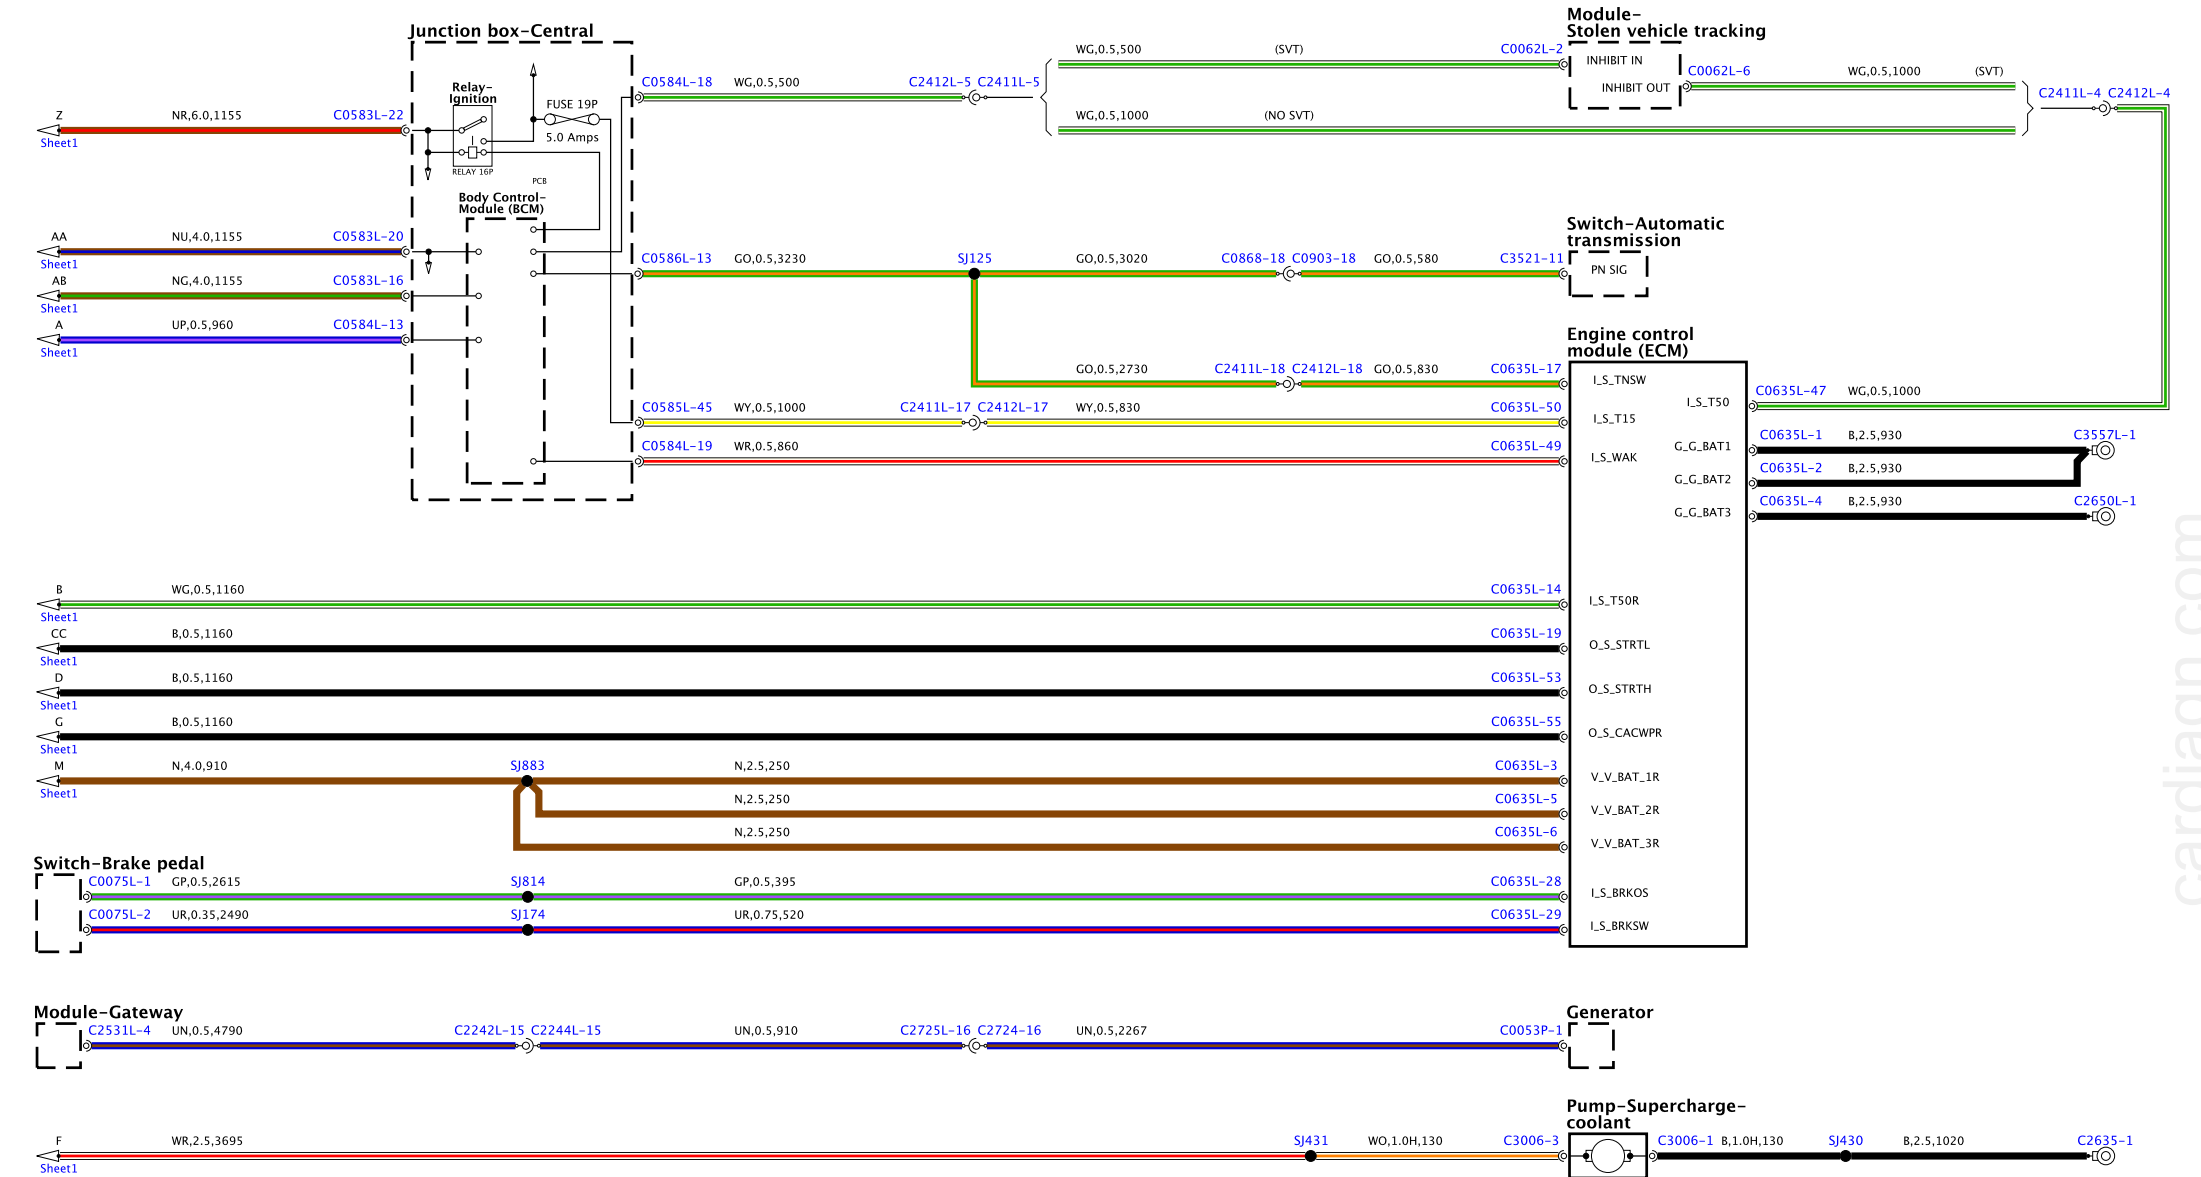
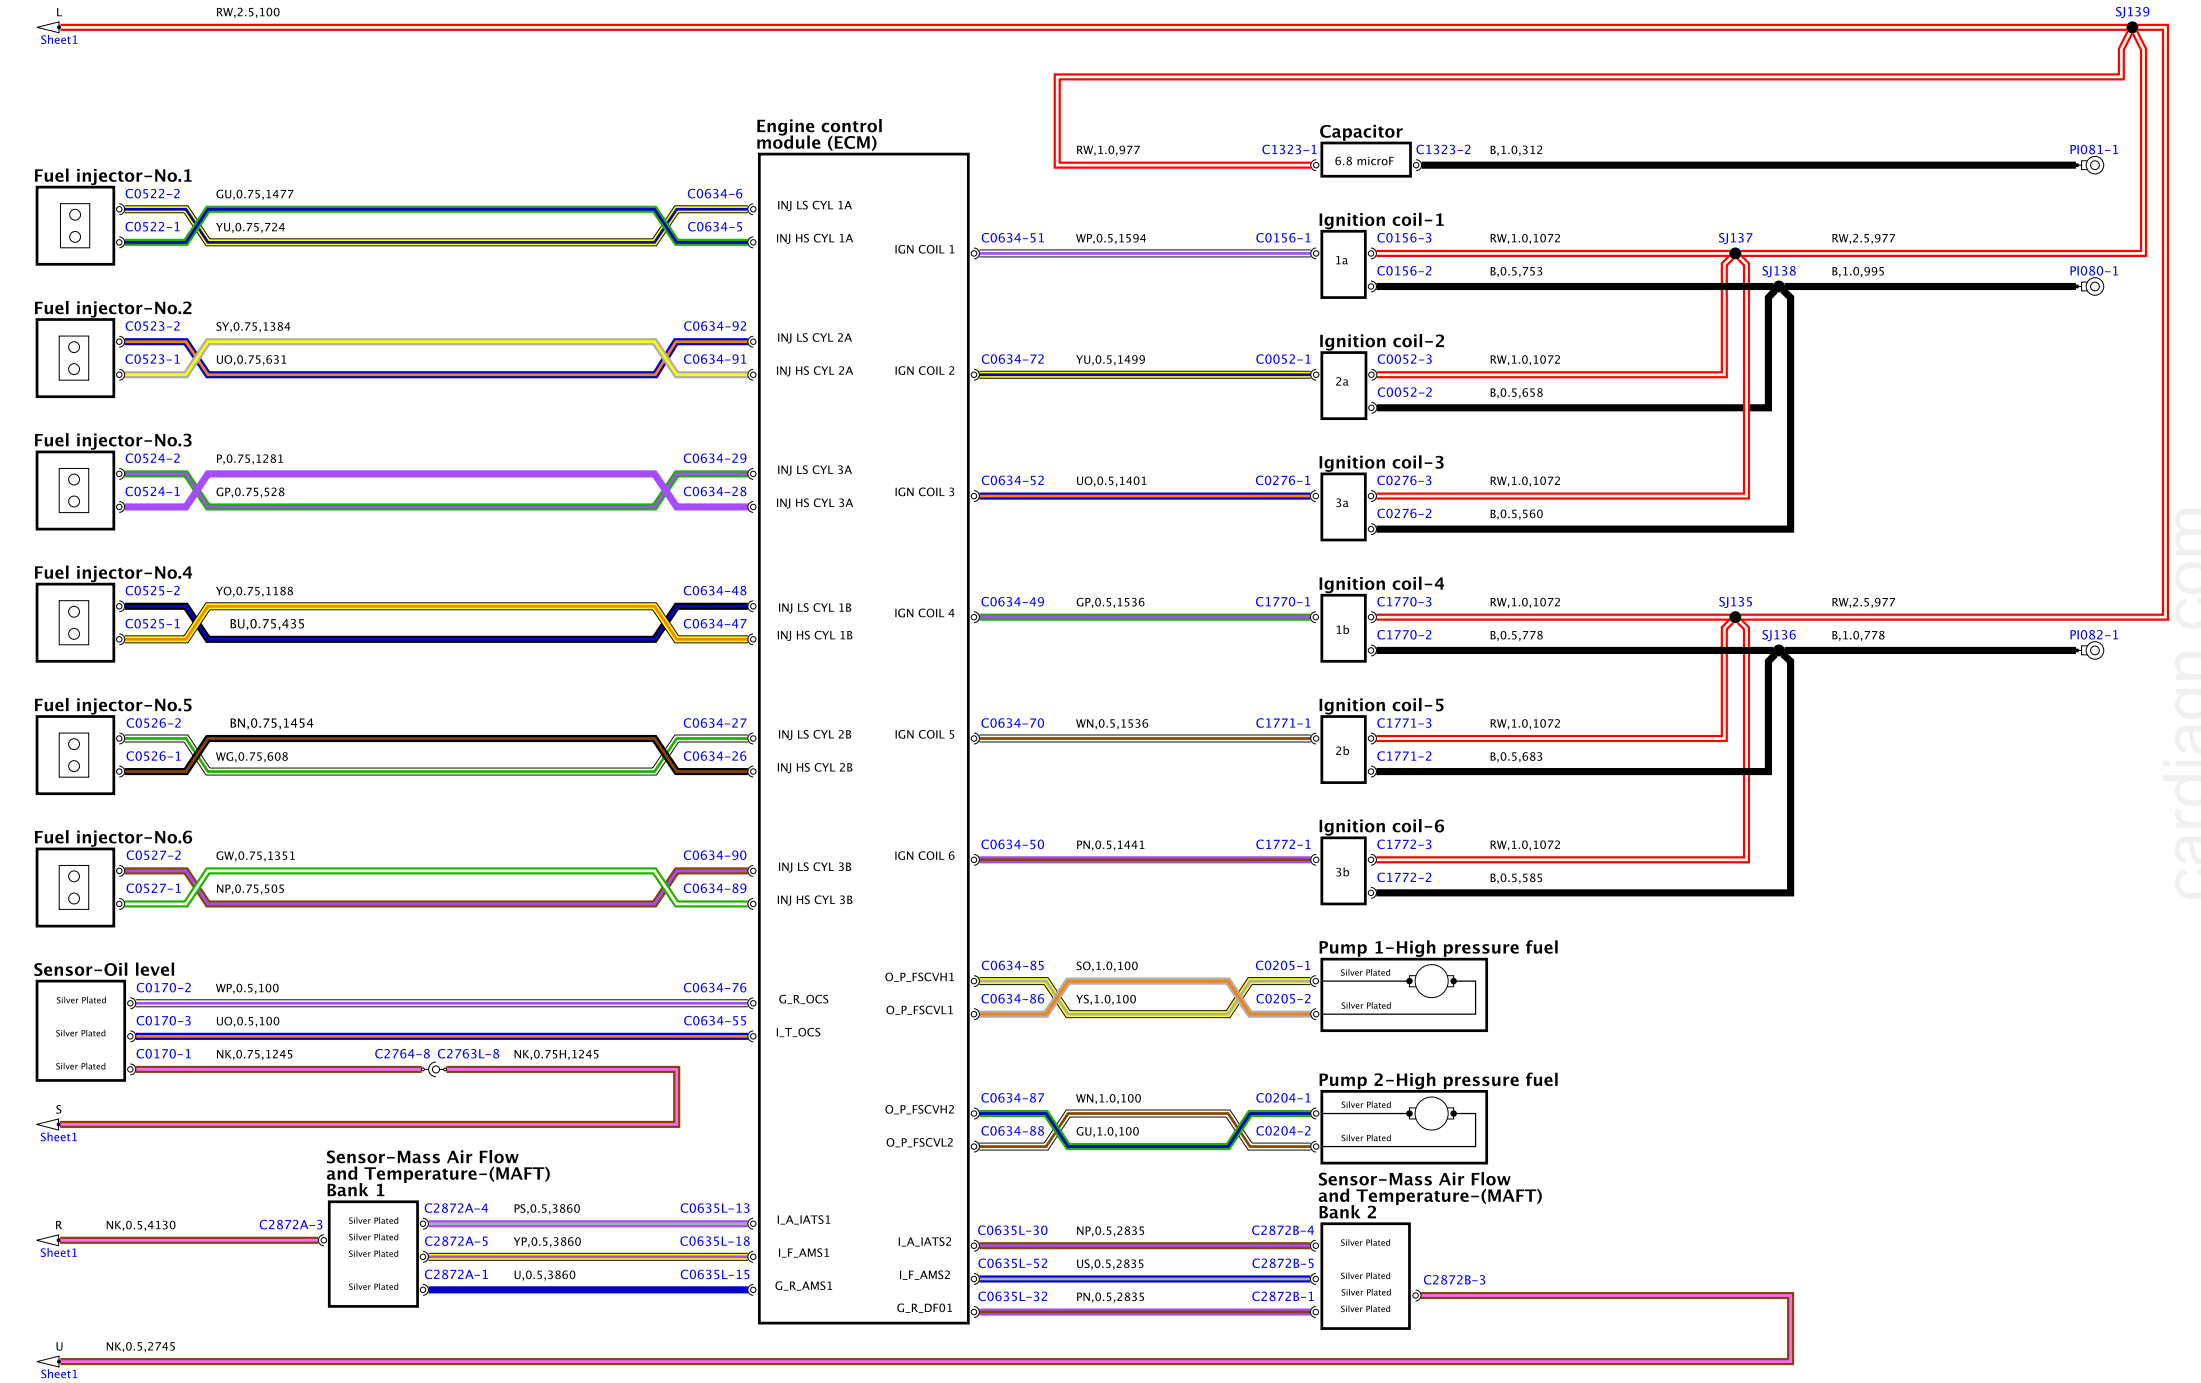


FIG21-70032-A-A-03-07-Service (0.319-13MM-P51)



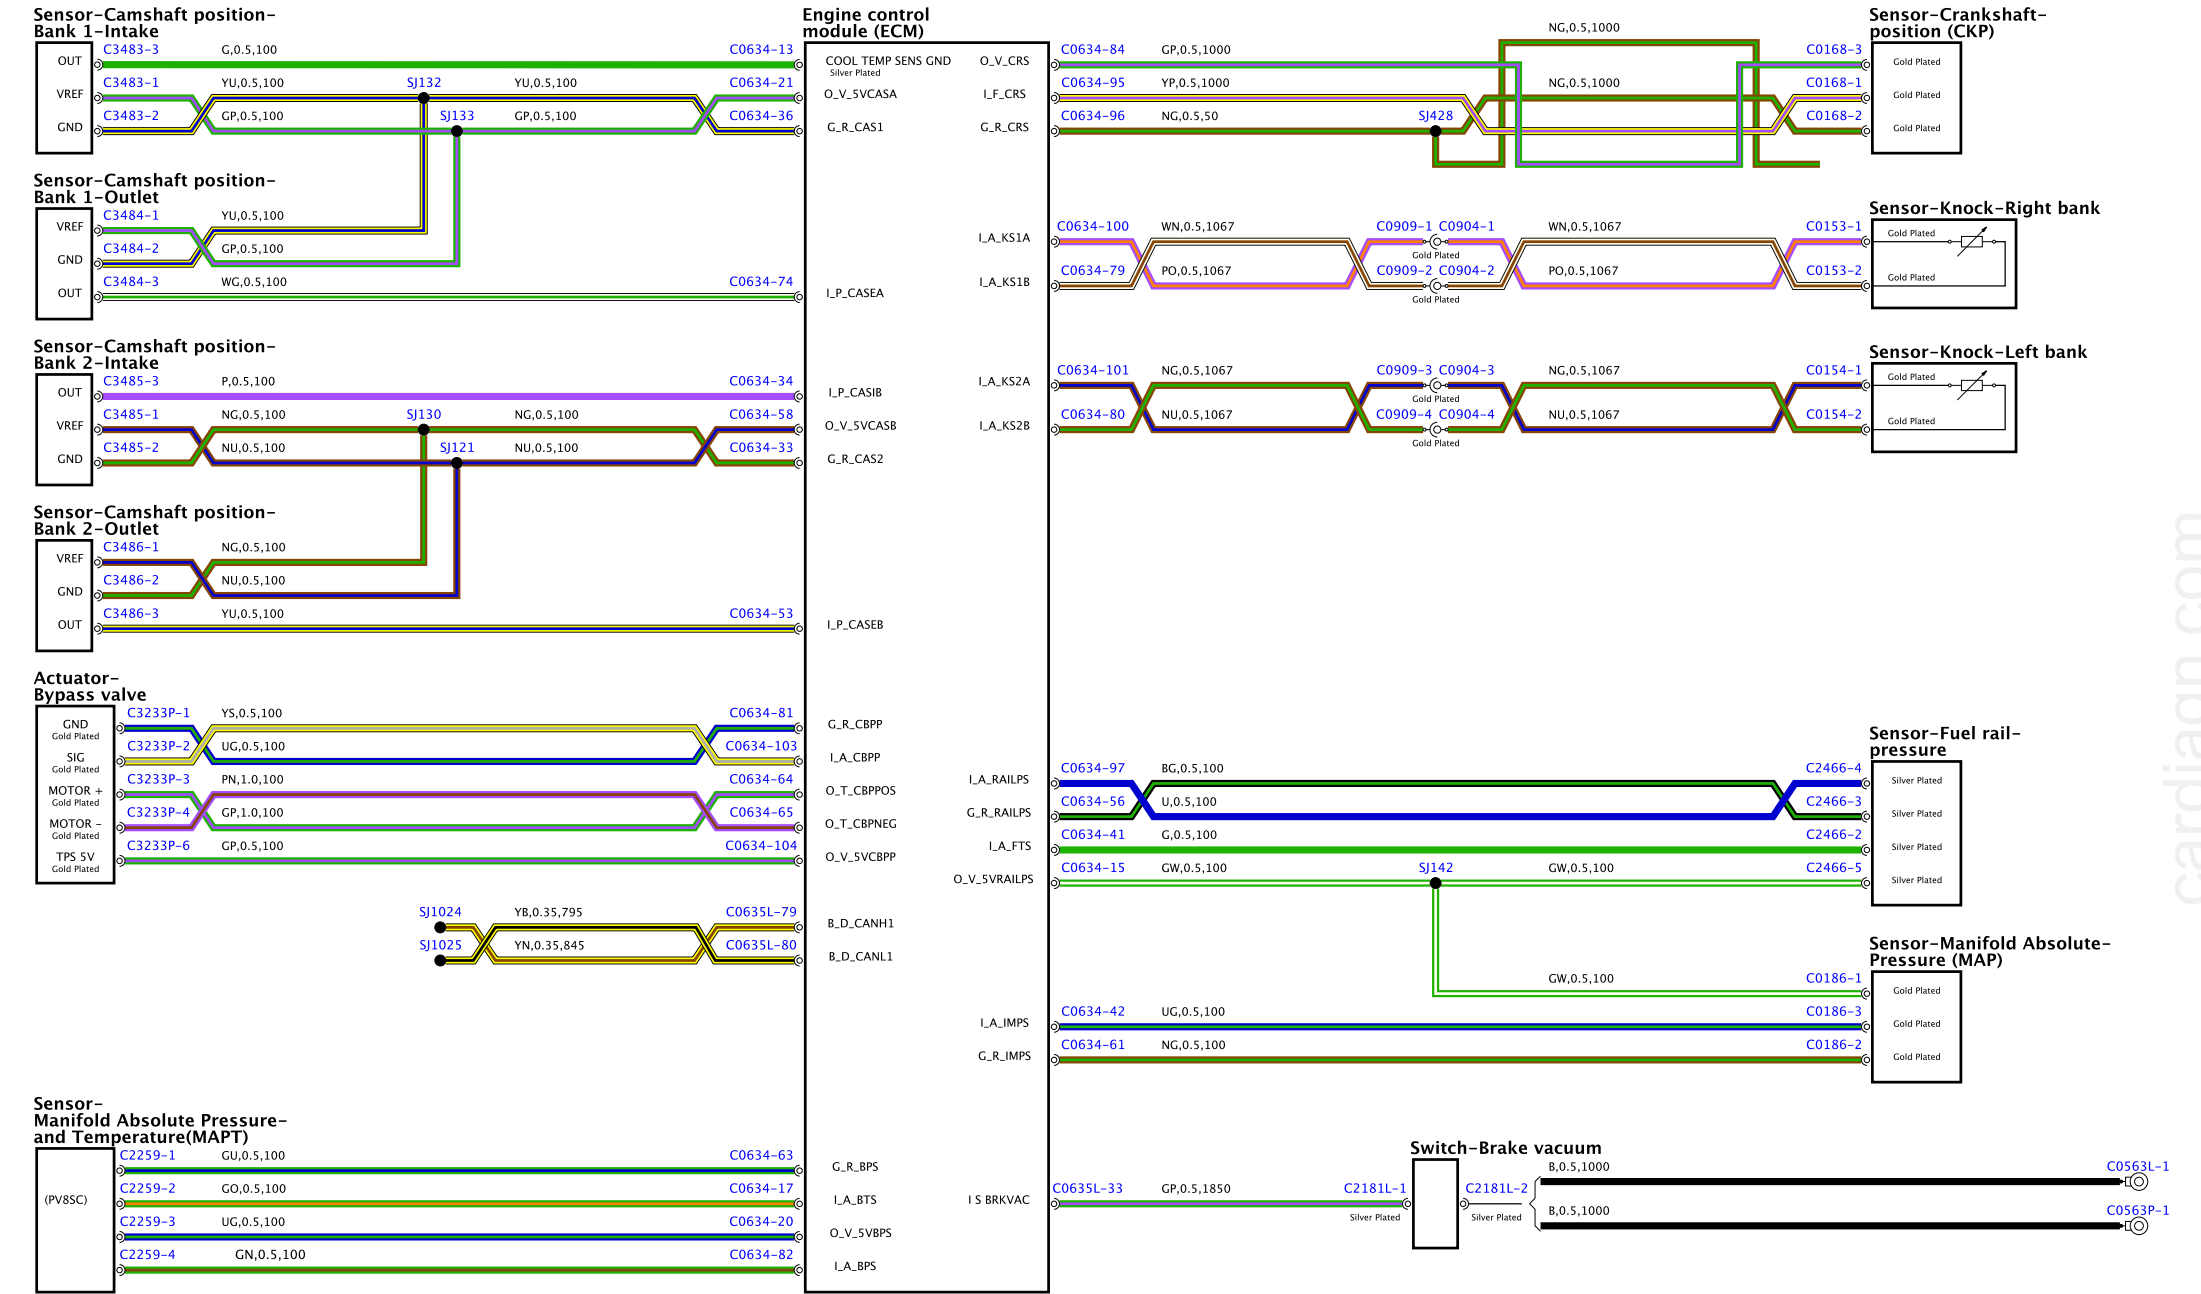
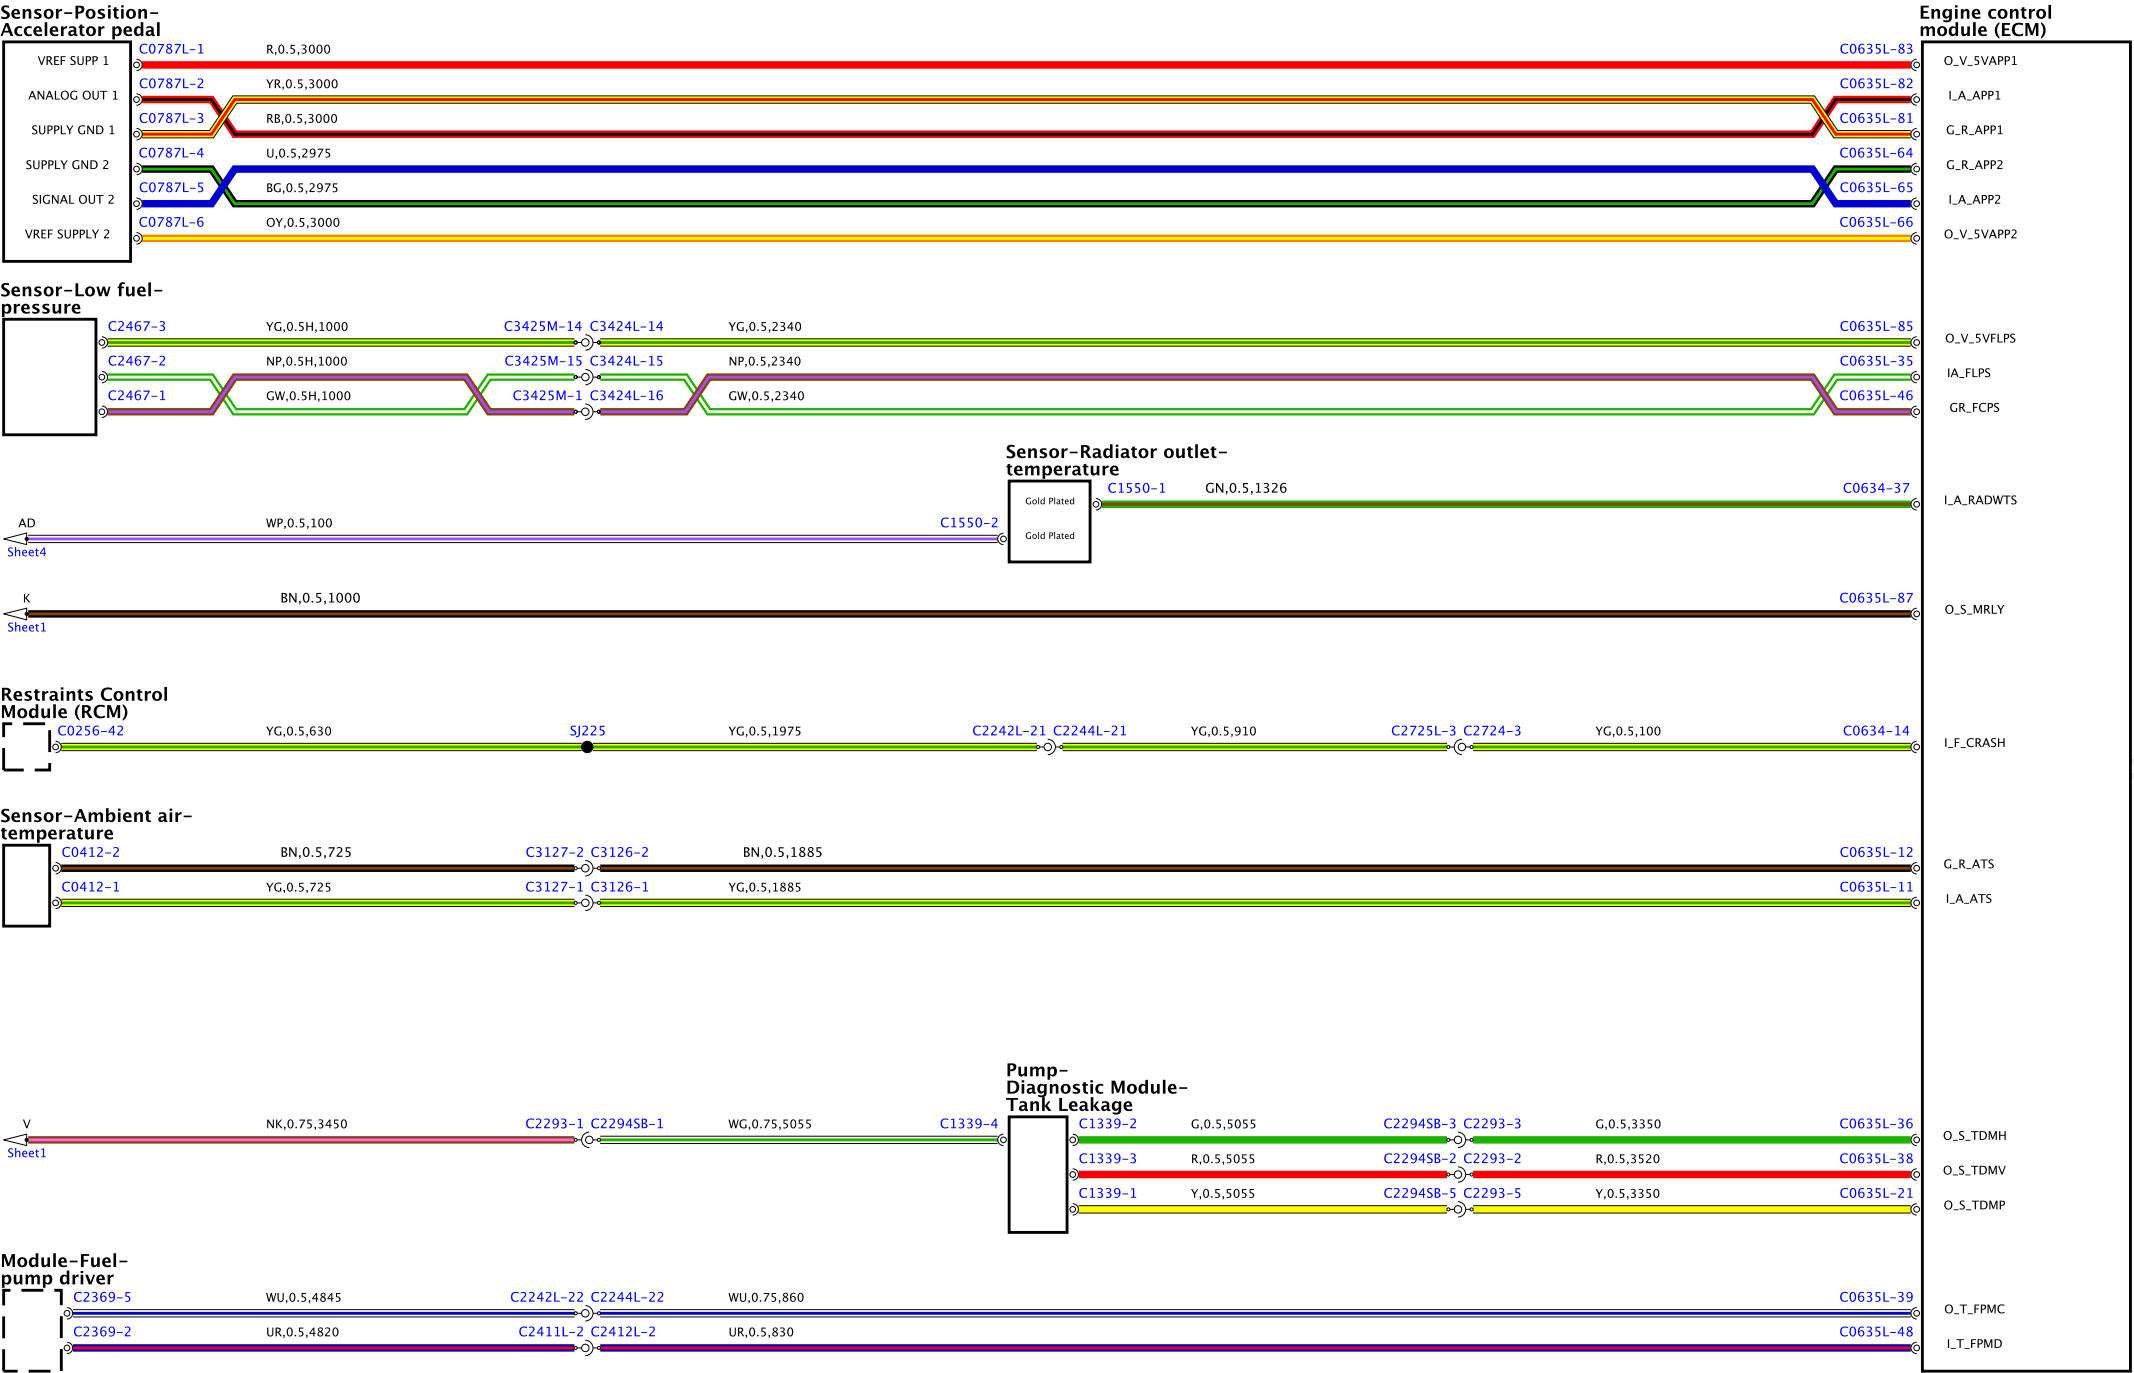
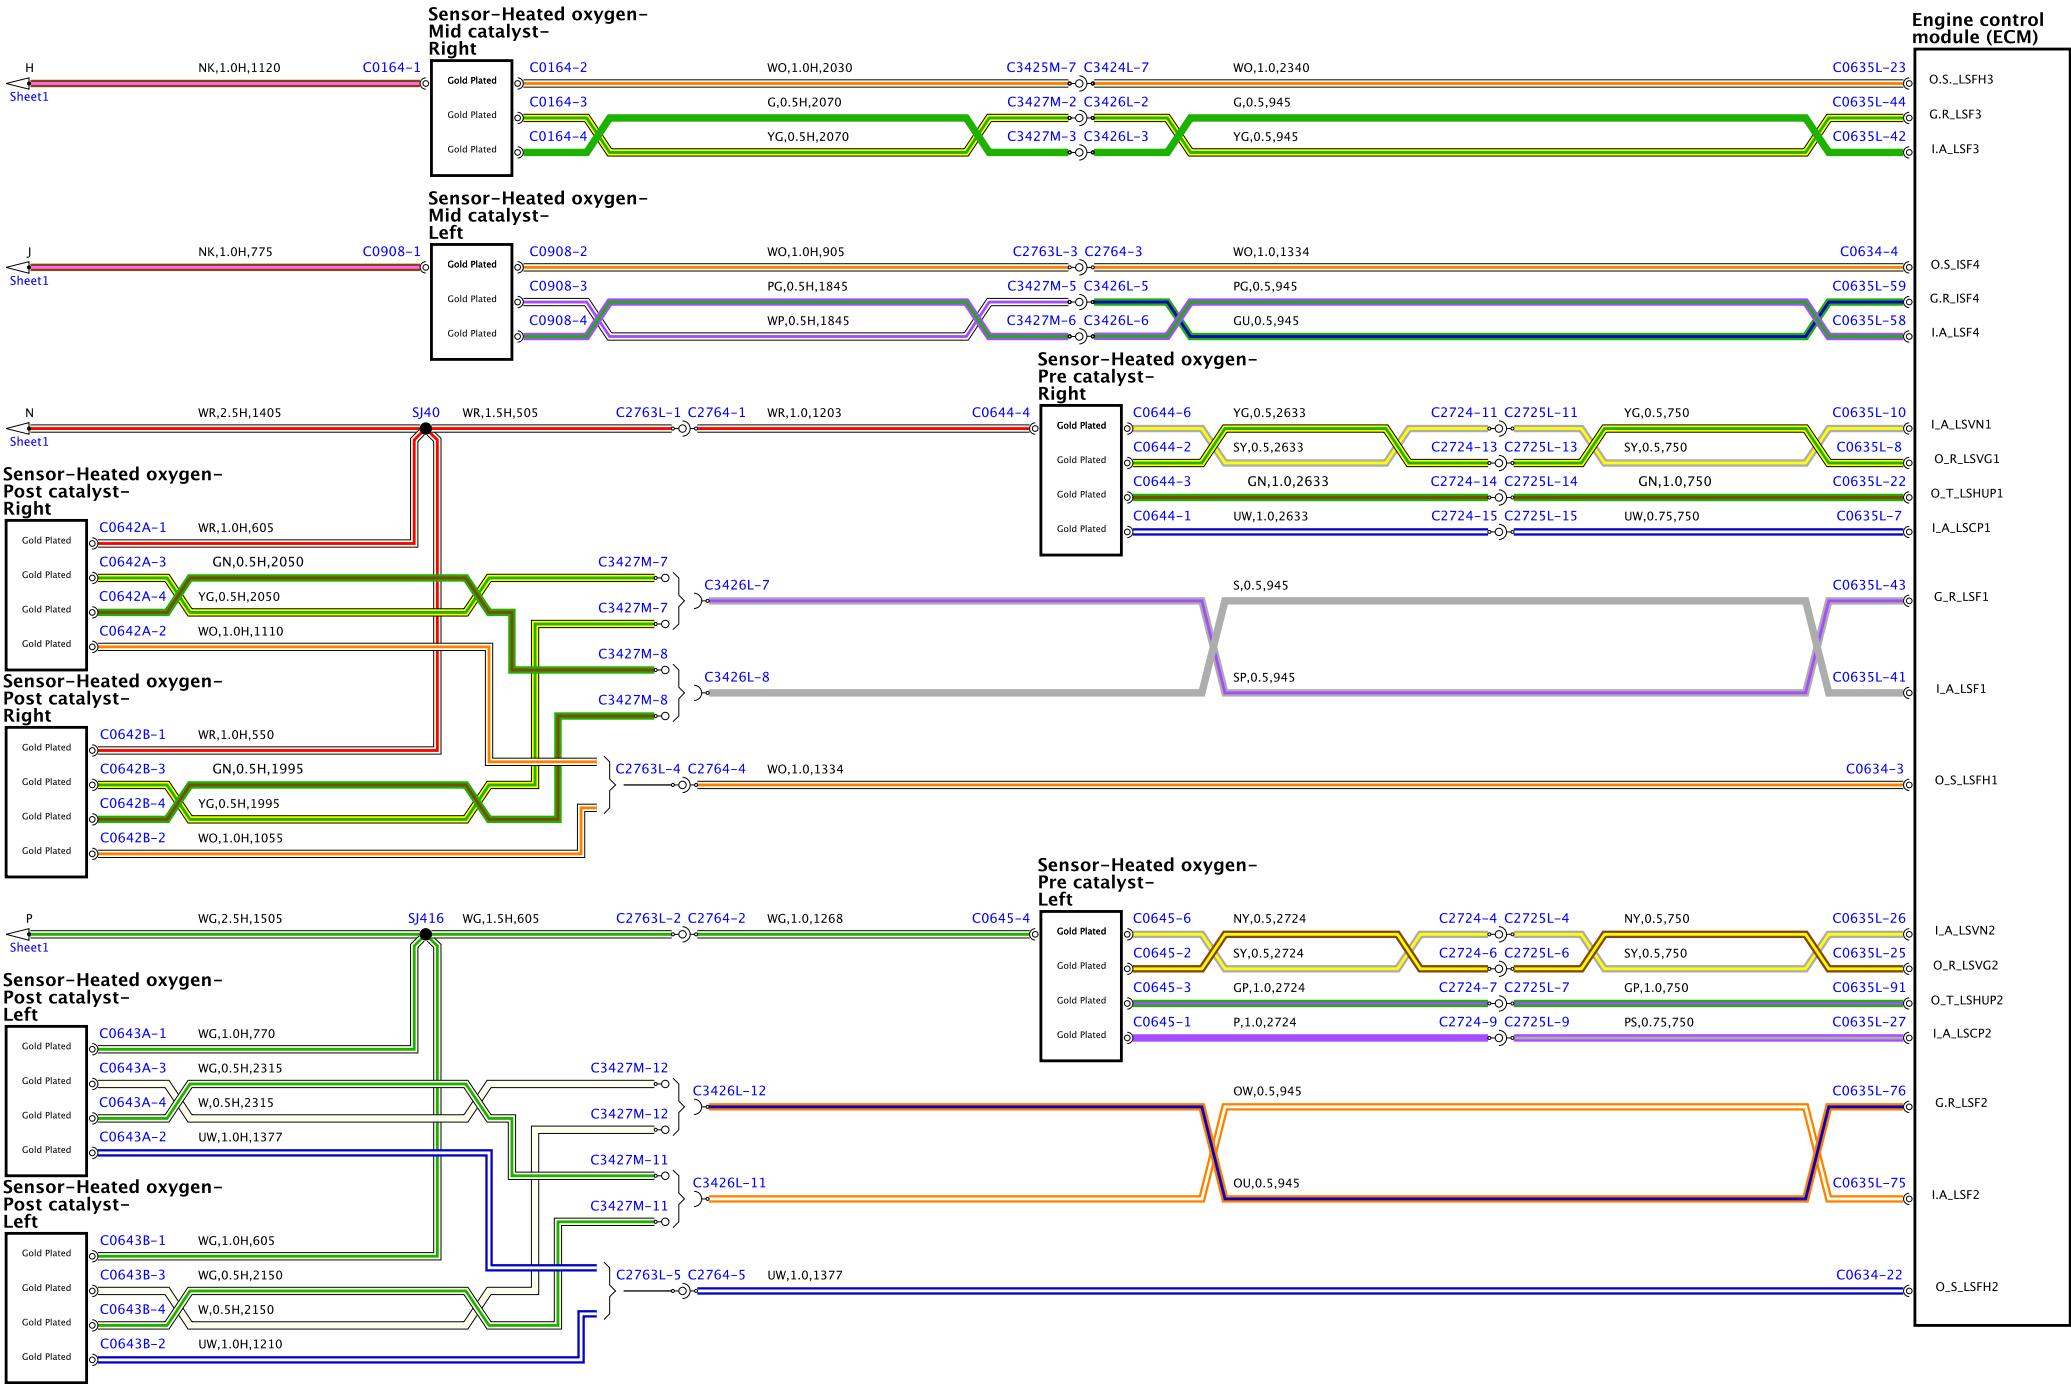
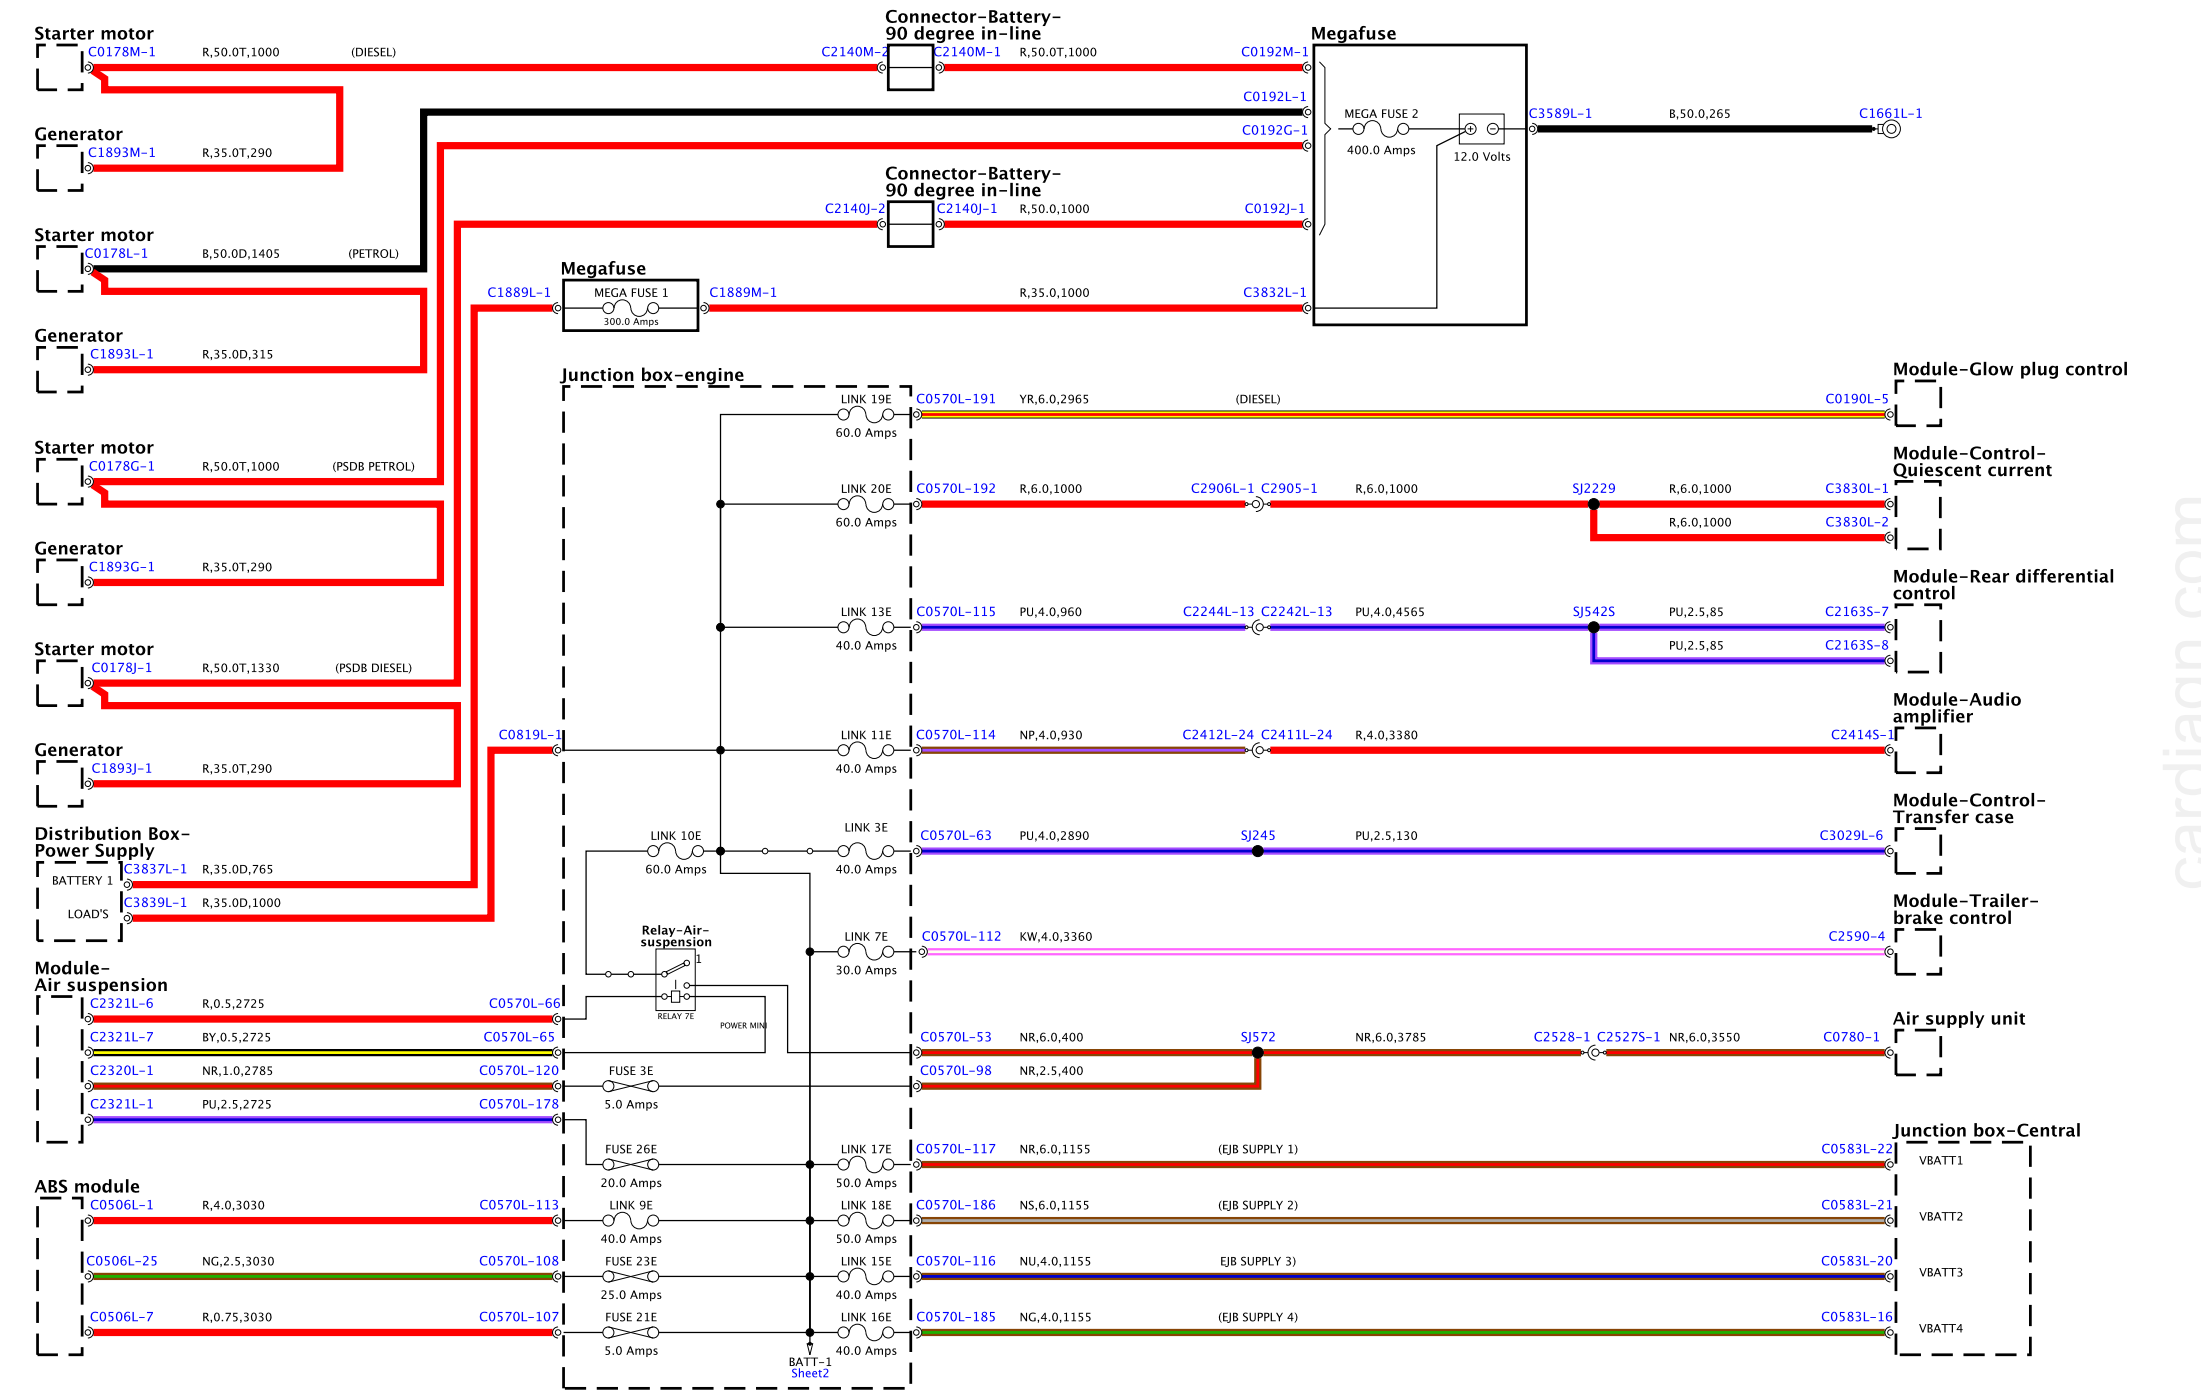
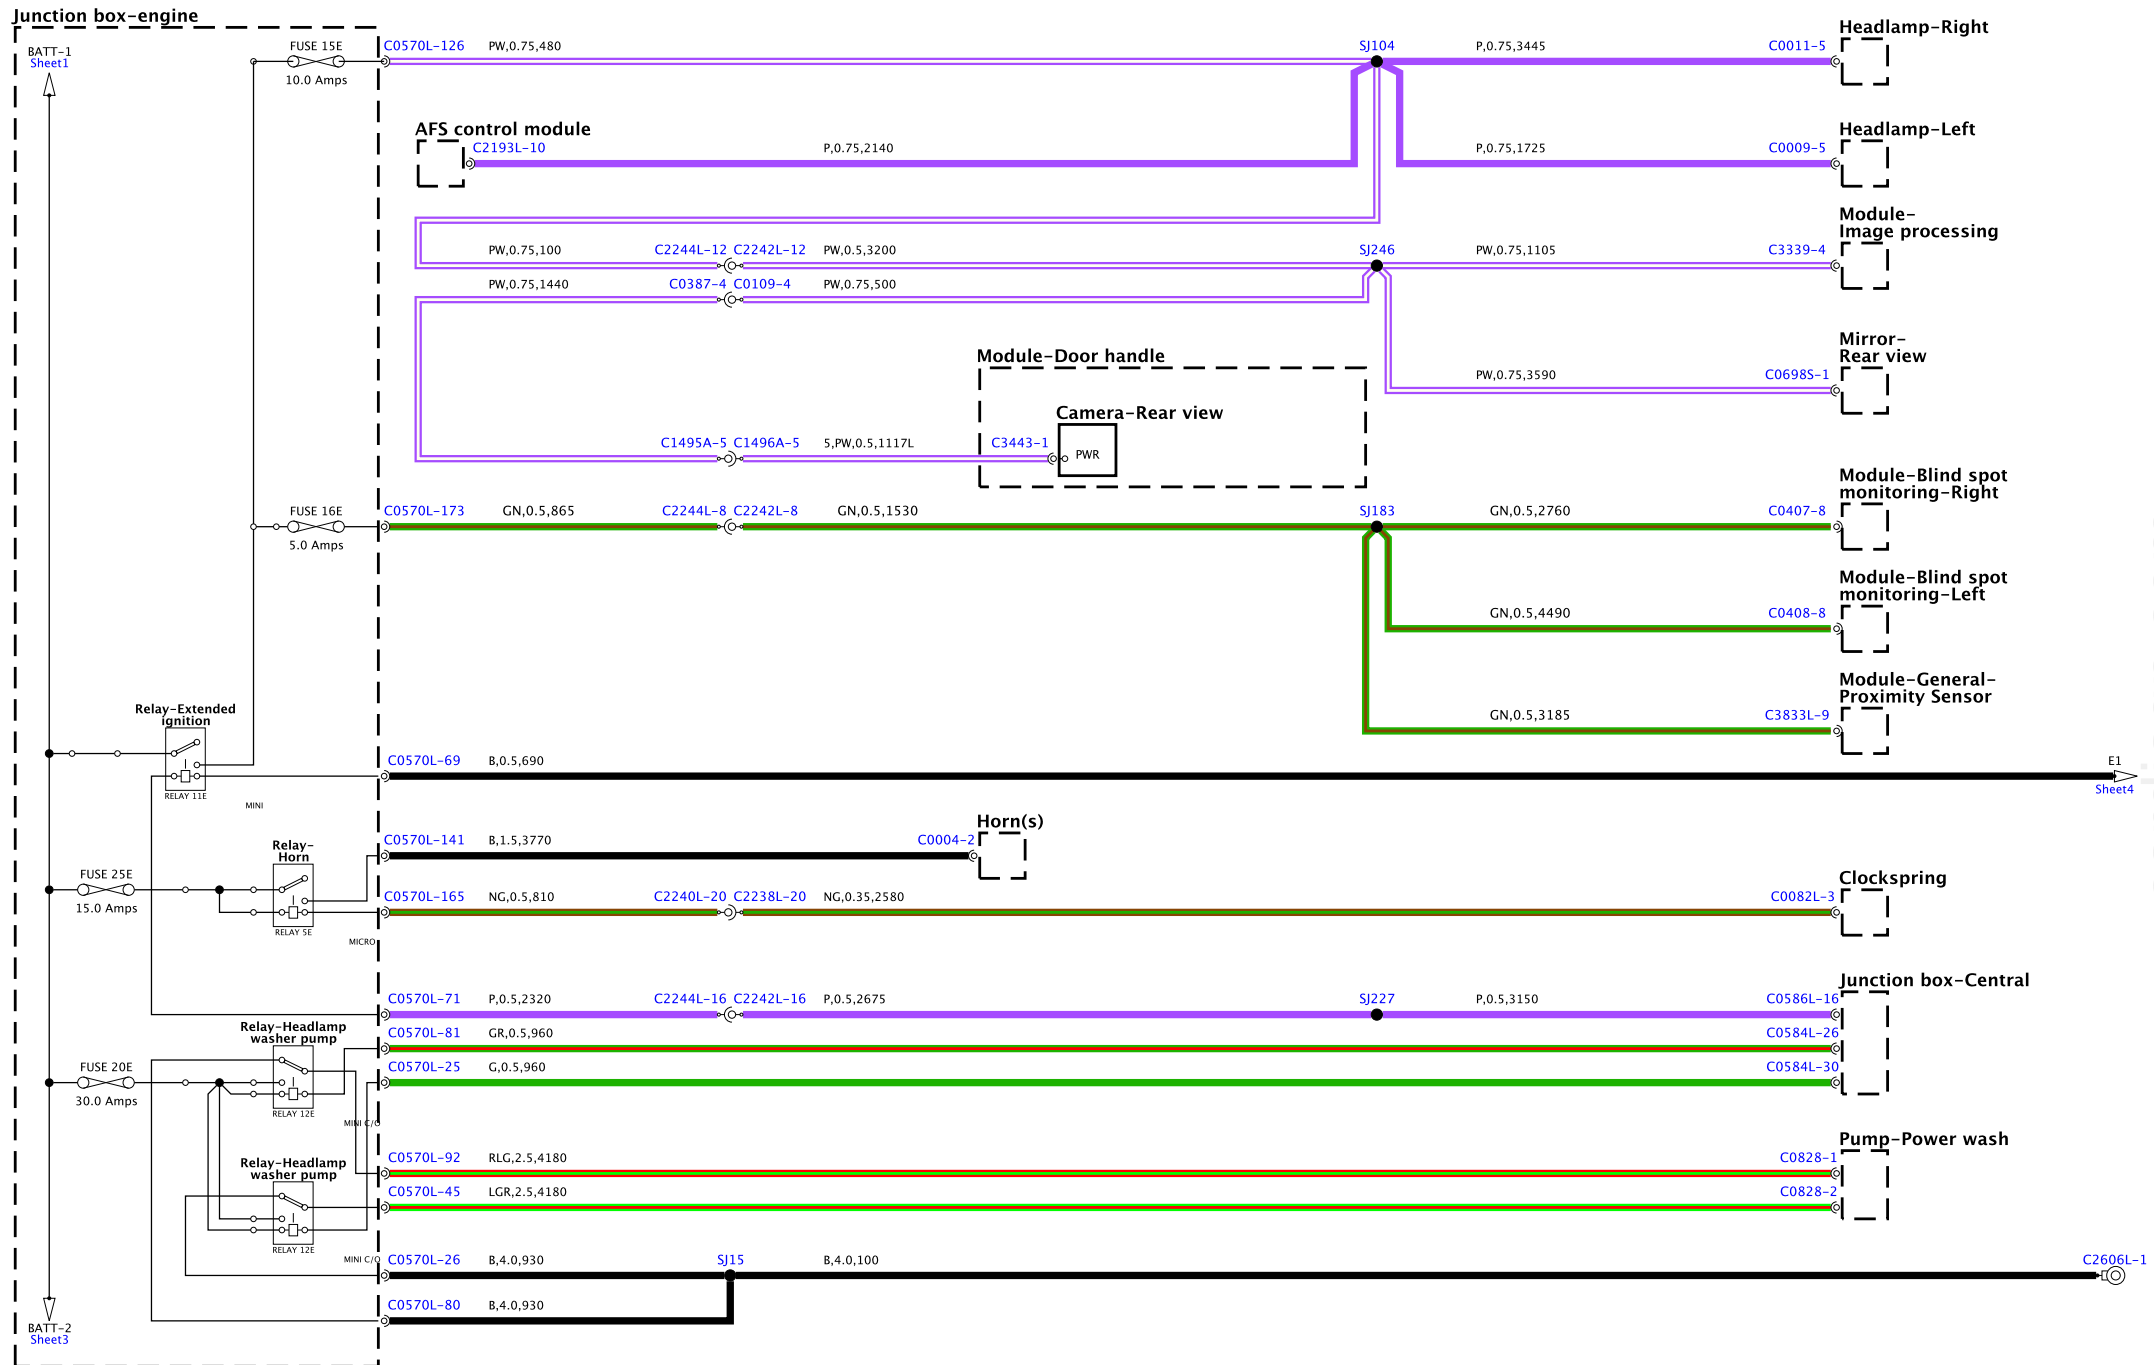



FIG22-70032-A-A-00-07-Service-0.319-13MR-01D









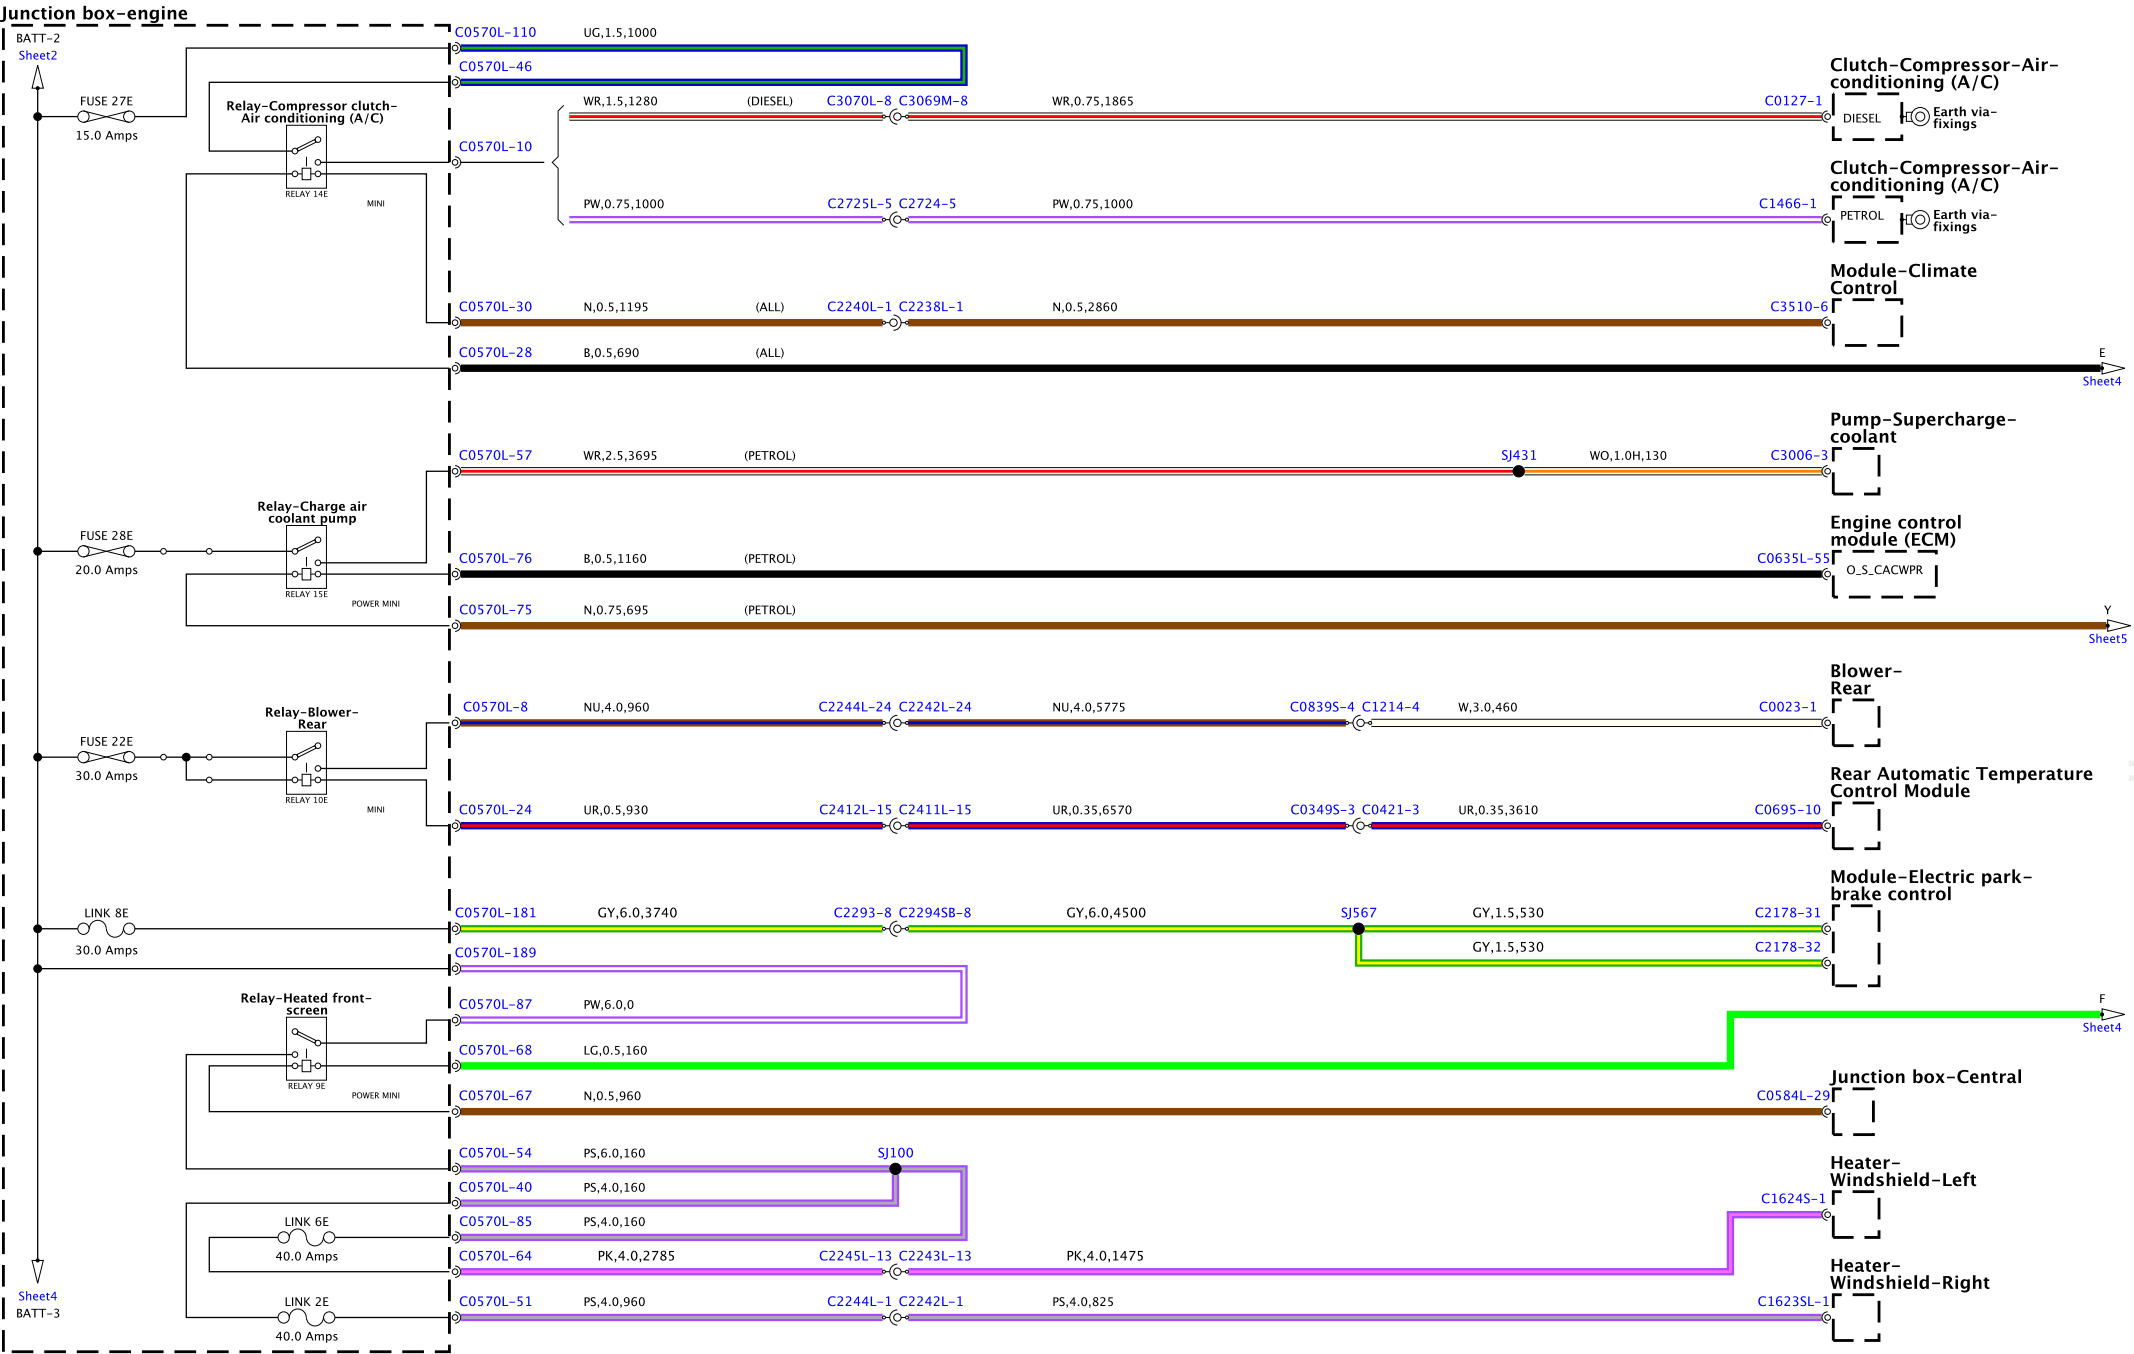


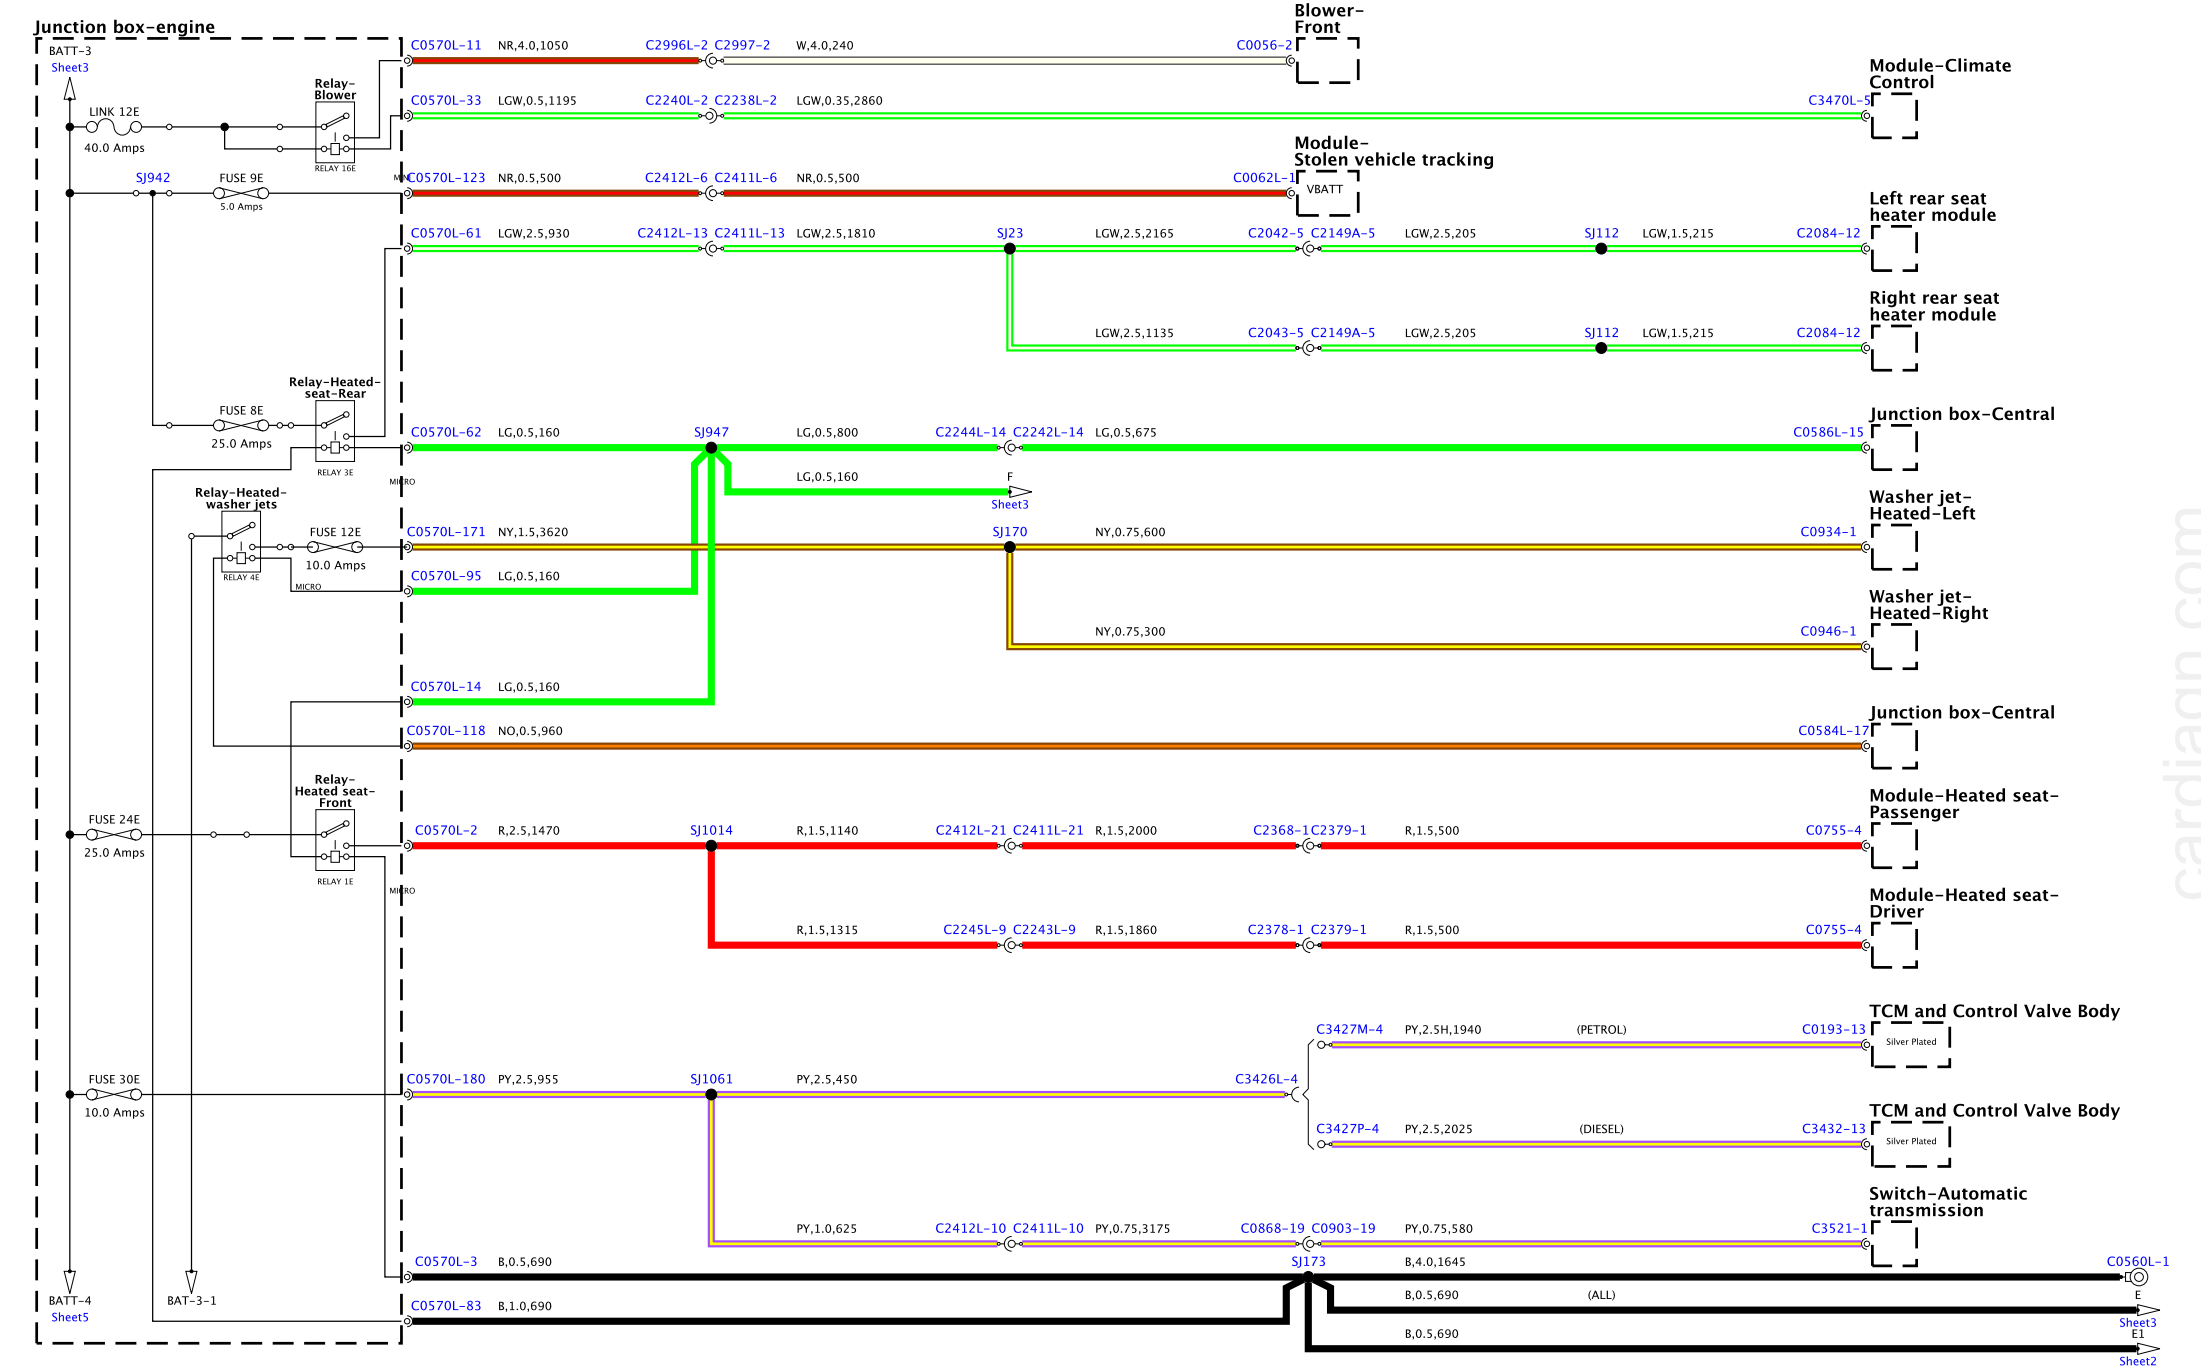


FIG22-70010-A-A-05-09-Service (L310-13M)-P01

Junction box-engine

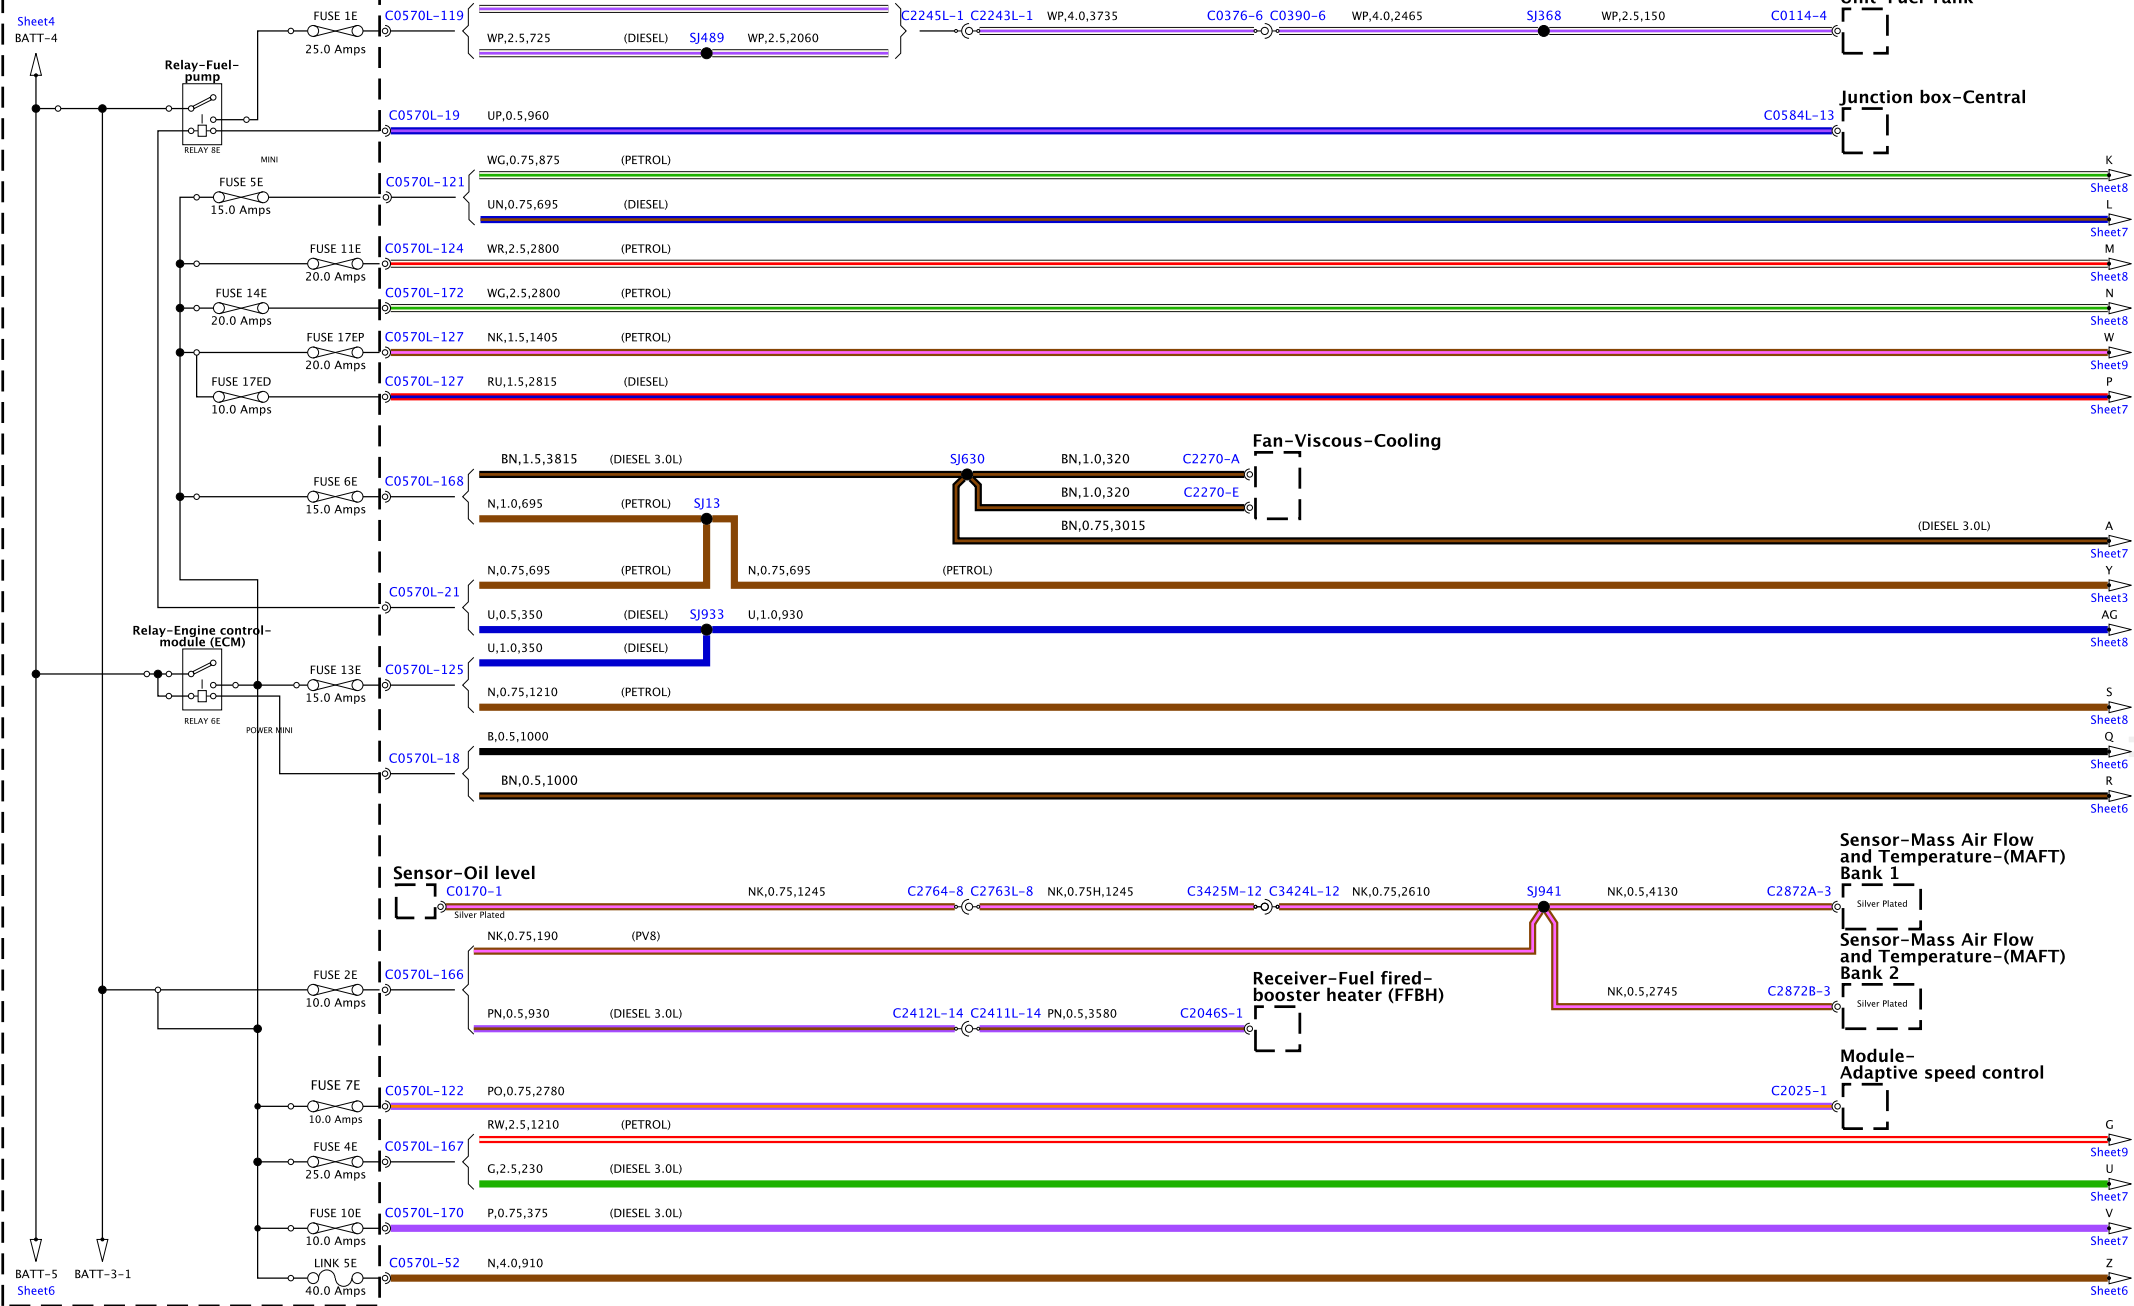

Junction box-engine




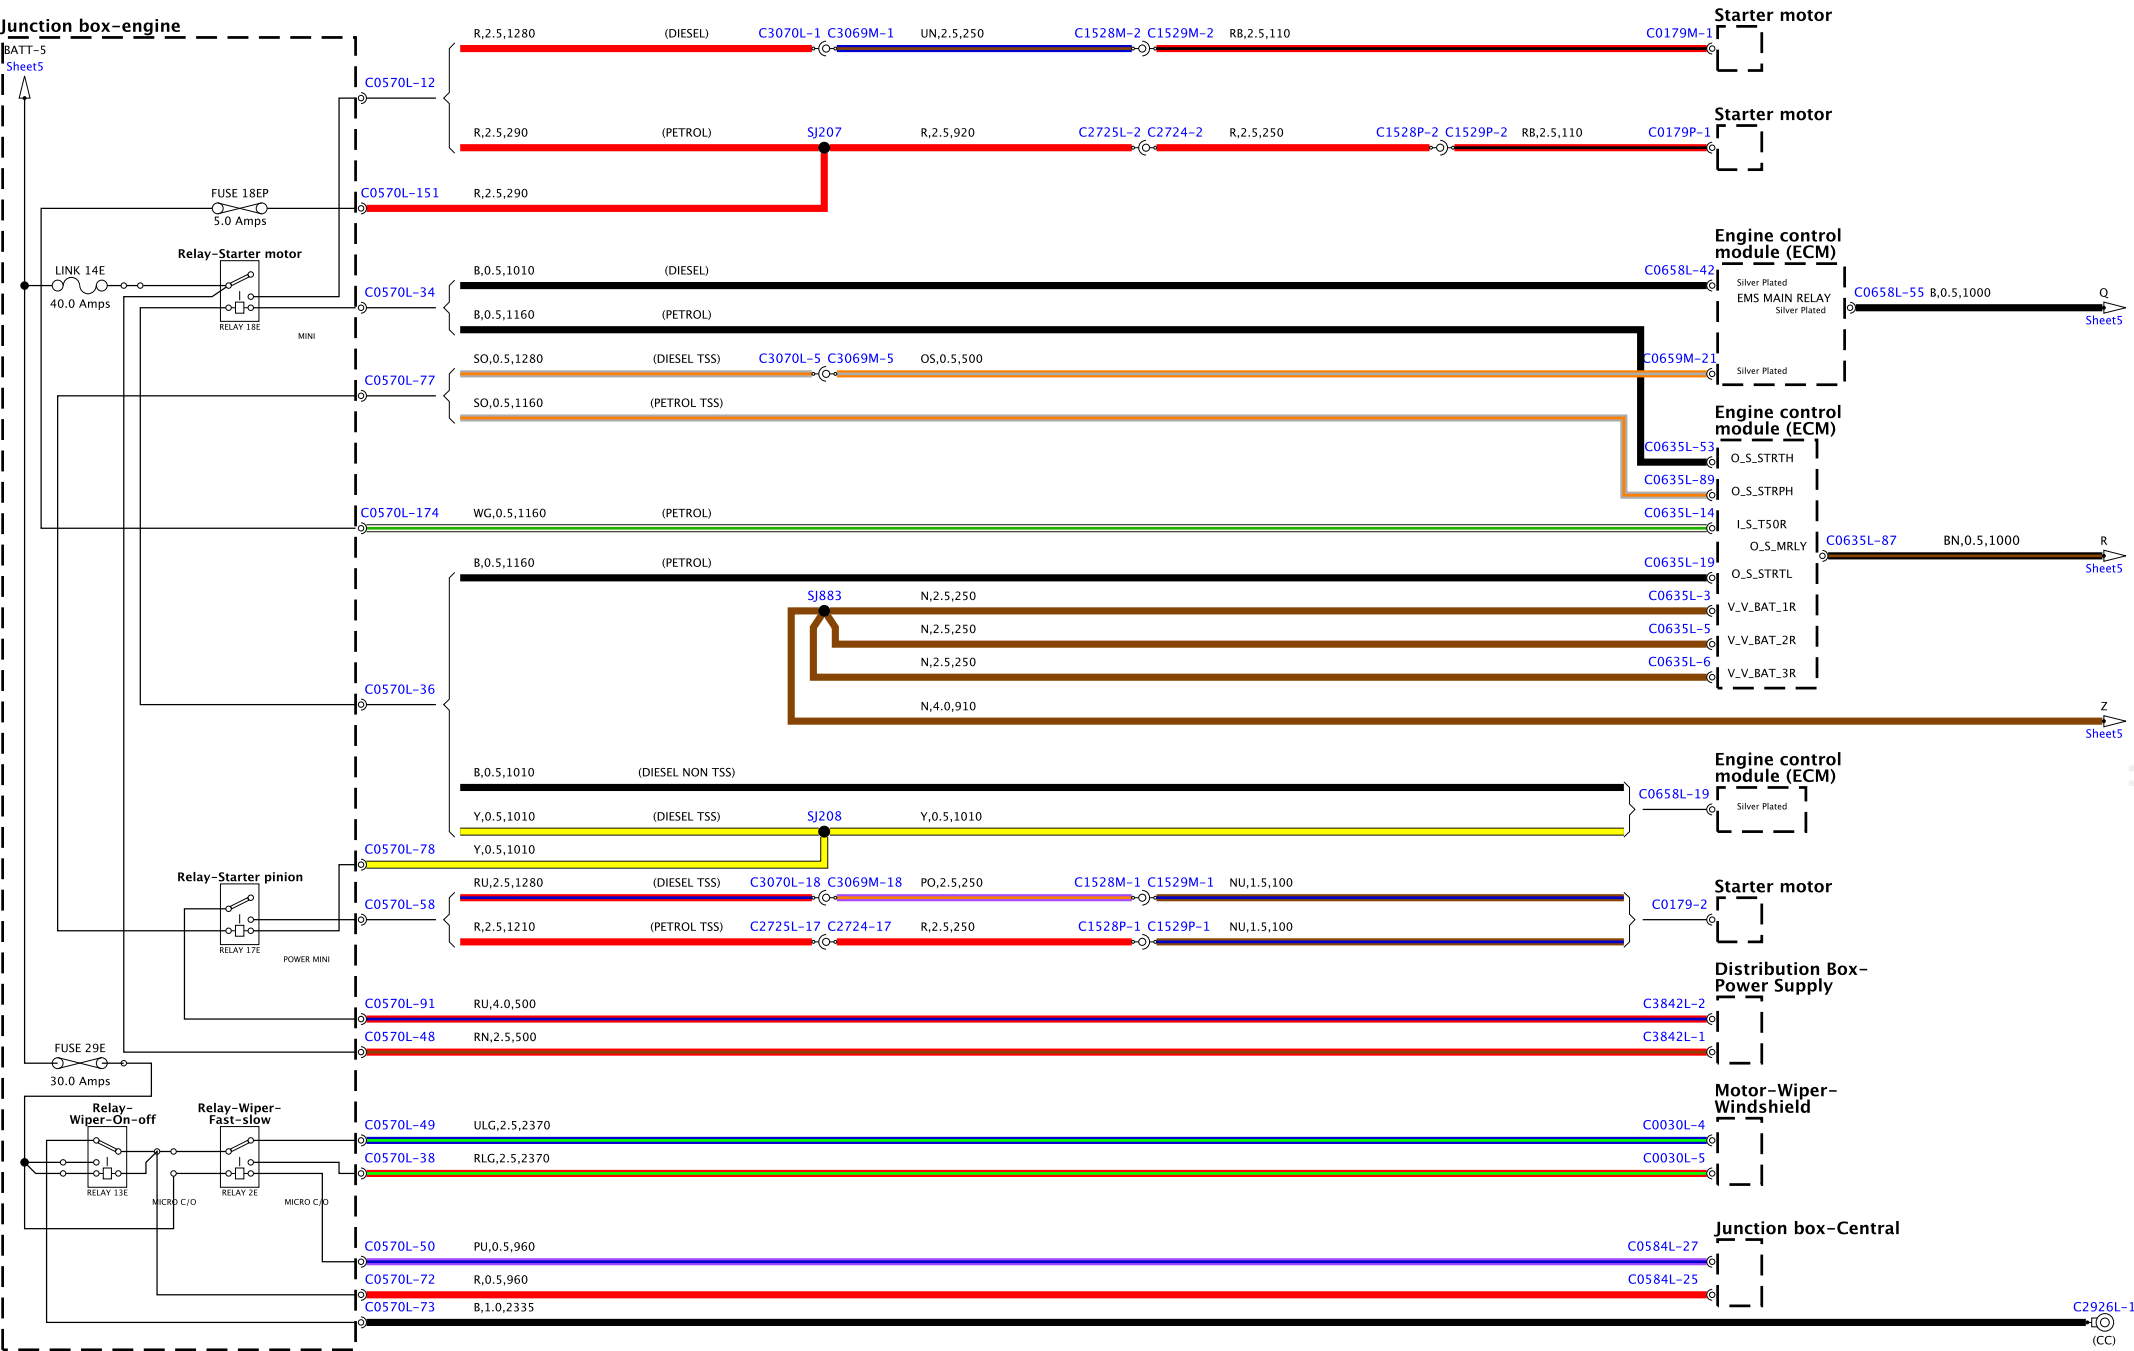



FIG22-70010-A-A-07-09-Service 6.310-15MY-910

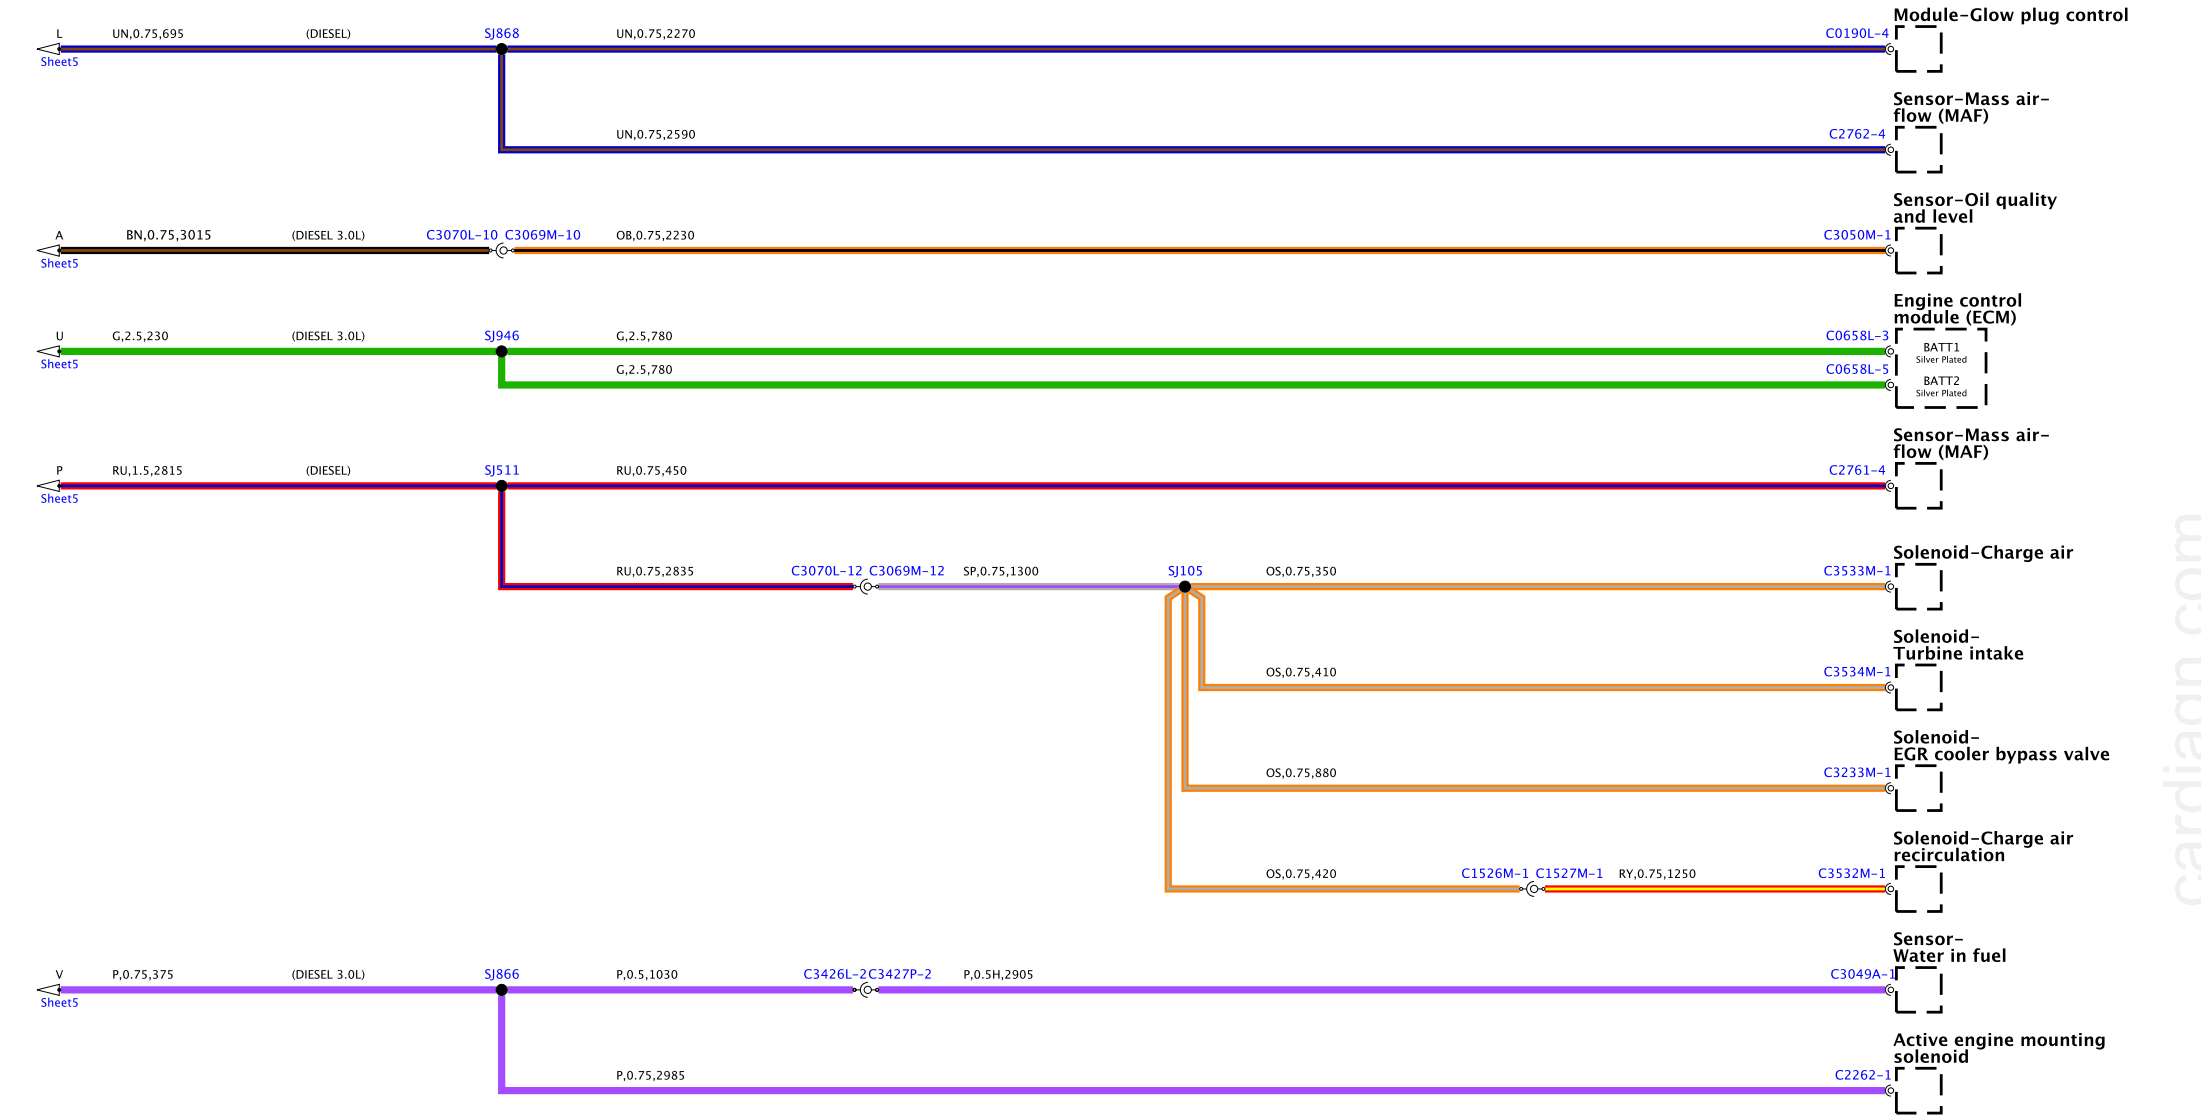
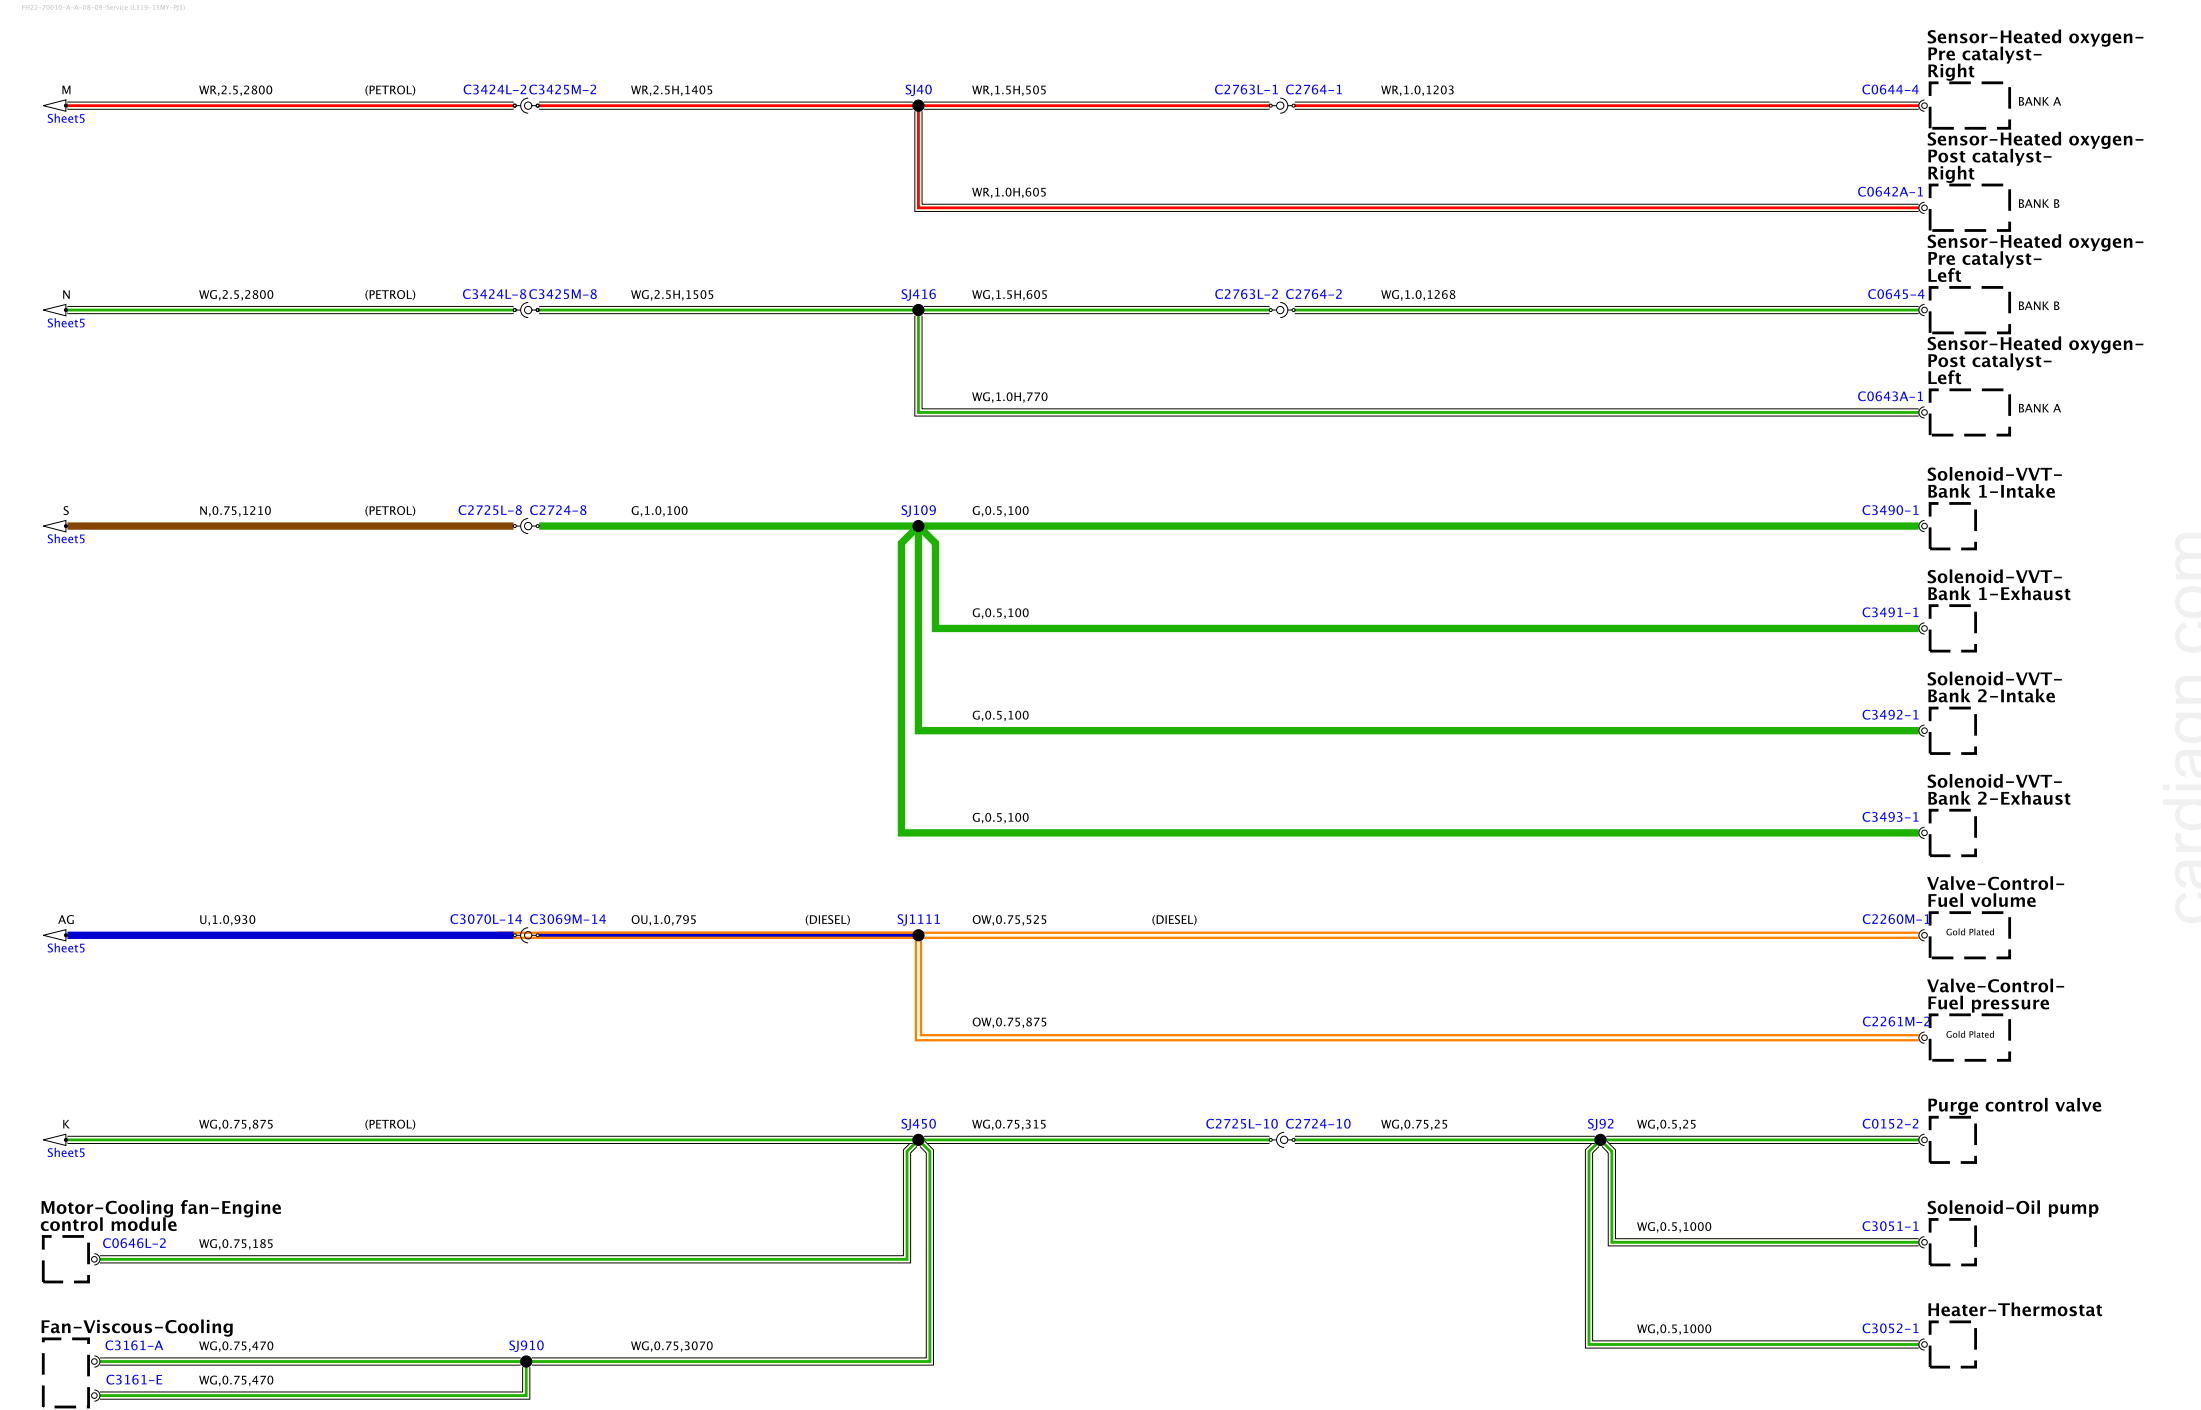


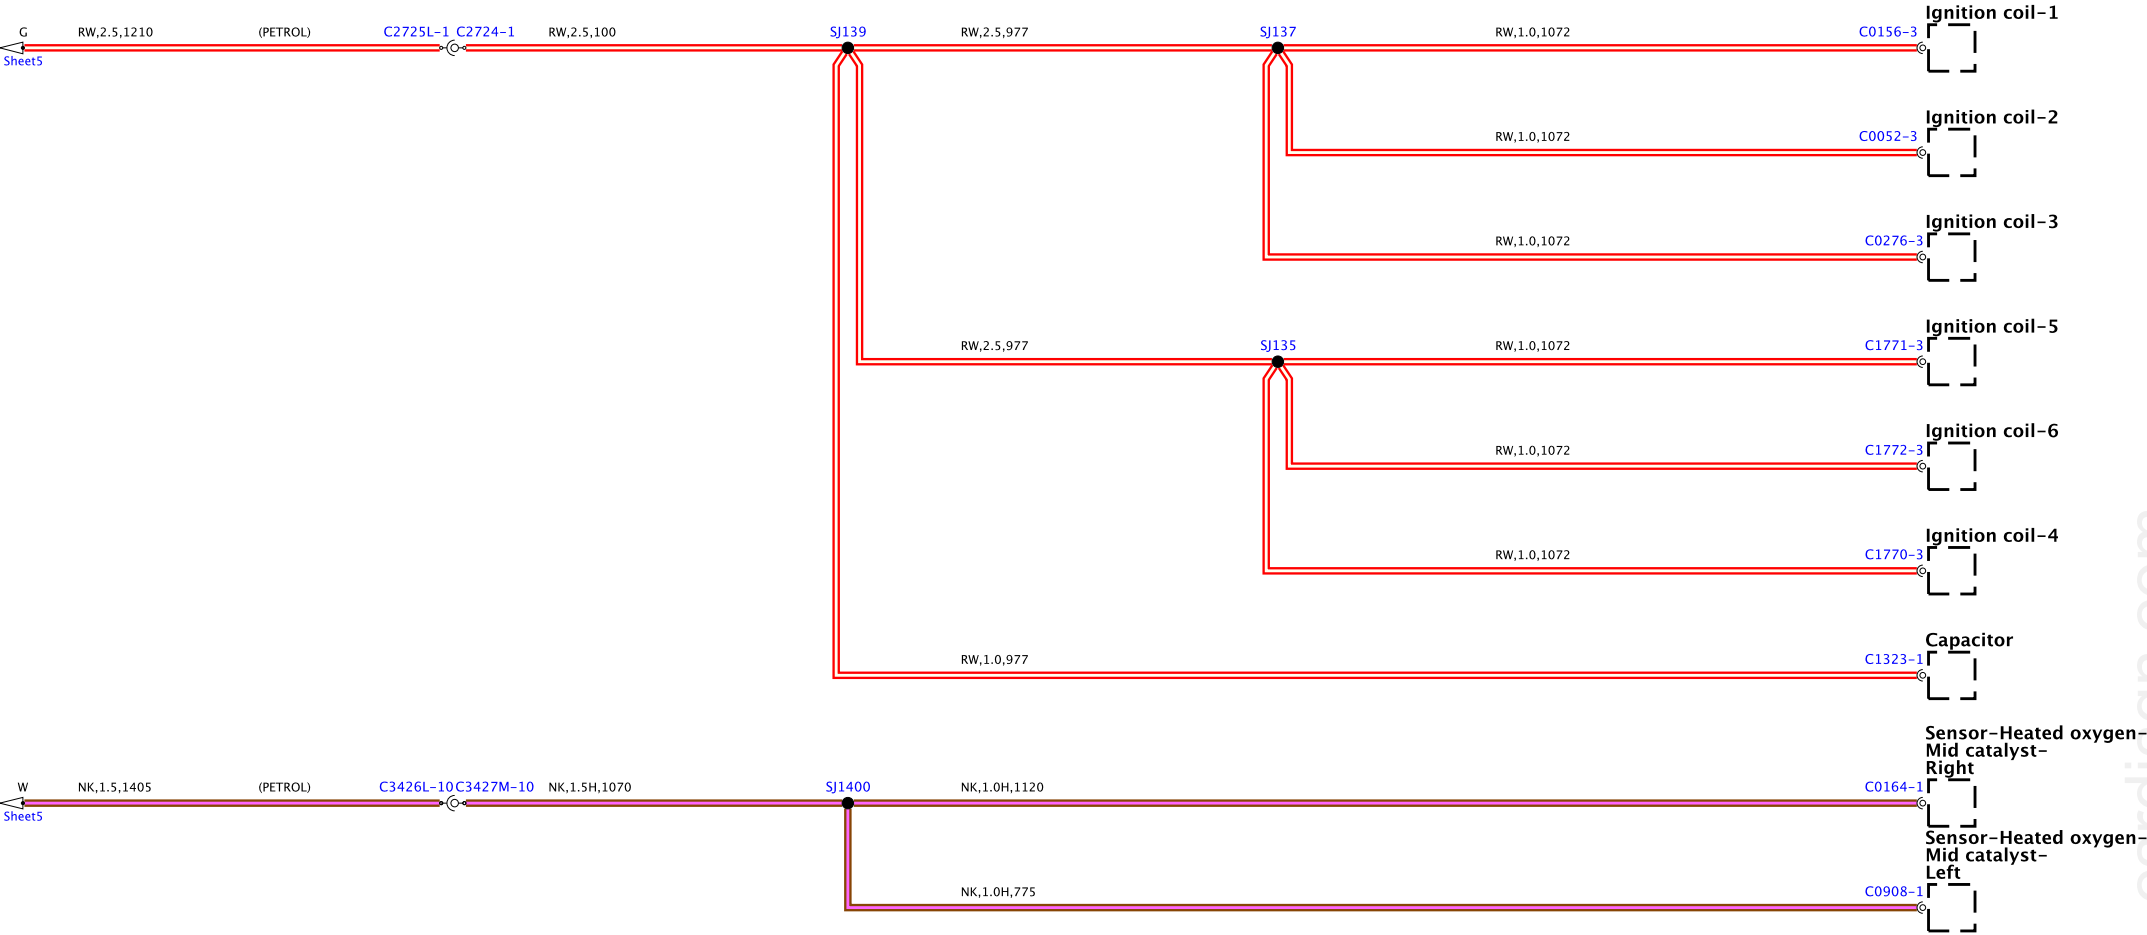



PH22-70010-A-A-09-09-Service (3.119-1107-P1)




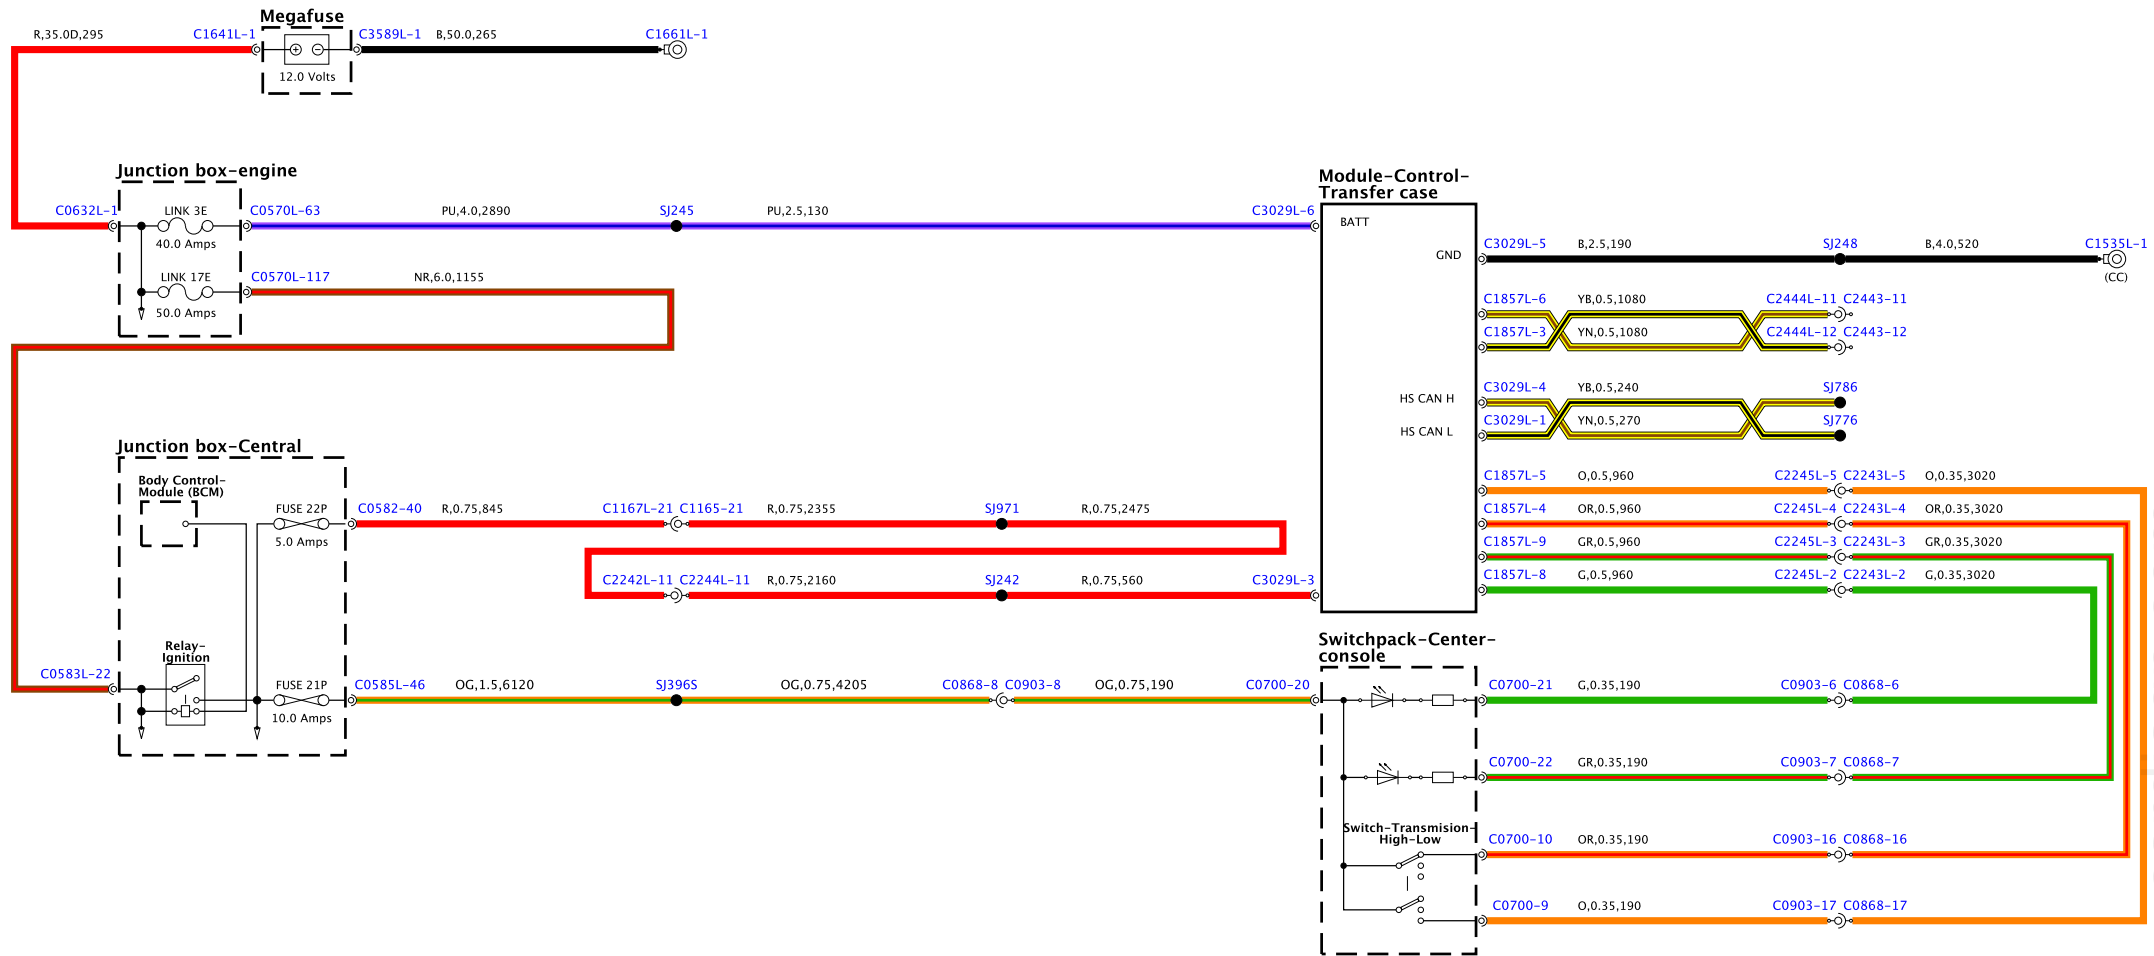


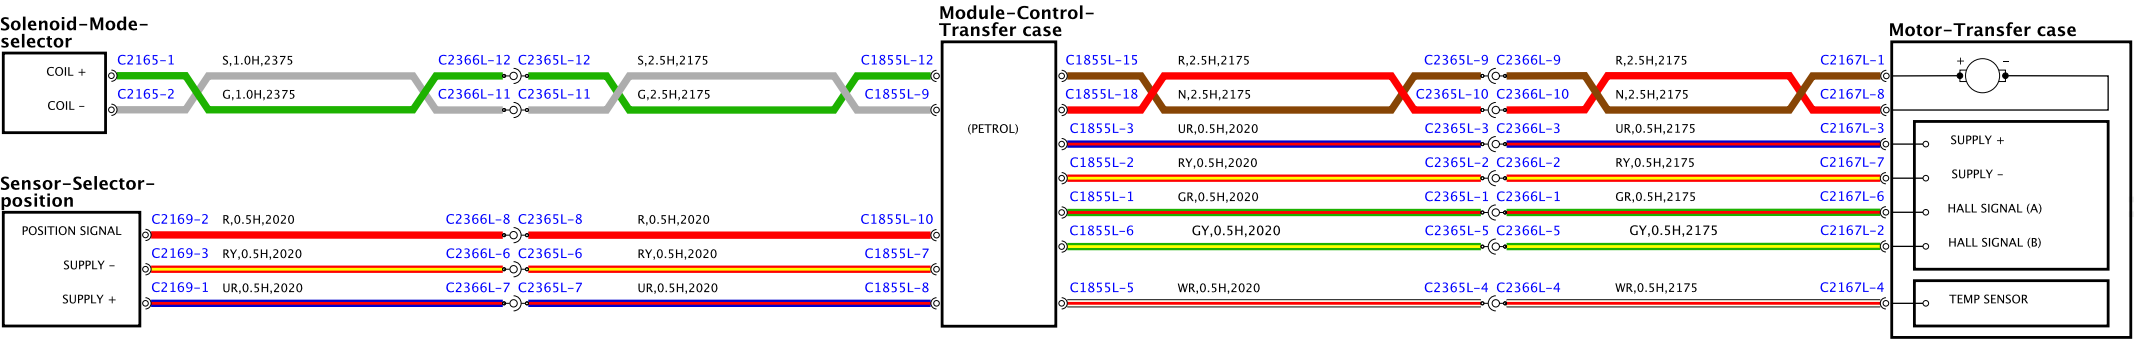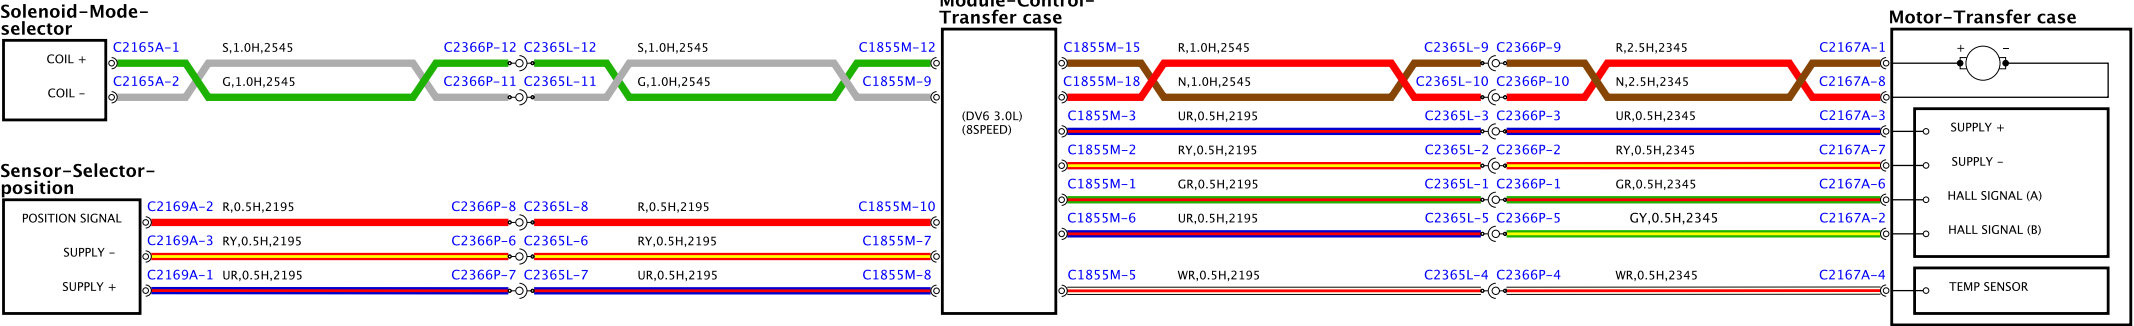


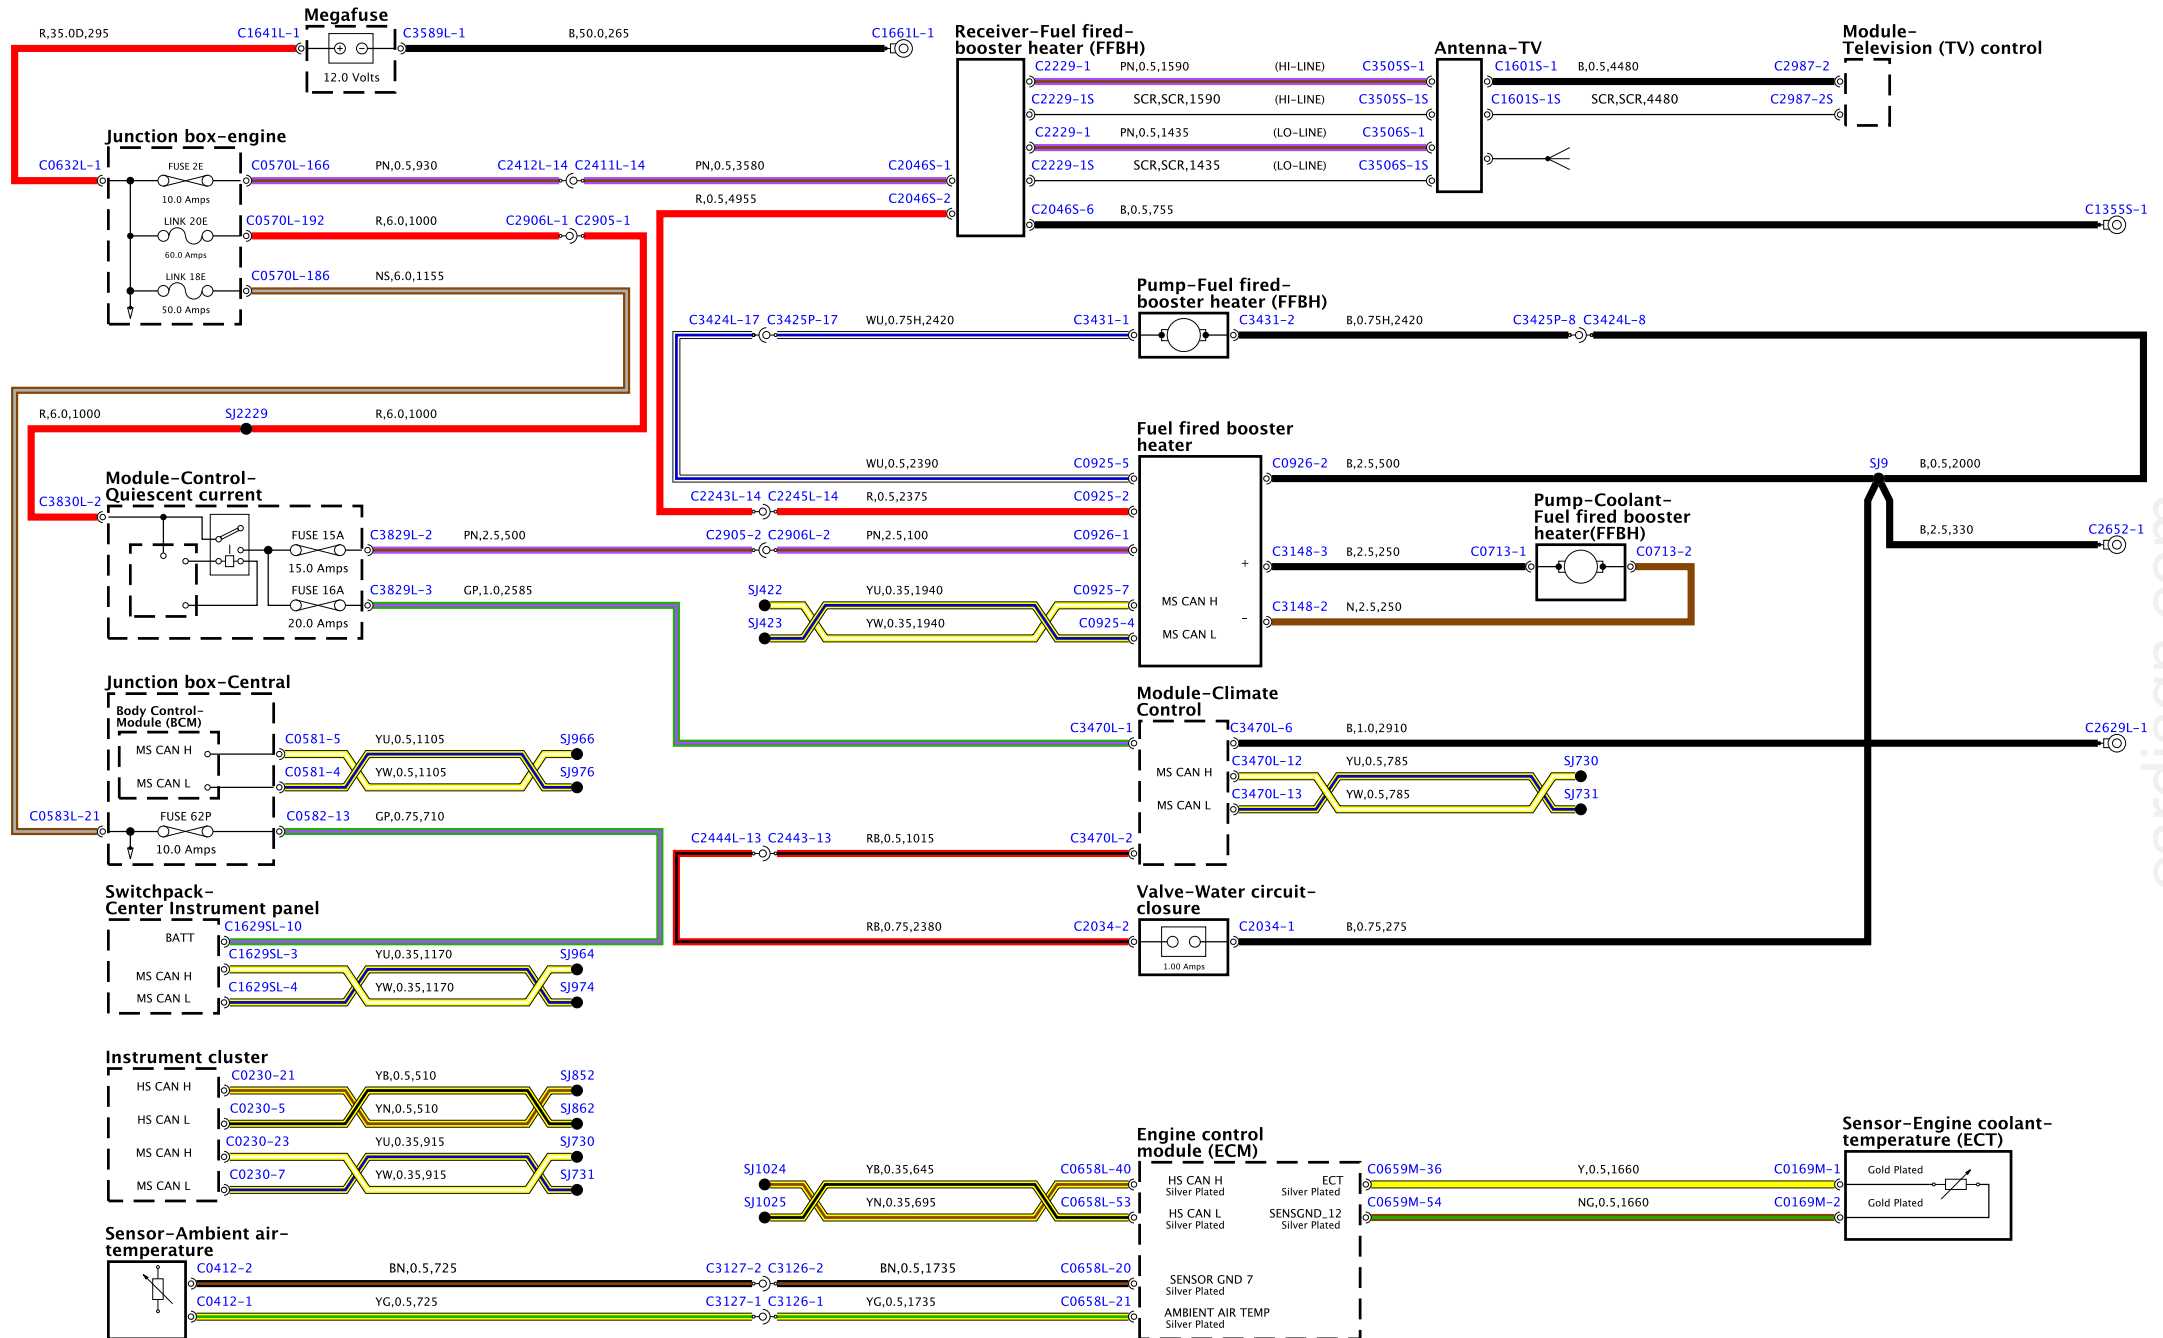


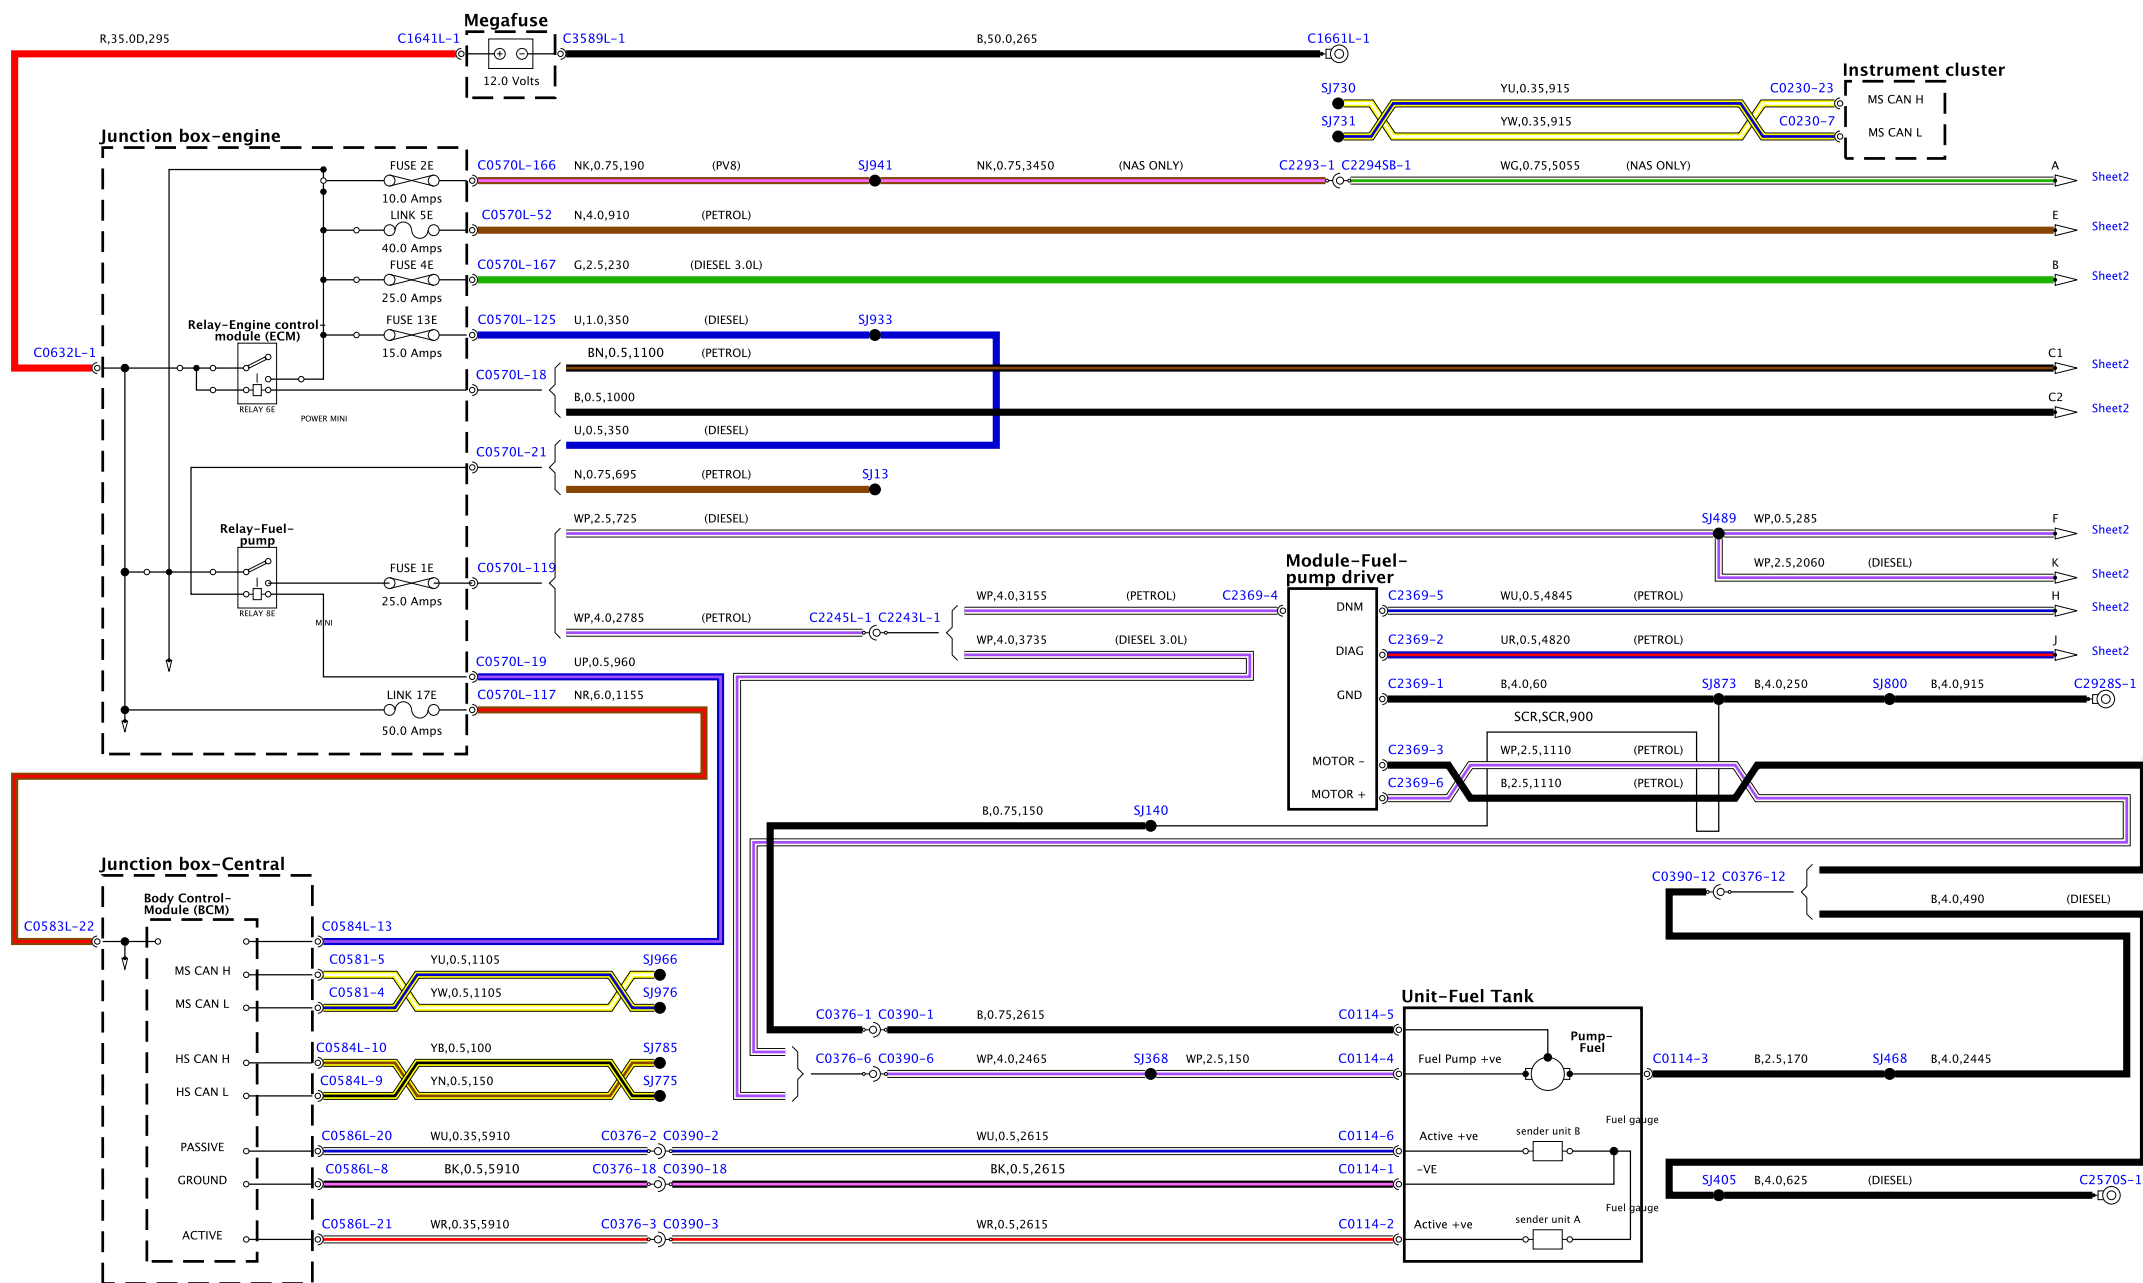

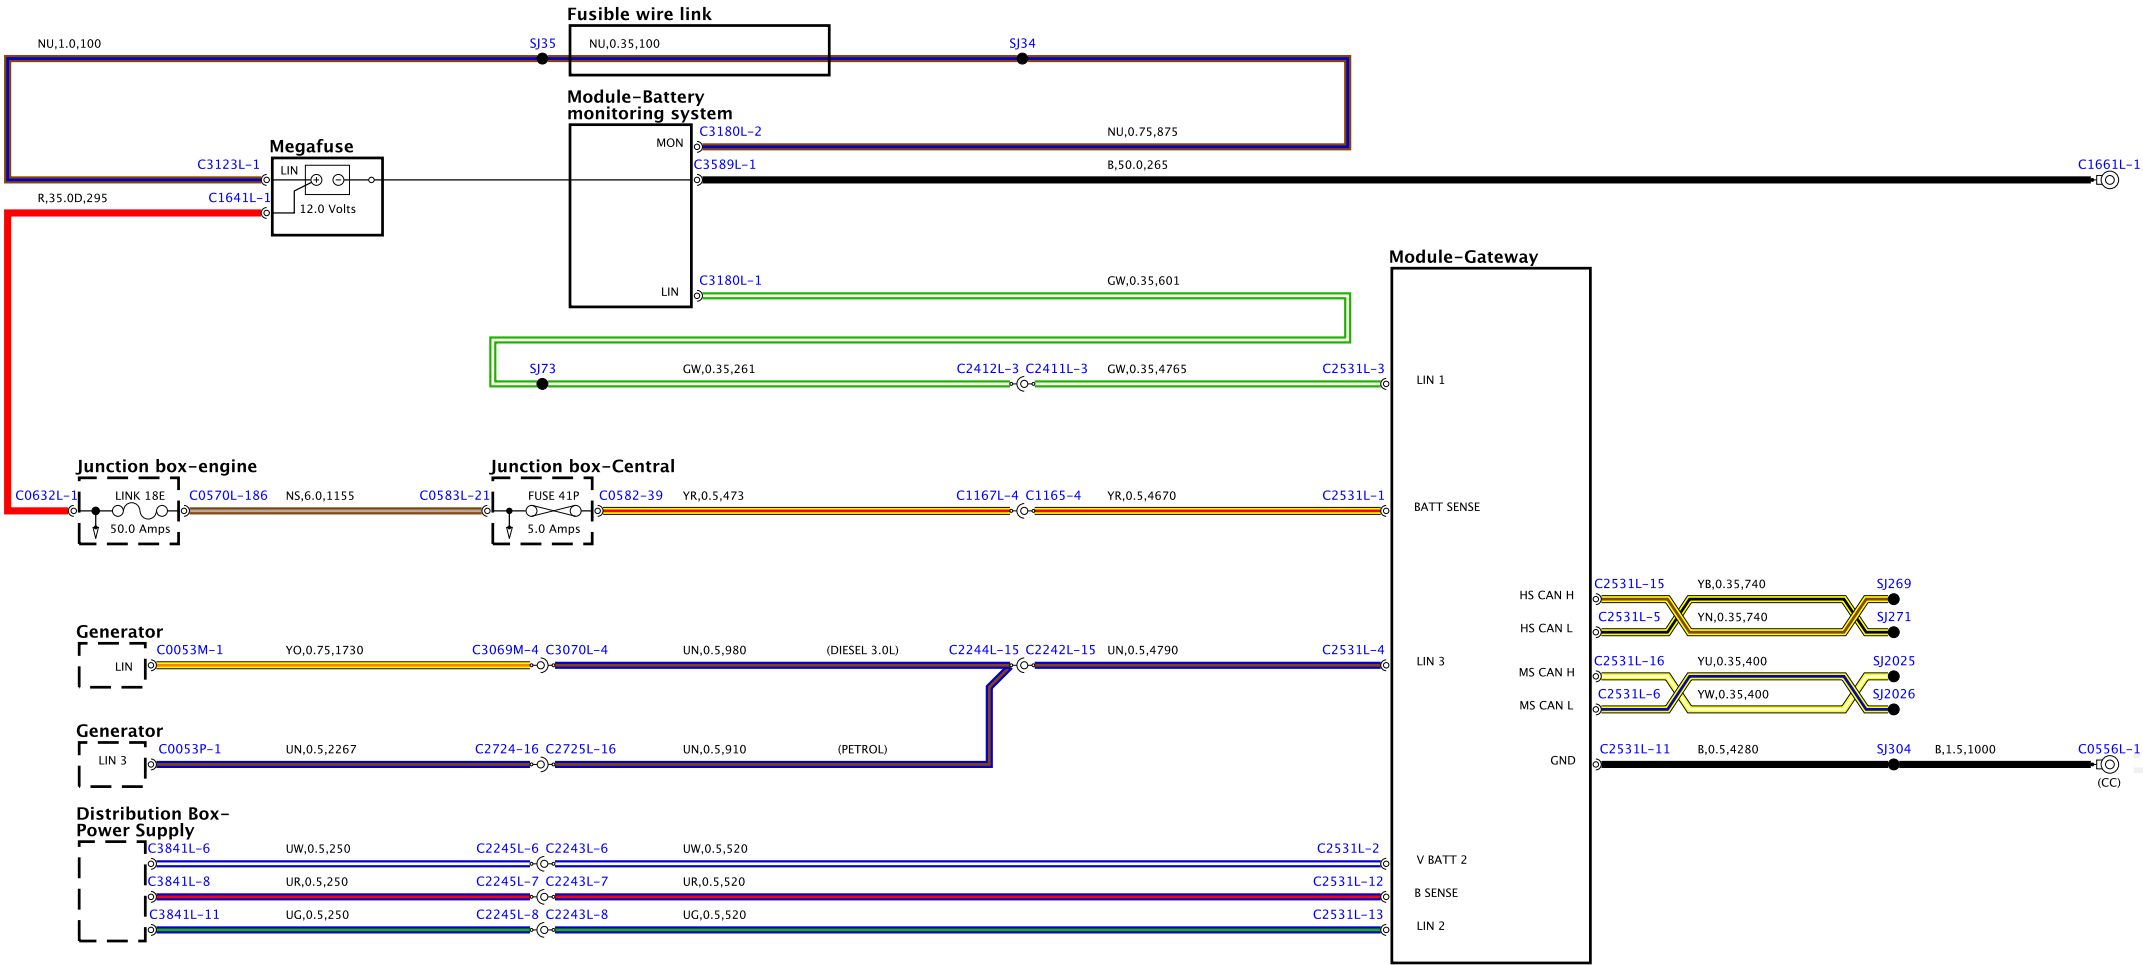

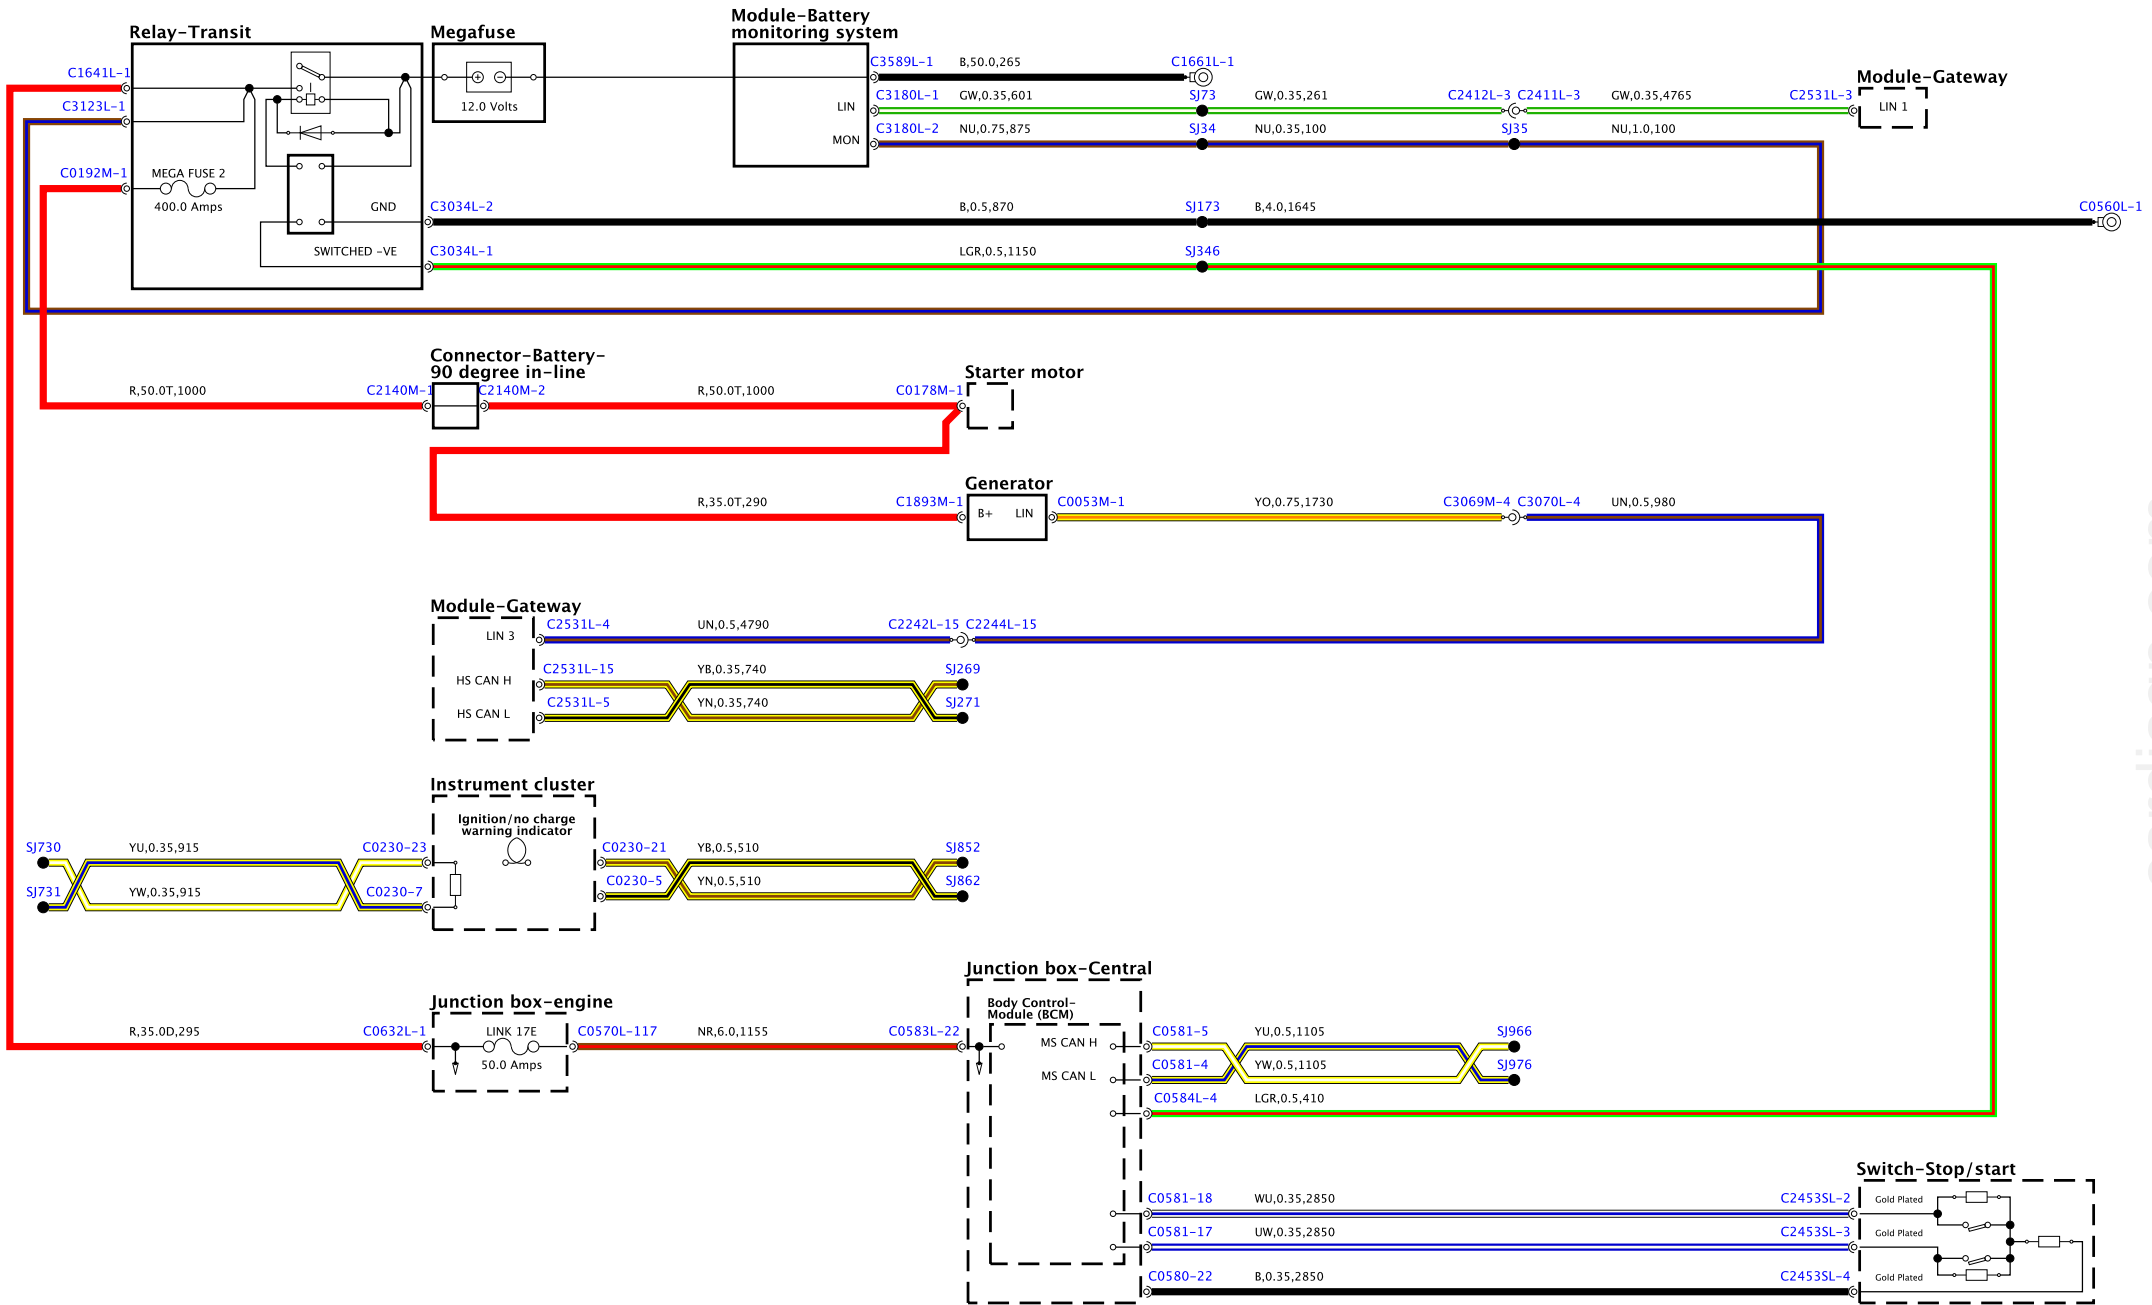

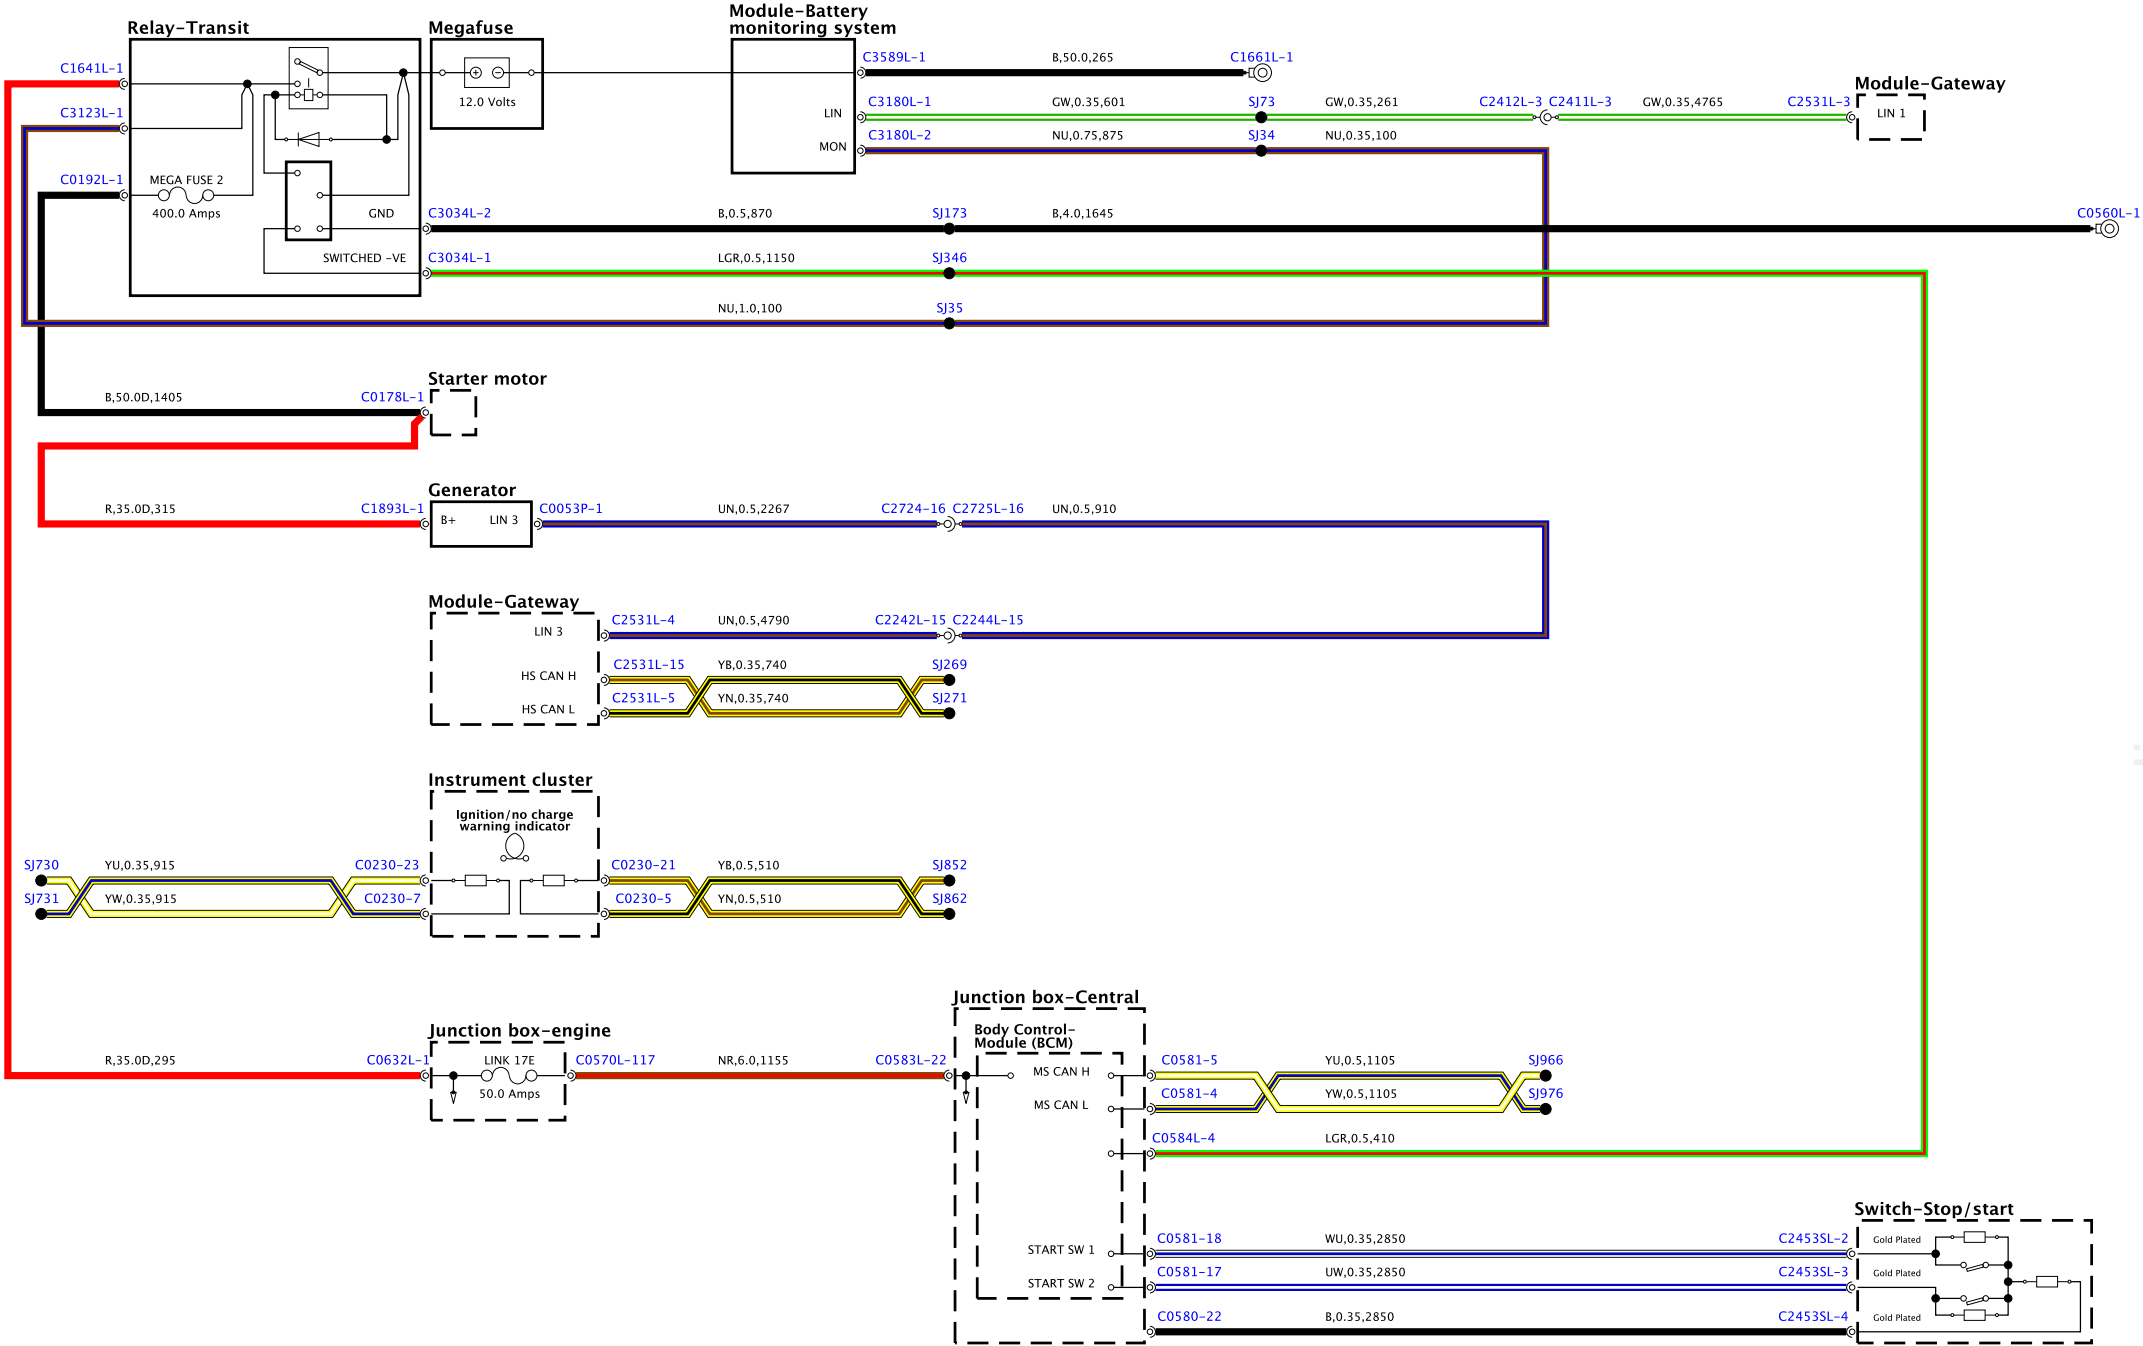

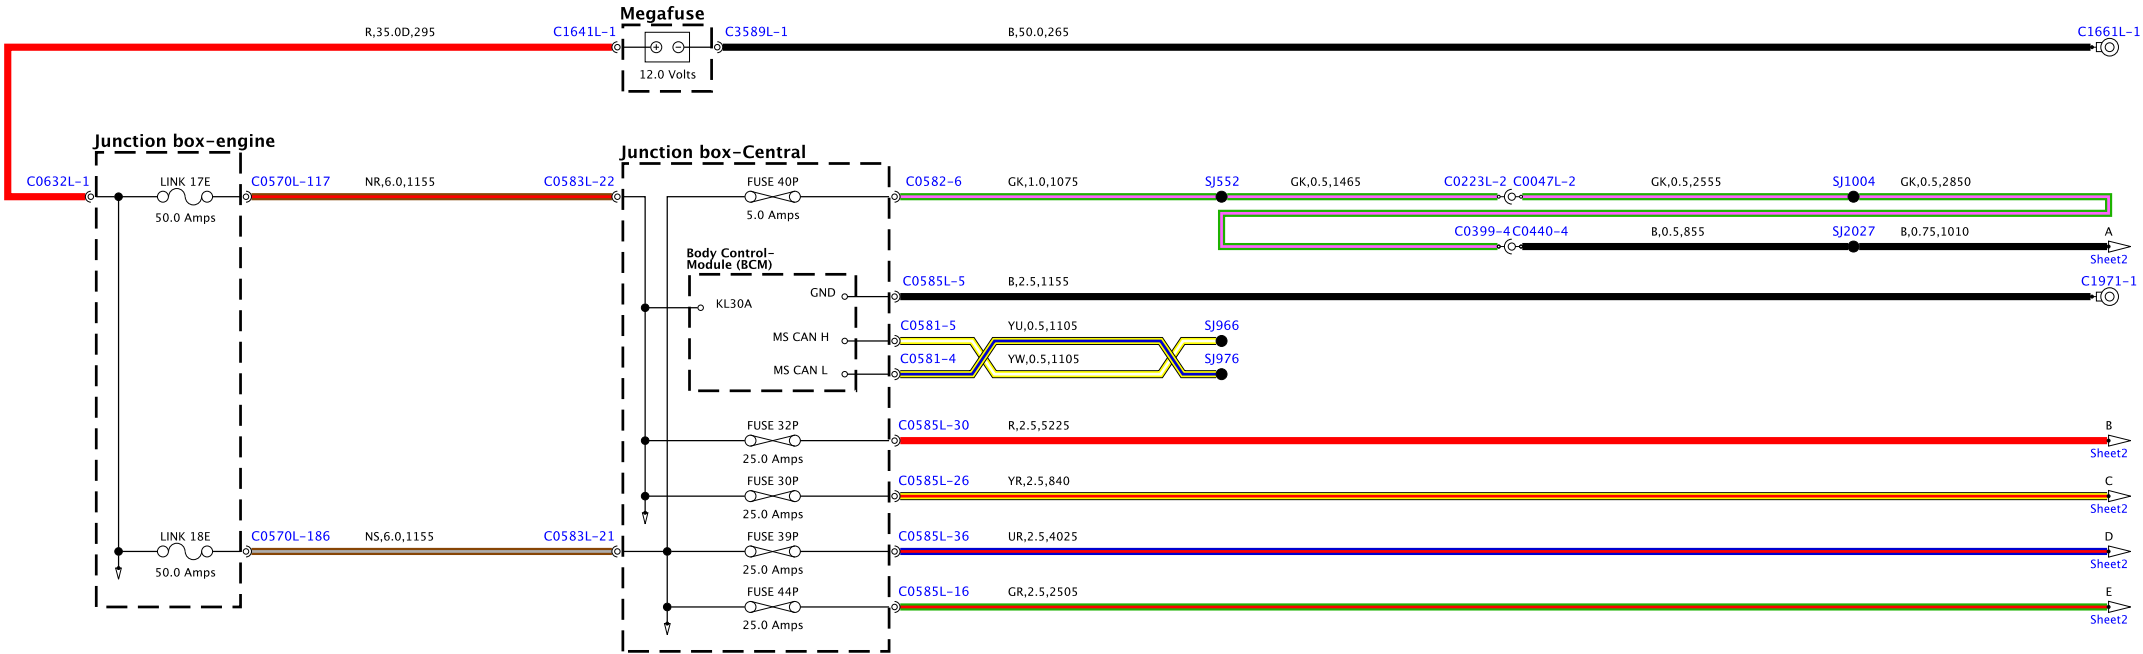



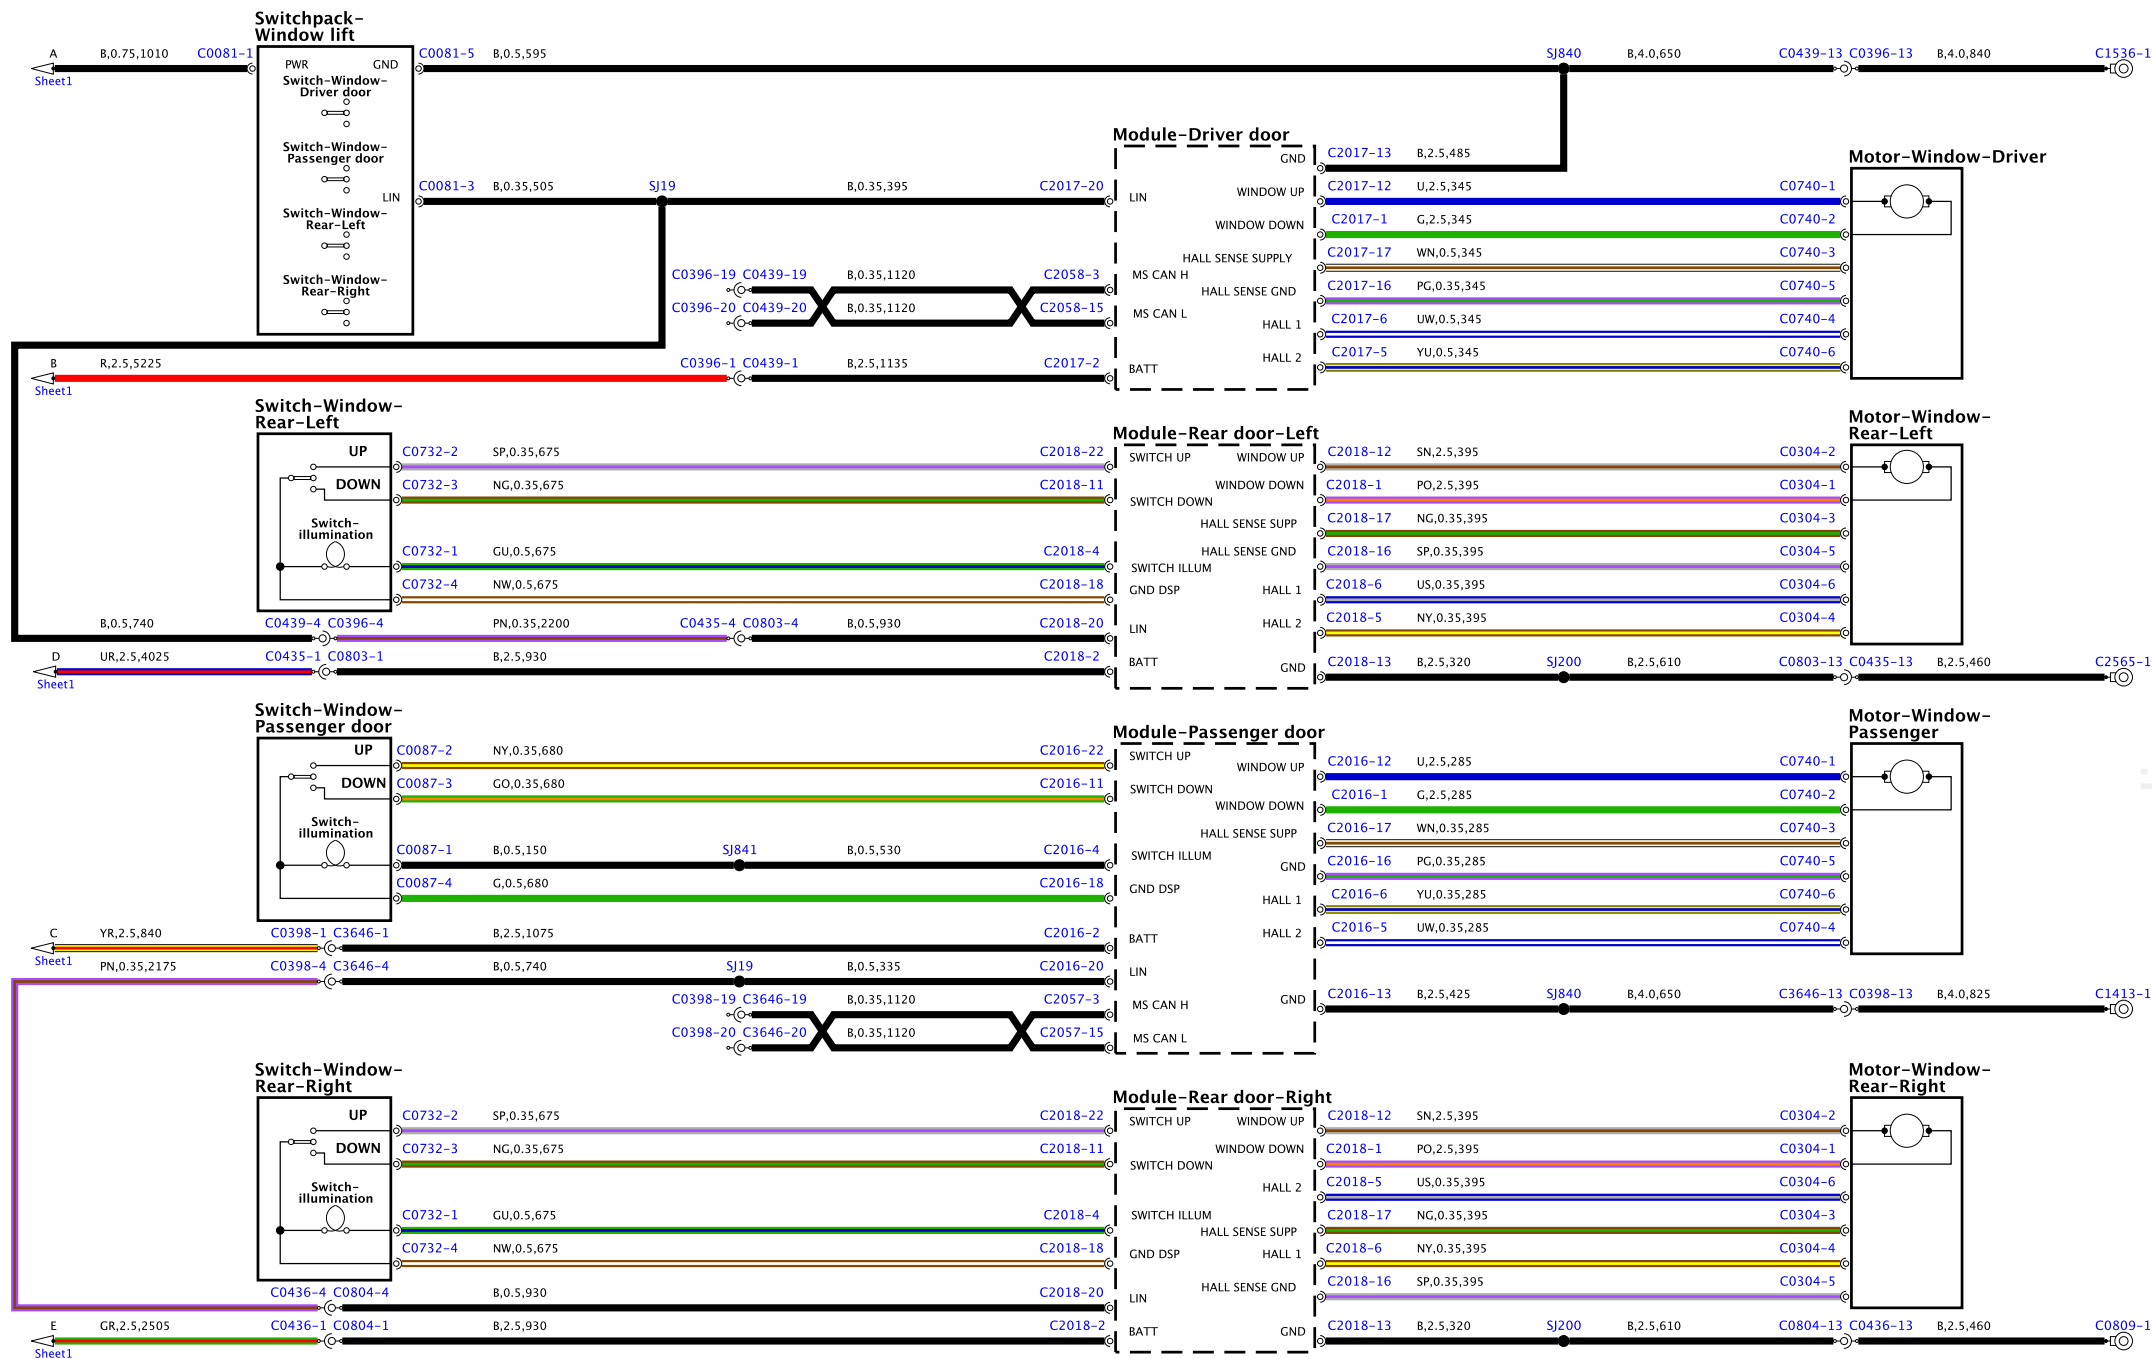


FIG21-70012-A-A-01-02-Service (0310-13MY-R1)

**Module-Control-
Transfer case**




**Engine control
module (ECM)**




**Engine control
module (ECM)**



**Socket-Accessory 12V-
Front**




Headlamp-Right

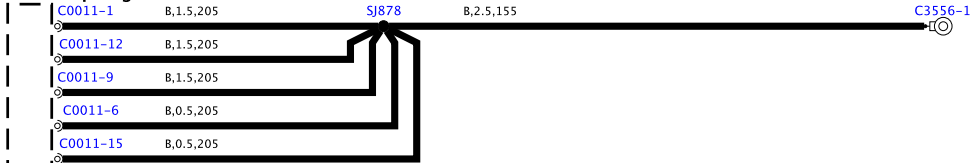


Air supply unit



**Switchpack-
Seat-Driver**



Junction box-engine




AFS control module



Relay-Transit




TCM and Control Valve Body




TCM and Control Valve Body



**Module-Blower-
control**



**Motor-Mode-Air-
temperature**



**Motor-Mode-Air-
distribution**



Pin2-70012-A-A-02-07-Service (3.13-15M9-R13)



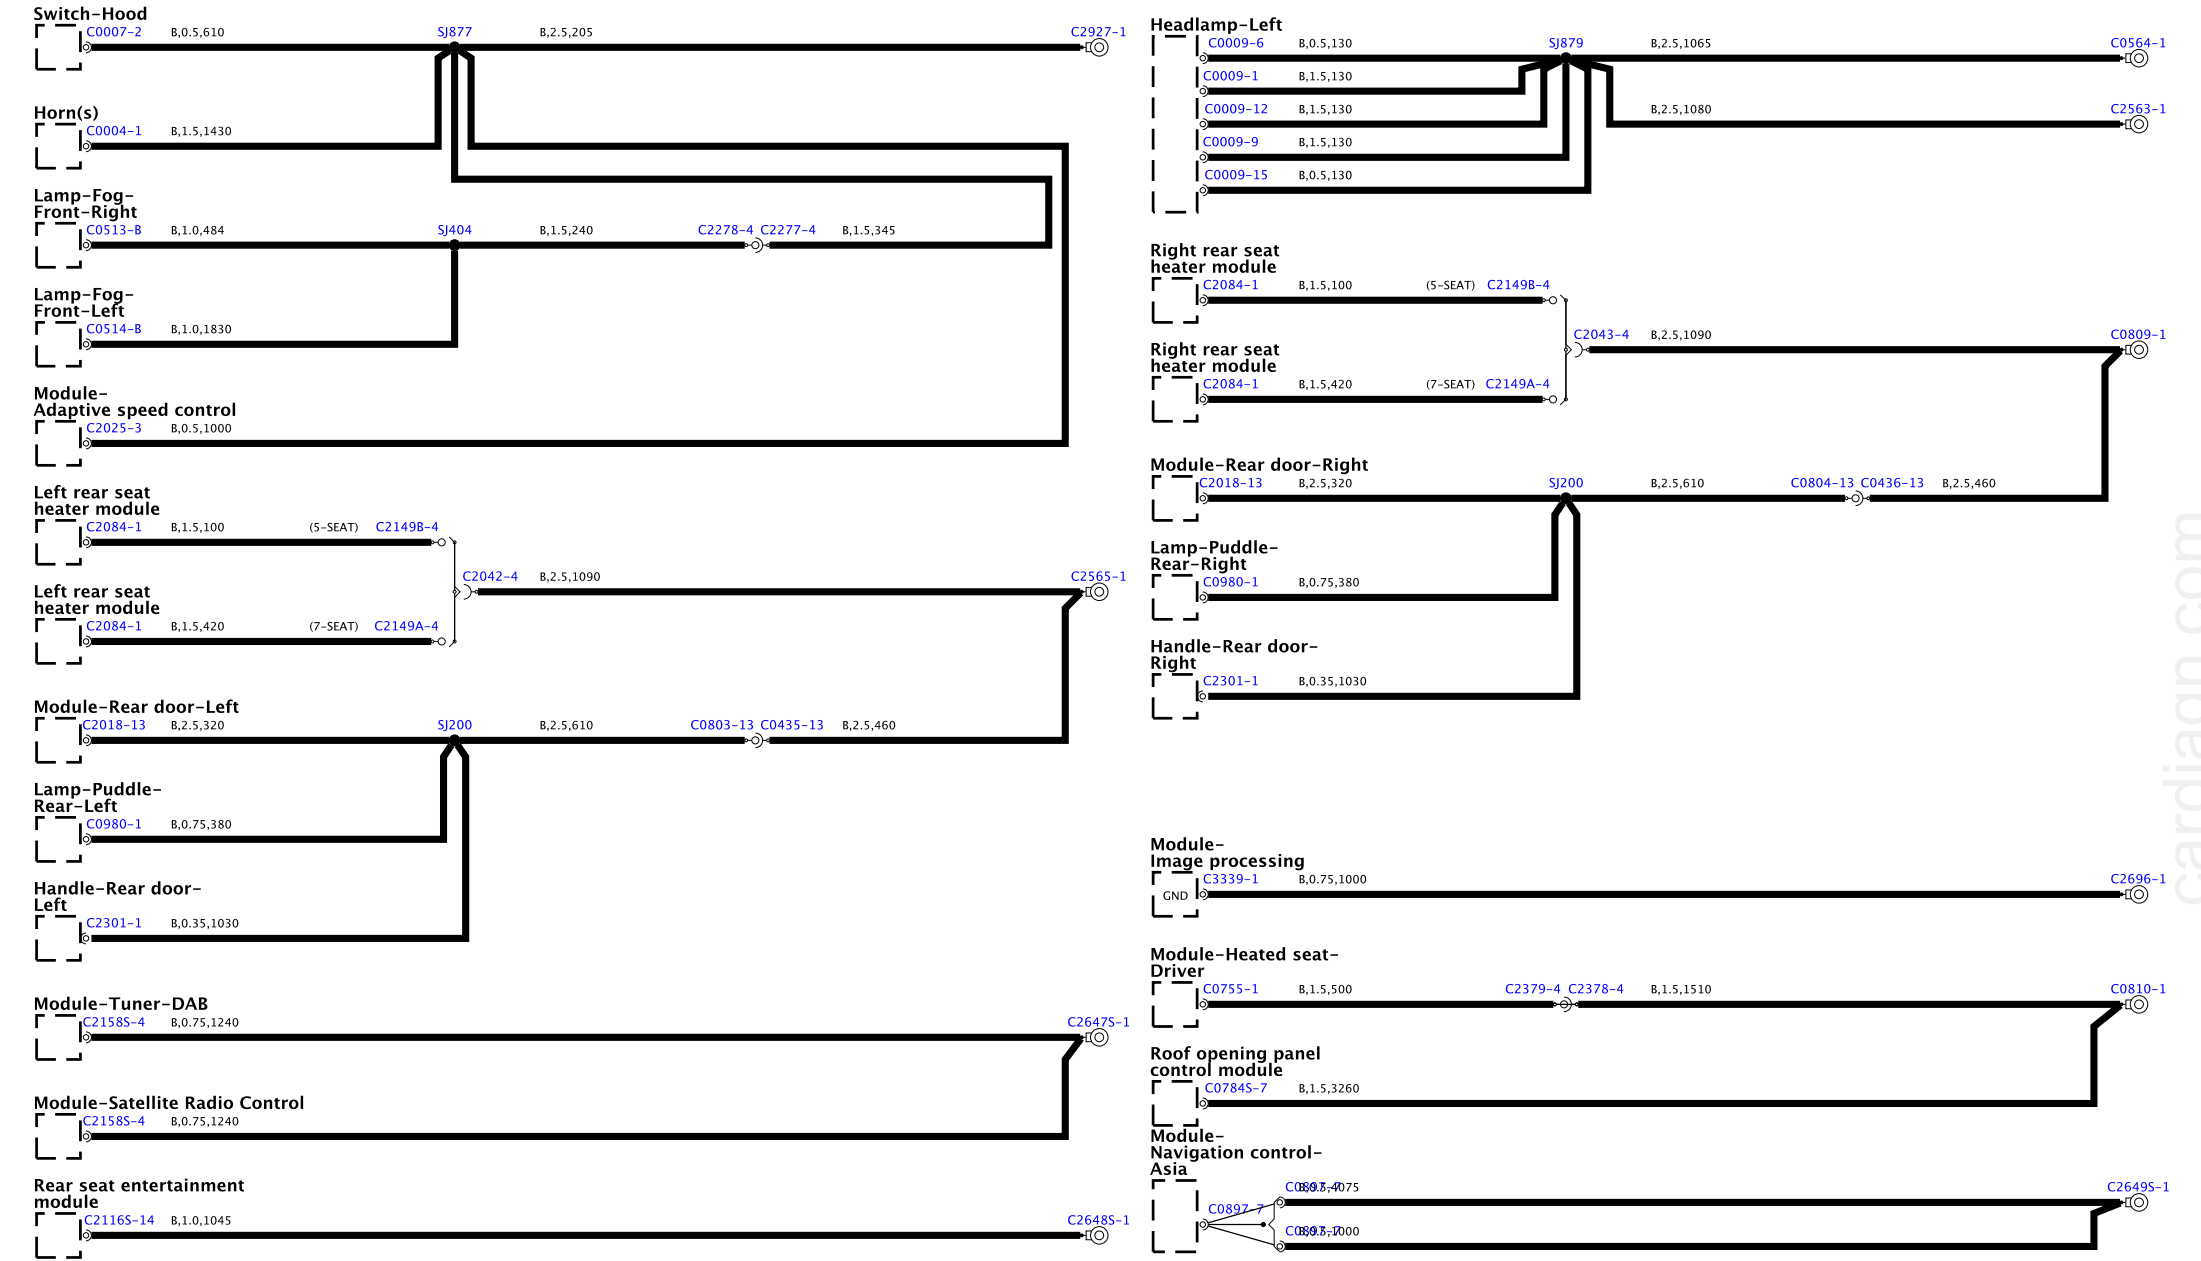


FIG22-70012-A-A-03-07-Service (319-15M)-P(1)



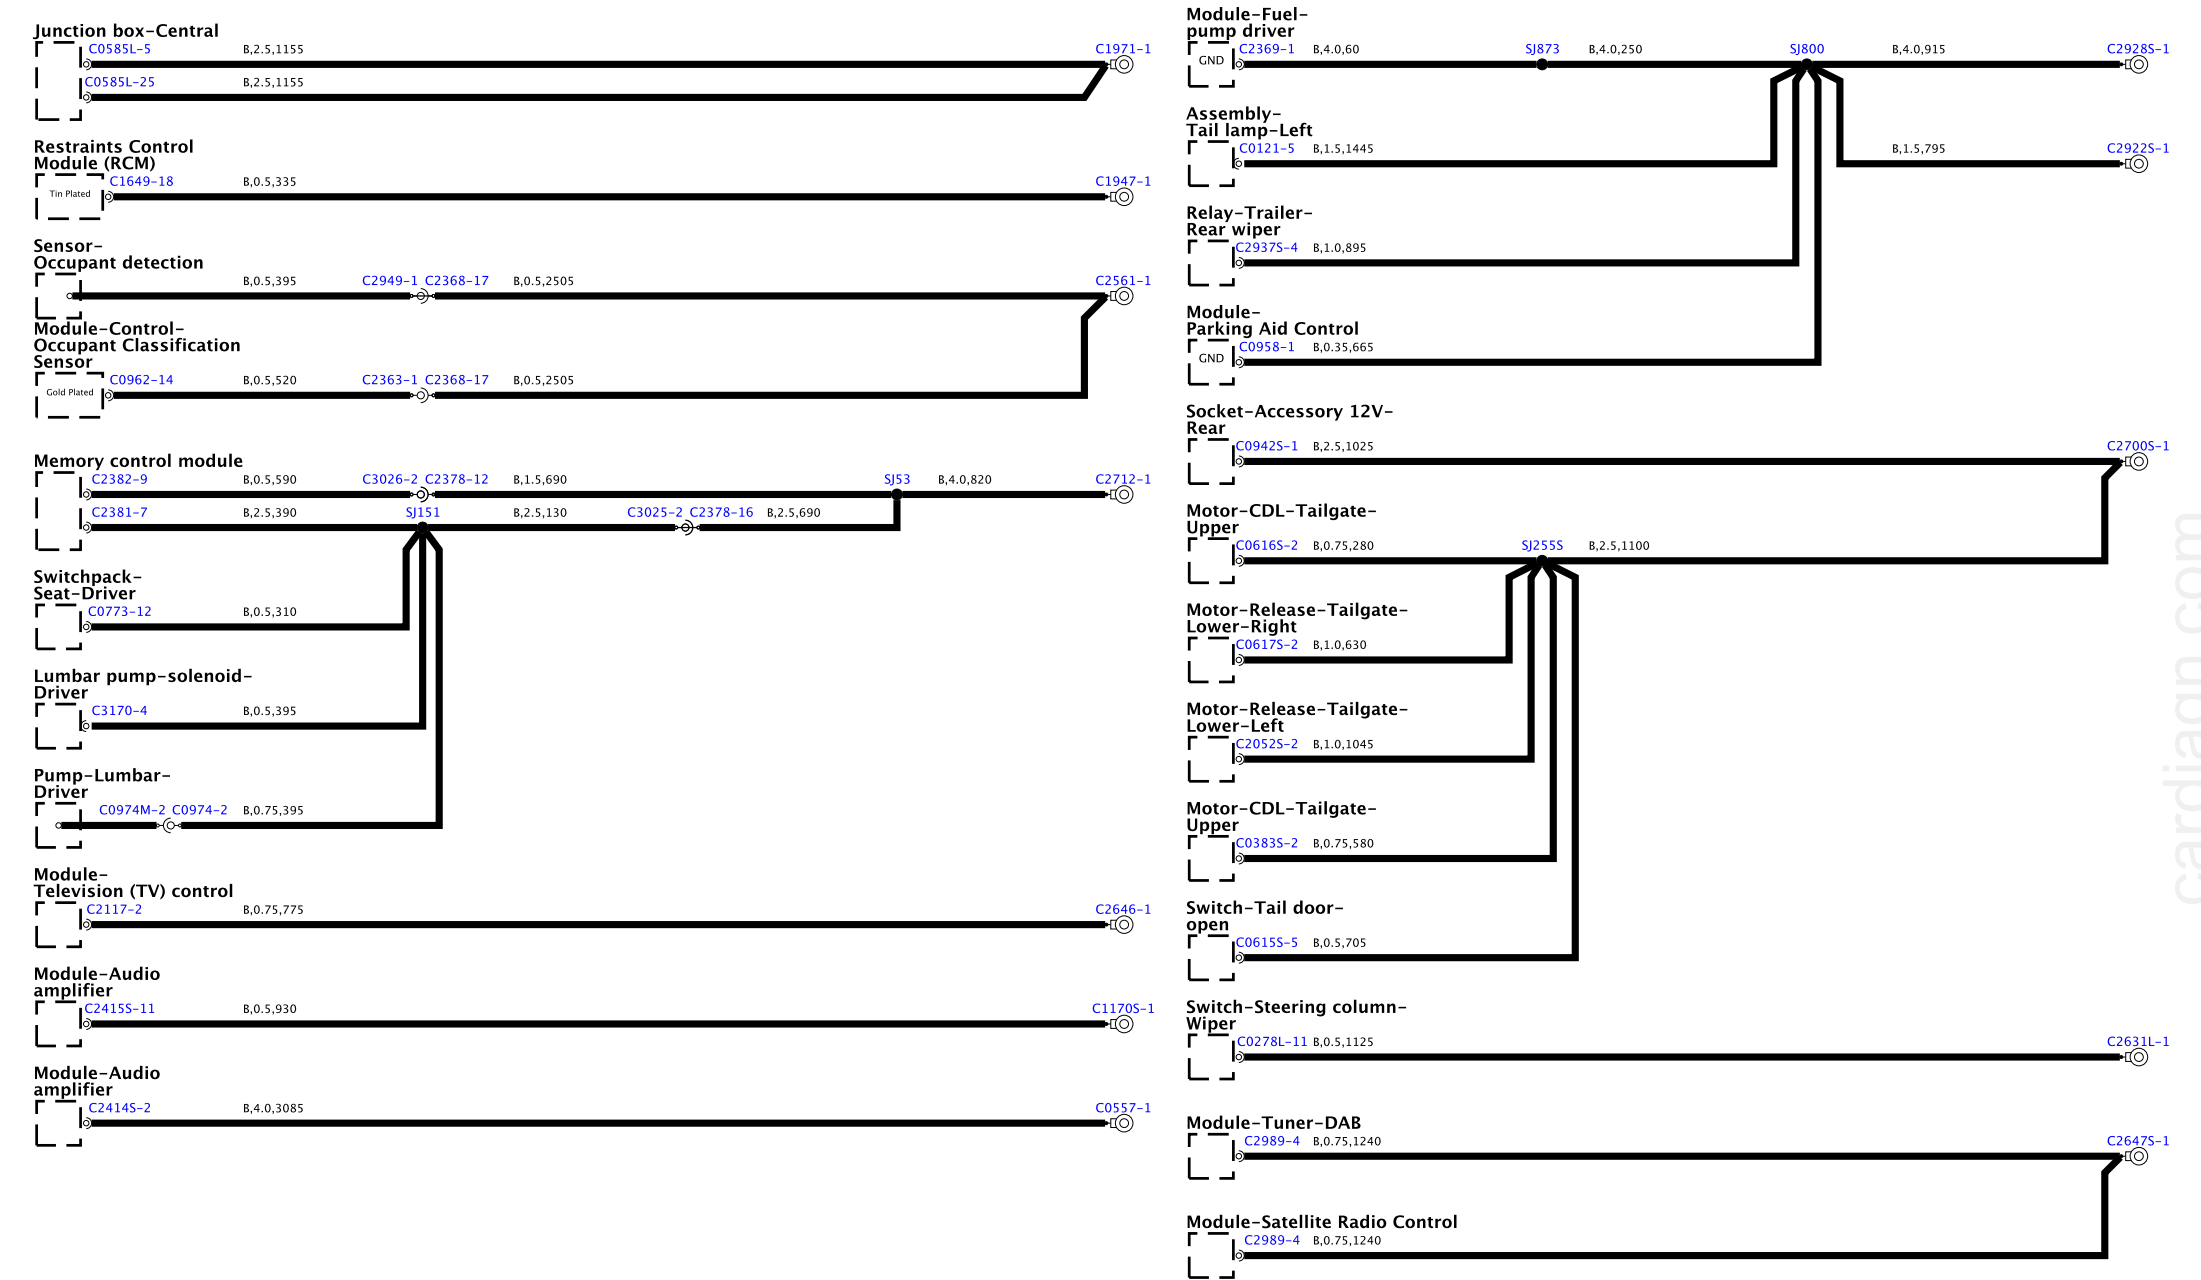


Keyless vehicle module

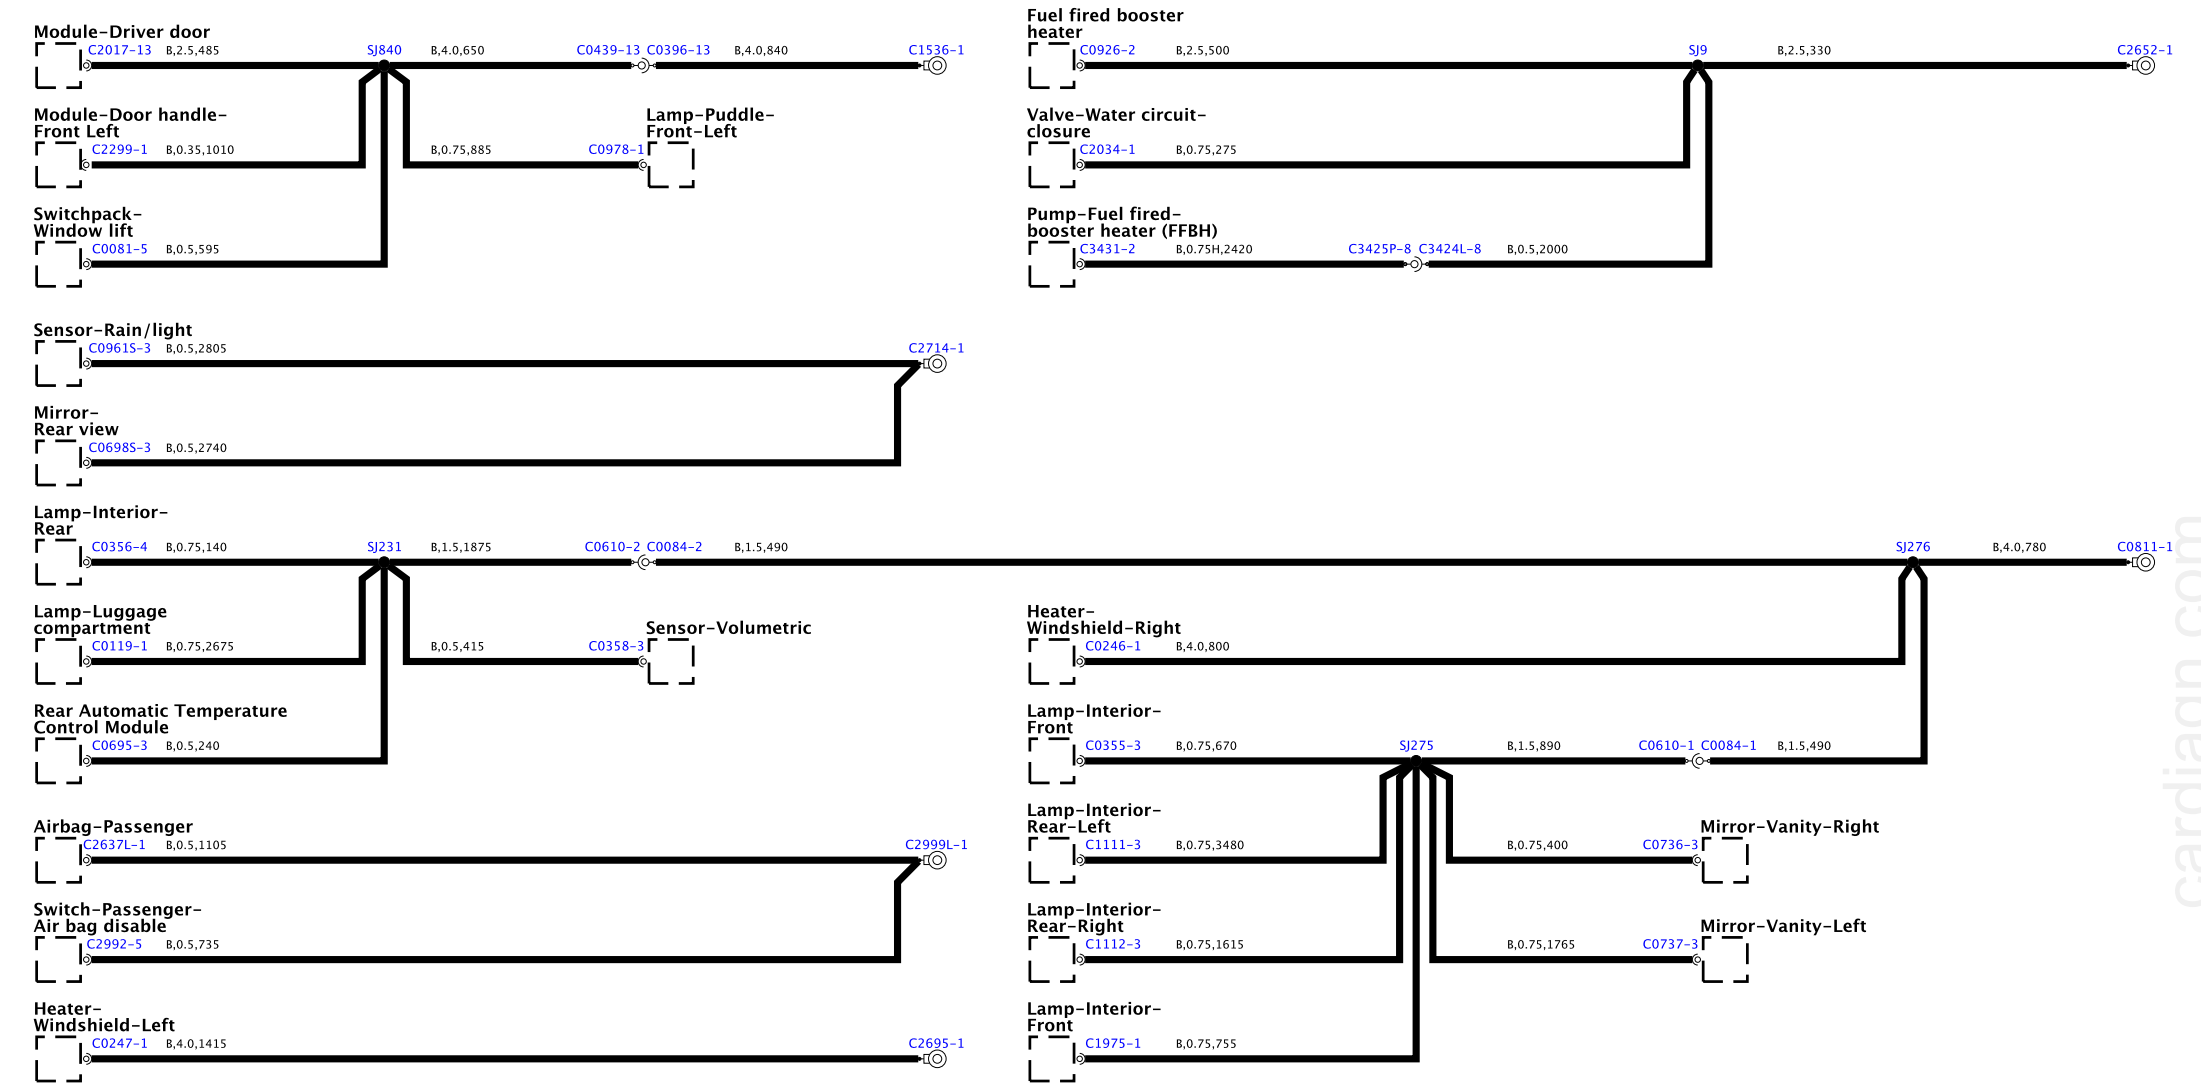

Integrated audio module



Touch screen




Instrument cluster



Module-Blower-motor control-Front




Motor-Wiper-Rear window




Lamp-High mounted stop



Module-Door handle




Camera-Rear view




Element-Heated rear window




Module-Passenger door




Module-Door handle-Front Right




Lamp-Puddle-Front-Right



Module-Electric park-brake control



Unit-Fuel Tank



Receiver-RF




Receiver-RF




Trailer pick-up



Trailer pick-up




Trailer pick-up

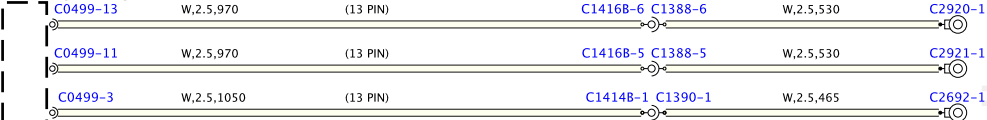

Integrated audio module




Switchpack-Seat-Passenger




Pump-Lumbar-Passenger



Module-Heated seat-Passenger



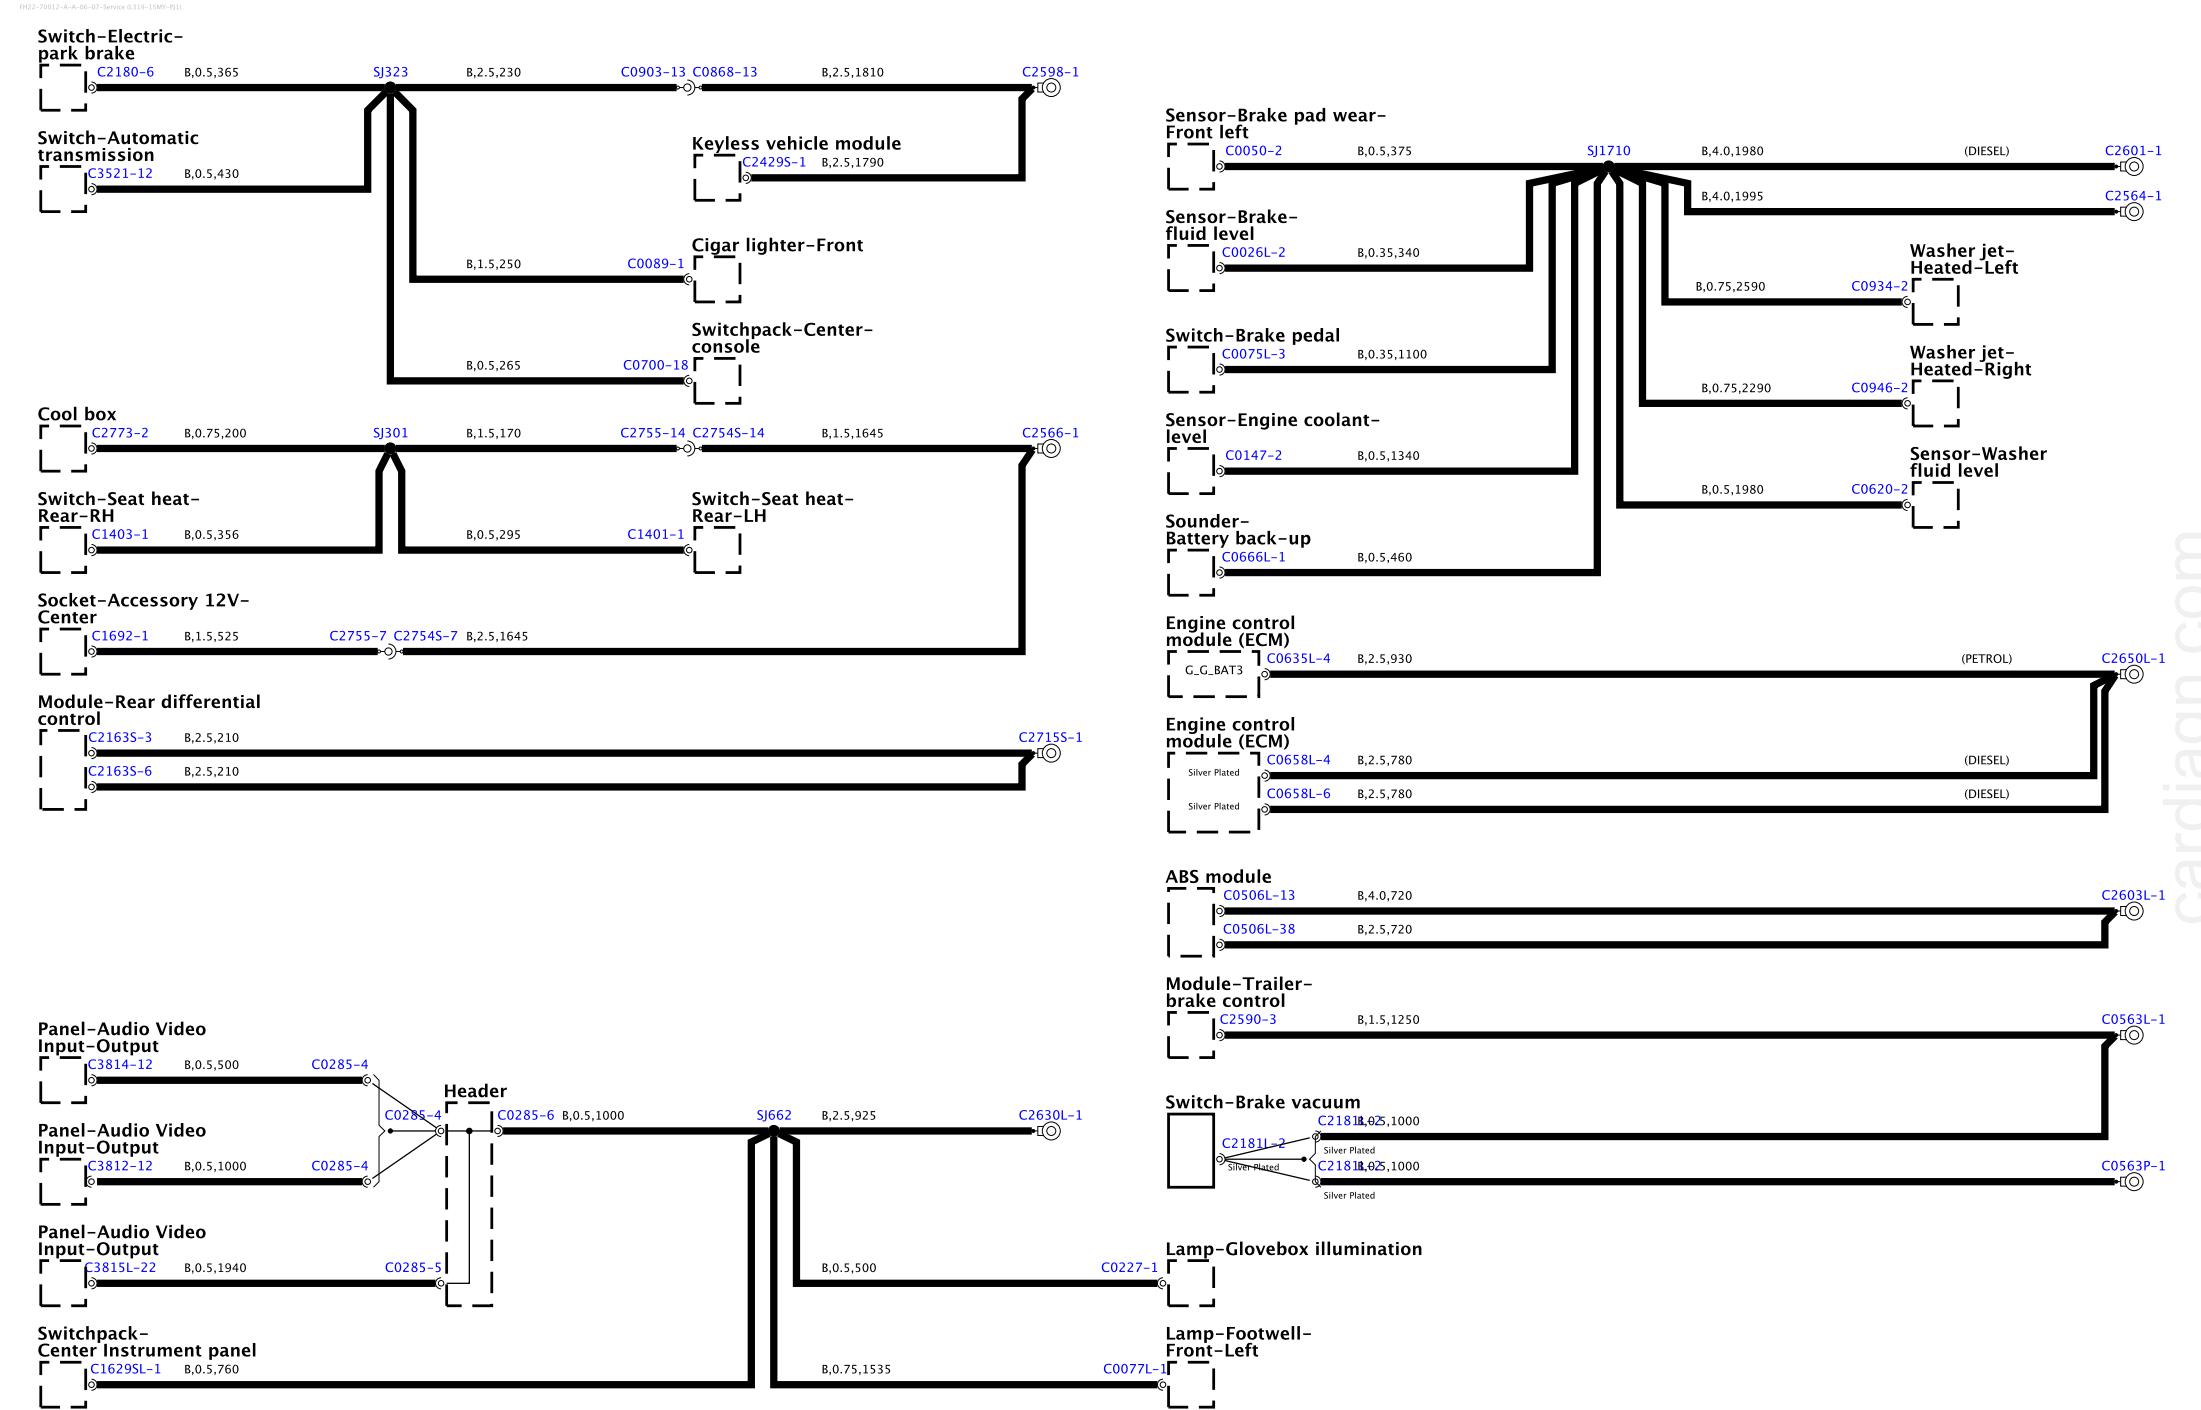

FH02-70012-A-A-07-07-Service 0,319-1300-951

Diagnostic connector



Lighting control switch



Lamp-Footwell-Front-Right



Switch-Steering column-Lighting




Clockspring



Sensor-Steering-angle



Clockspring



Assembly-Steering column



Diagnostic connector



Instrument cluster



Unit-Immobiliser antenna



Clock-Analogue



Module-Telephone interface



Integrated control panel



Assembly-Tail lamp-Right



Receiver-Fuel fired-booster heater (FFBH)




Module-Climate Control




Ignition coil-1



Ignition coil-2



Ignition coil-3




Capacitor




Ignition coil-4



Ignition coil-5



Ignition coil-6



Pump-Supercharge-coolant



Fan-Viscous-Cooling



Megafuse



Megafuse



C3002-1 8,2.5,433

C3001A-1 8,2.5,433

C3000-1




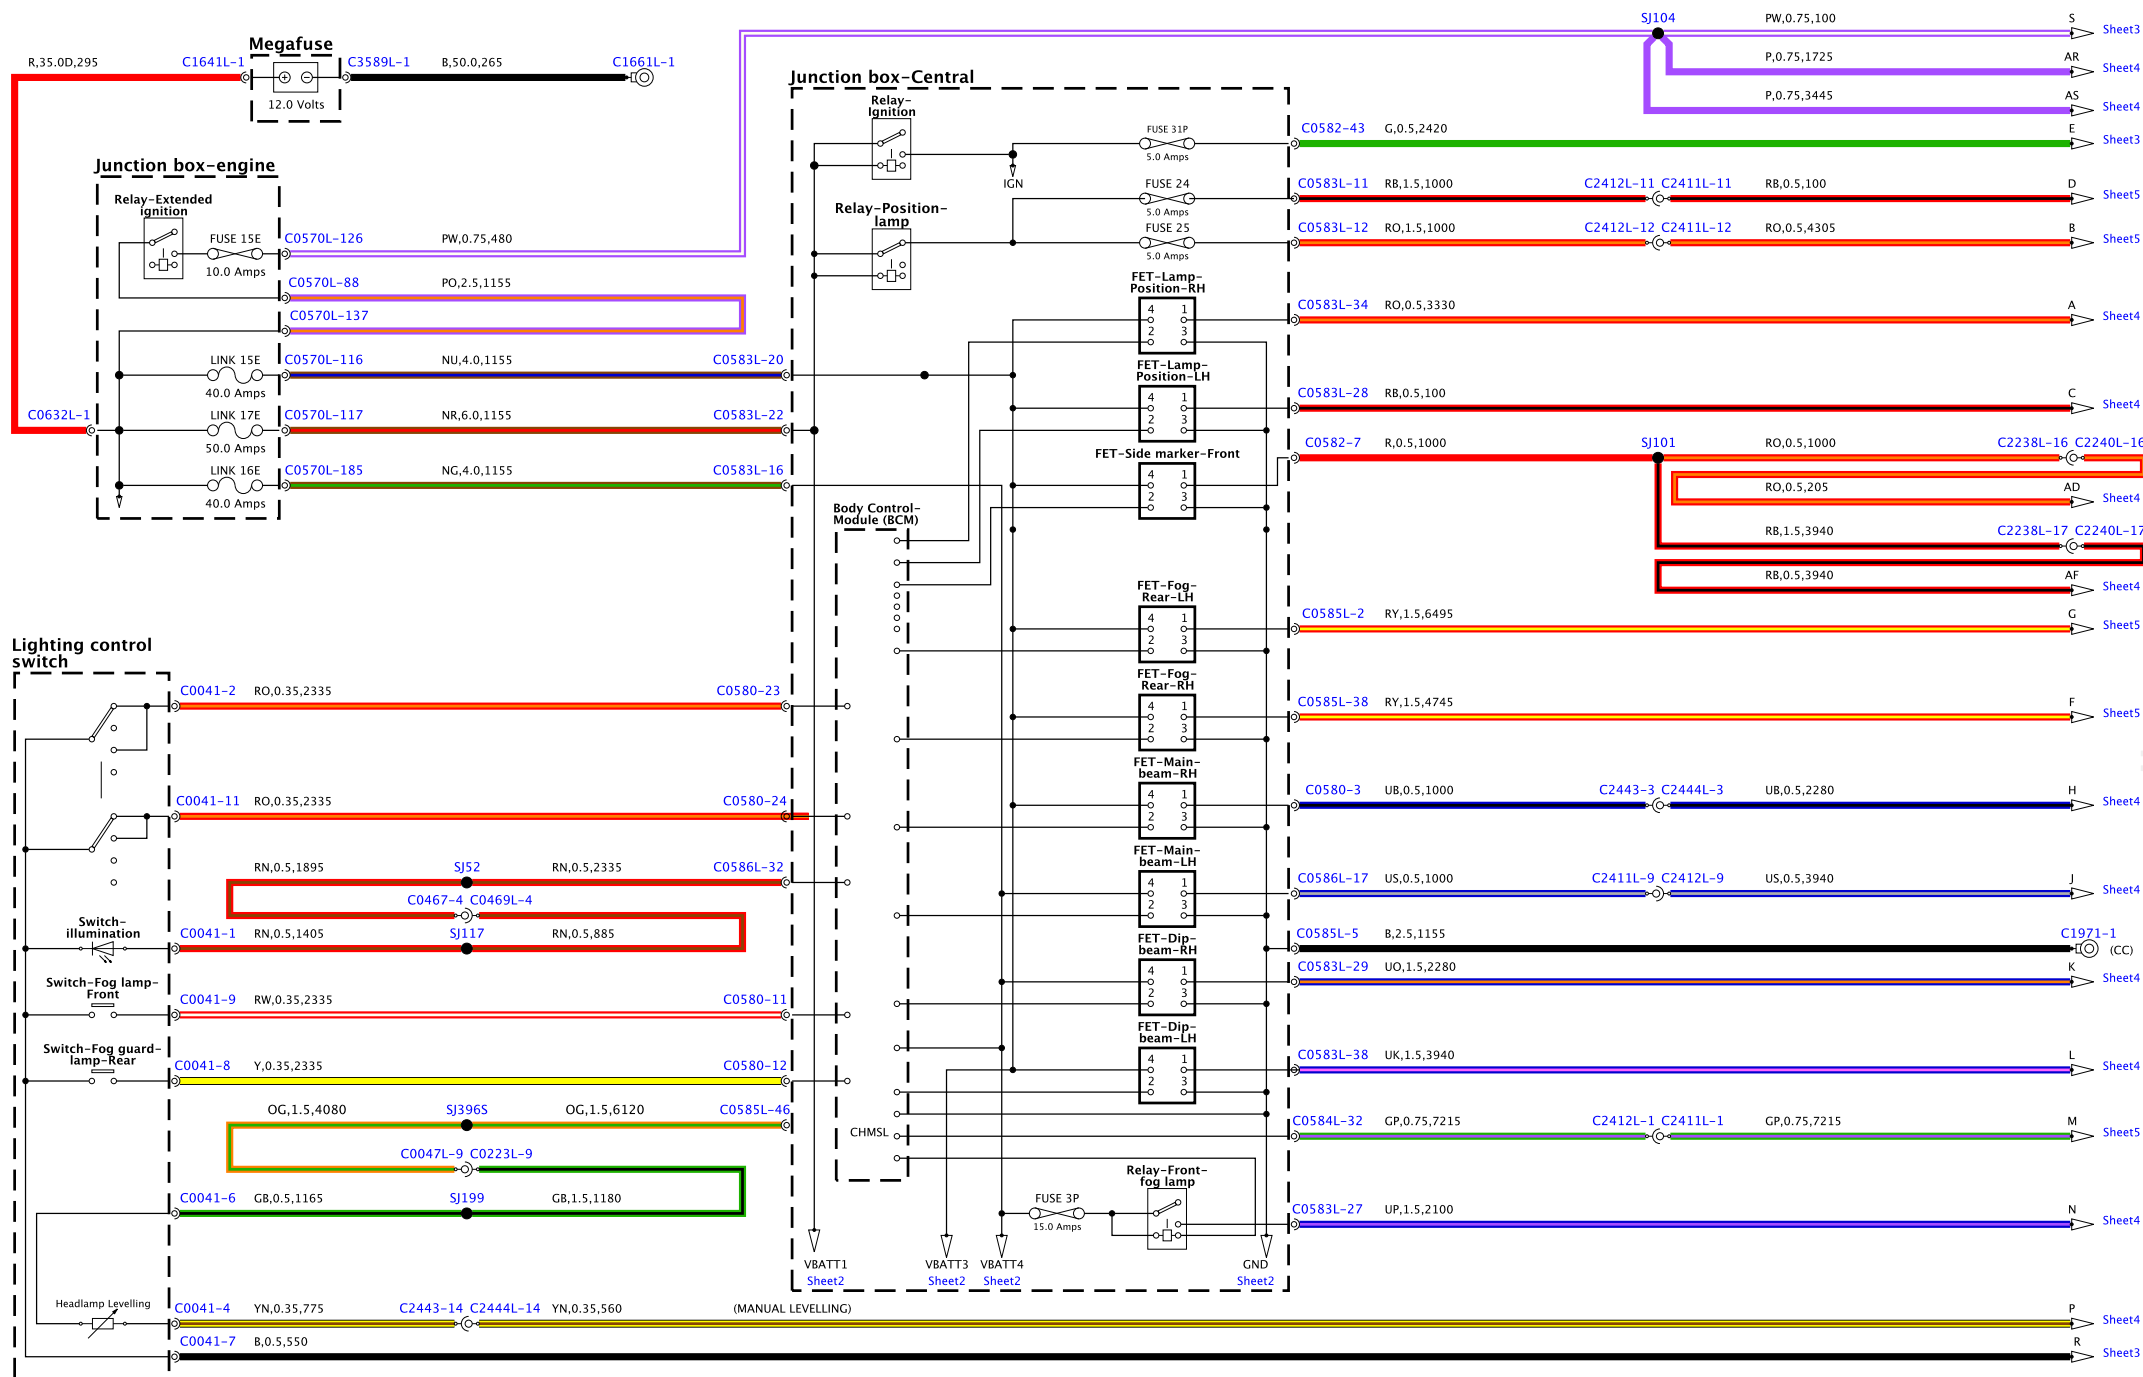



FIG22-70000-A-A-02-05-Service (0319-13M1-P51)


Junction box-Central

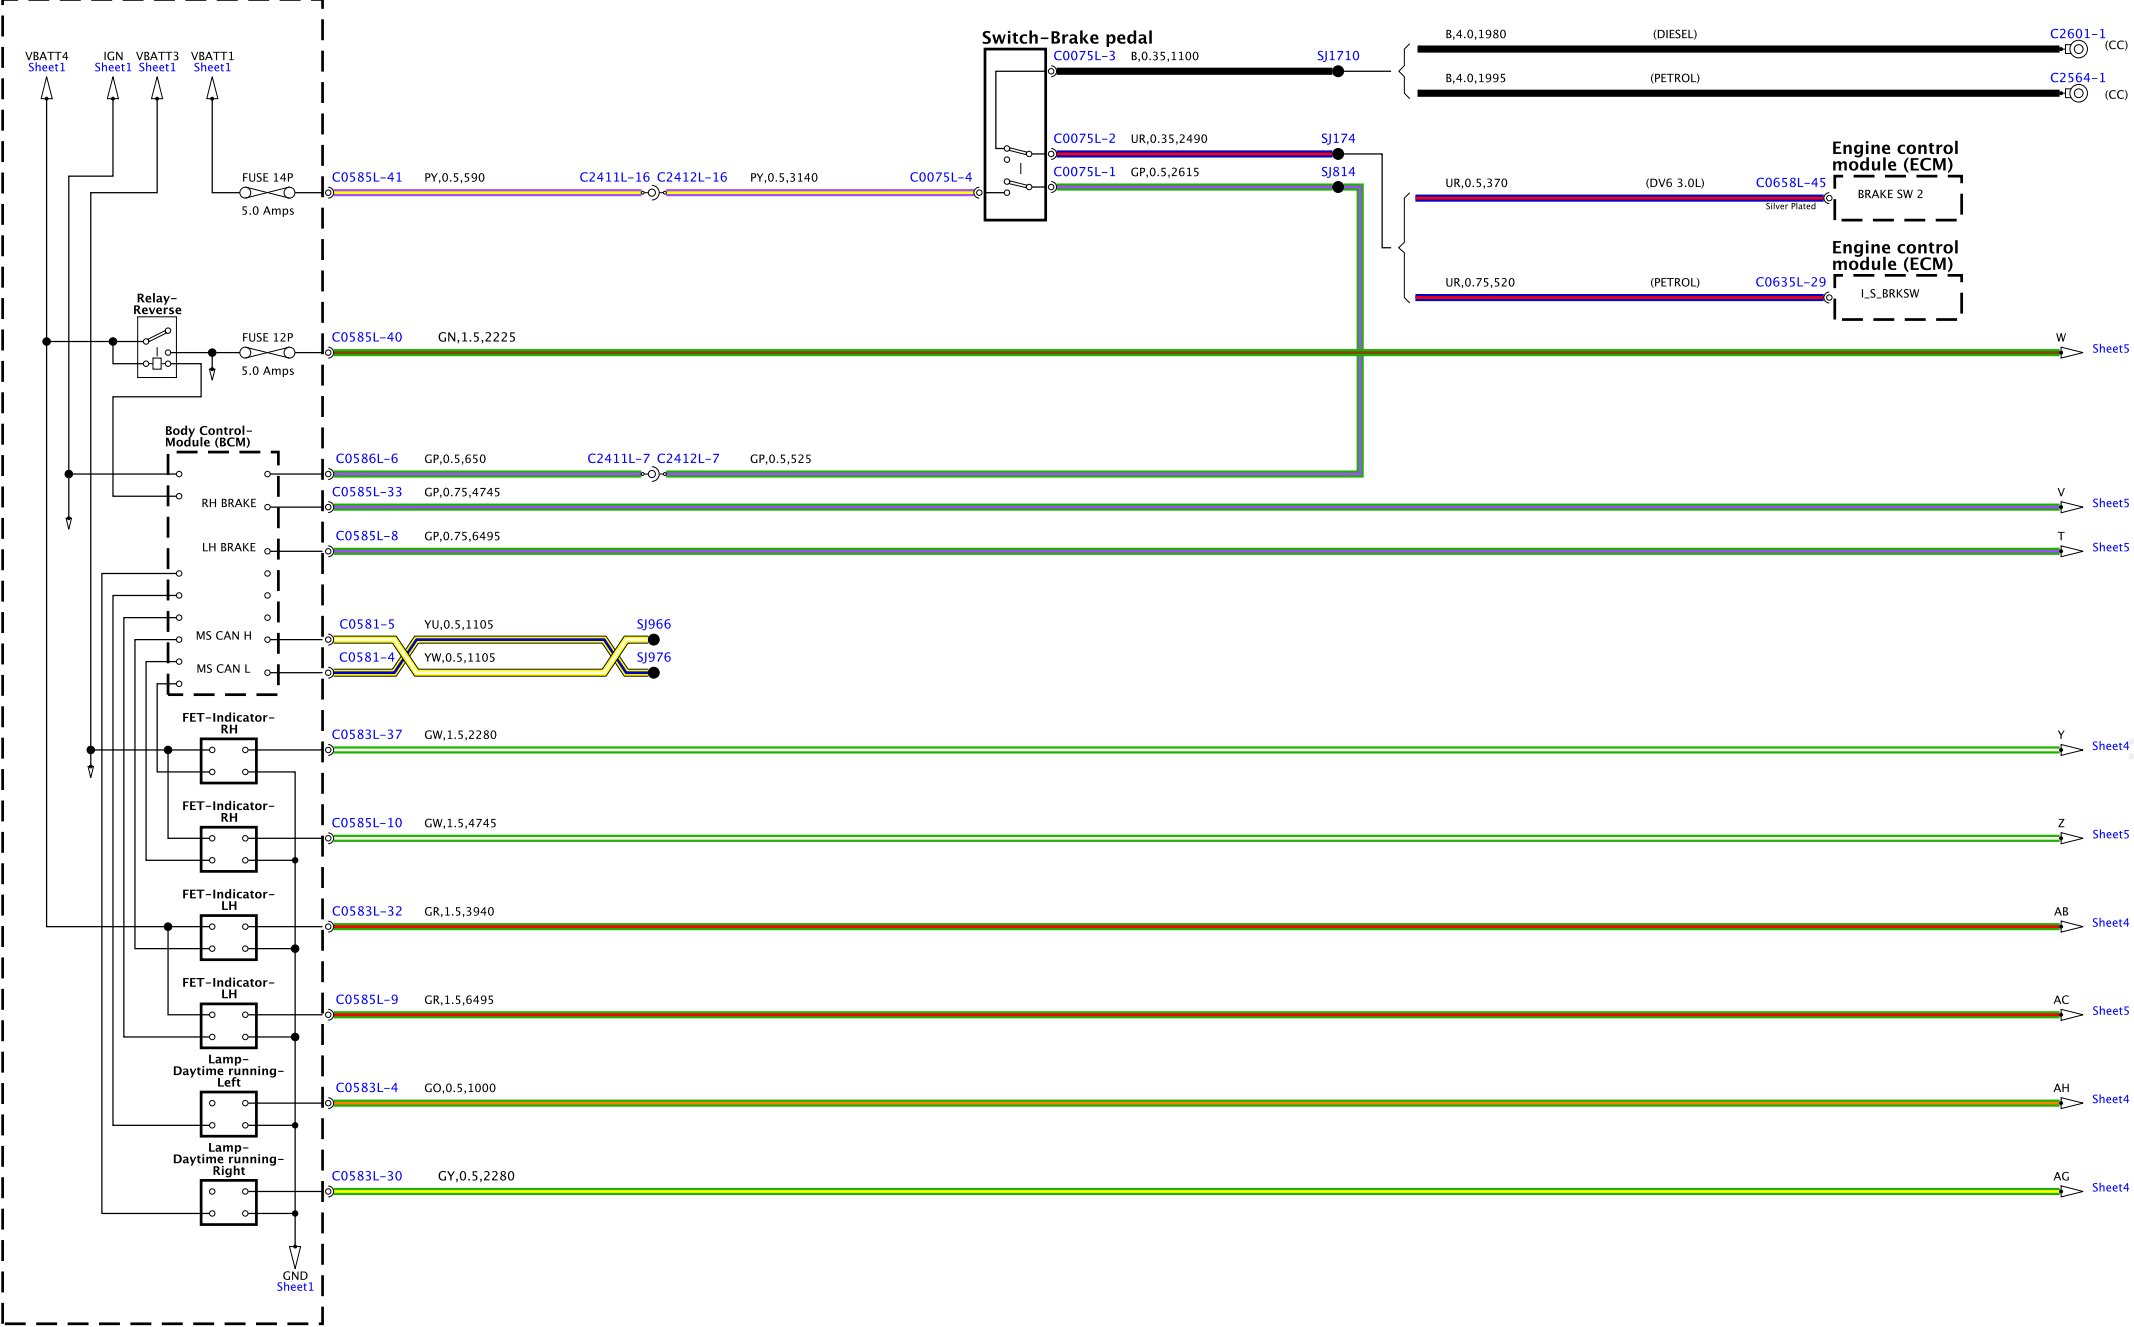


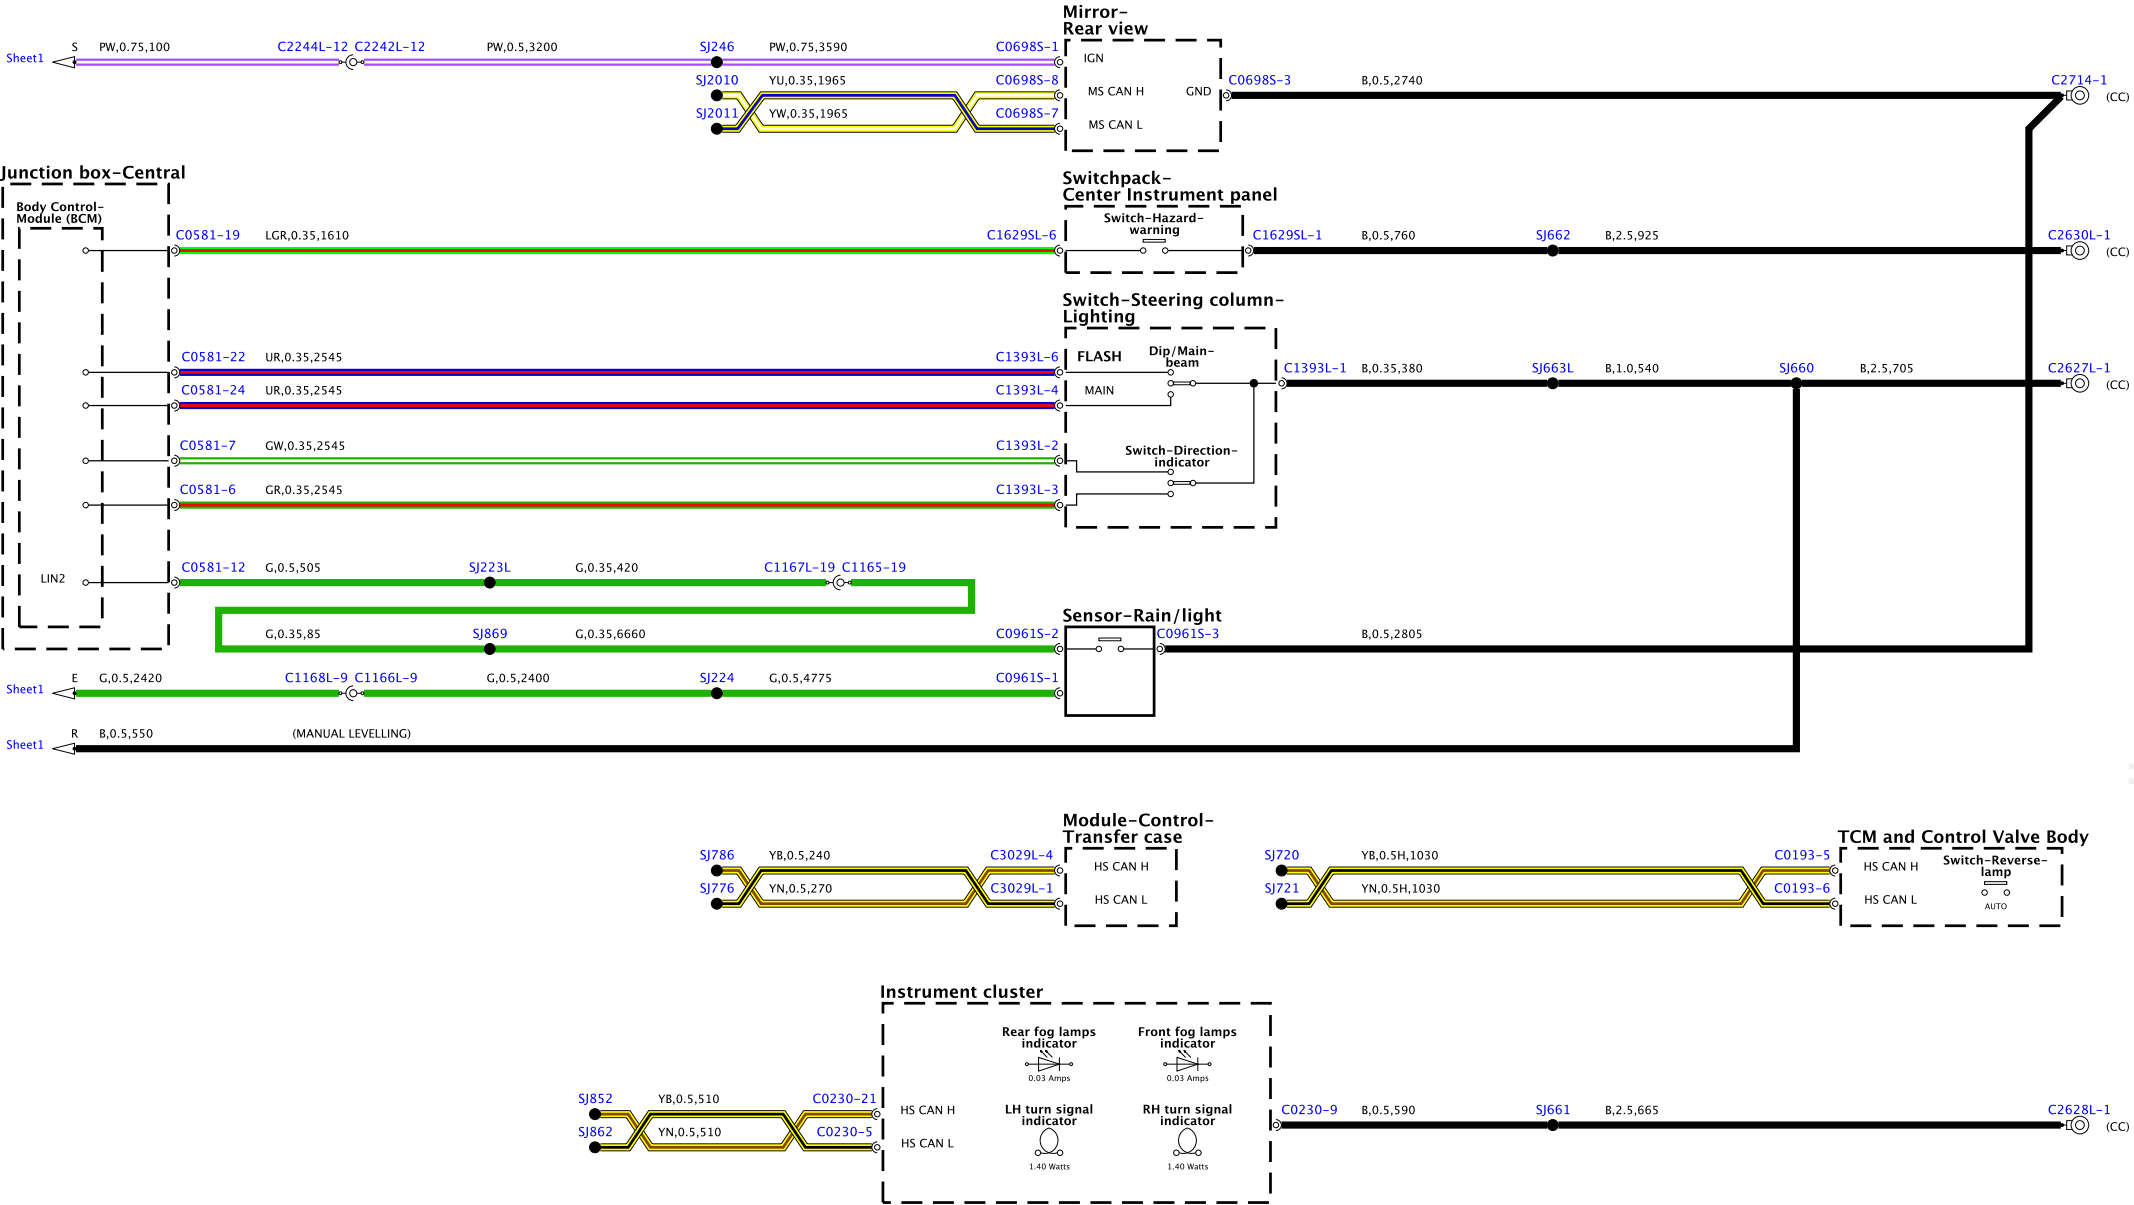

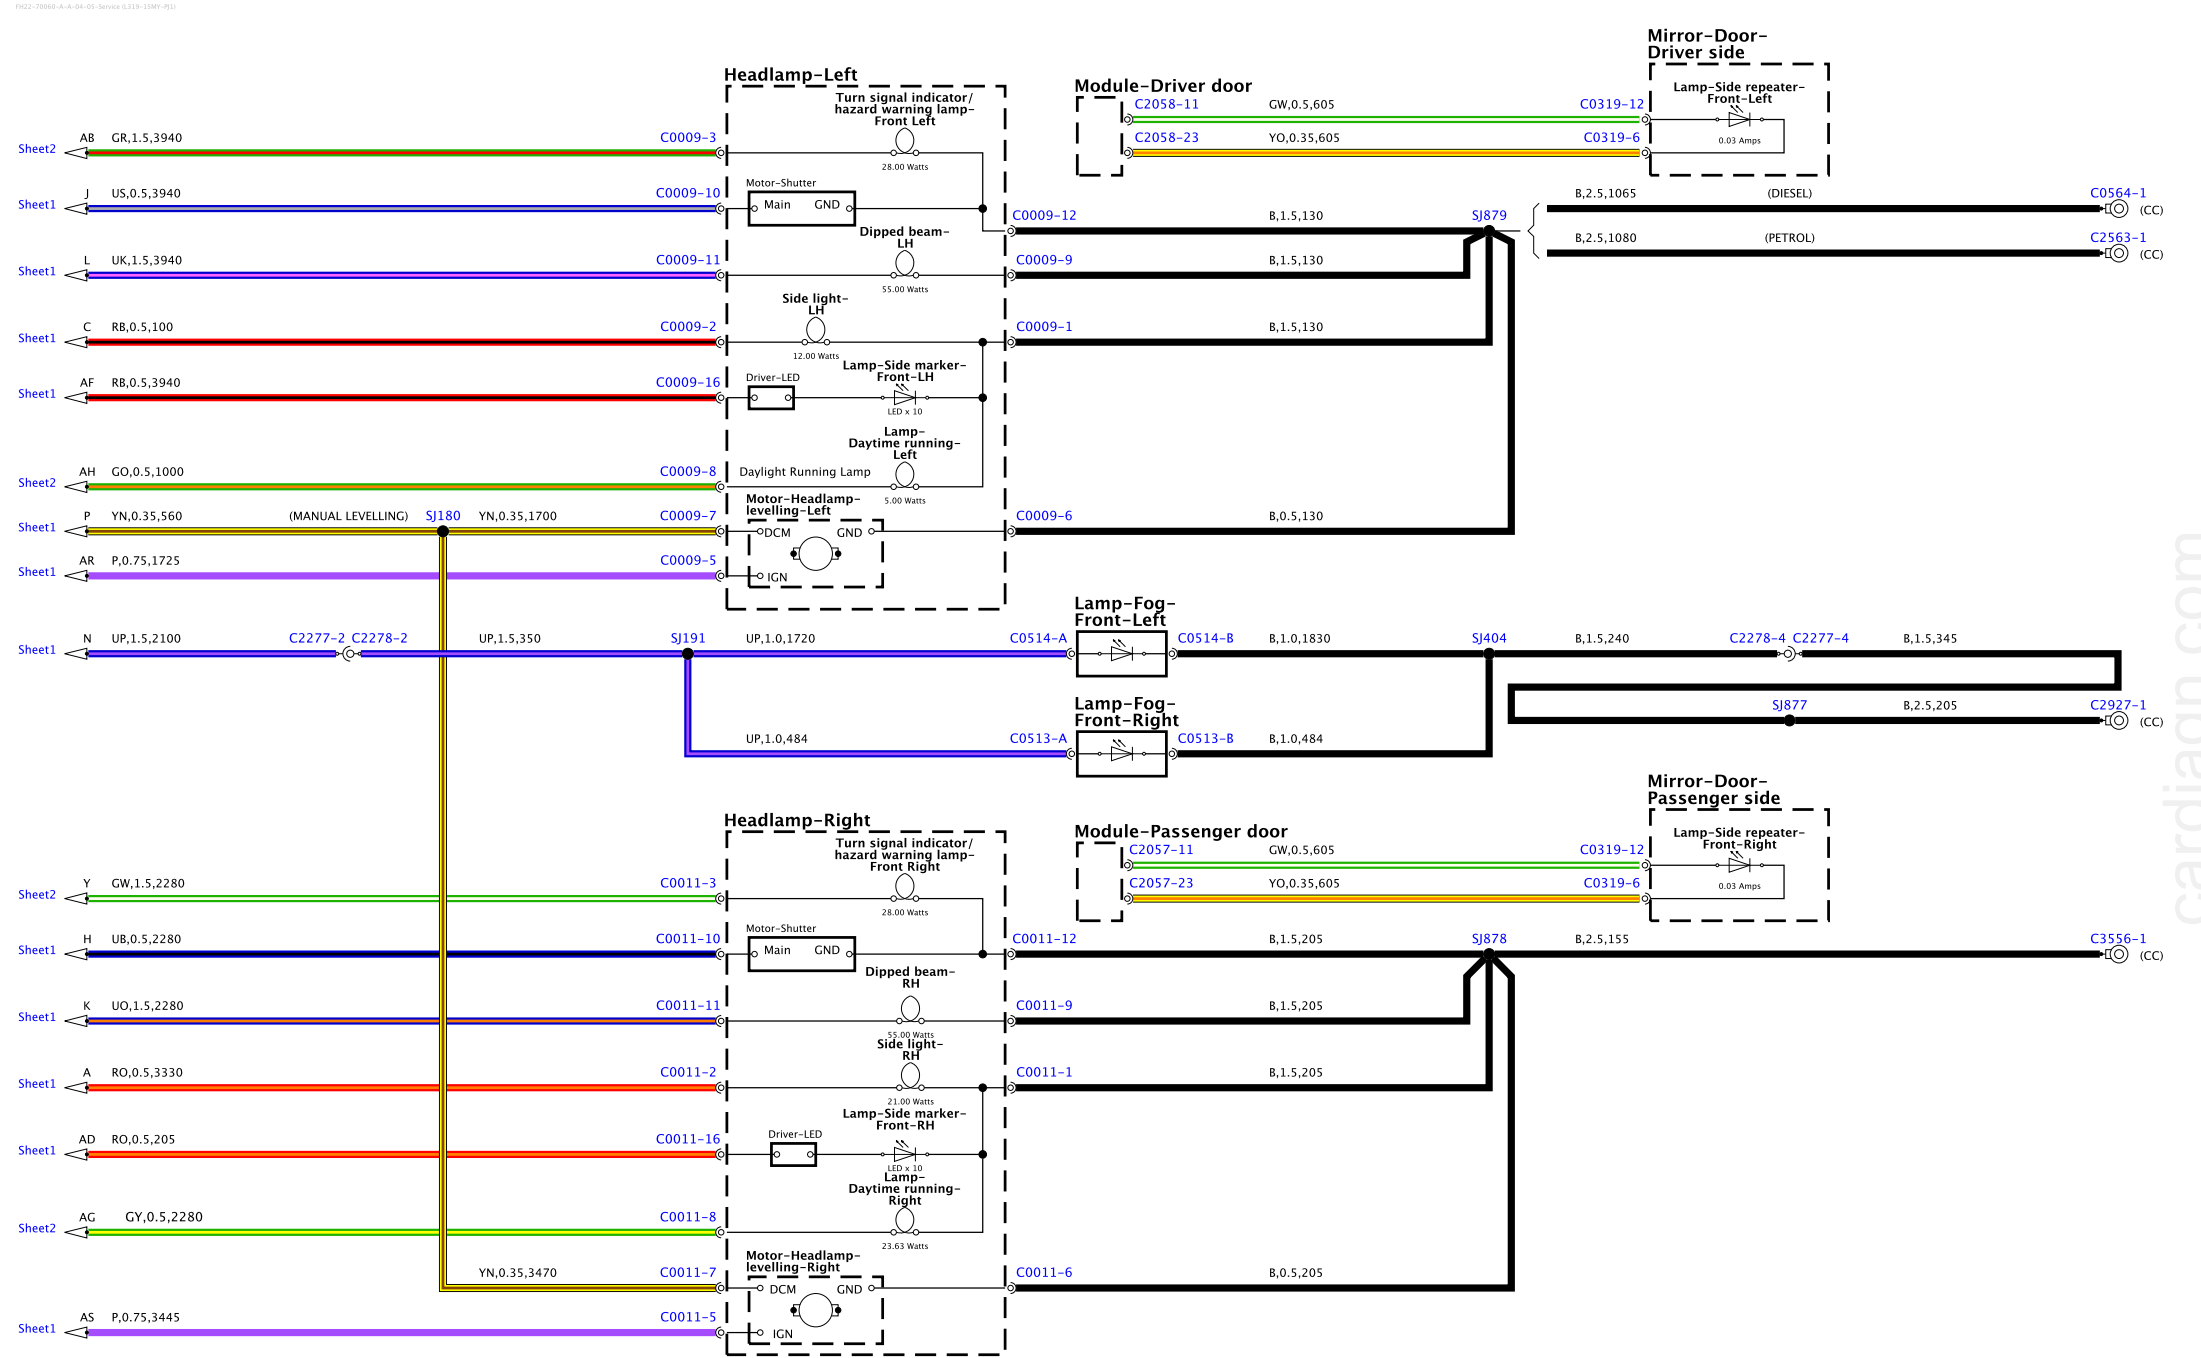

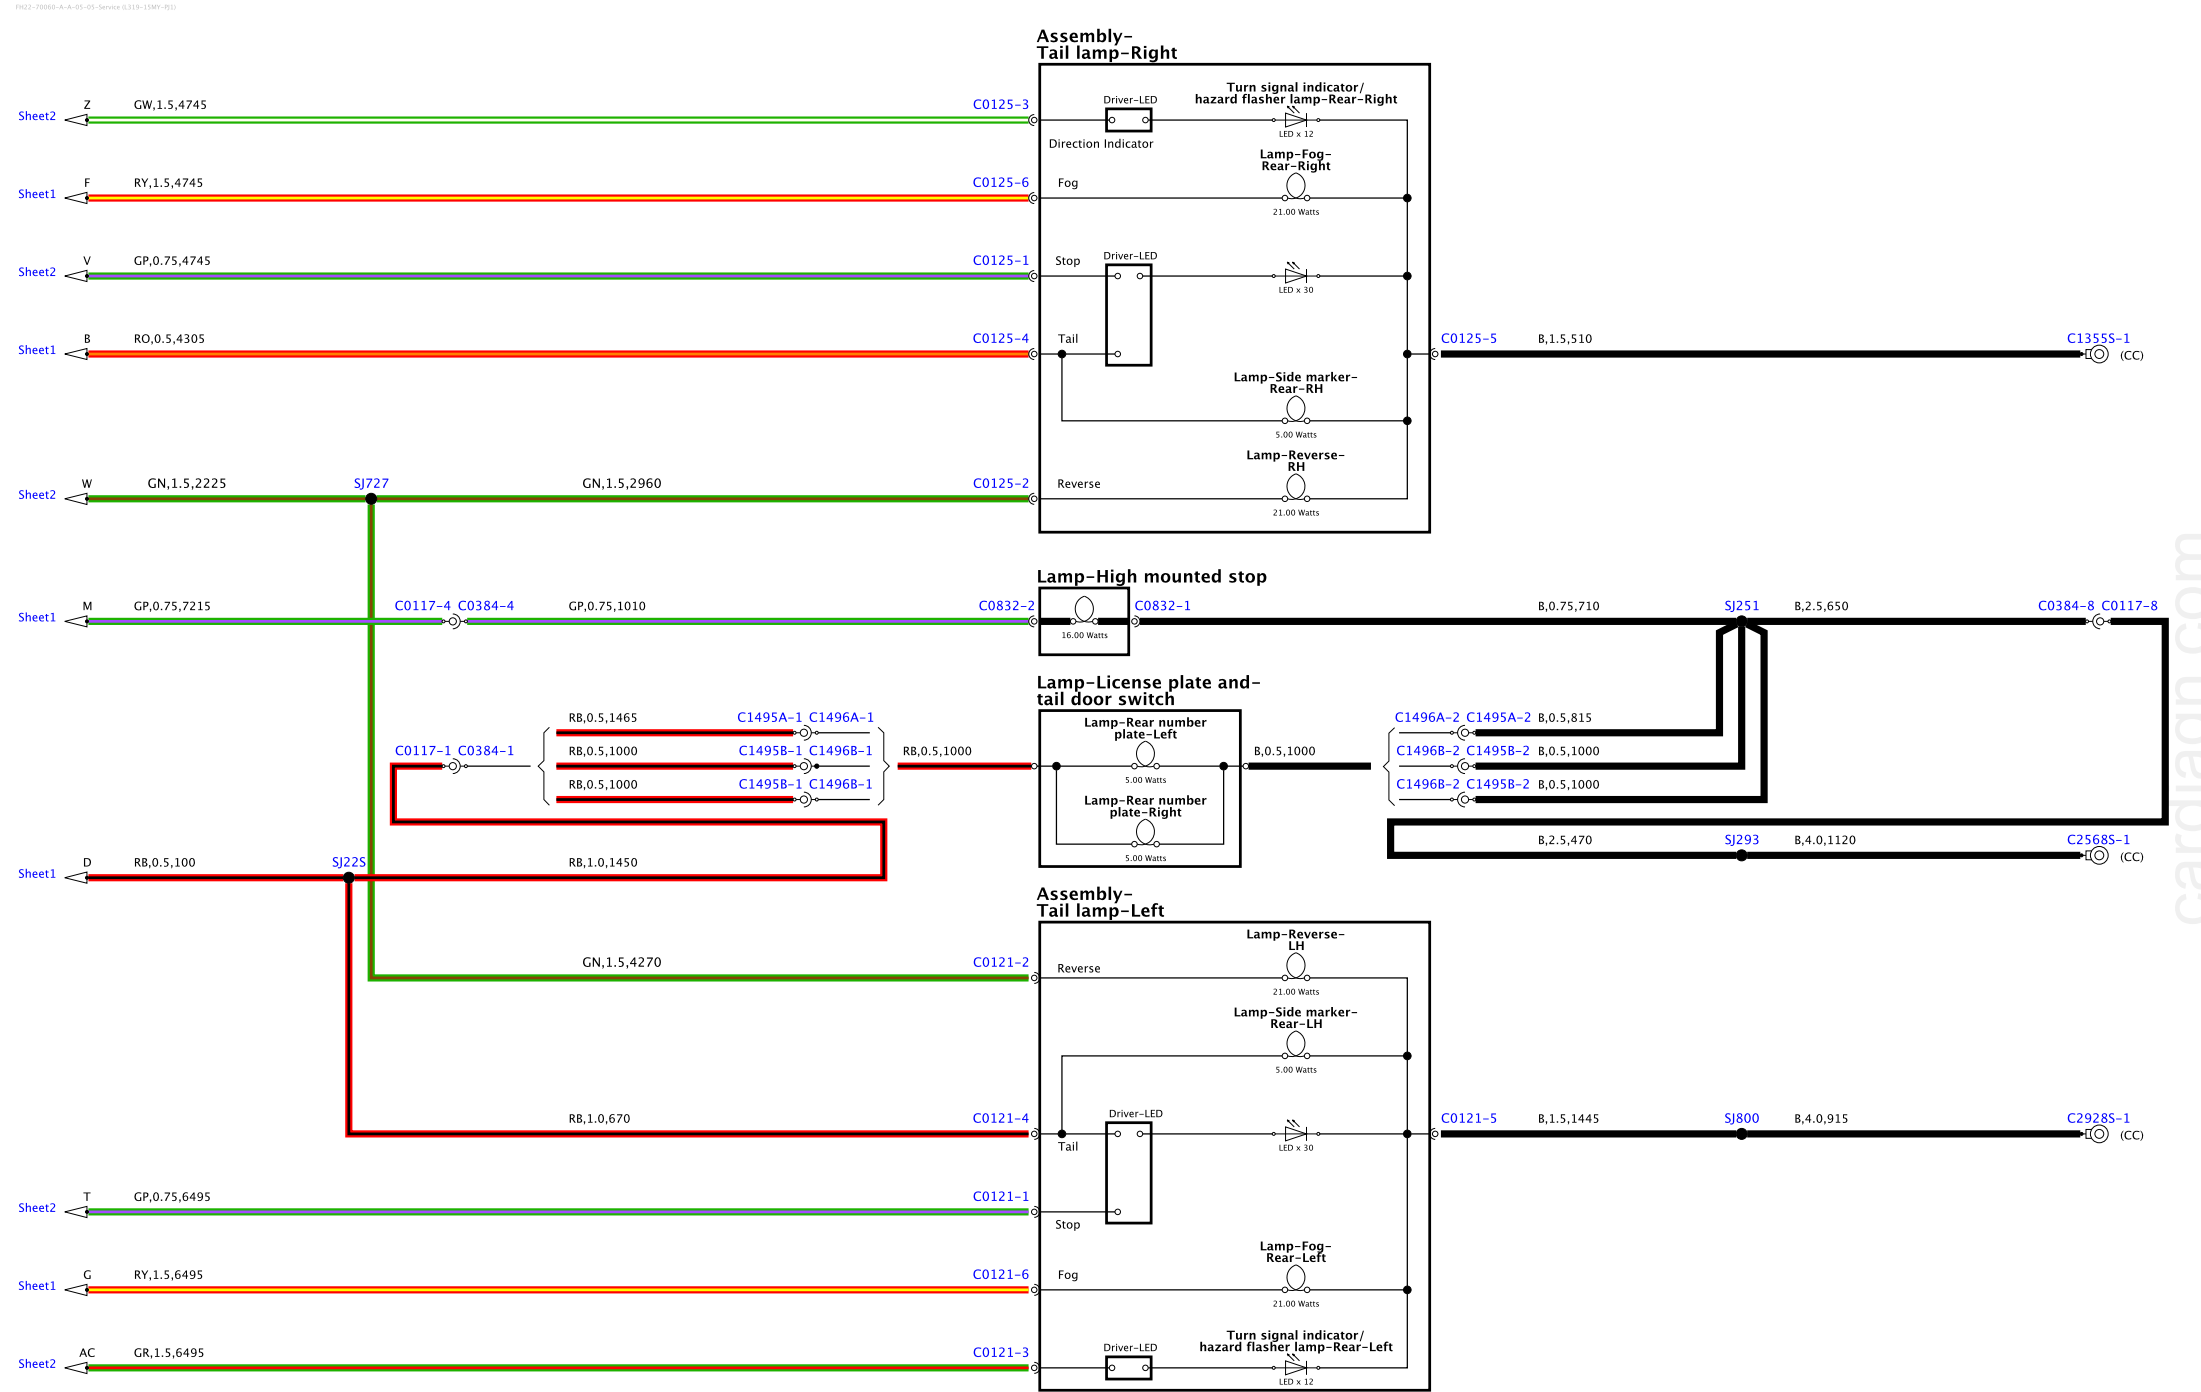


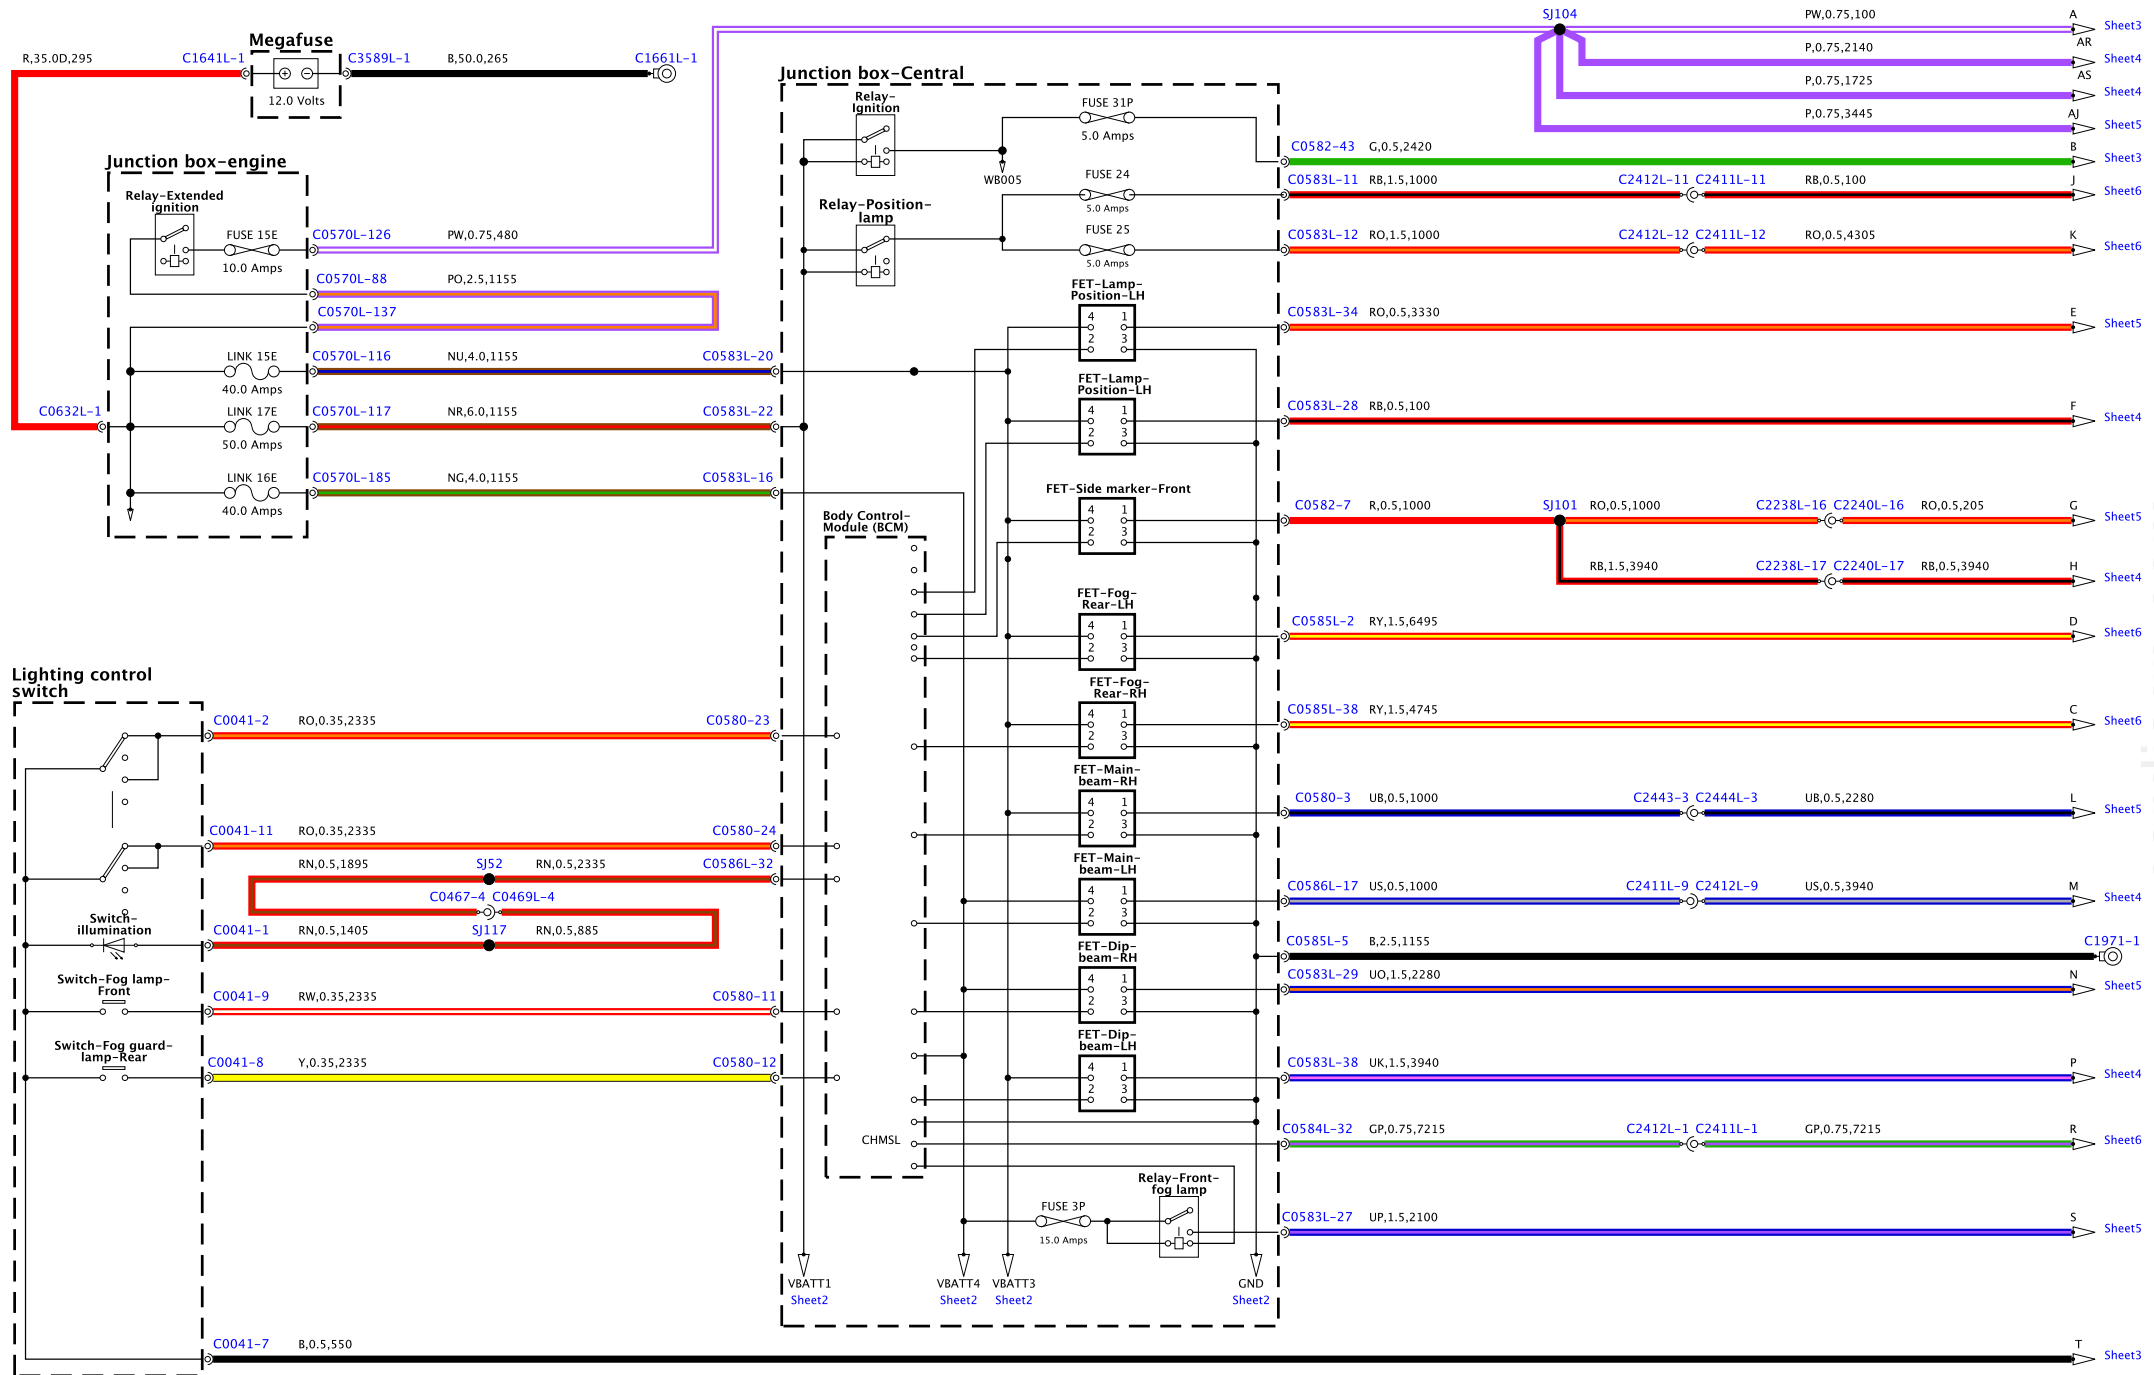

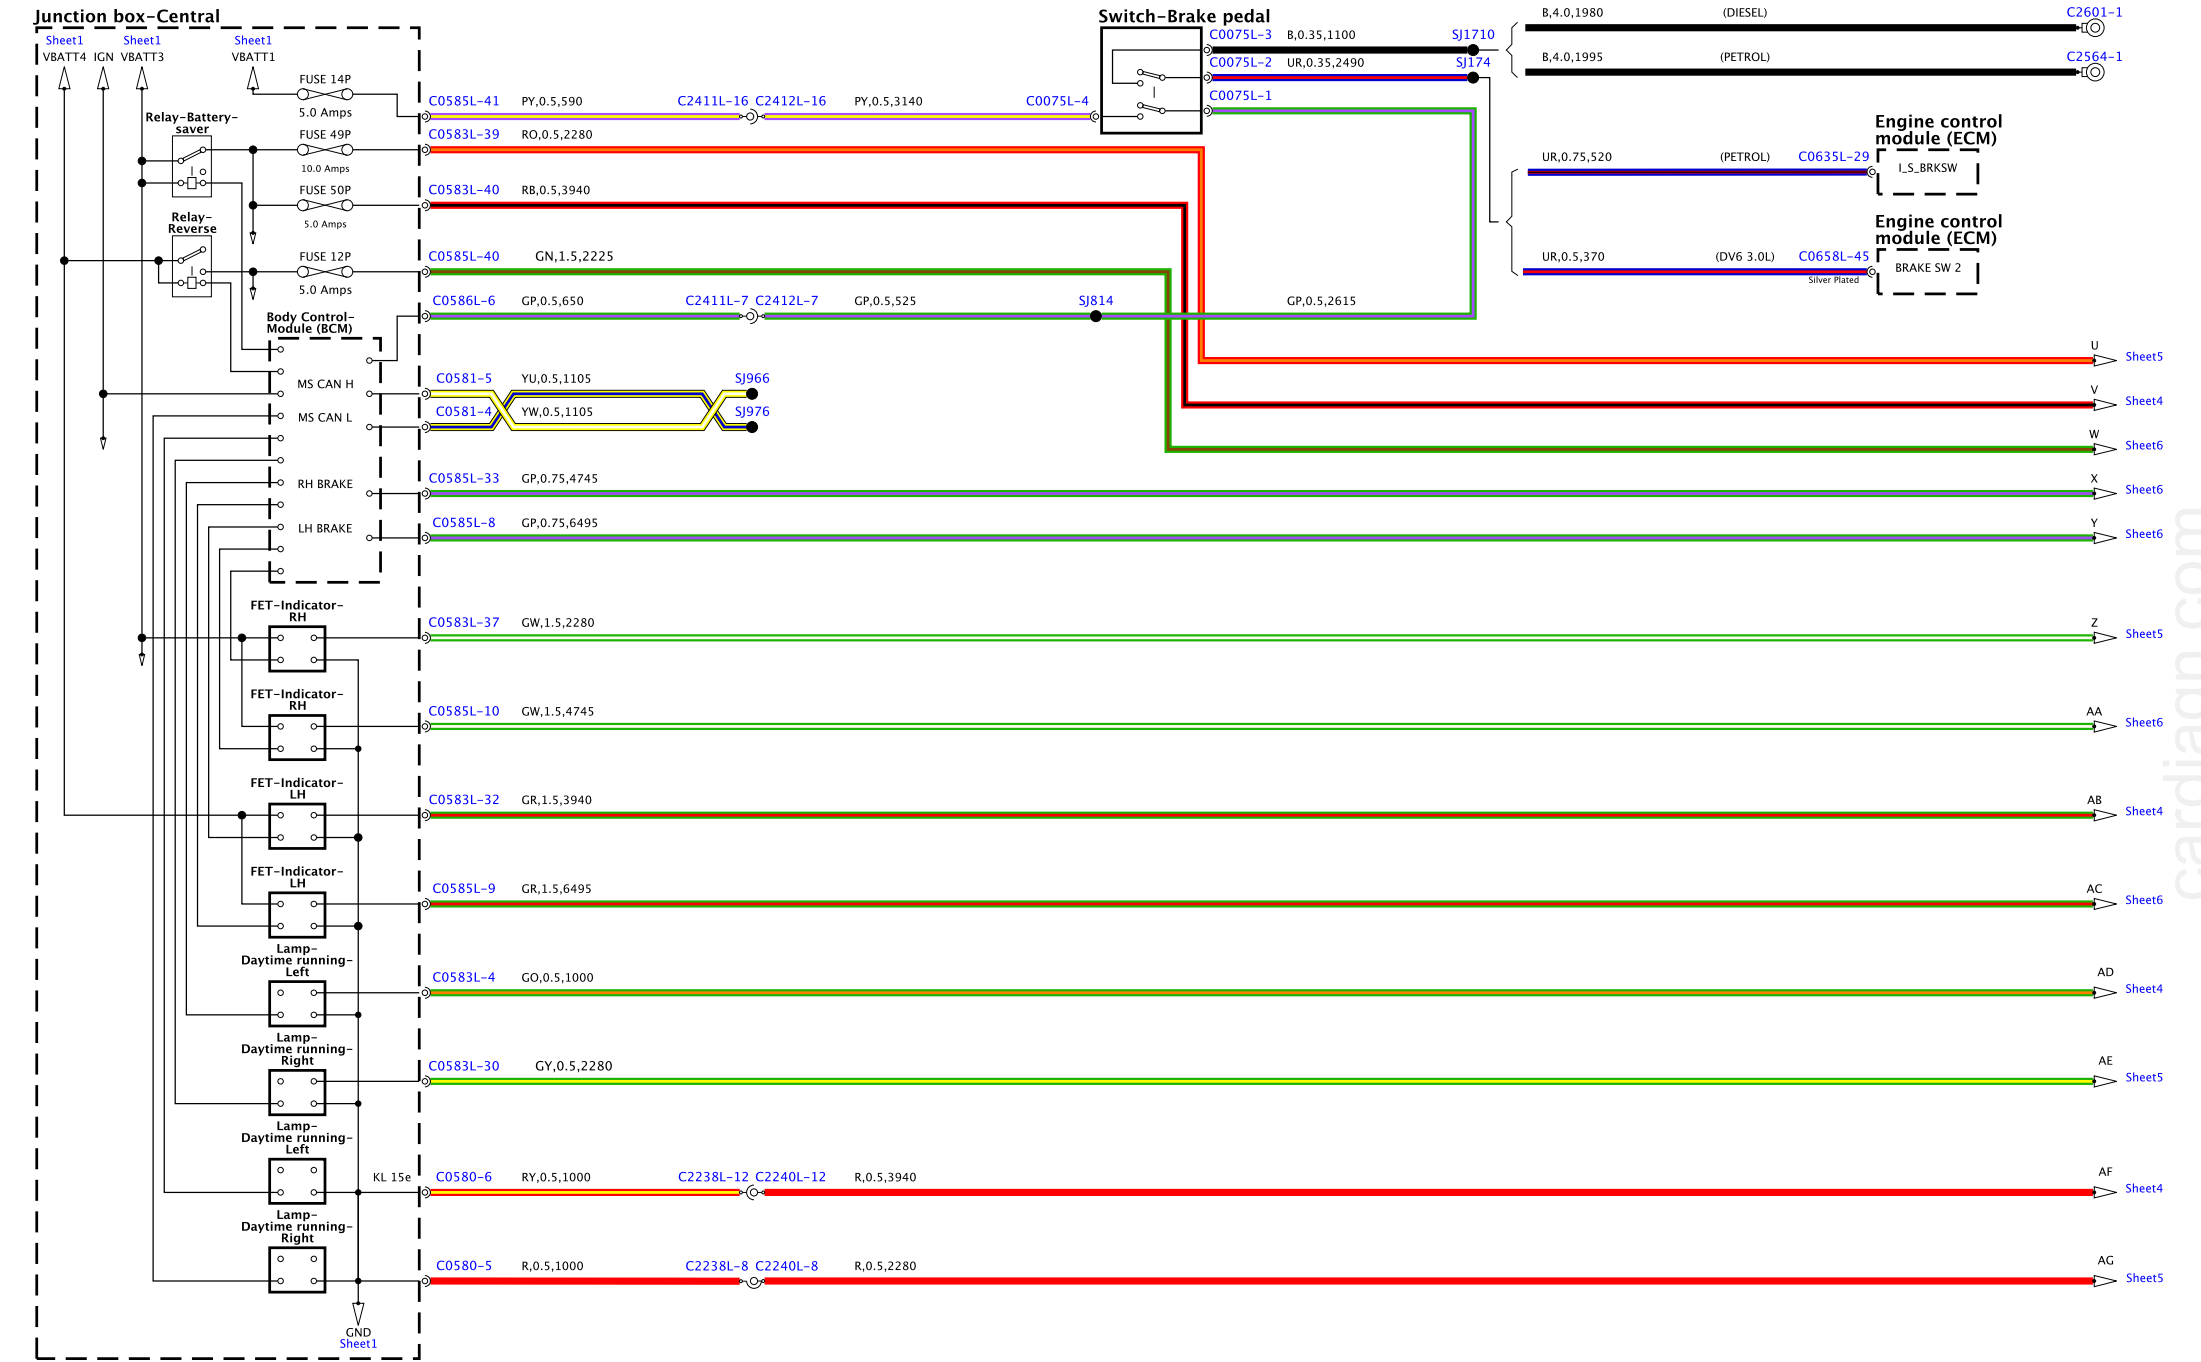

Pin22-70000-E-A-03-00-Service (319-1509-P51)

Junction box-Central

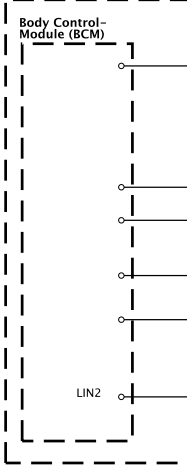

C0581-19 LGR,0.35,1610

C0581-22 UR,0.35,2545


C0581-24 UR,0.35,2545

C0581-7 GW,0.35,2545

C0581-6 GR,0.35,2545

C0581-12

Switchpack-Center Instrument panel

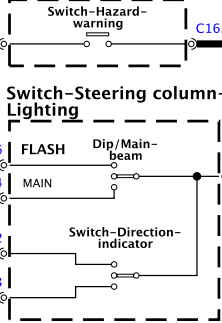

C1629SL-6

C1393L-6

C1393L-4

C1393L-2

C1393L-3

C1629SL-1

B,0.5,760

SJ662

B,2.5,925

C2630L-1

(CC)

C1393L-1

B,0.35,380

SJ663L

B,1.0,540

SJ660

B,2.5,705

C2627L-1

(CC)

B,0.5,550

G,0.5,505

SJ223L

G,0.35,420

C1167L-19 C1165-19

G,0.35,85

SJ869

G,0.35,6660

C0961S-2

C0961S-3 B,0.5,2805

C2714-1

(CC)

G,0.5,2420

C1168L-9 C1166L-9

G,0.5,2400

SJ224

G,0.5,4775

C0961S-1

PW,0.75,100

C2244L-12 C2242L-12

PW,0.5,3200

SJ246

PW,0.75,3590

SJ2010

YU,0.35,1965

C0698S-1


C0698S-8

SJ2011

YW,0.35,1965


C0698S-7

Sensor-Rain/light



C0698S-3 B,0.5,2740

Module-Control-Transfer case




C3029L-4 YB,0.5,240

C3029L-1 YN,0.5,270

SJ786

SJ776

TCM and Control Valve Body



C0193-5 YB,0.5H,1030

C0193-6 YN,0.5H,1030


SJ720

SJ721

SJ852

YB,0.5,510

Instrument cluster

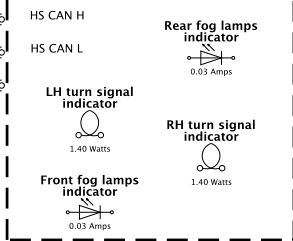

SJ862

YN,0.5,510

C0230-5

SJ661


B,0.5,590


C0230-9


B,2.5,665

C2628L-1

(CC)

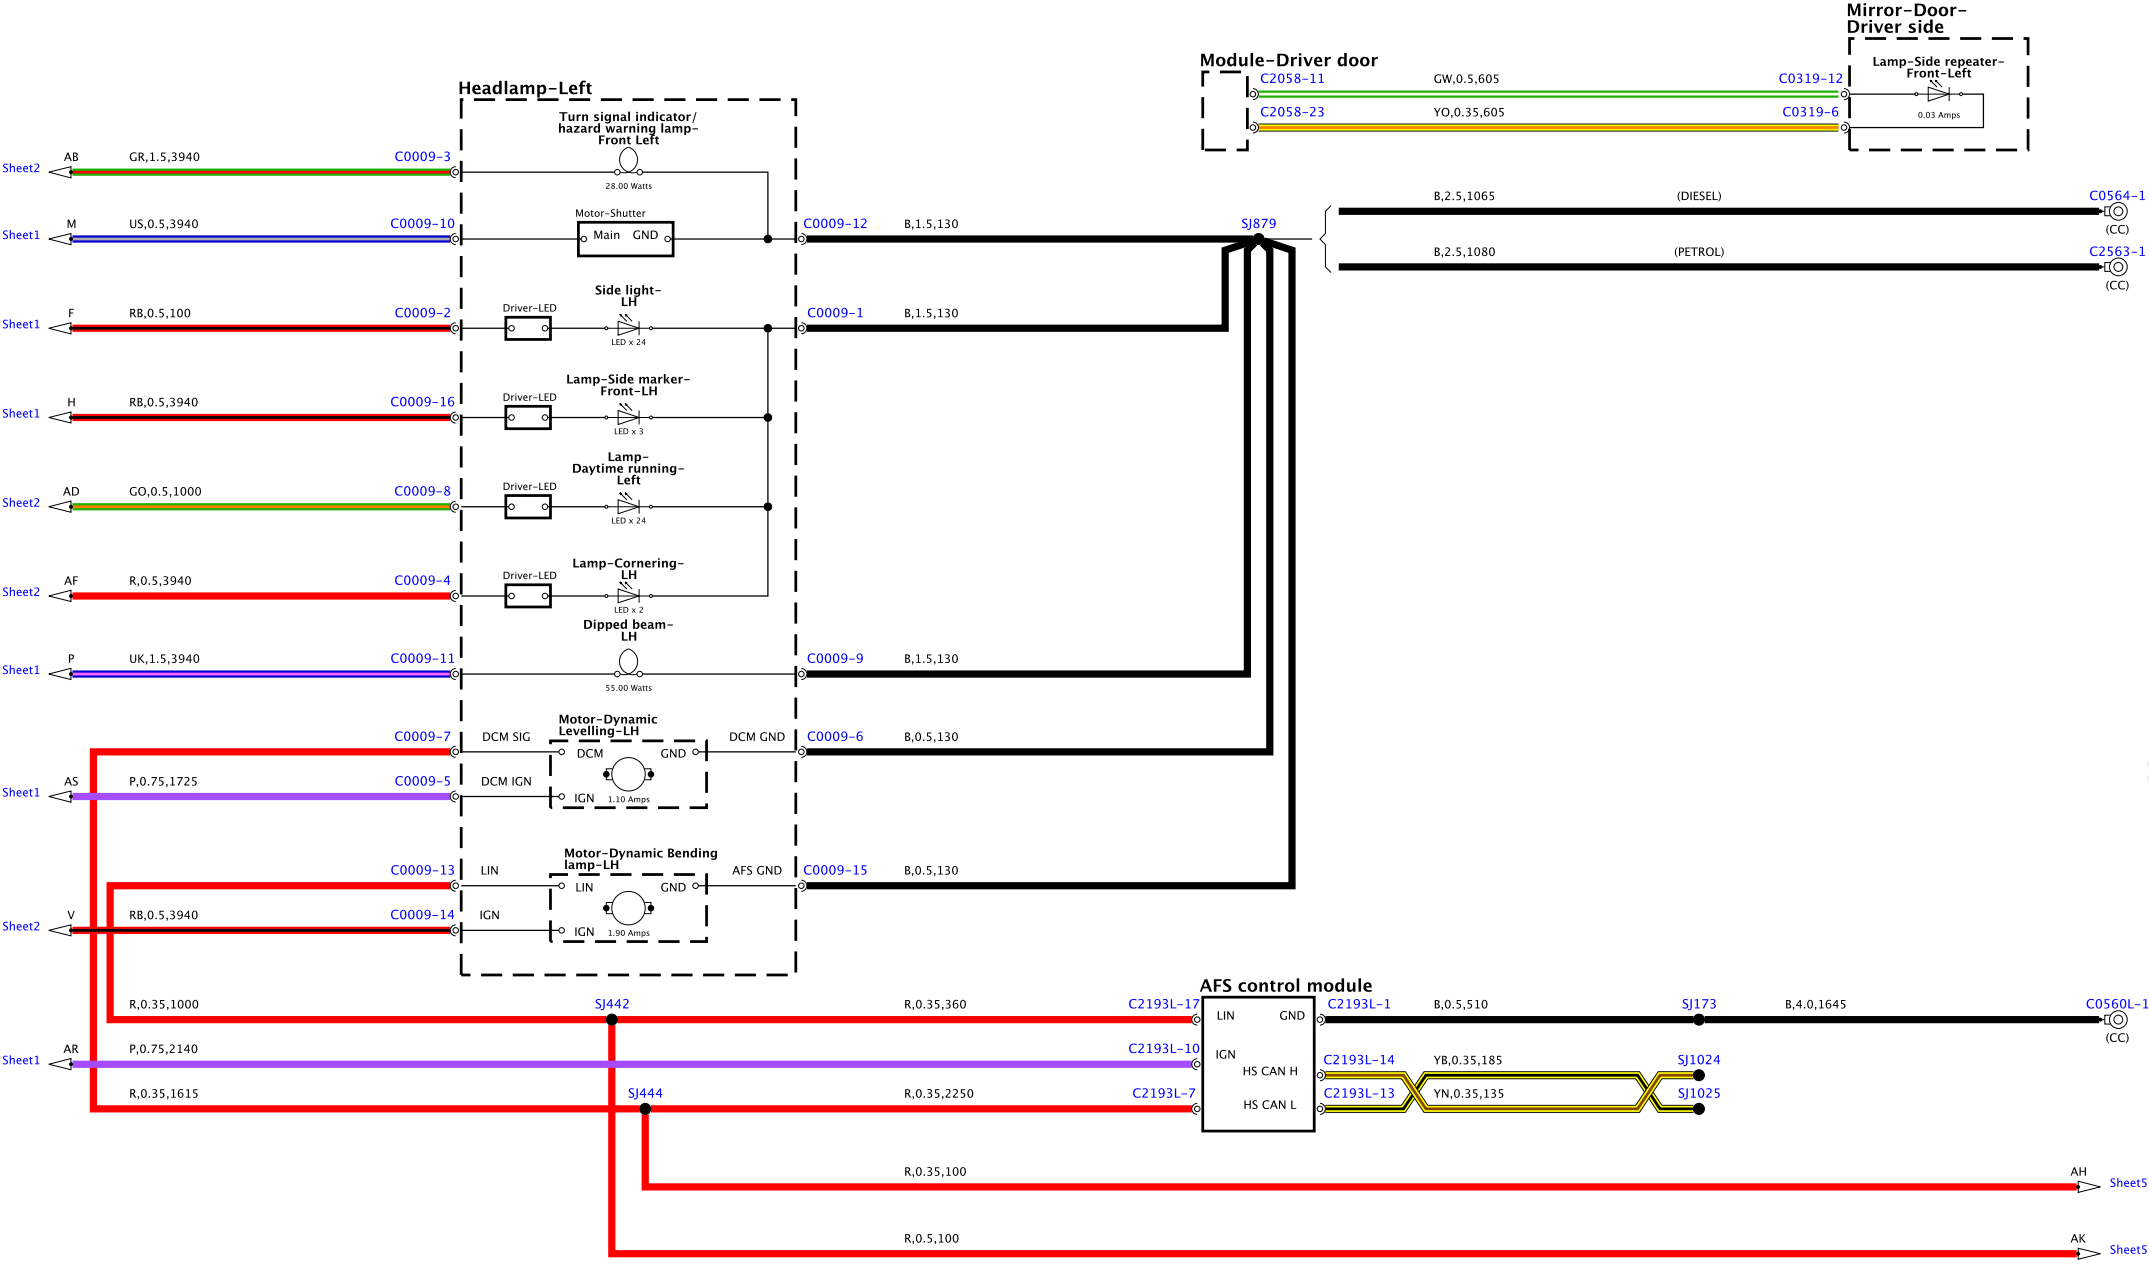

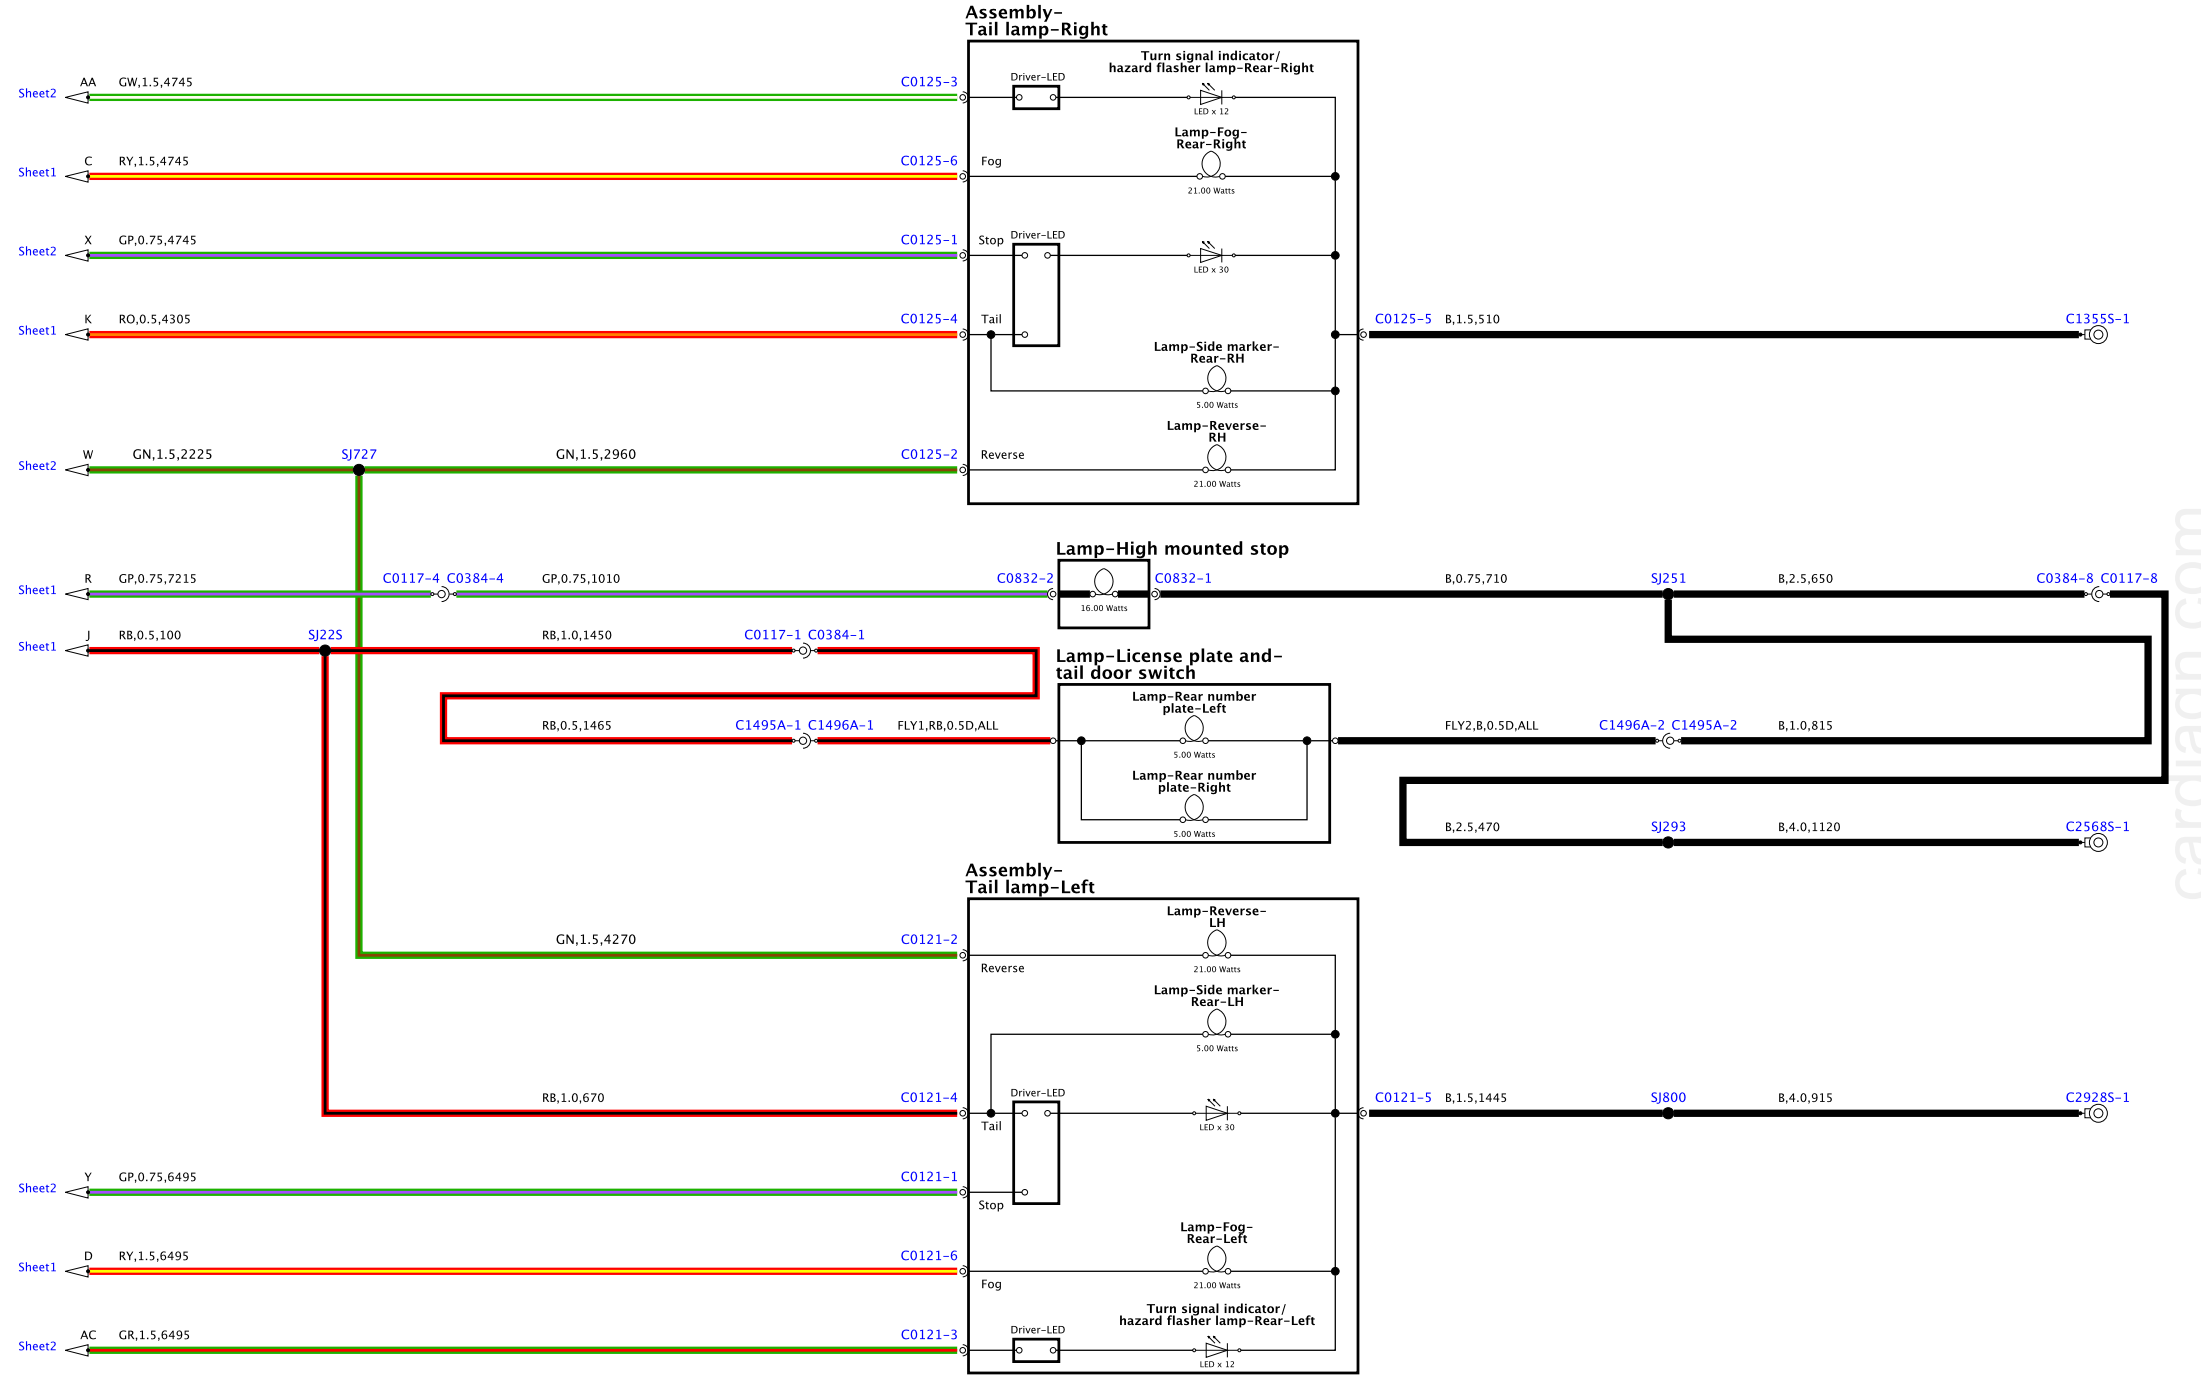

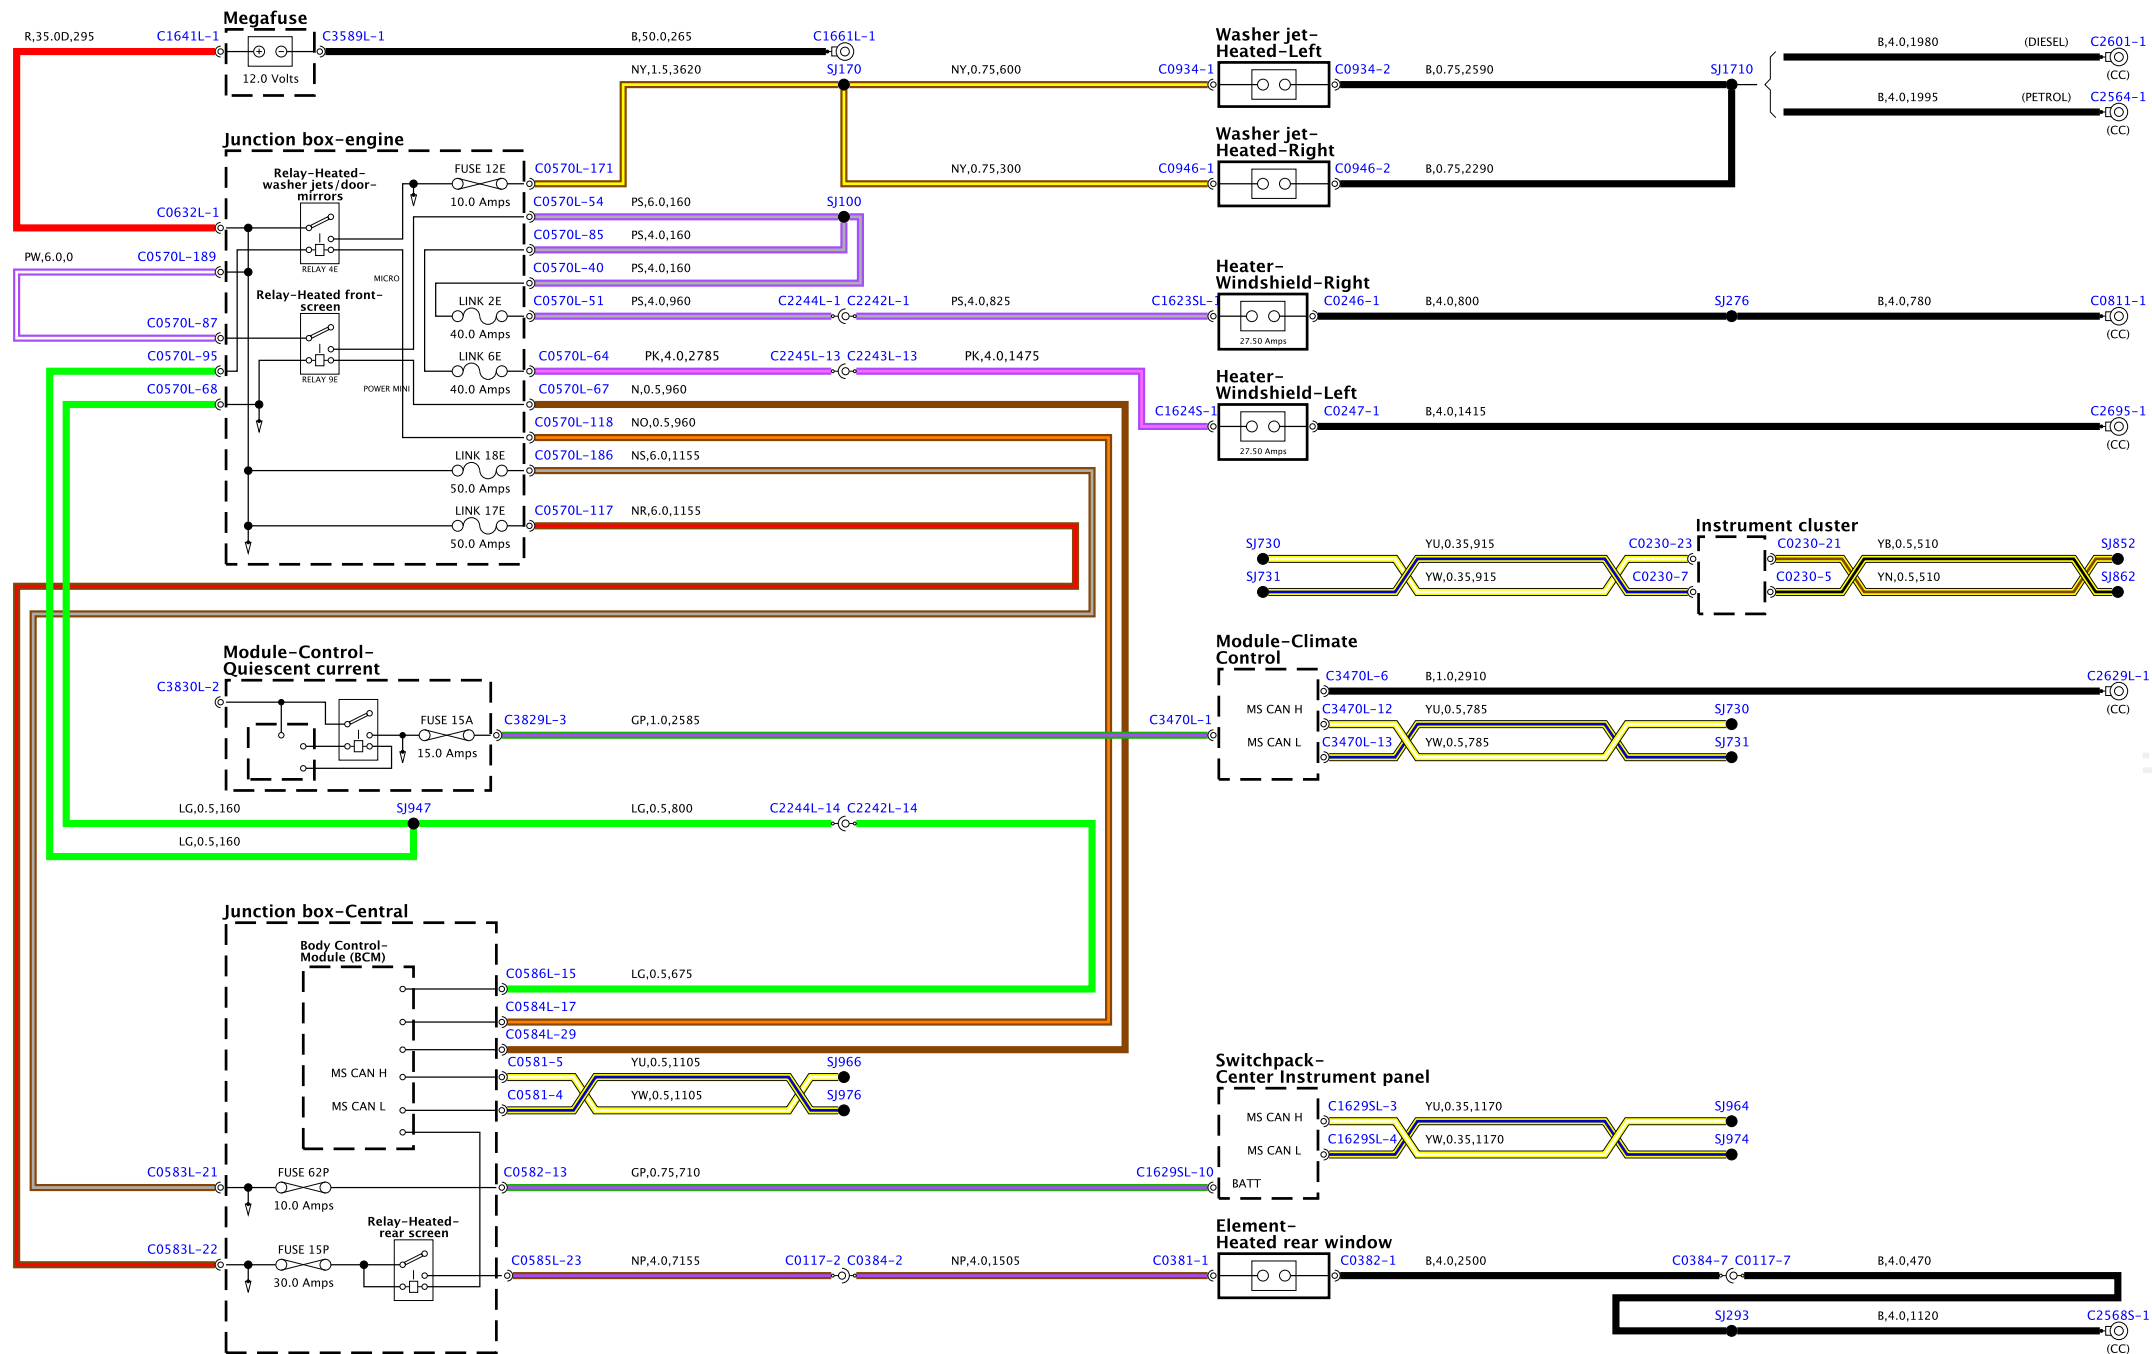

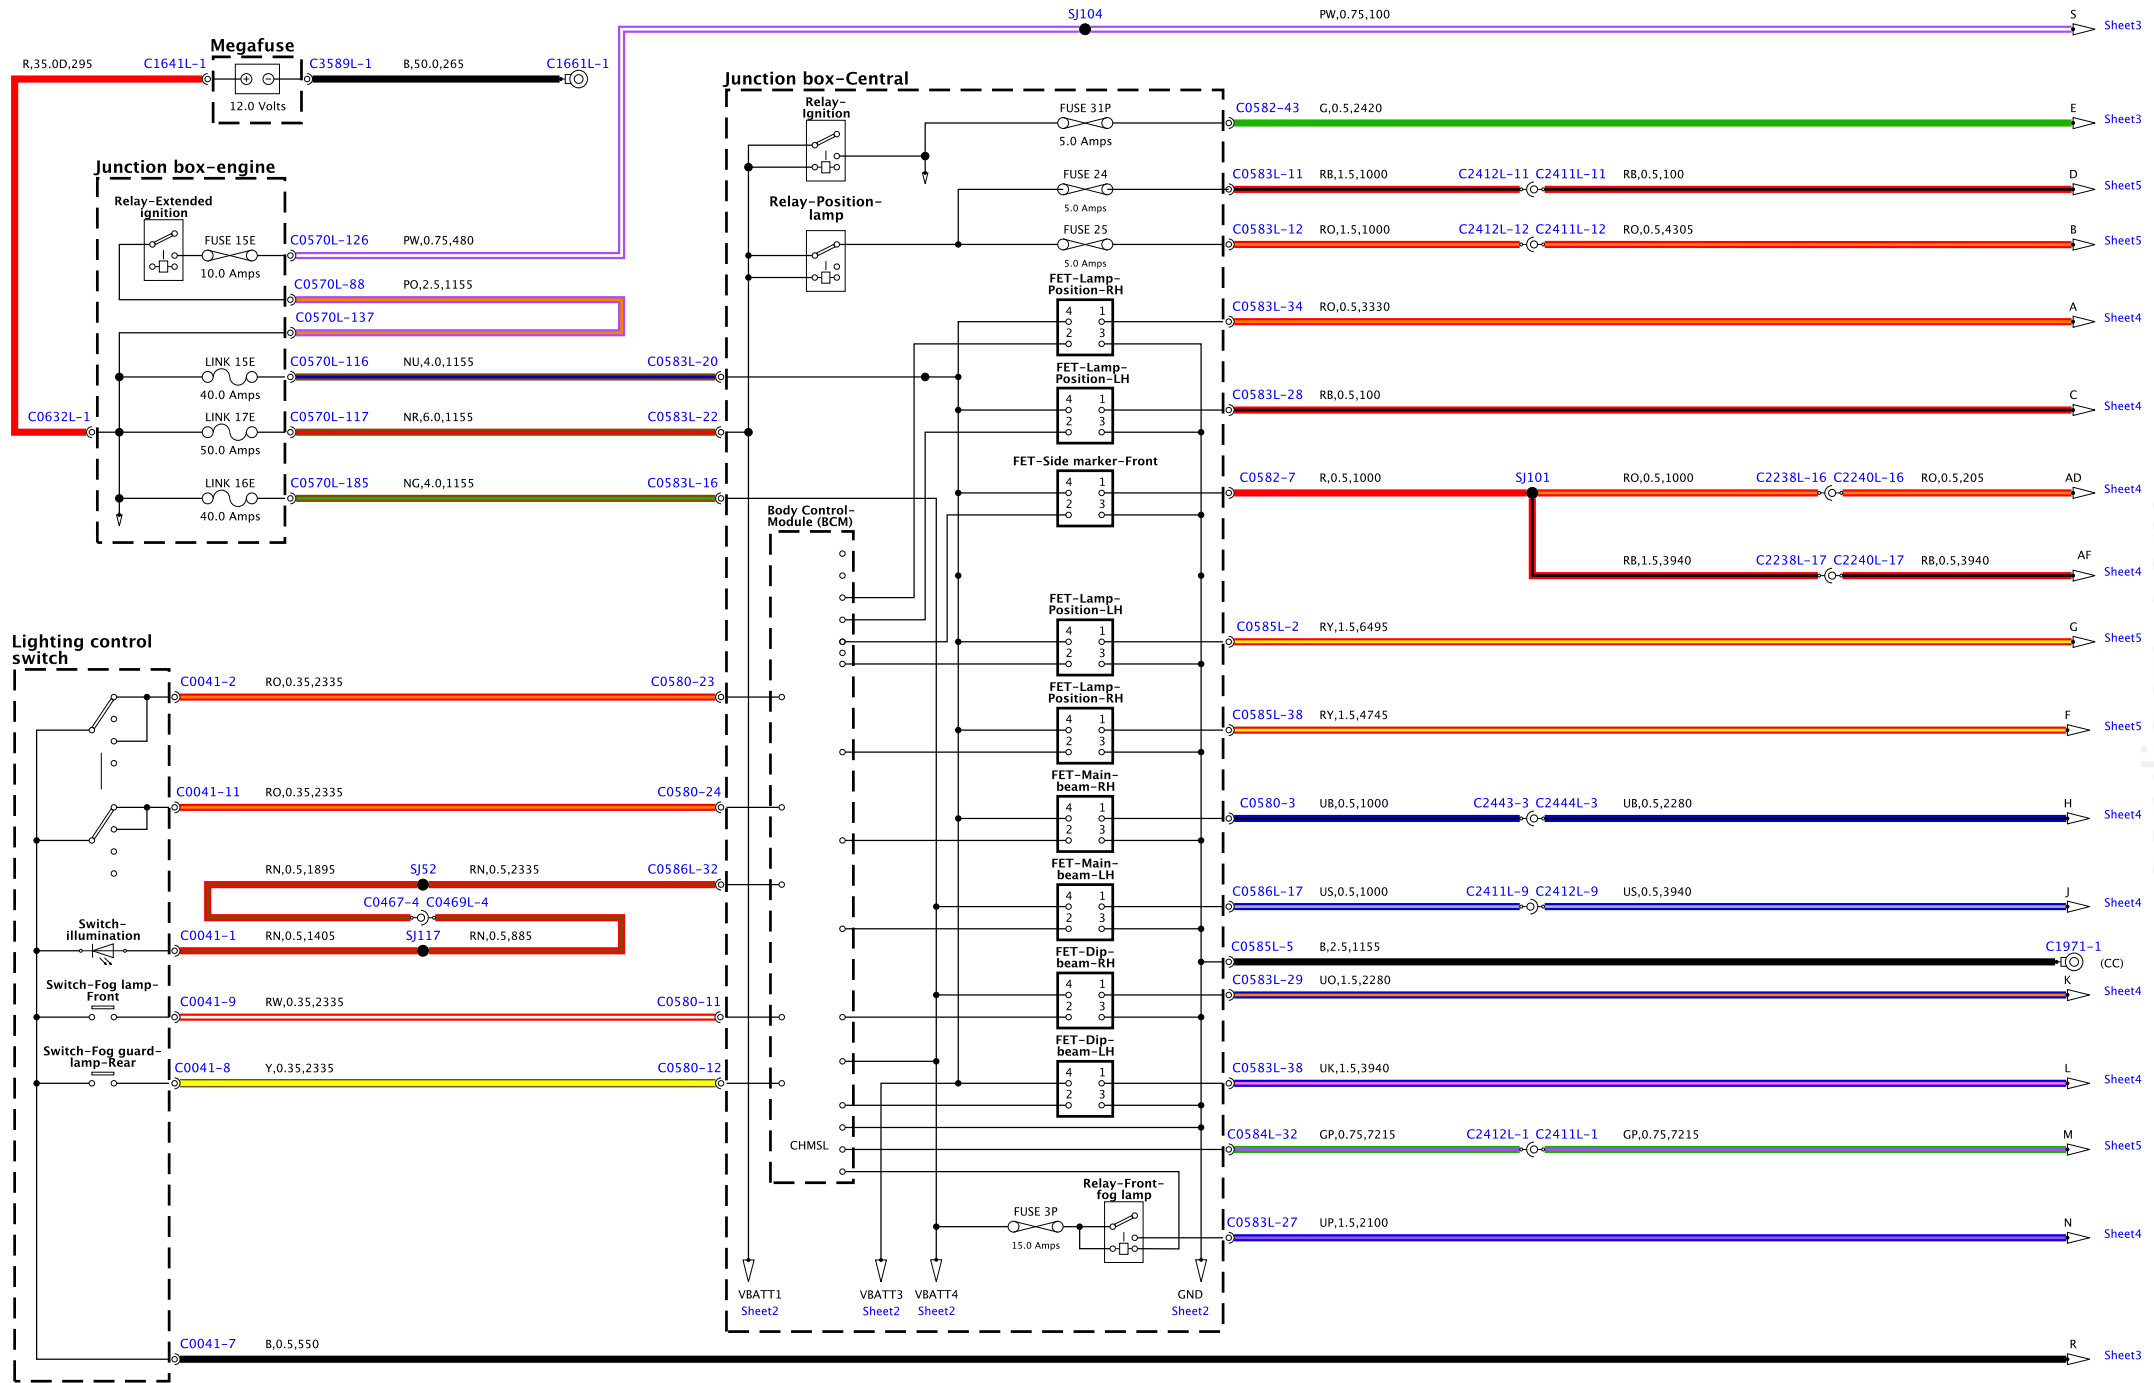
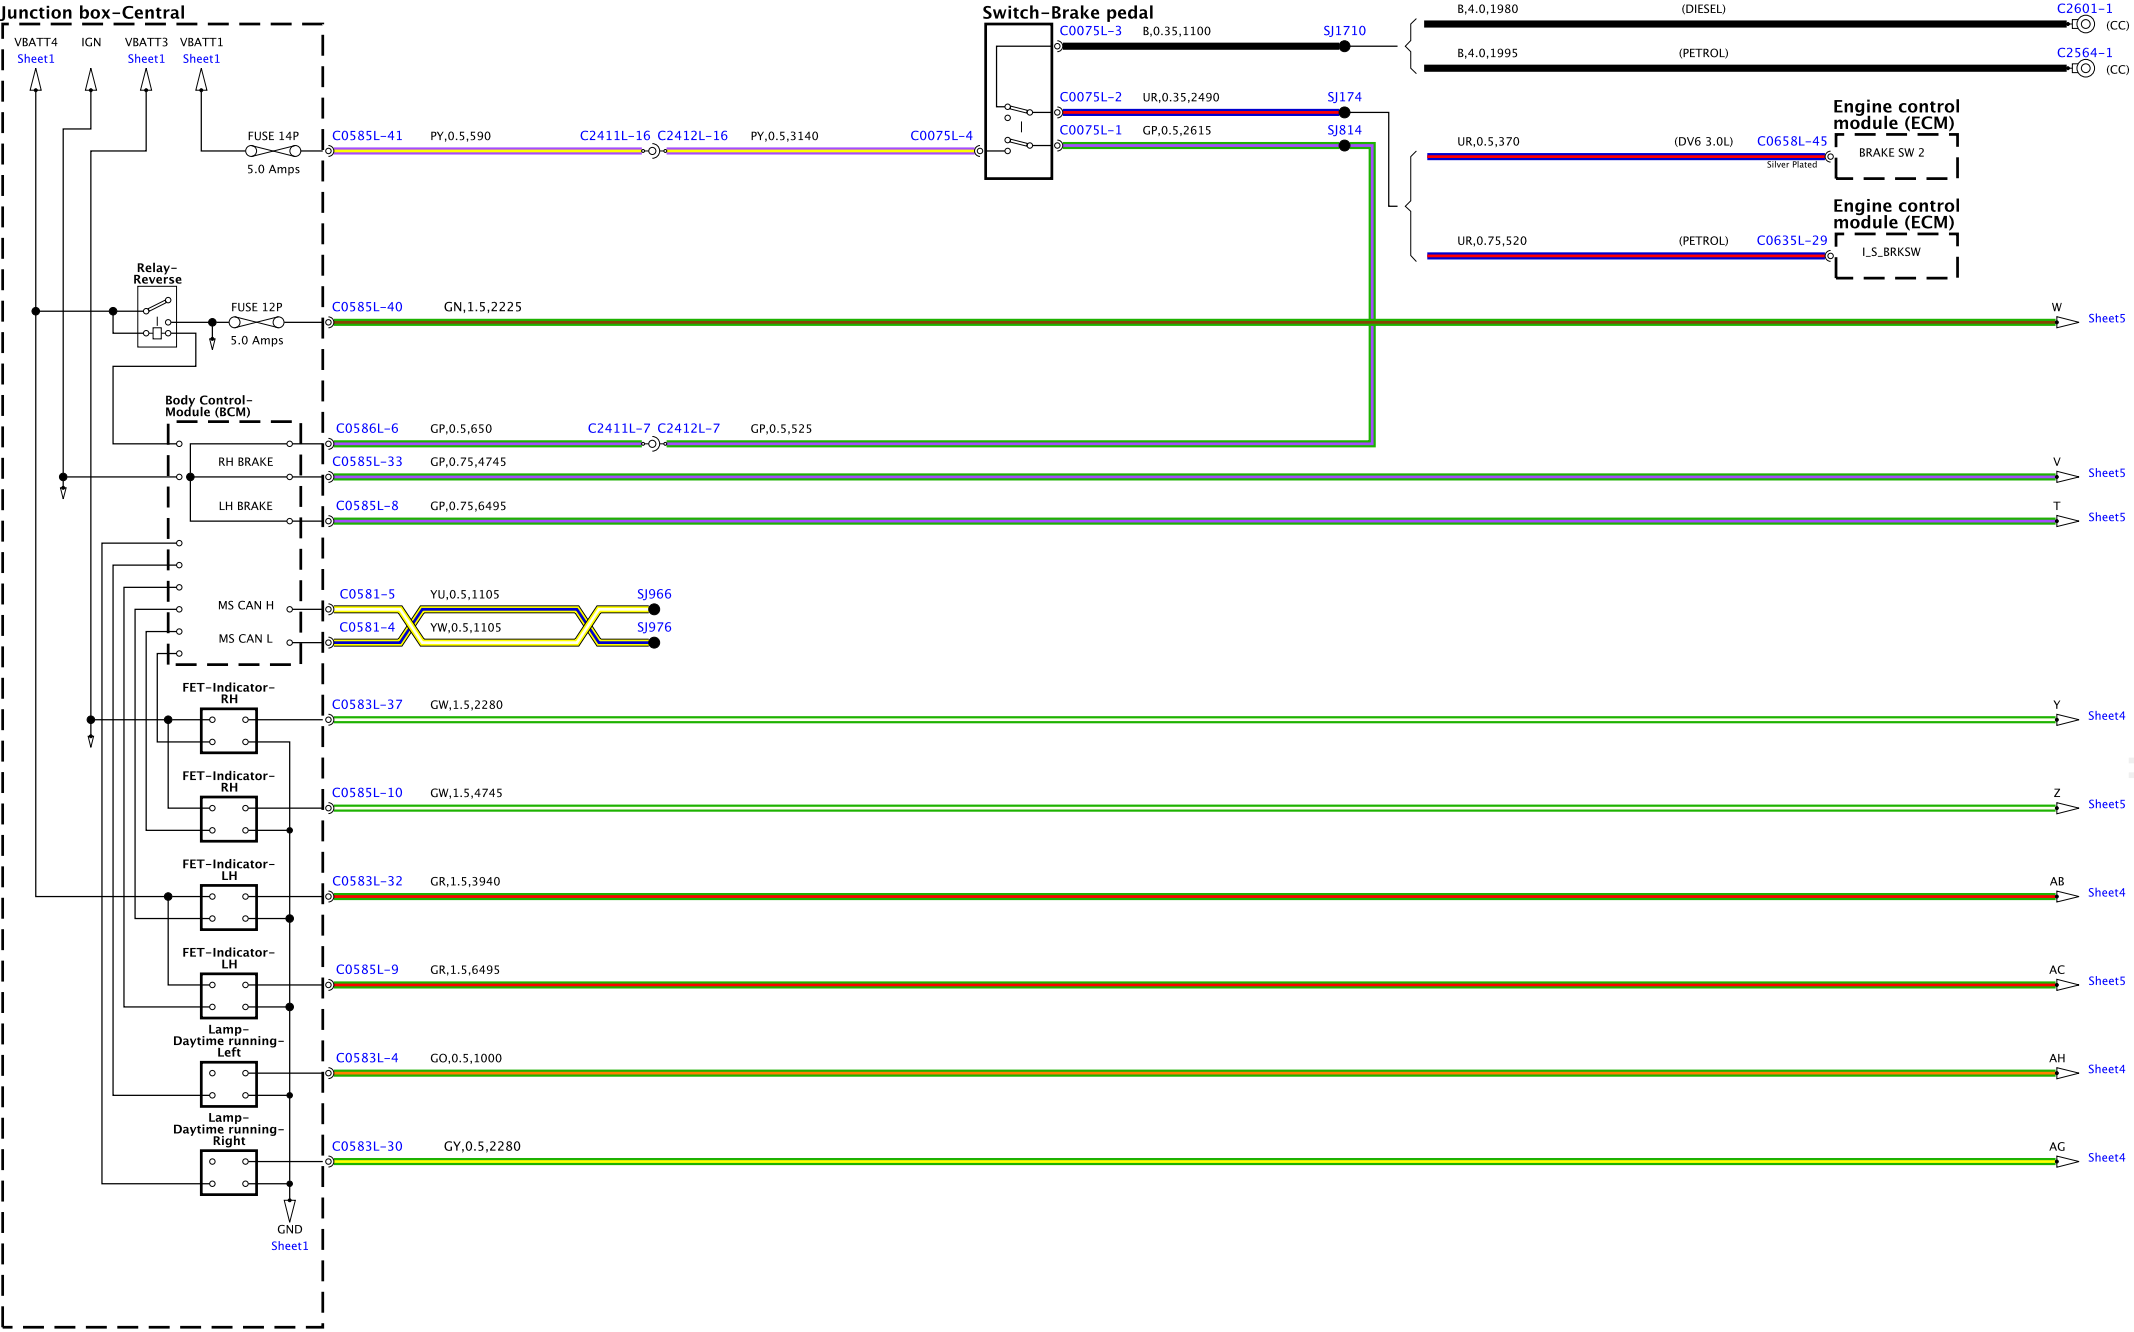
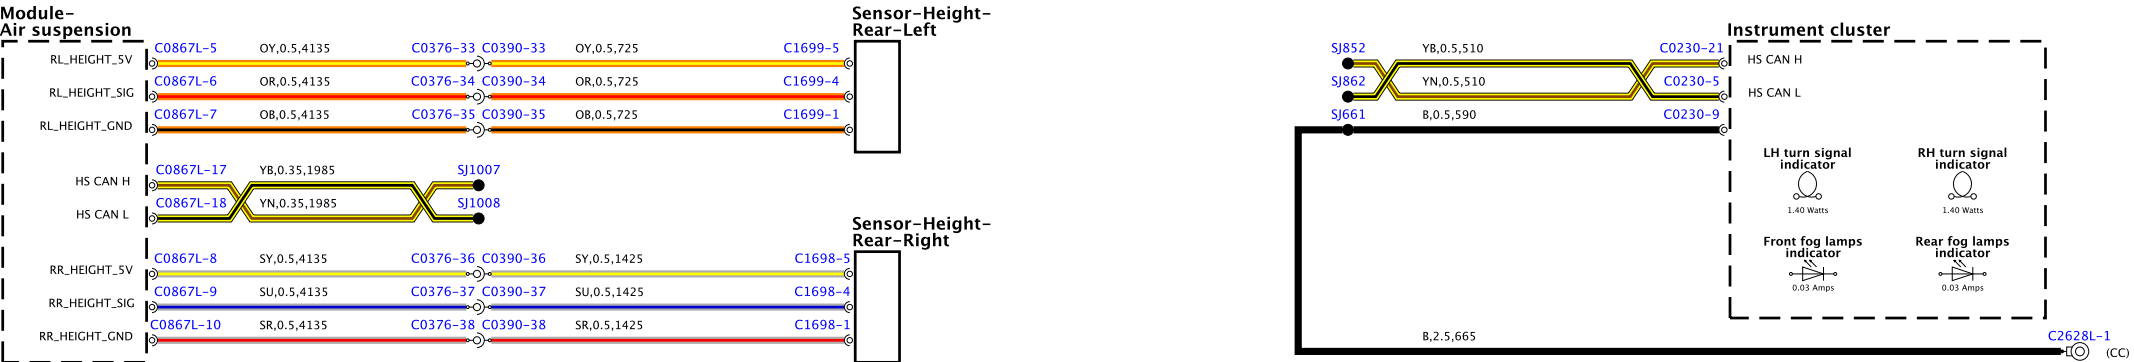
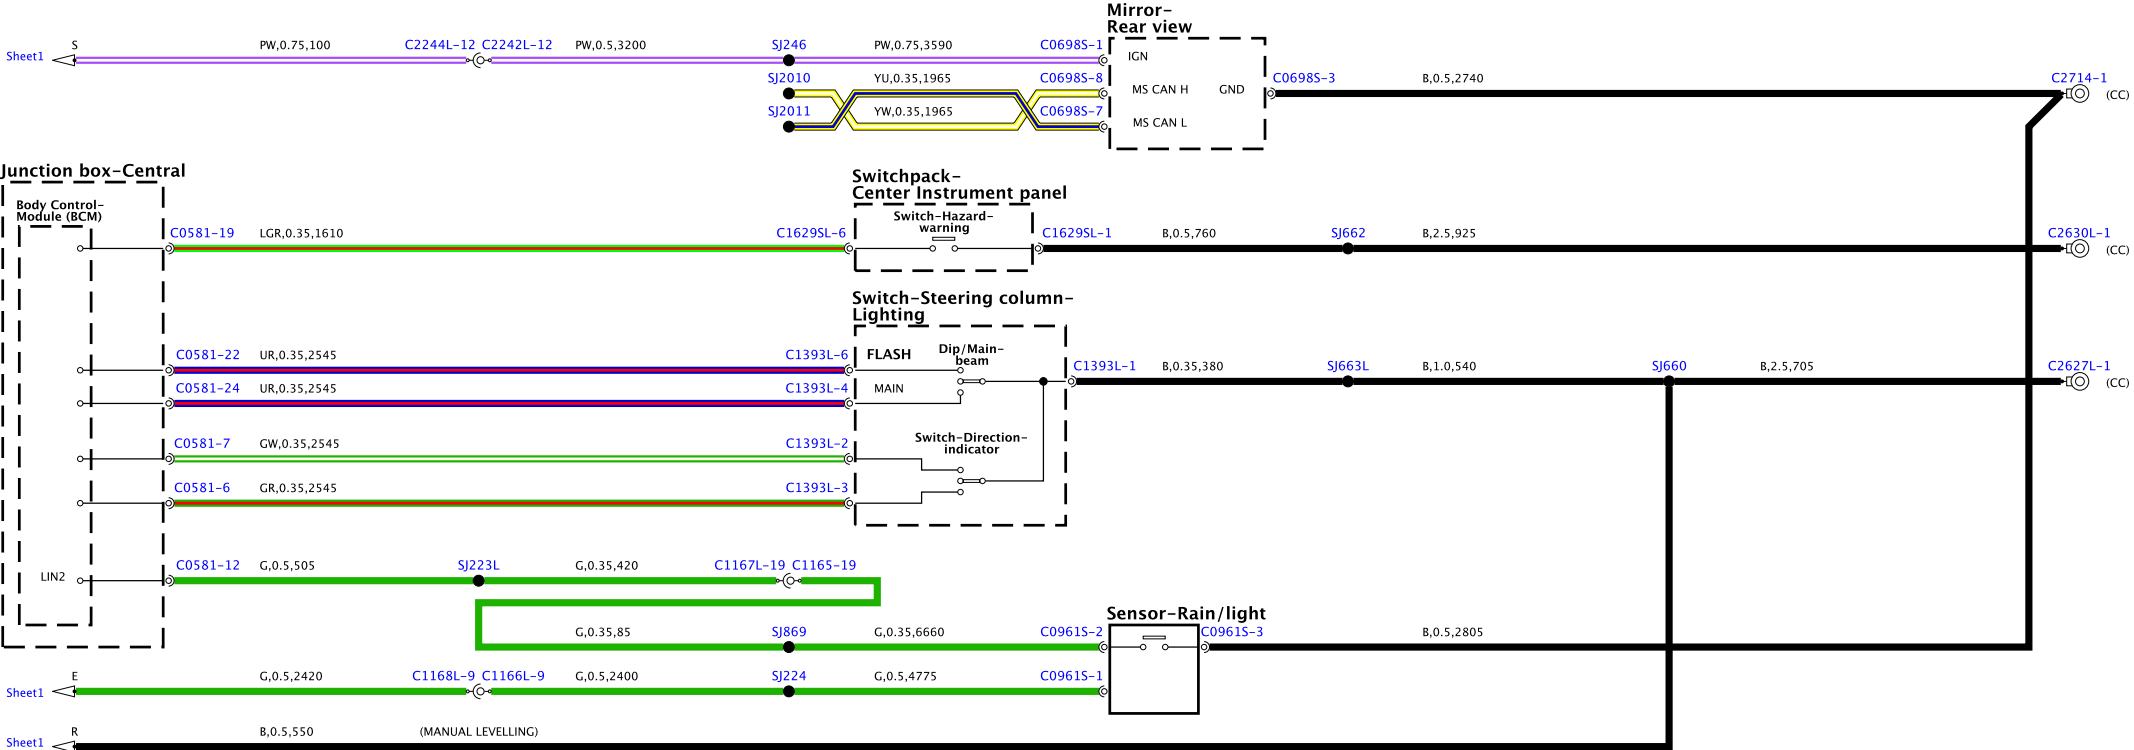
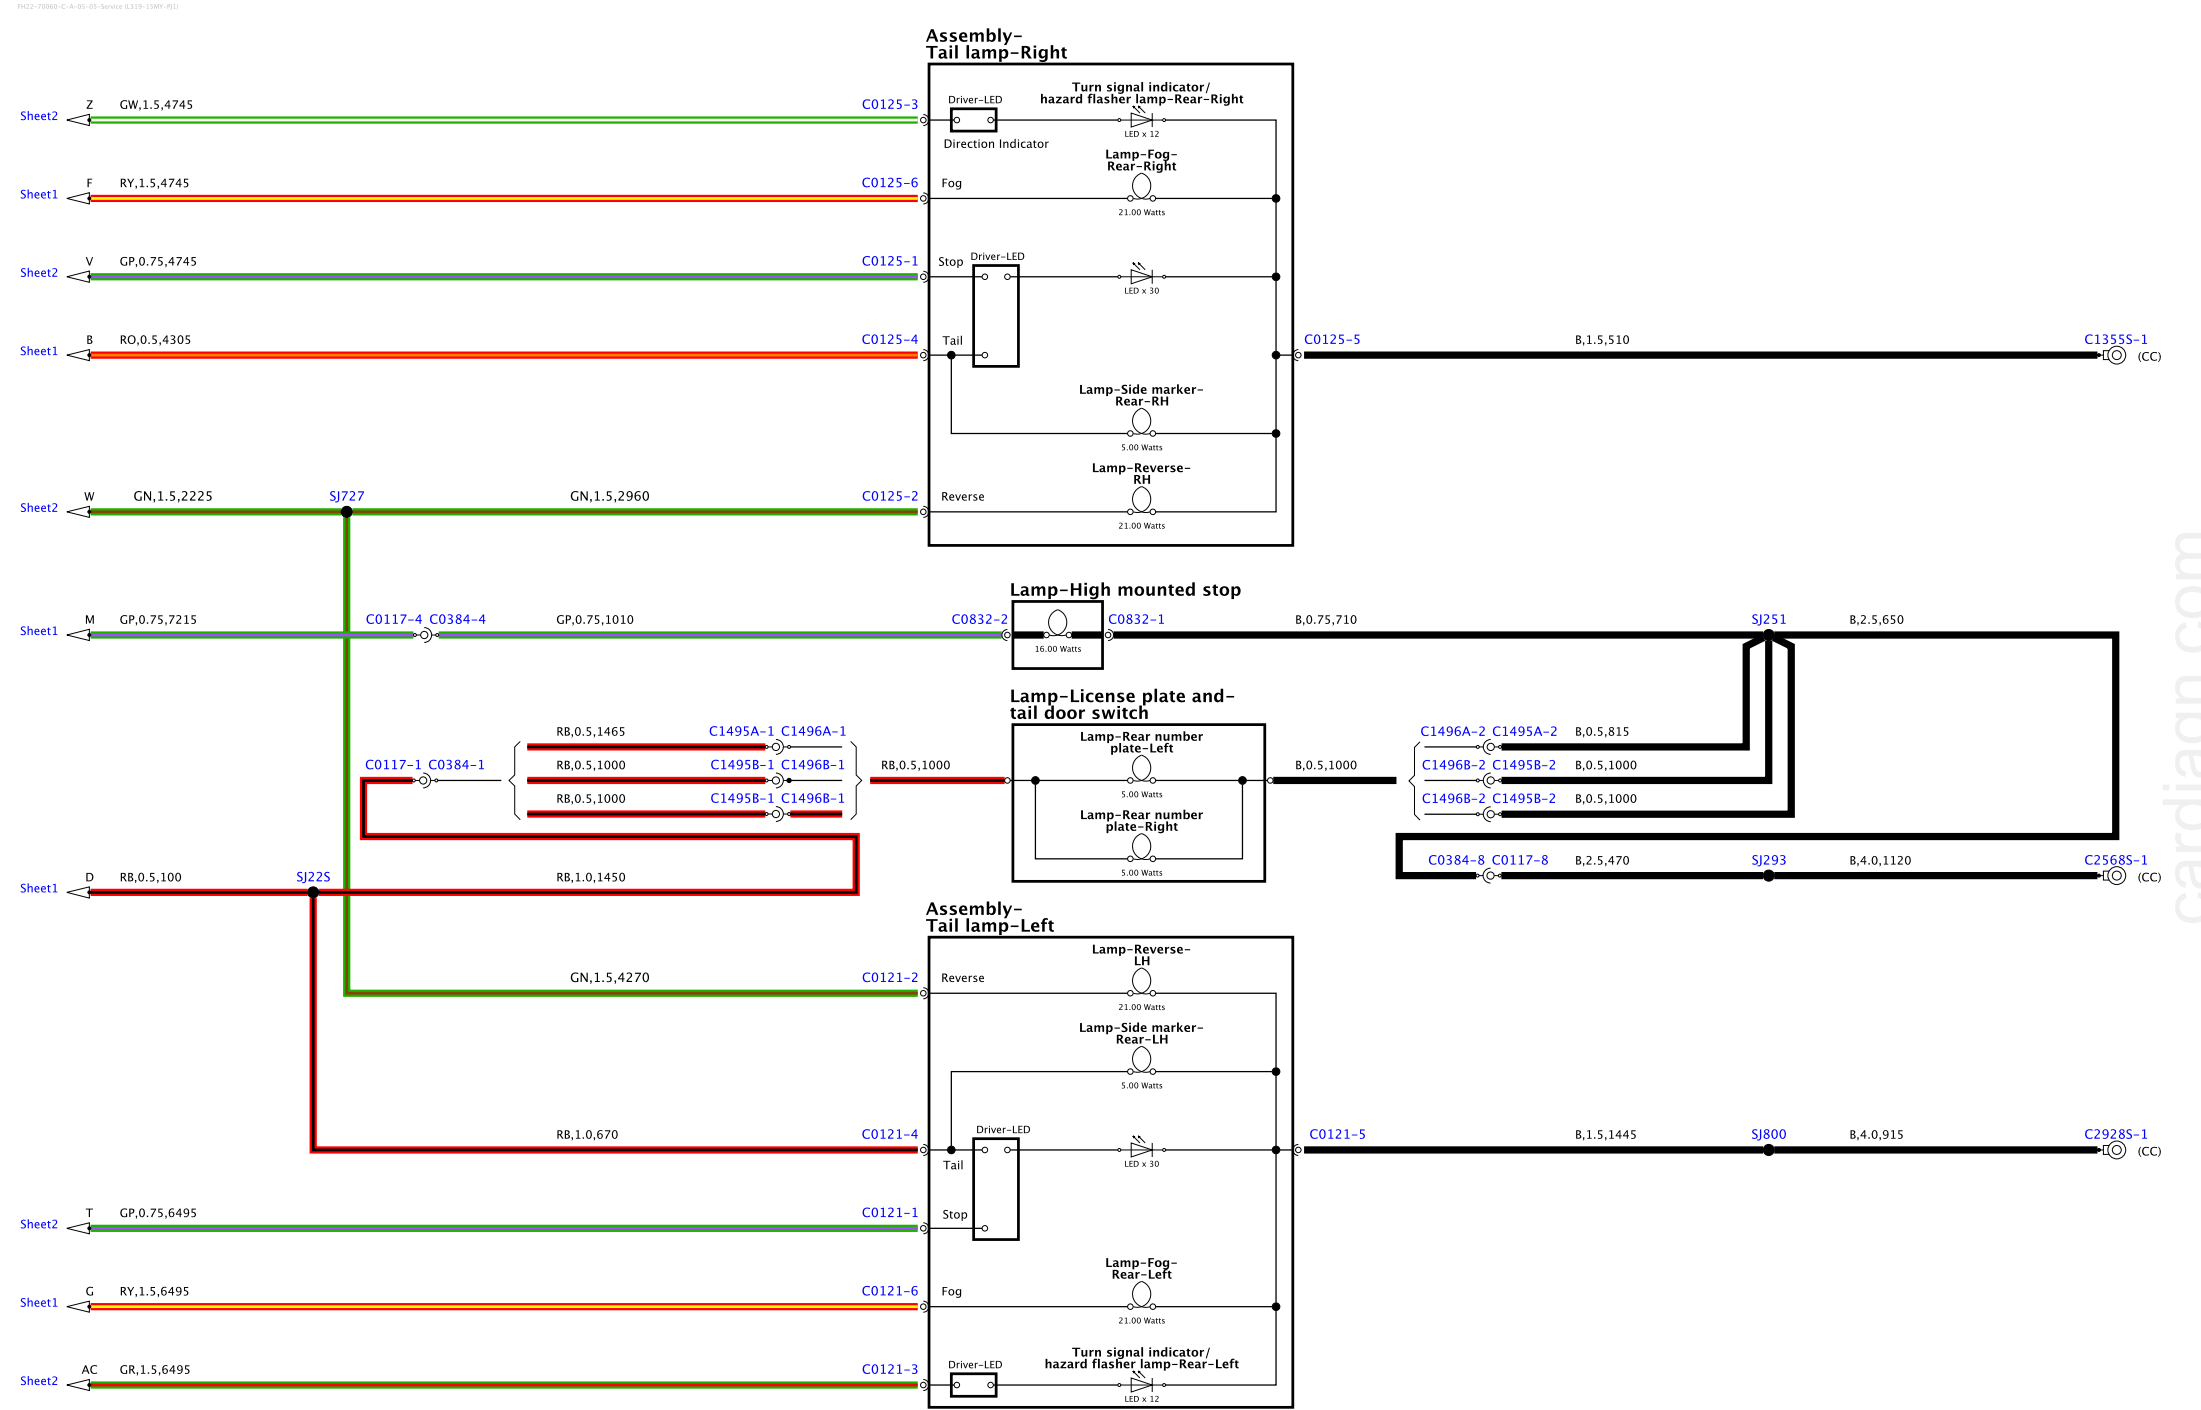
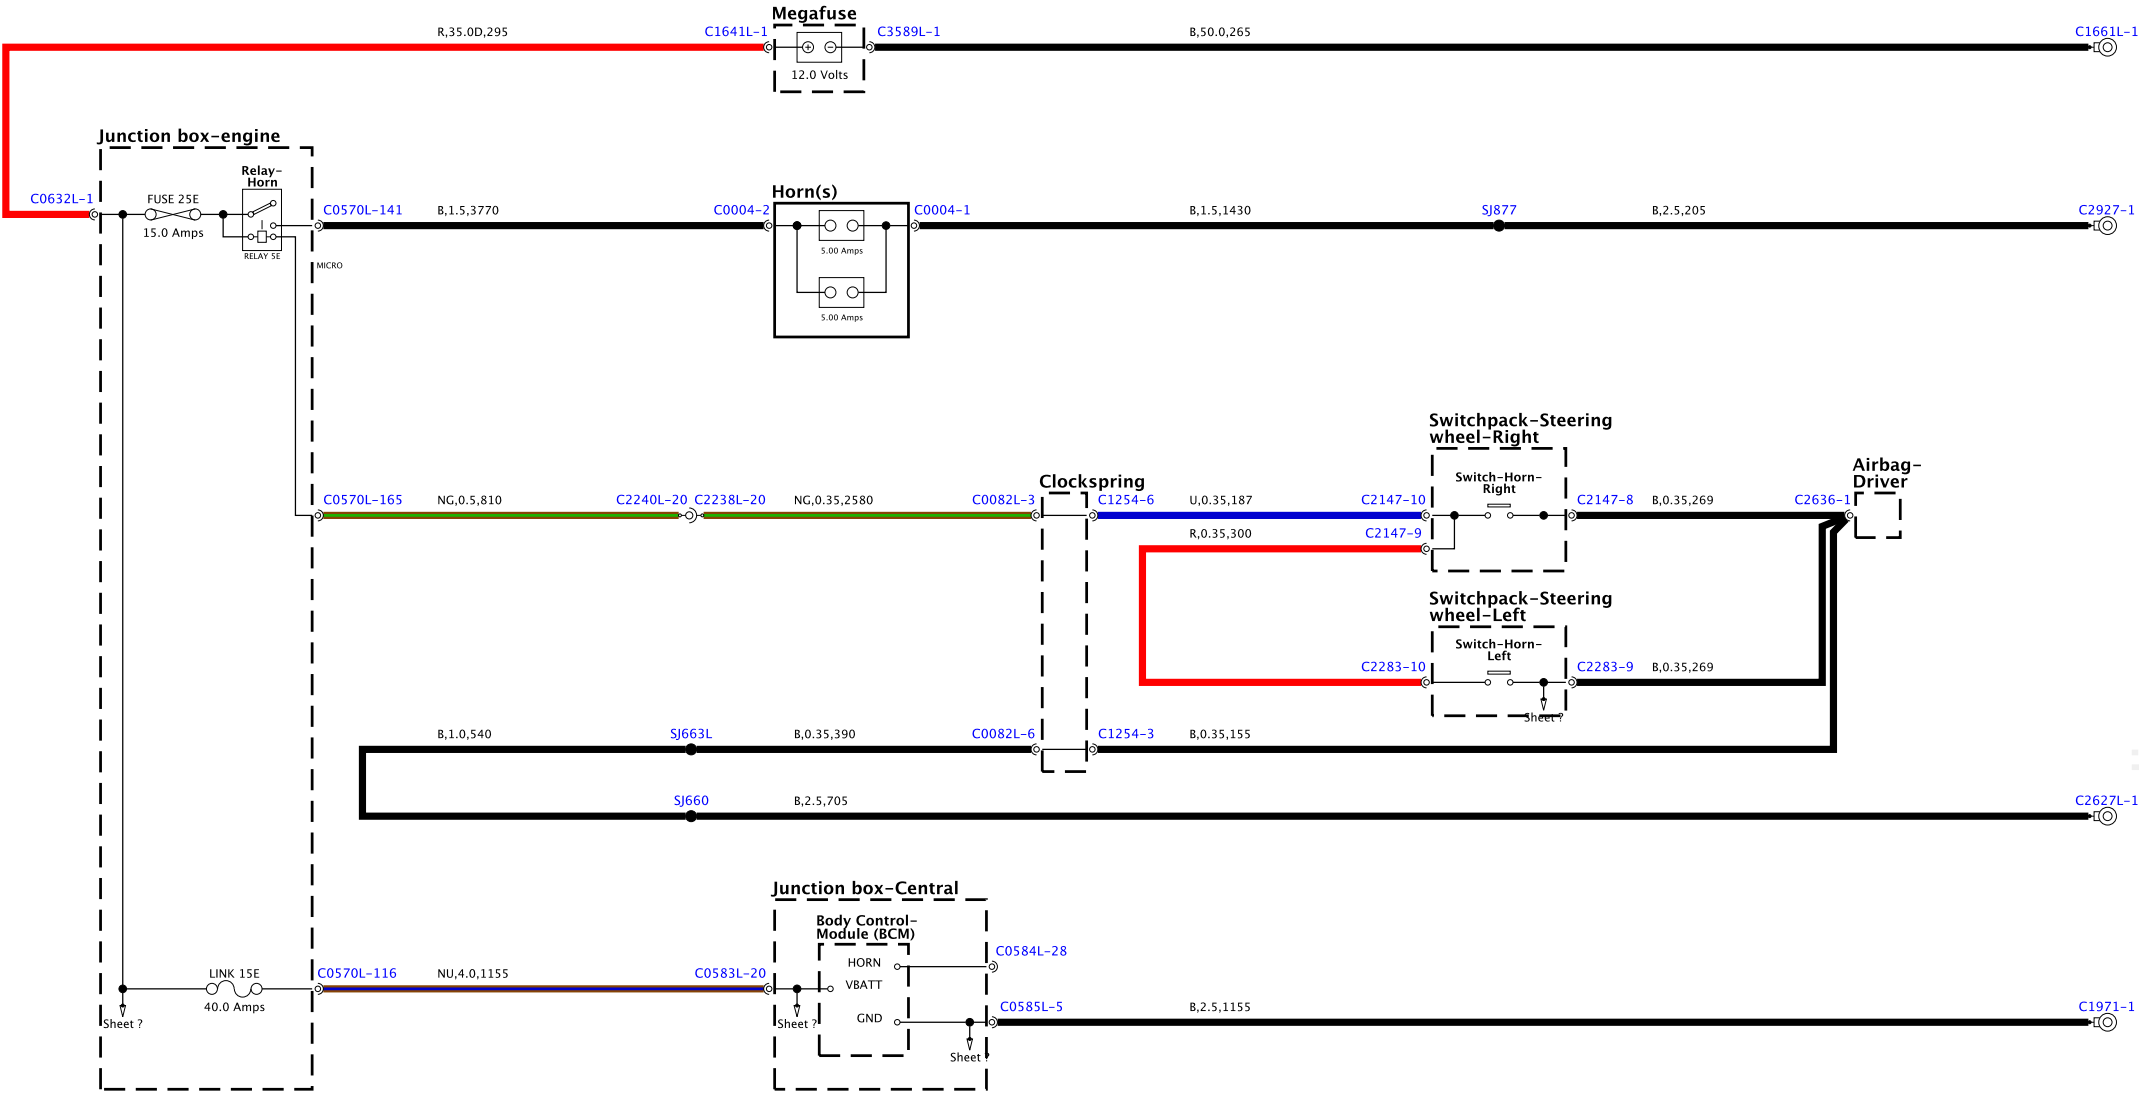


FIG22-70000-C-A-02-05-Service (0310-13M1-R1)









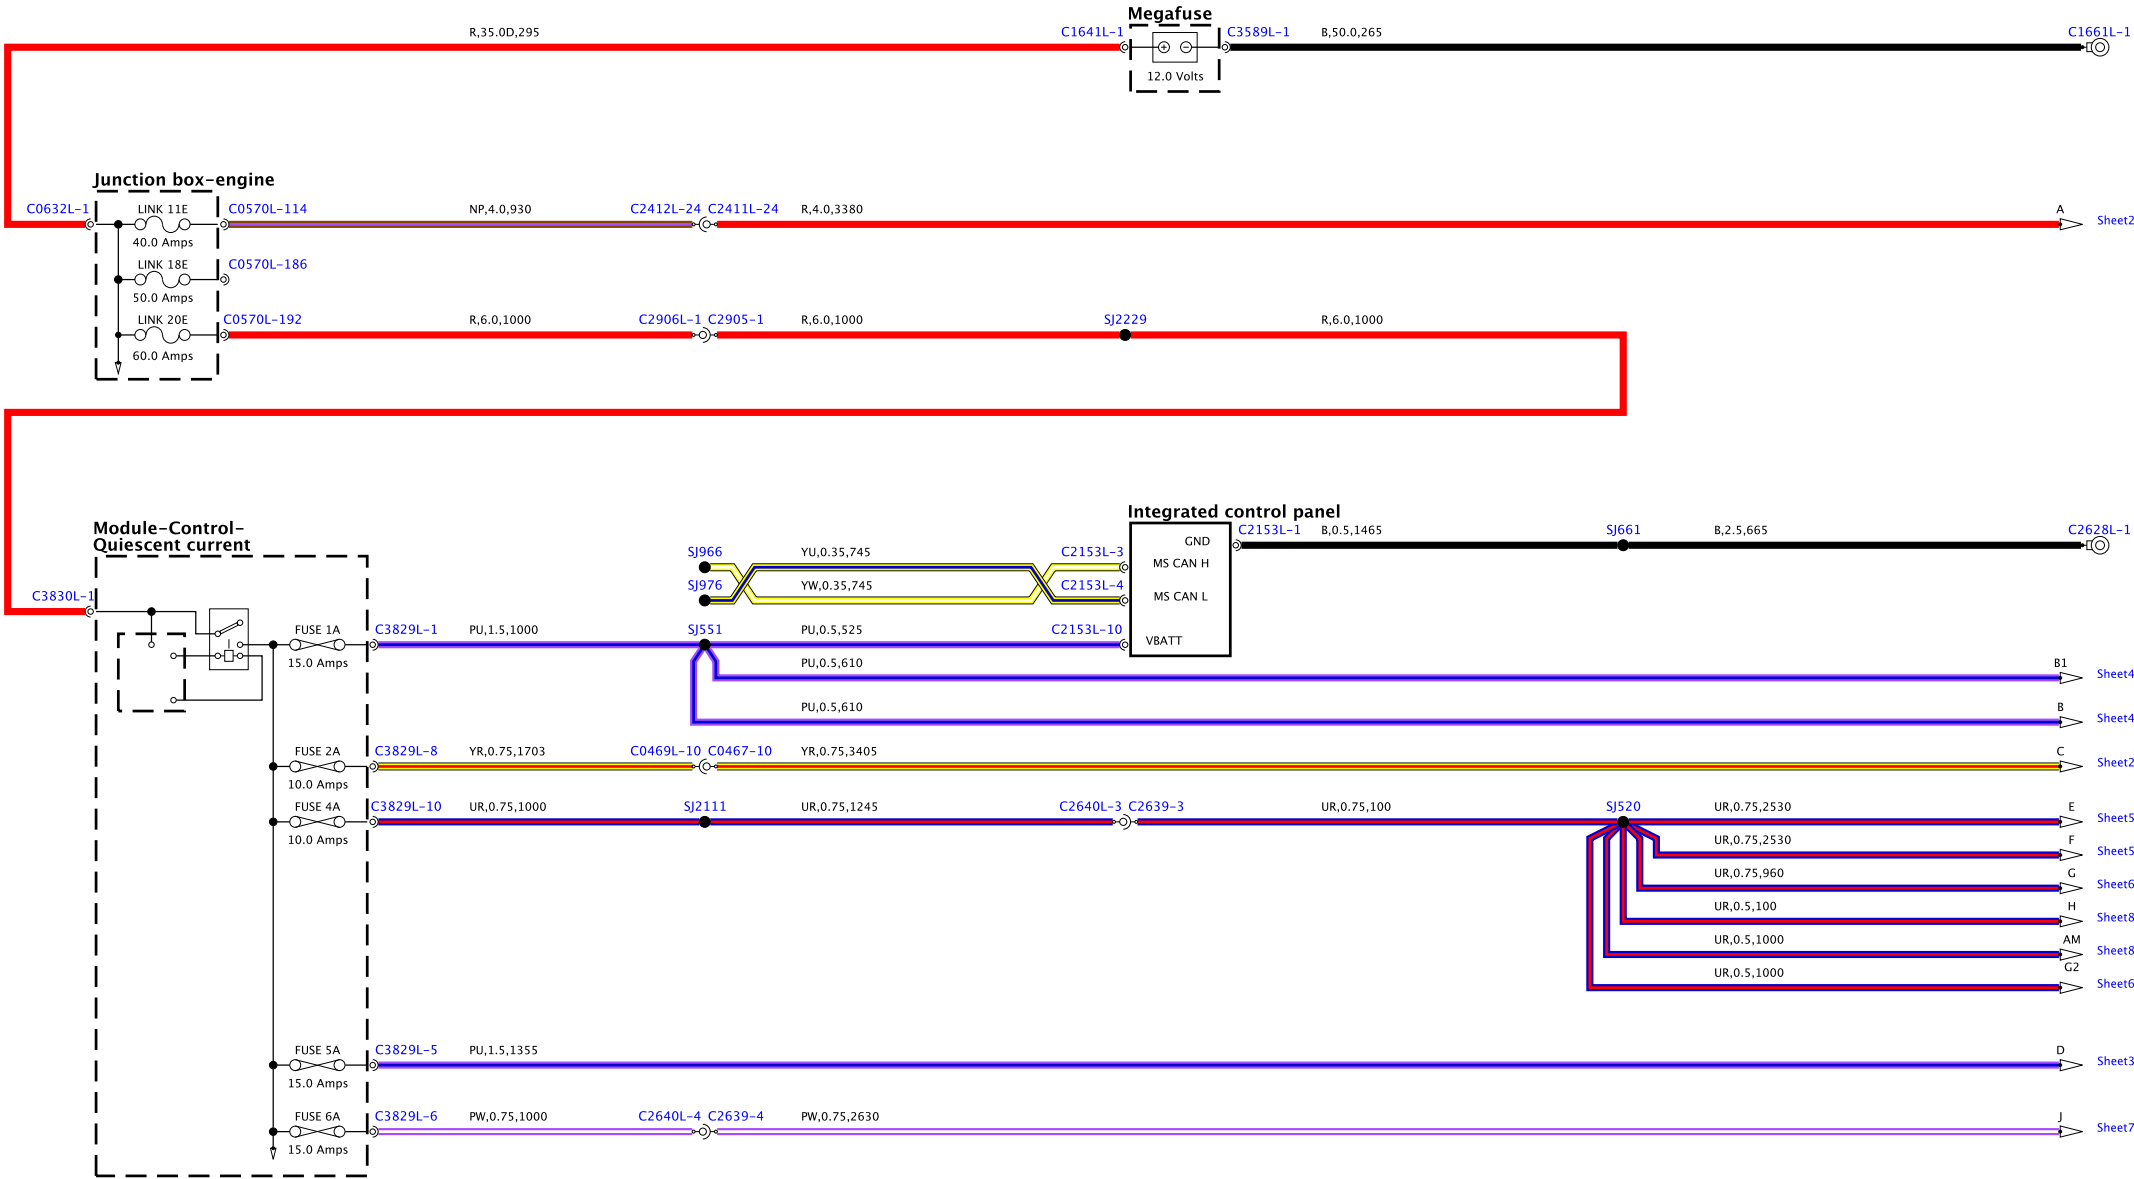
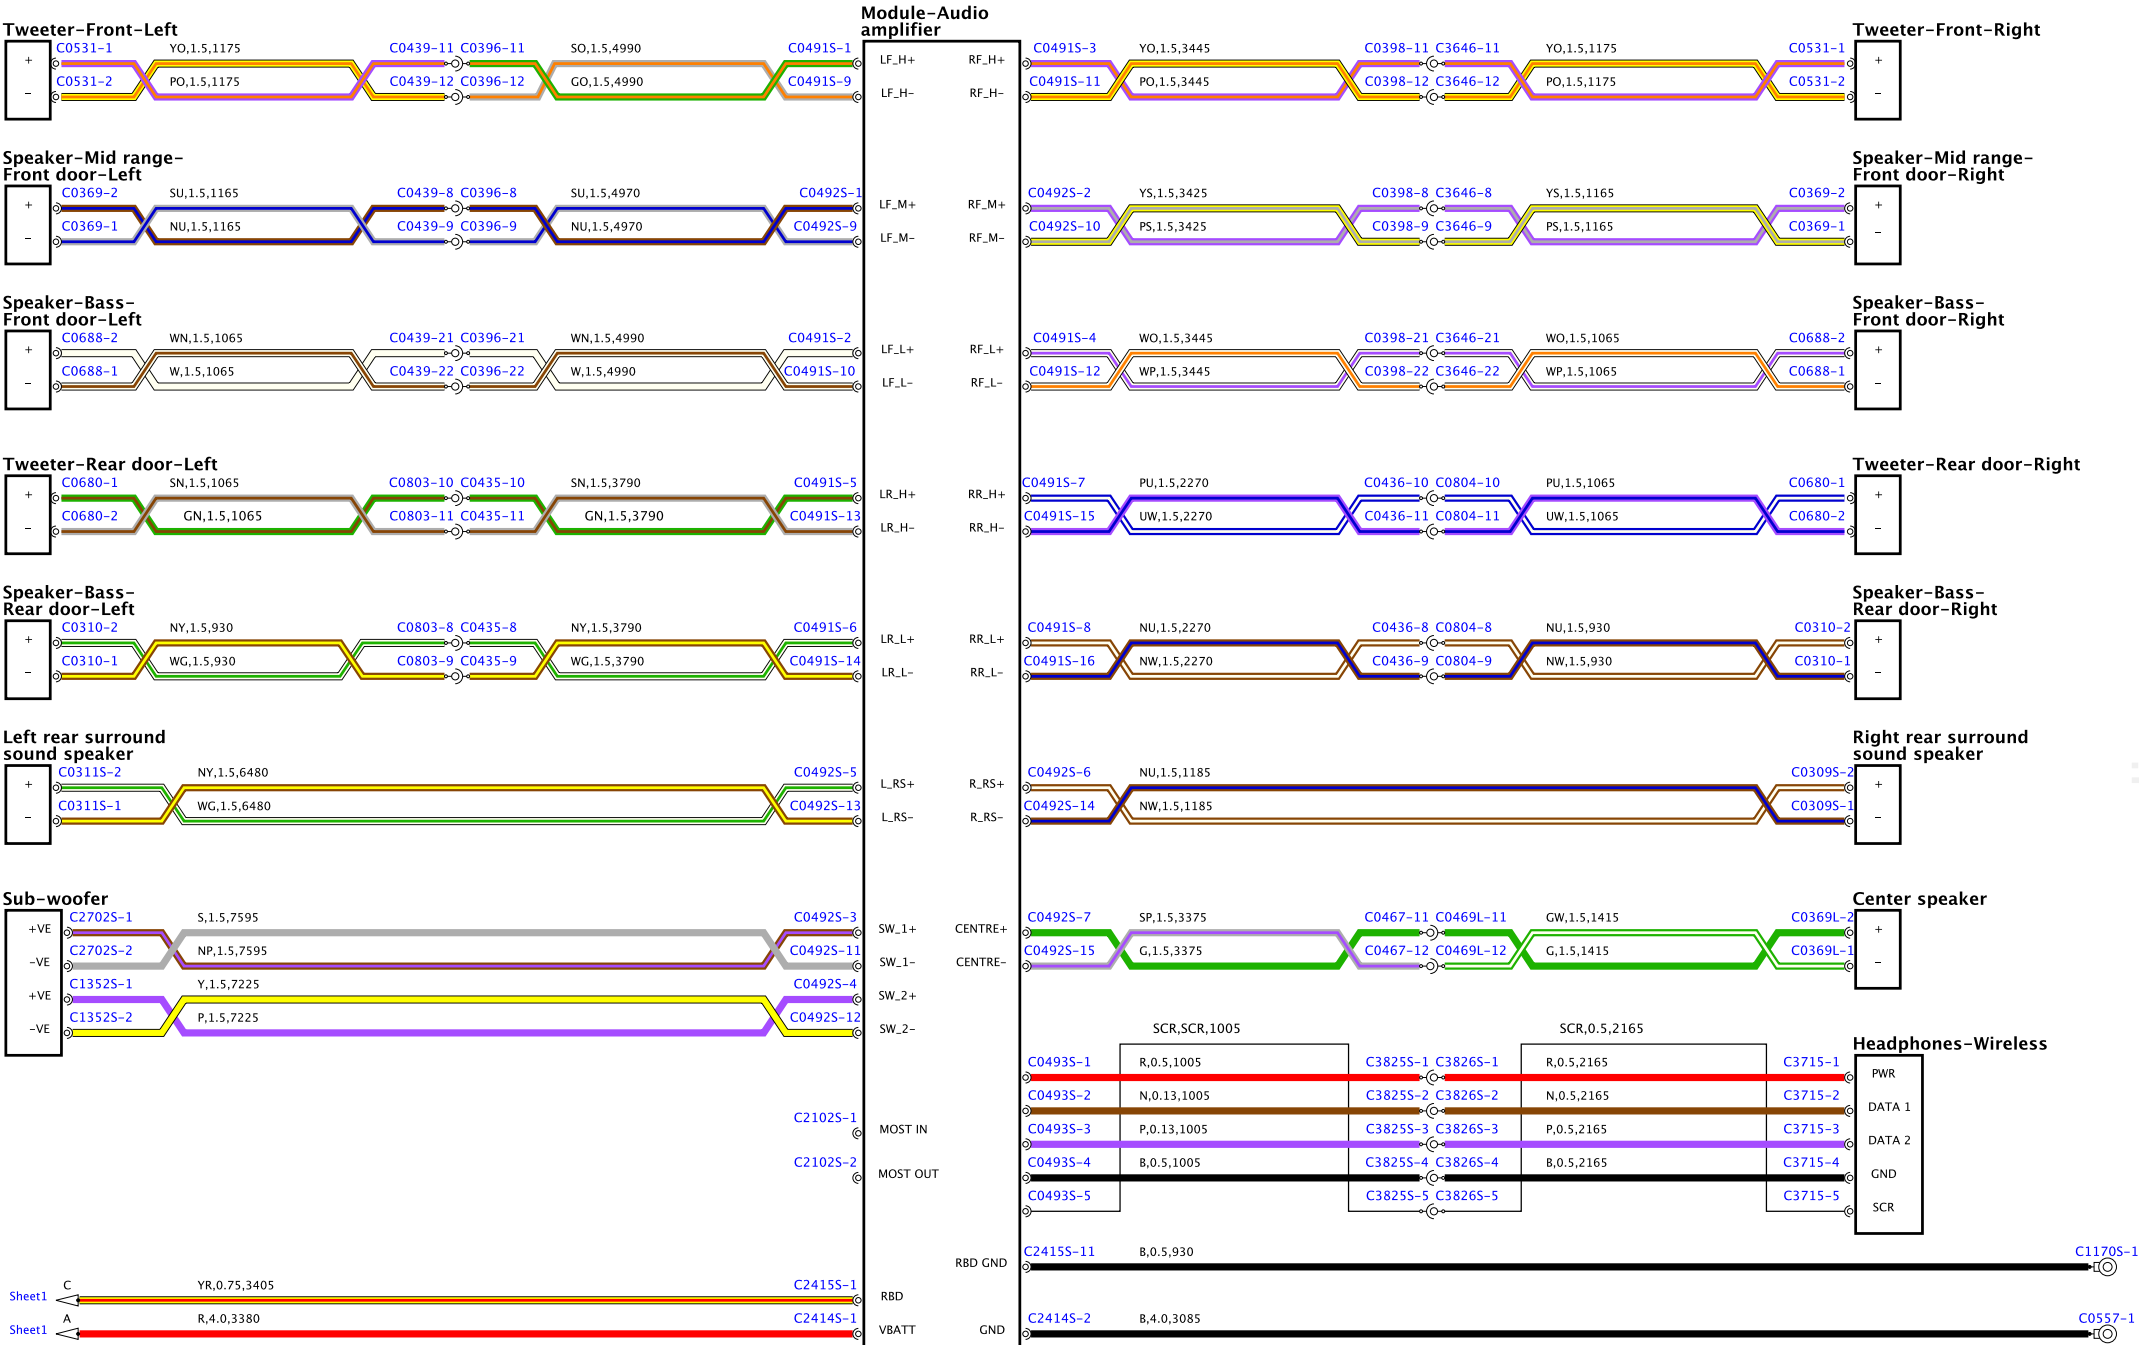
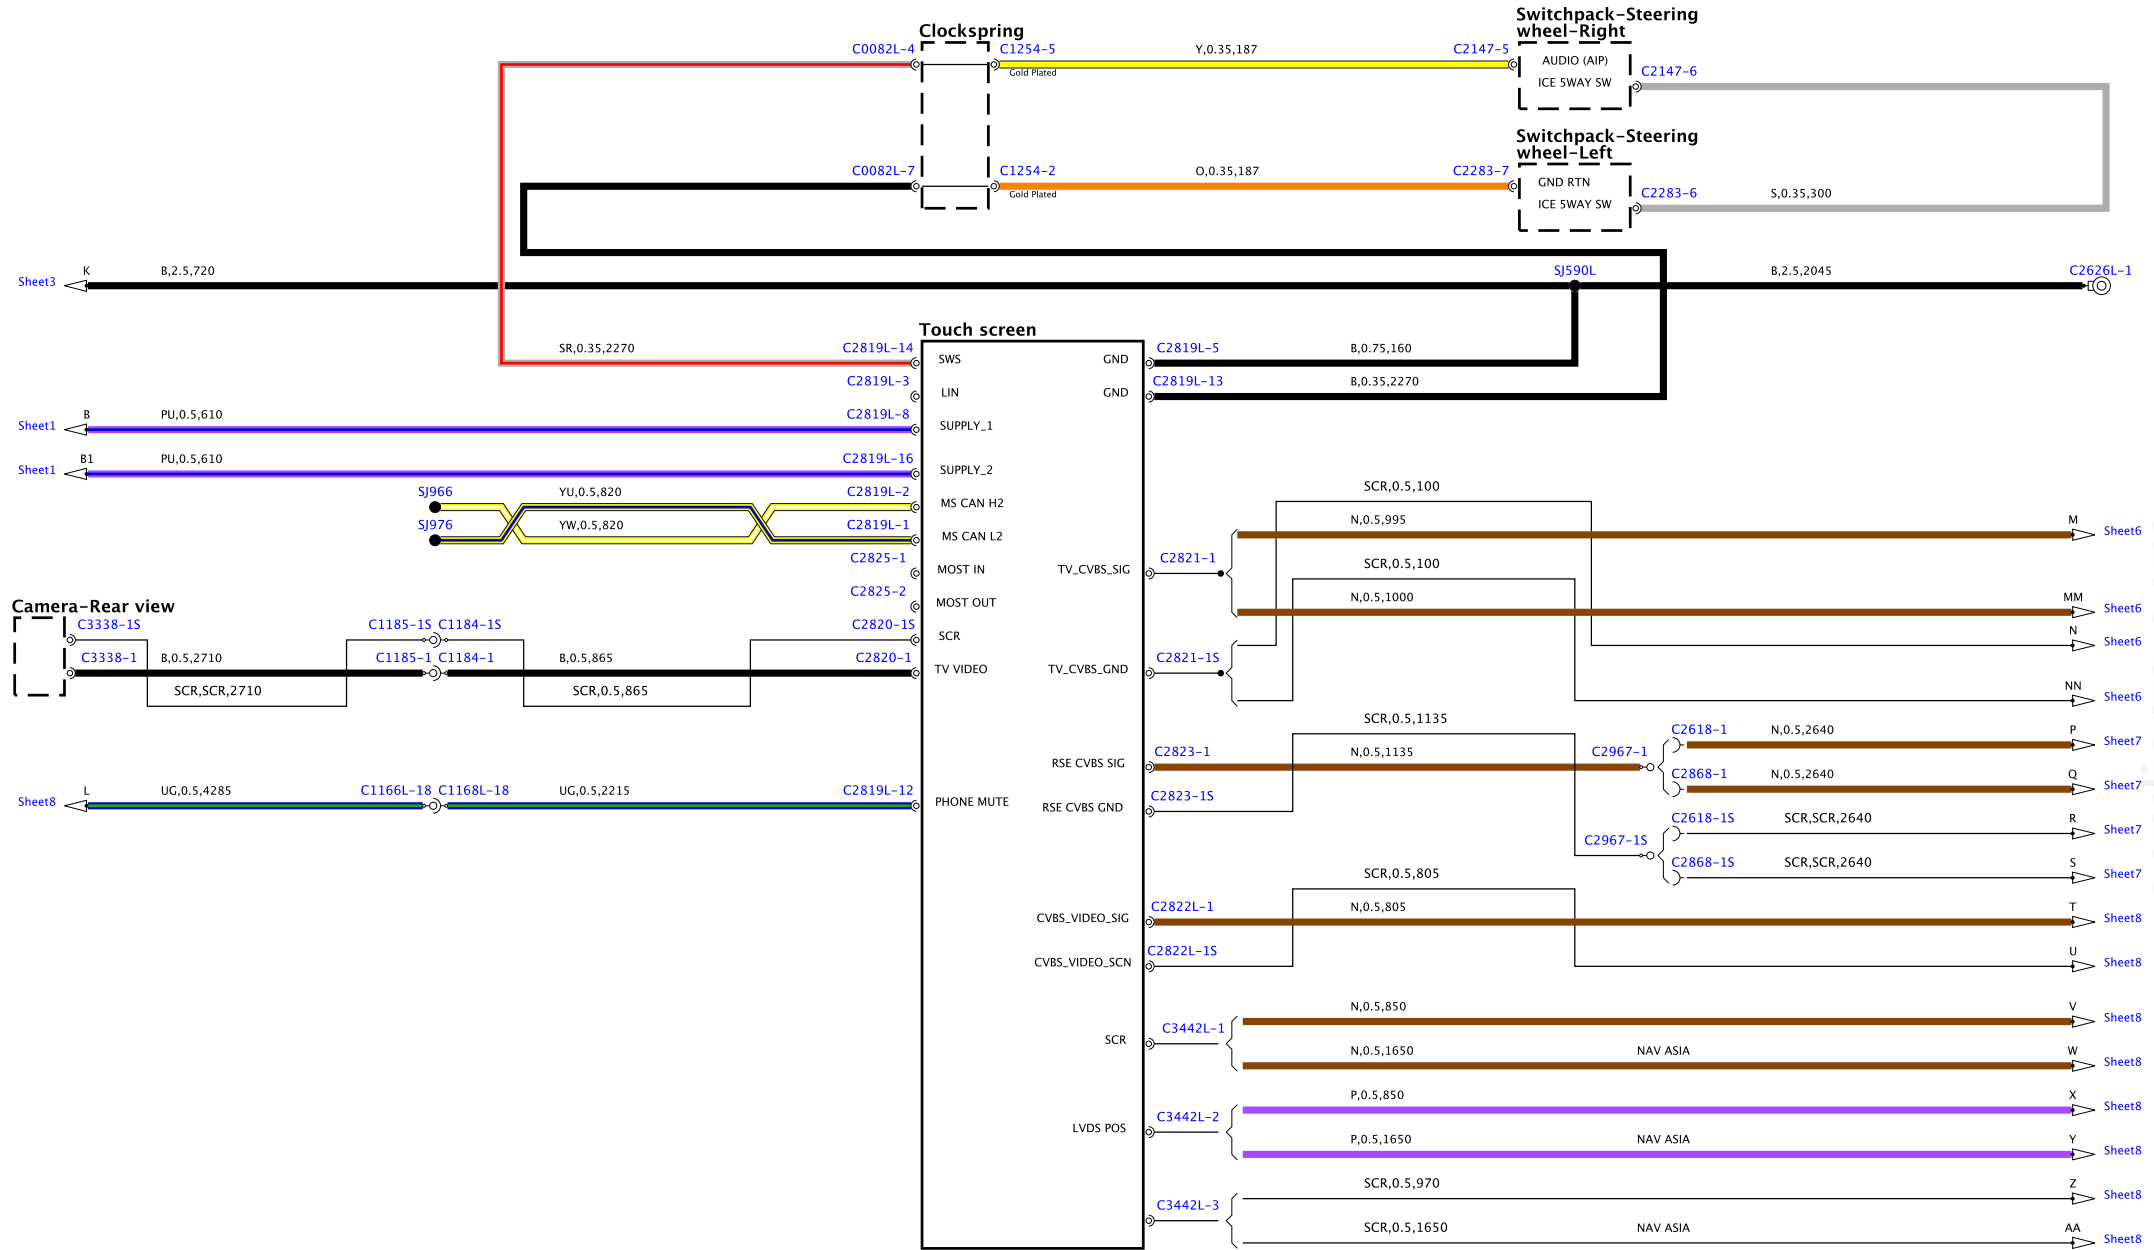
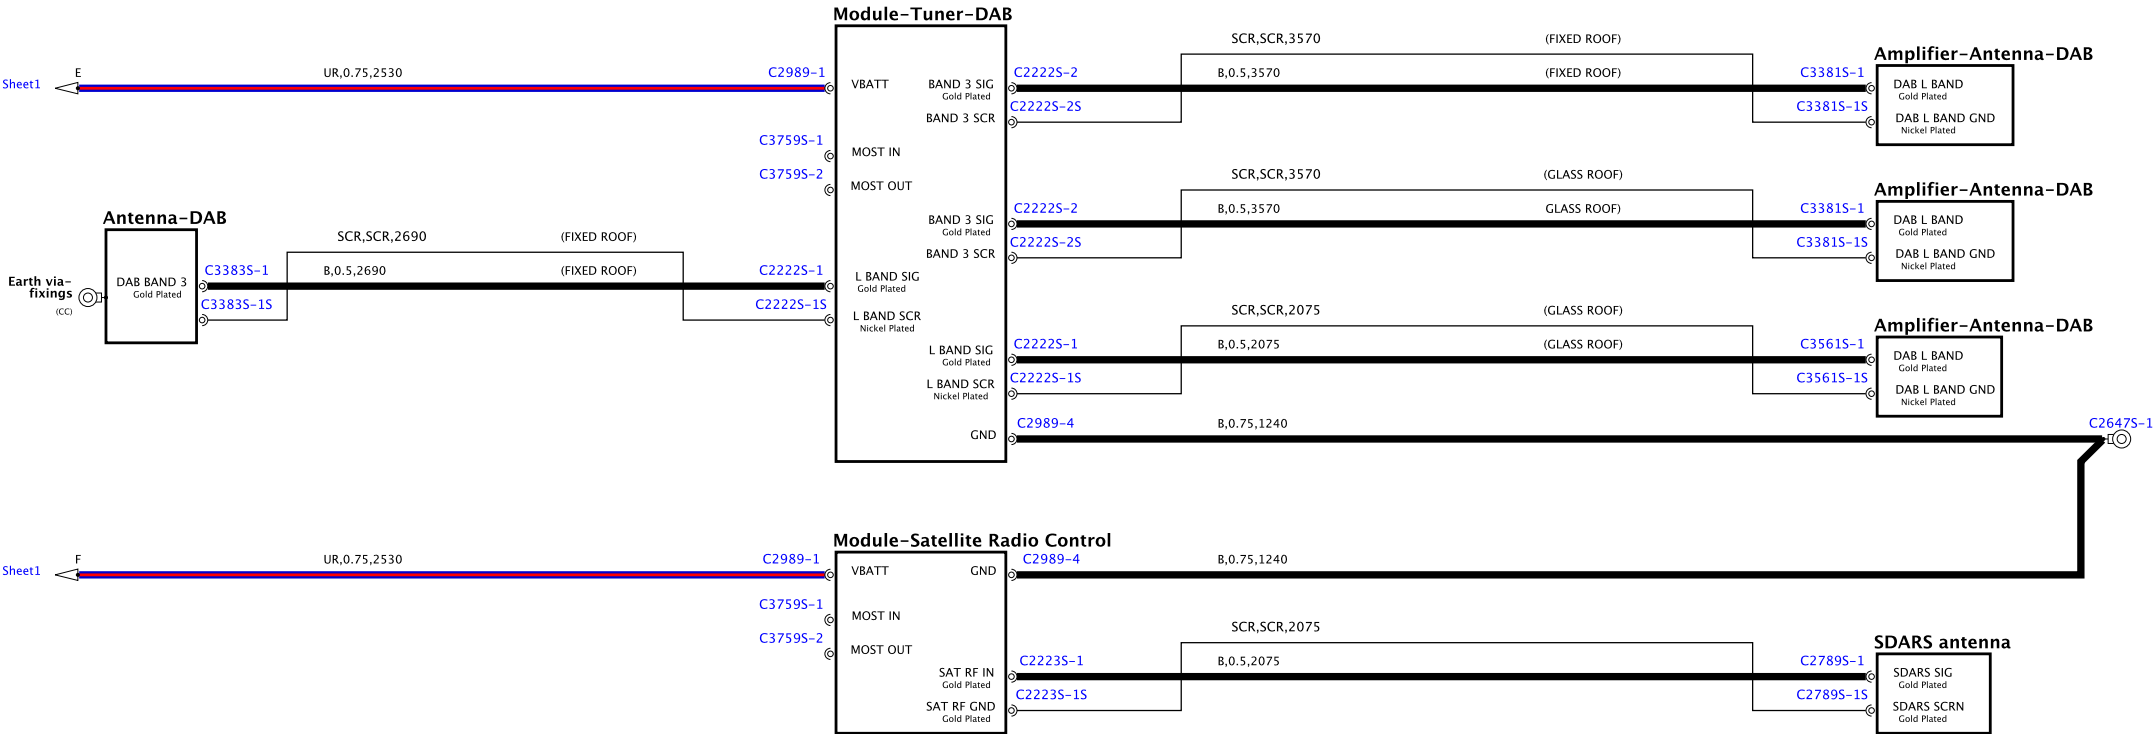
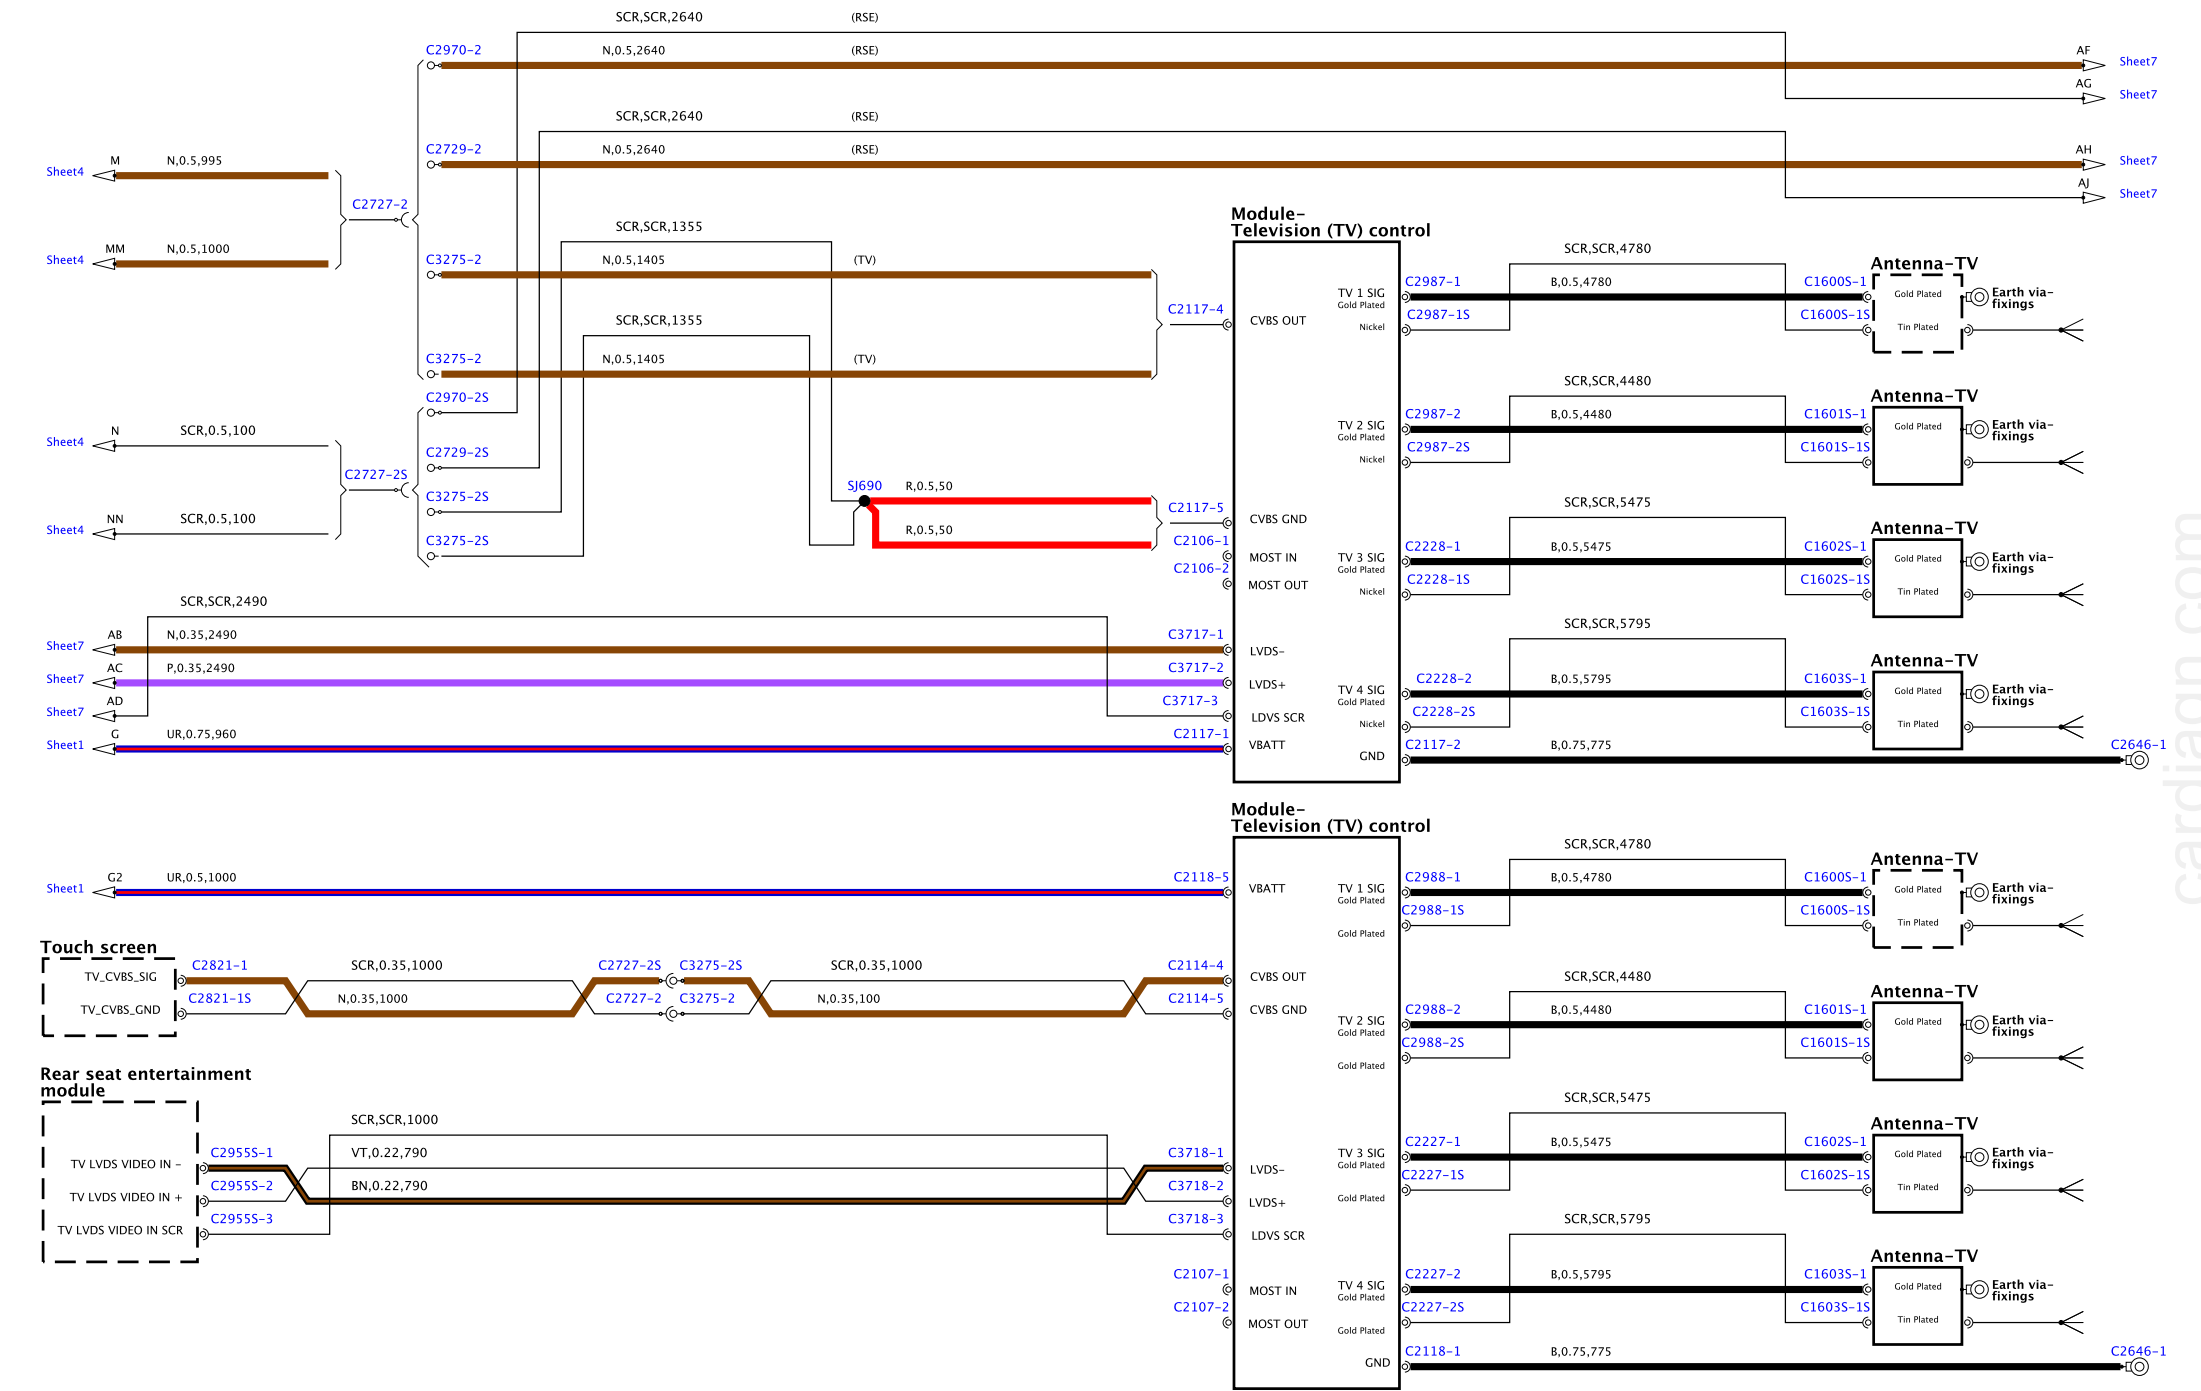



FIG21-70441, 8-A-02-08-Service (0.310-15M7-P03)










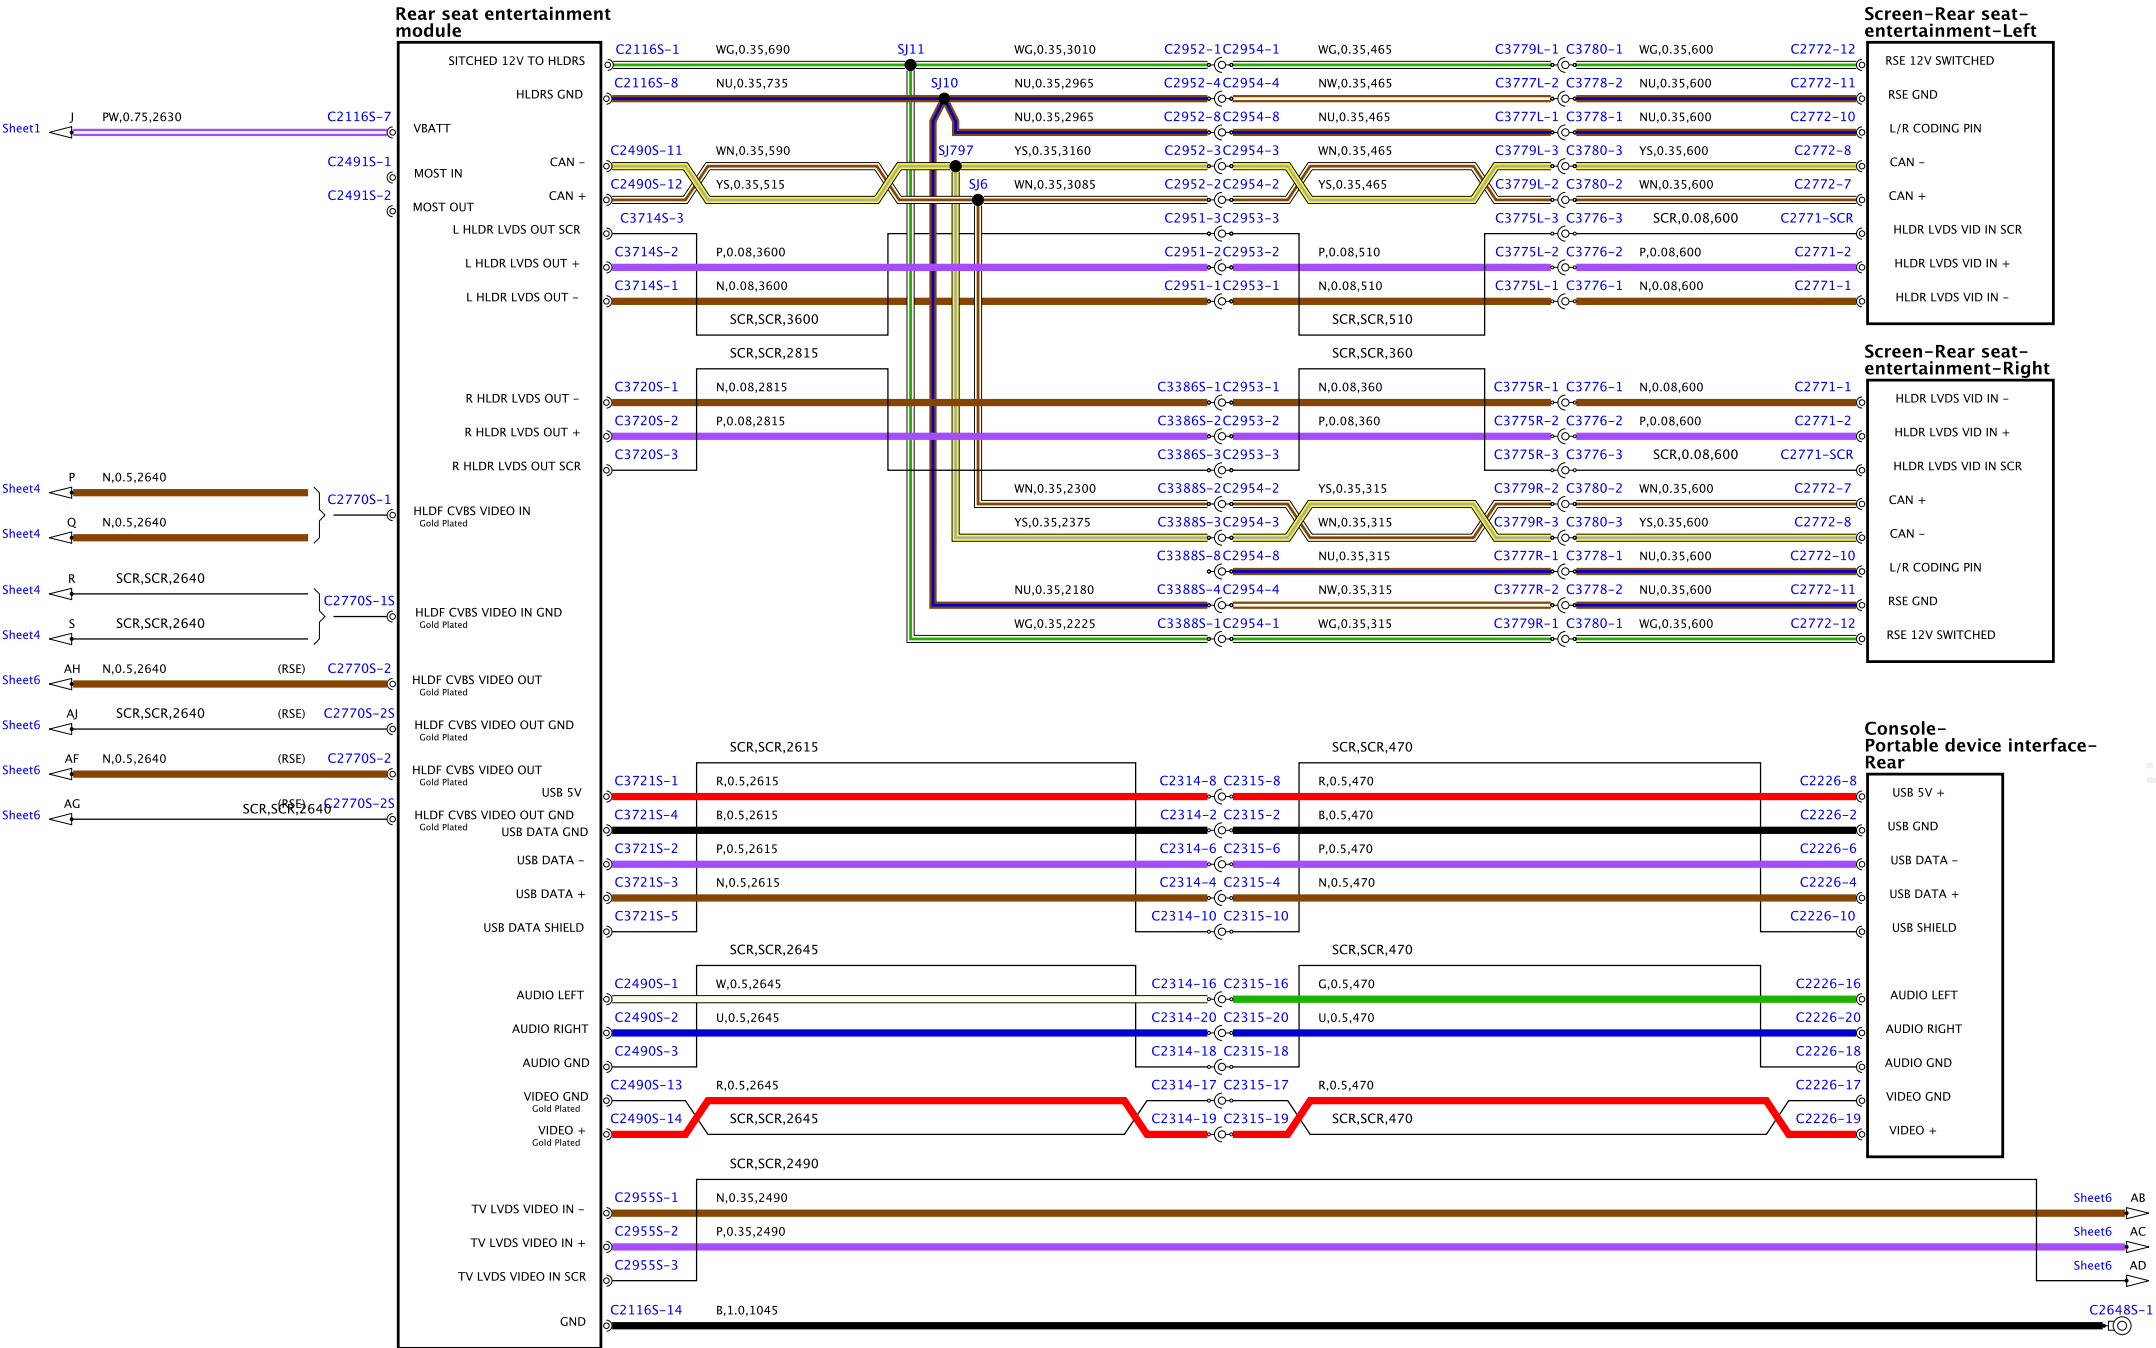

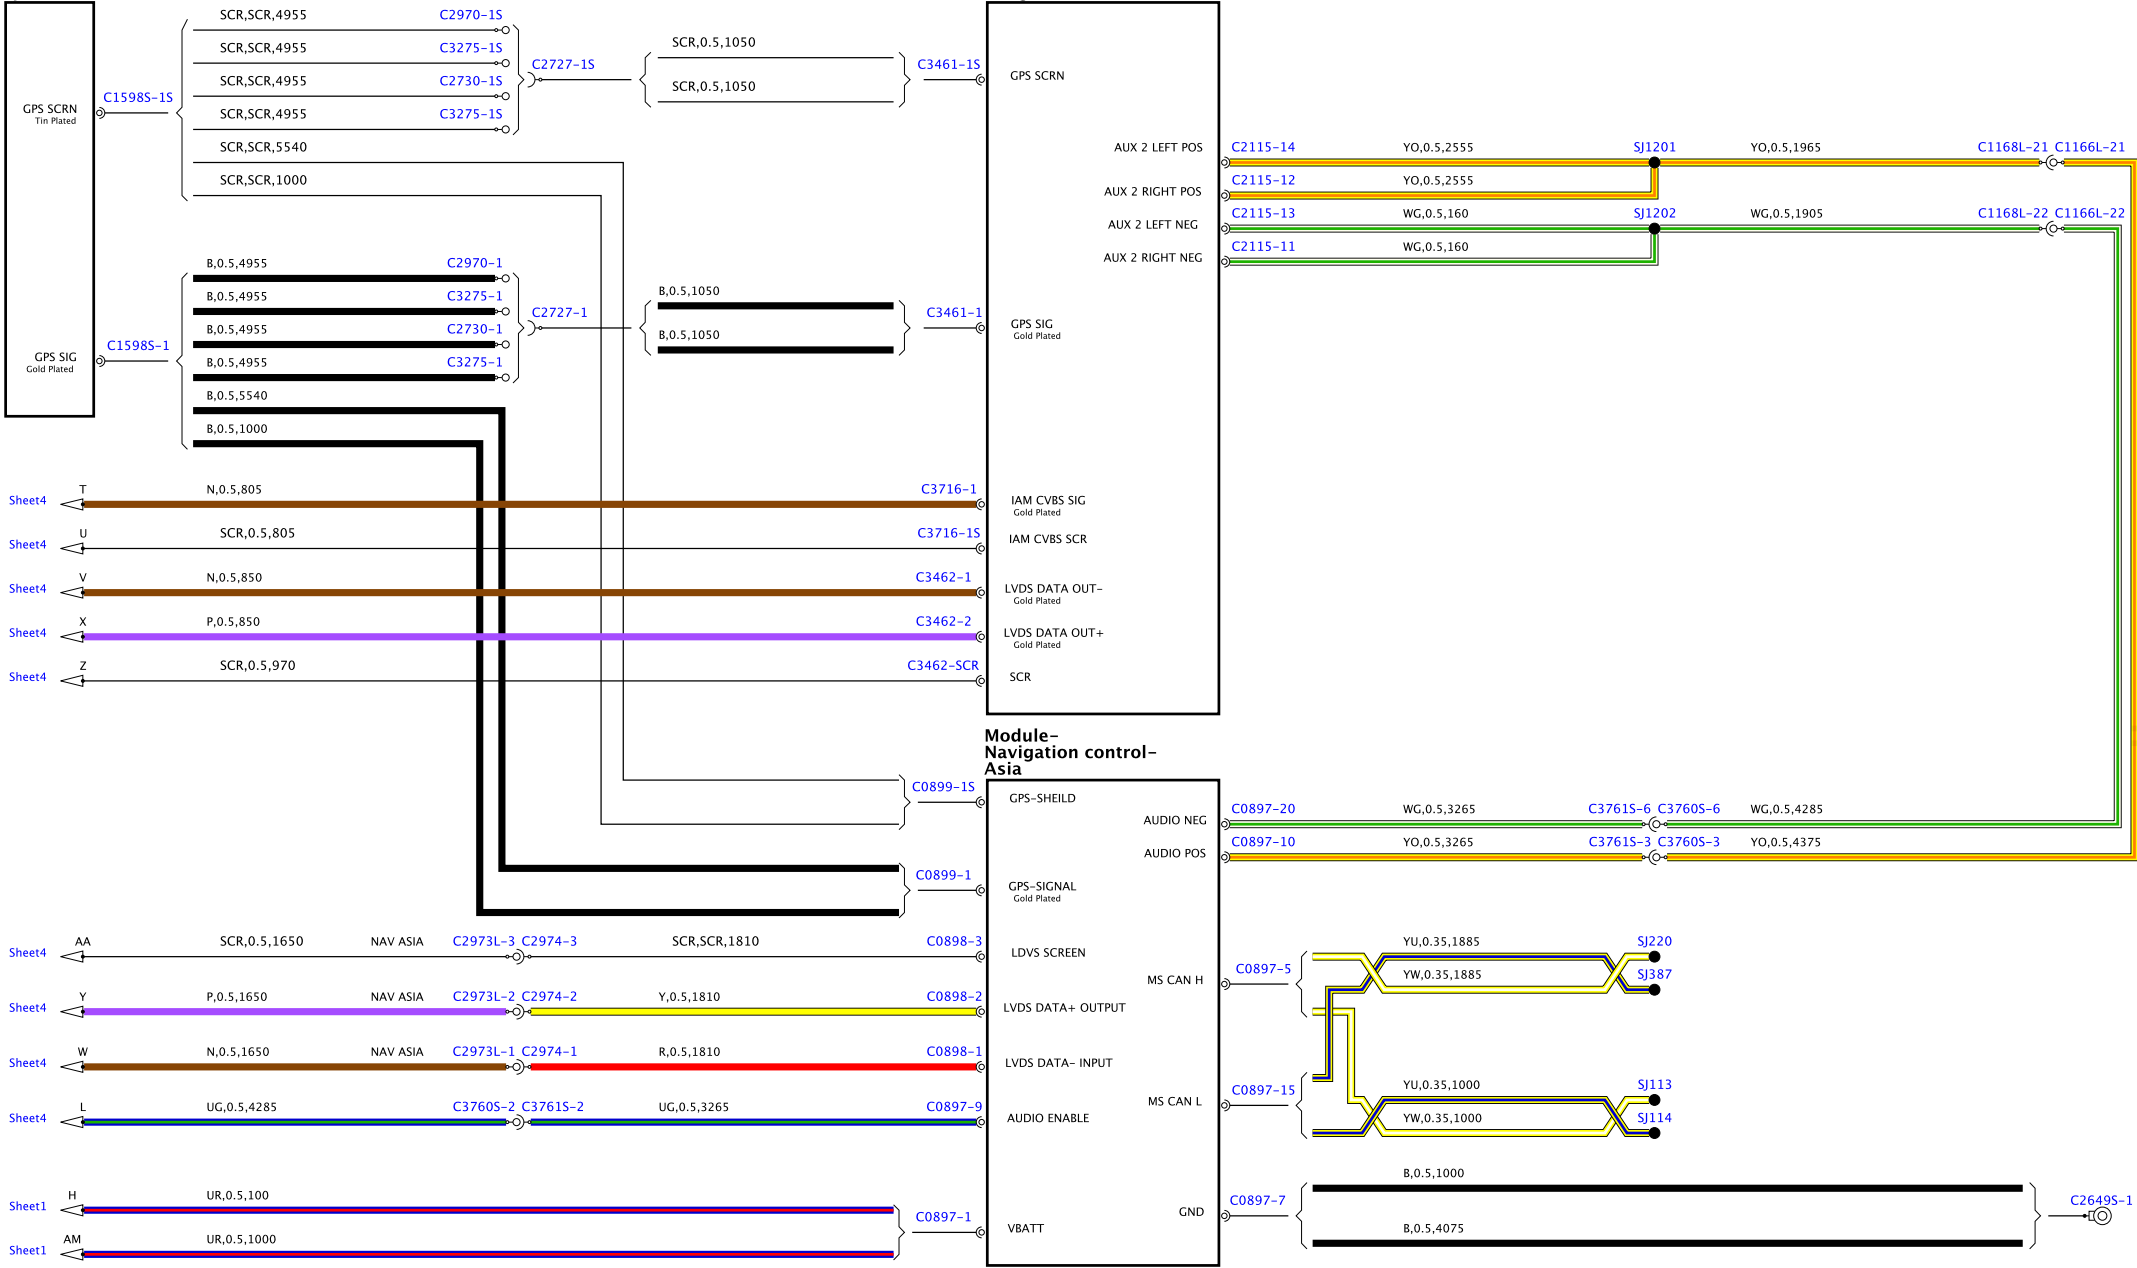



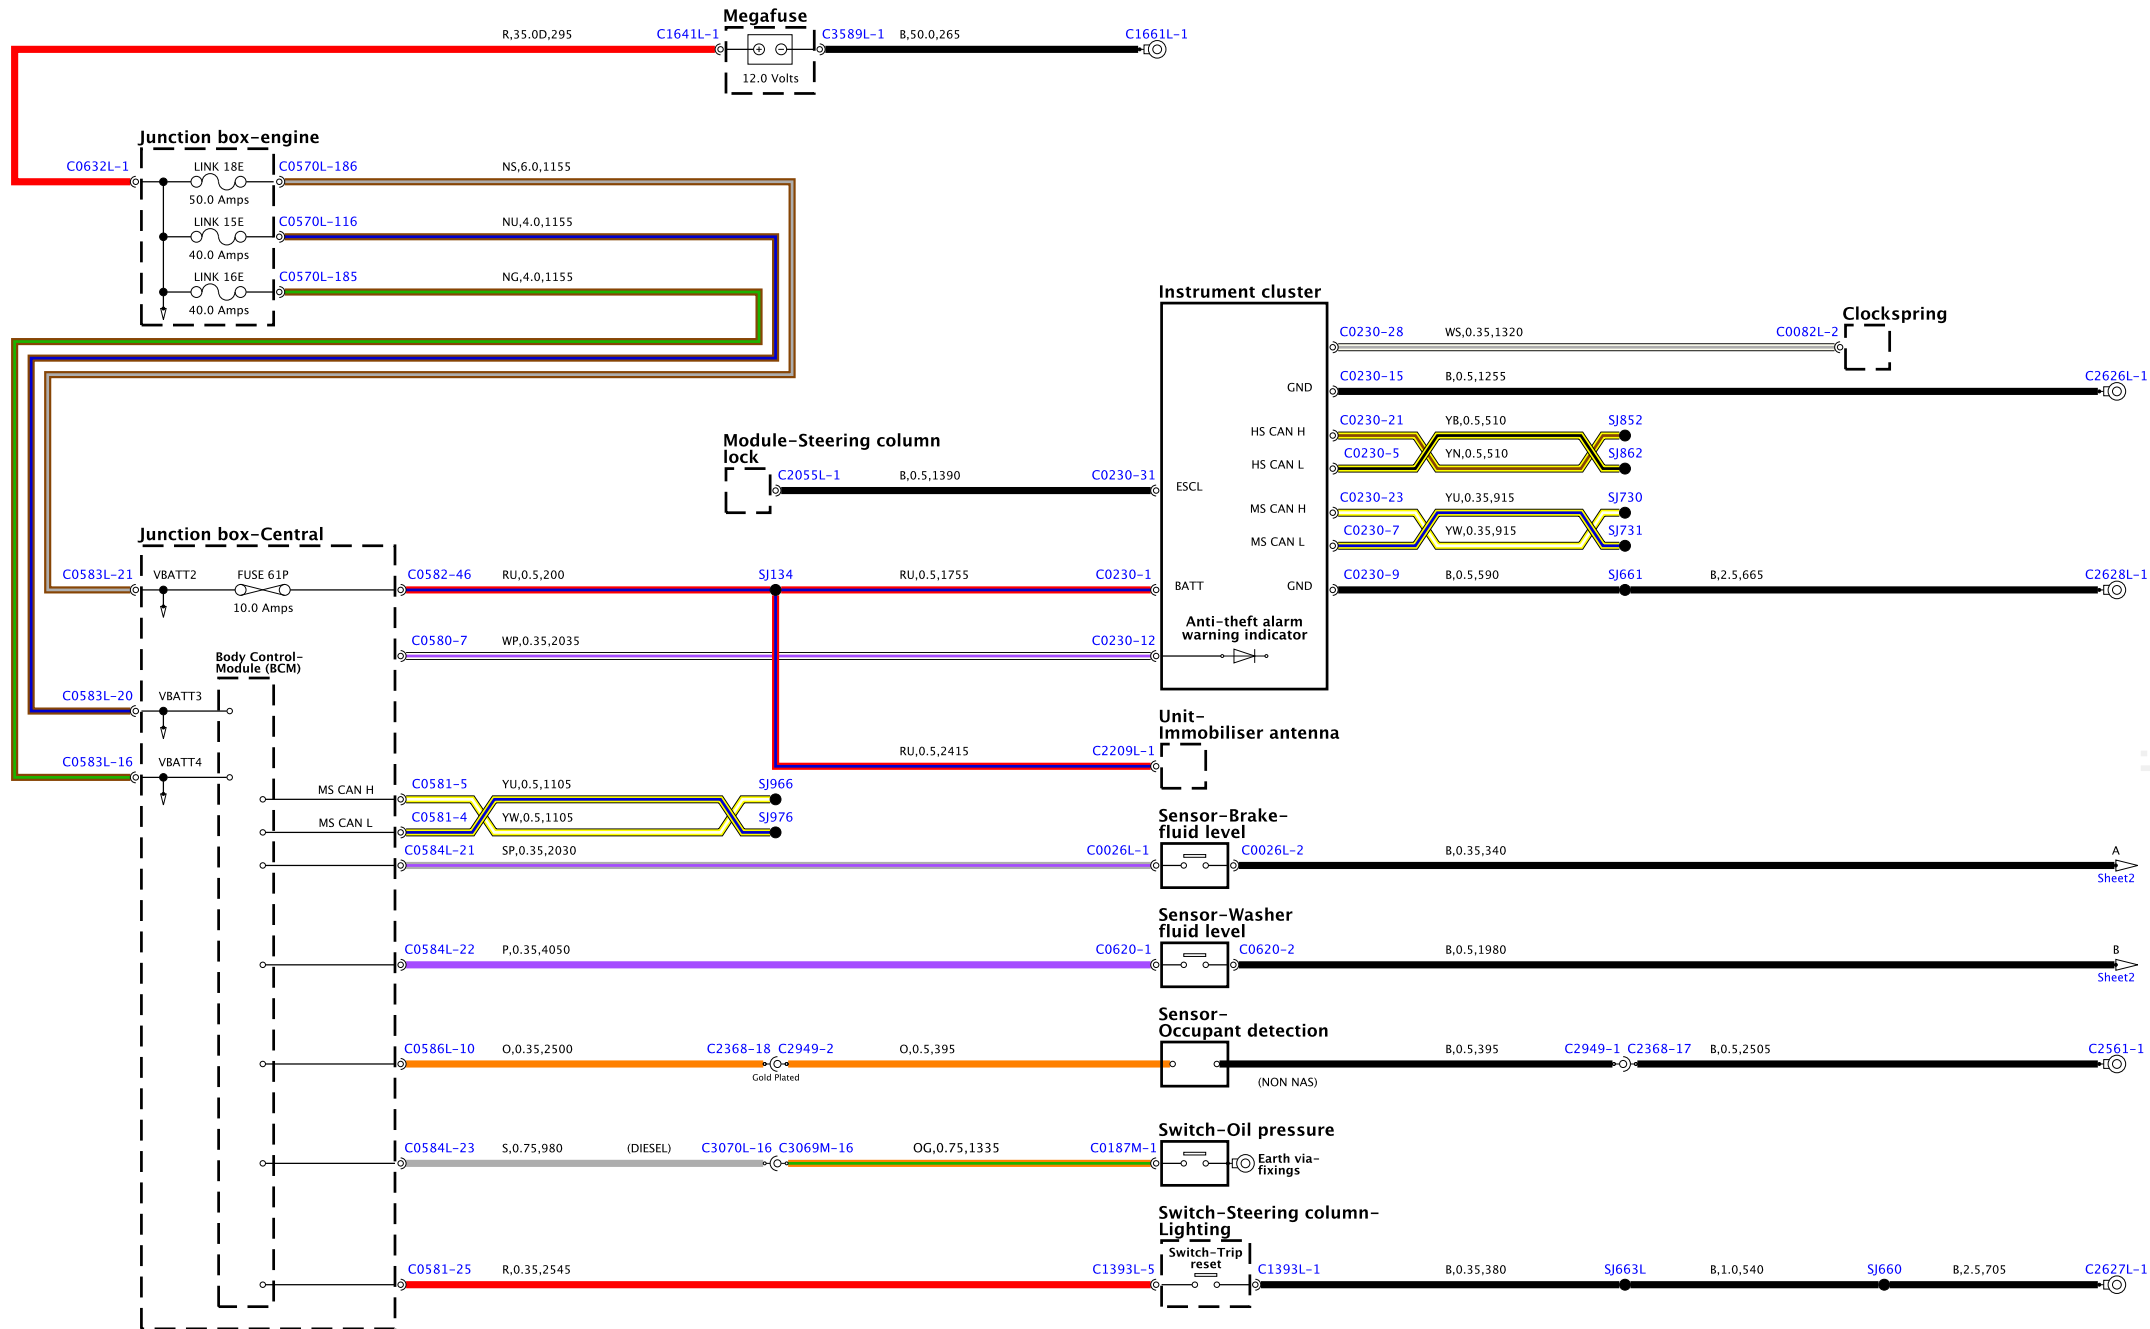



FIG21-70210-A-A-02-02-Service 0,339-15MY-011


Junction box-Central

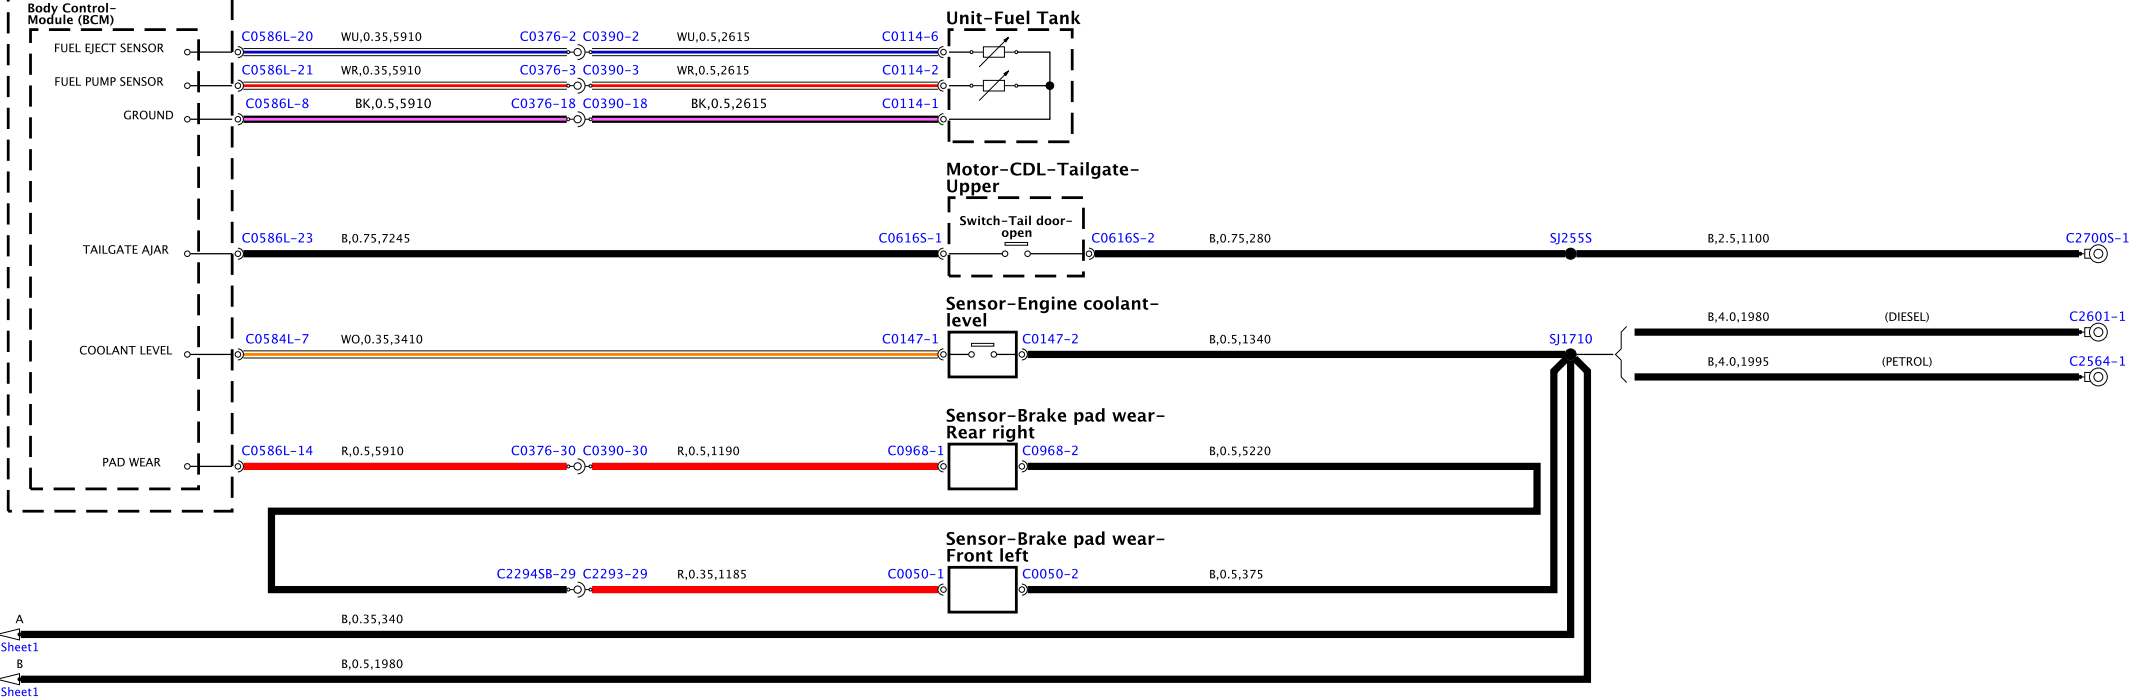

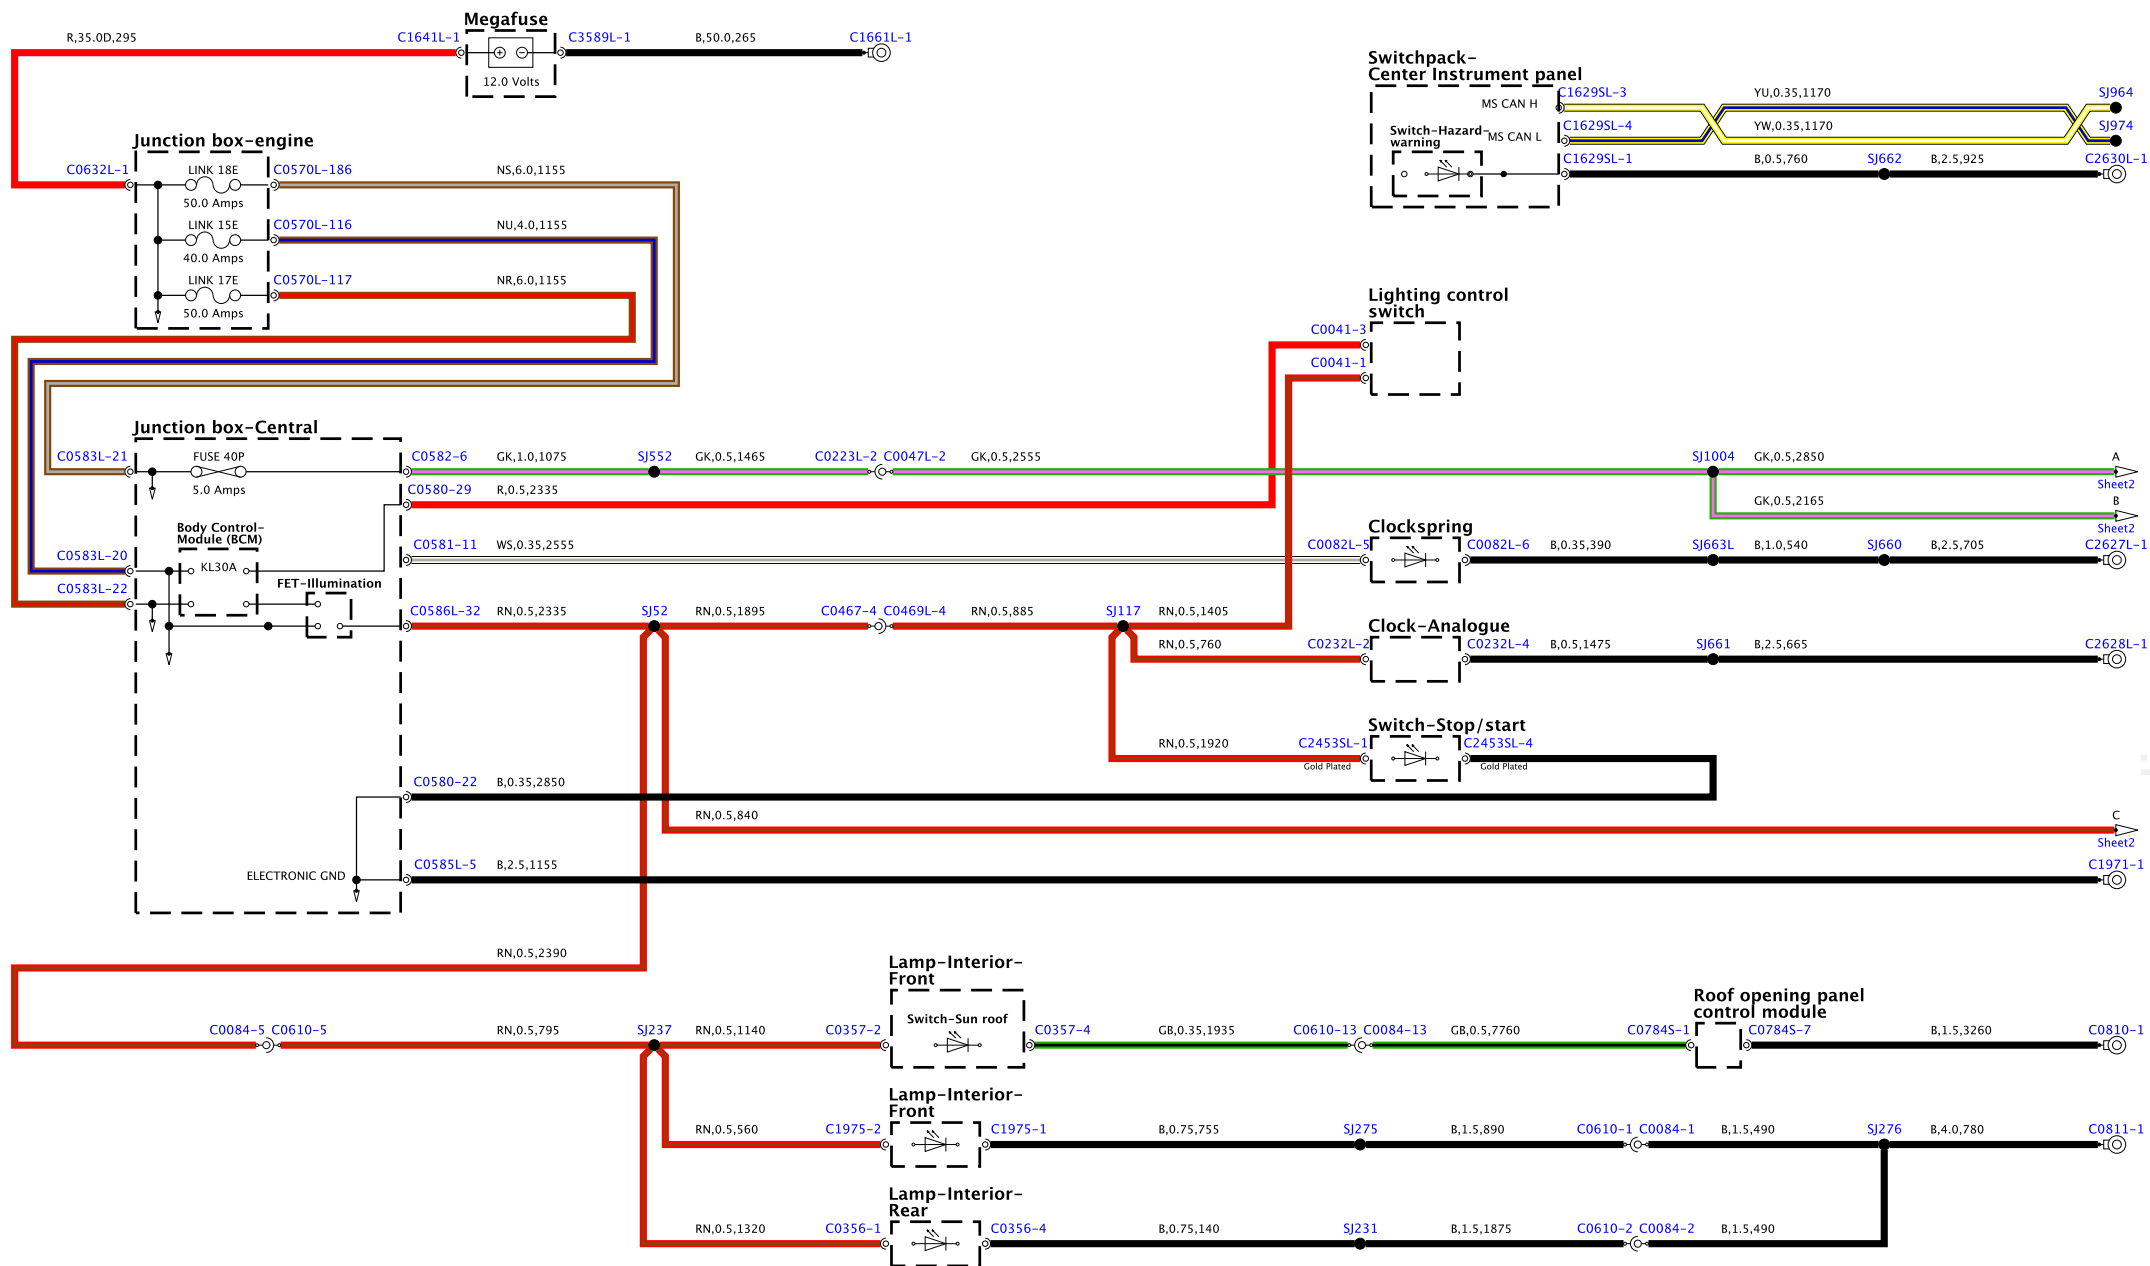



FR22-70120-A-A-02-02-Service (0,310-15MY-#31)

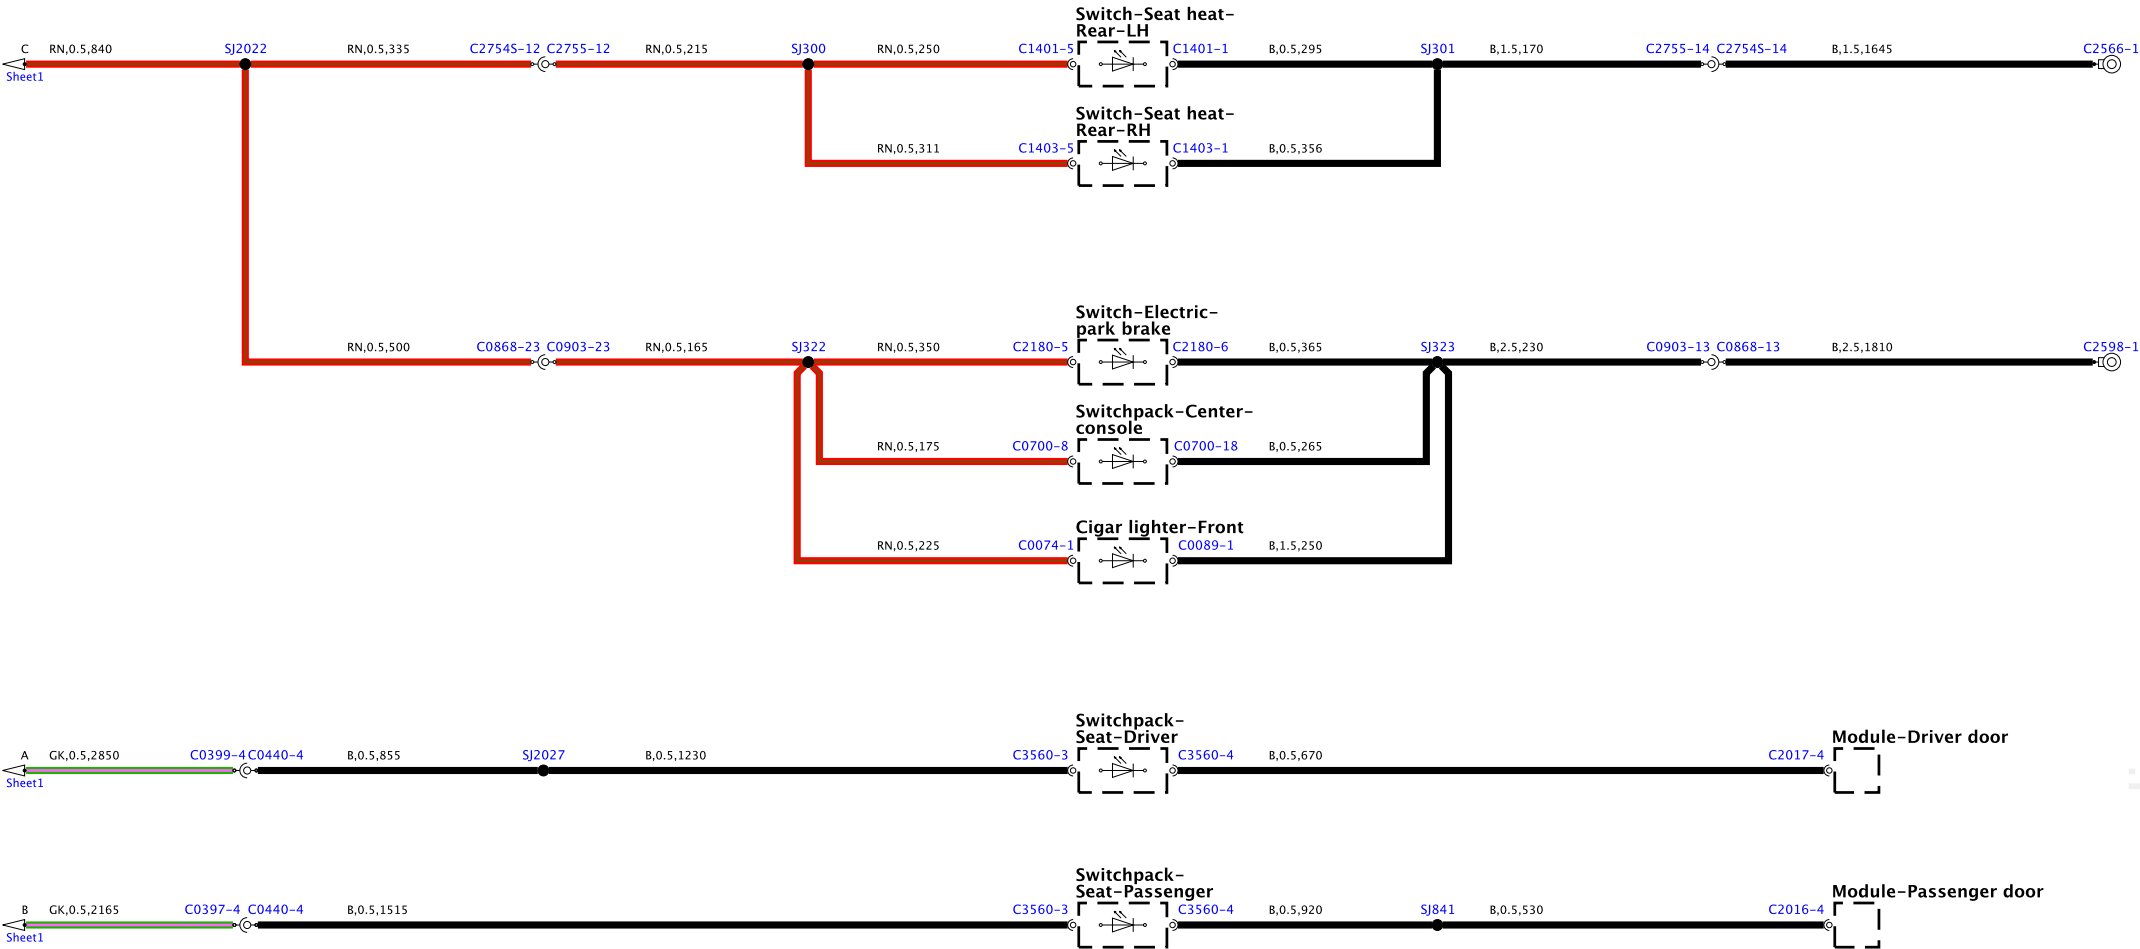


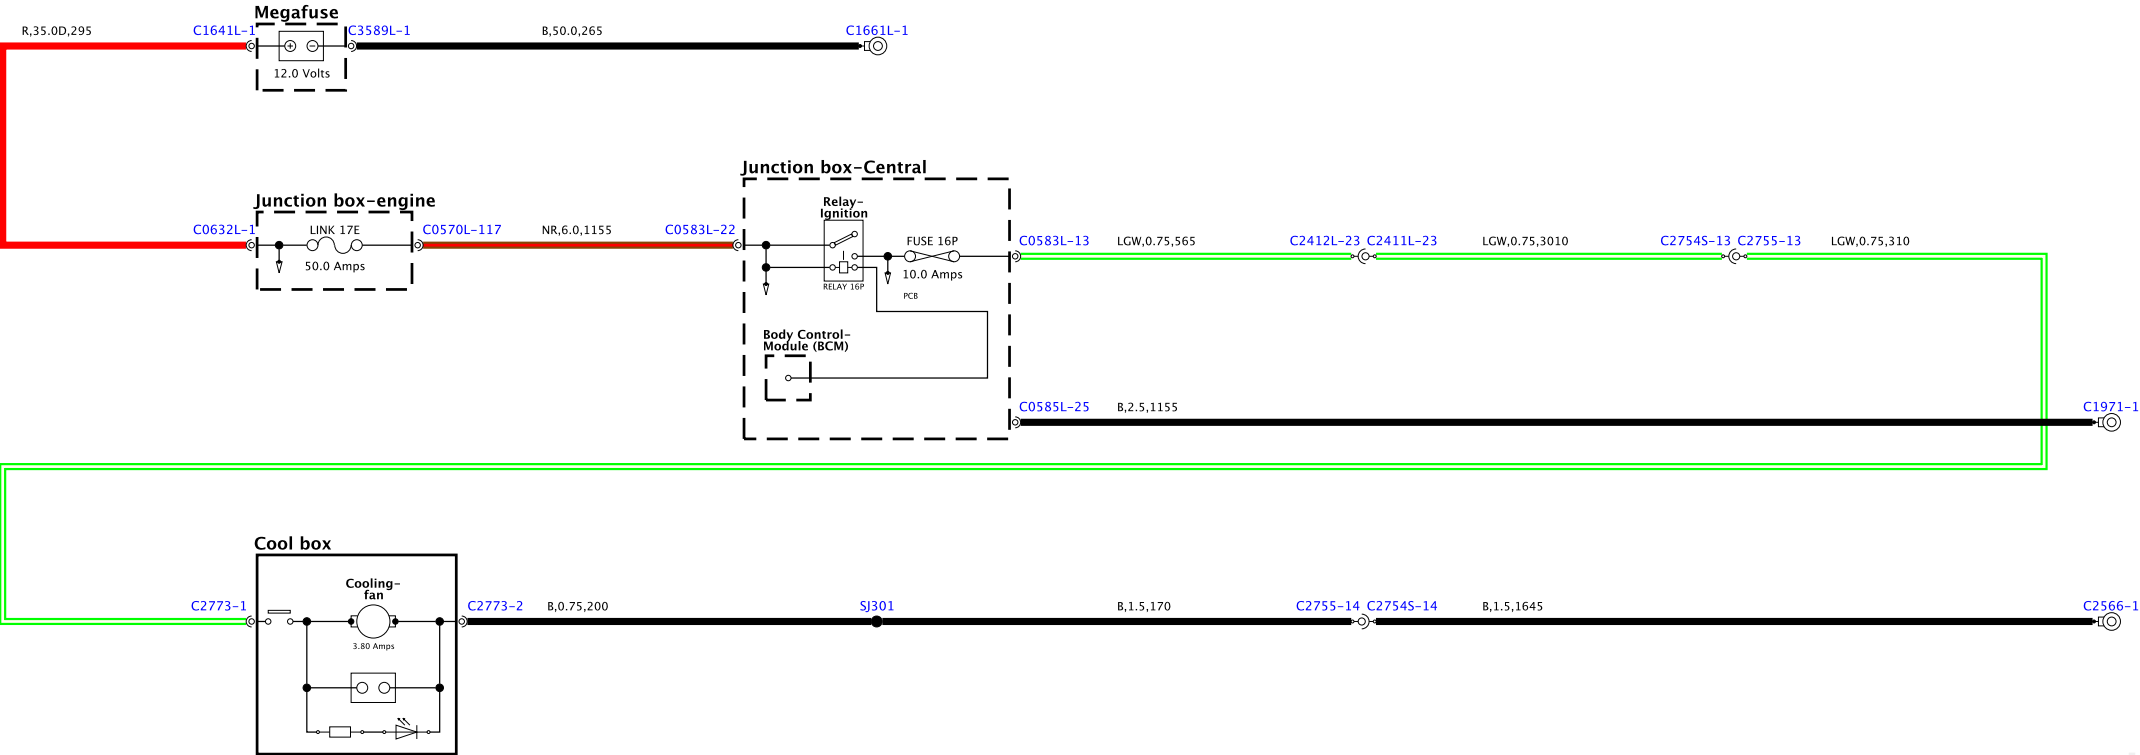



Pin22-70100-A-A-01-01-Service (3,330-15Mv-R3)

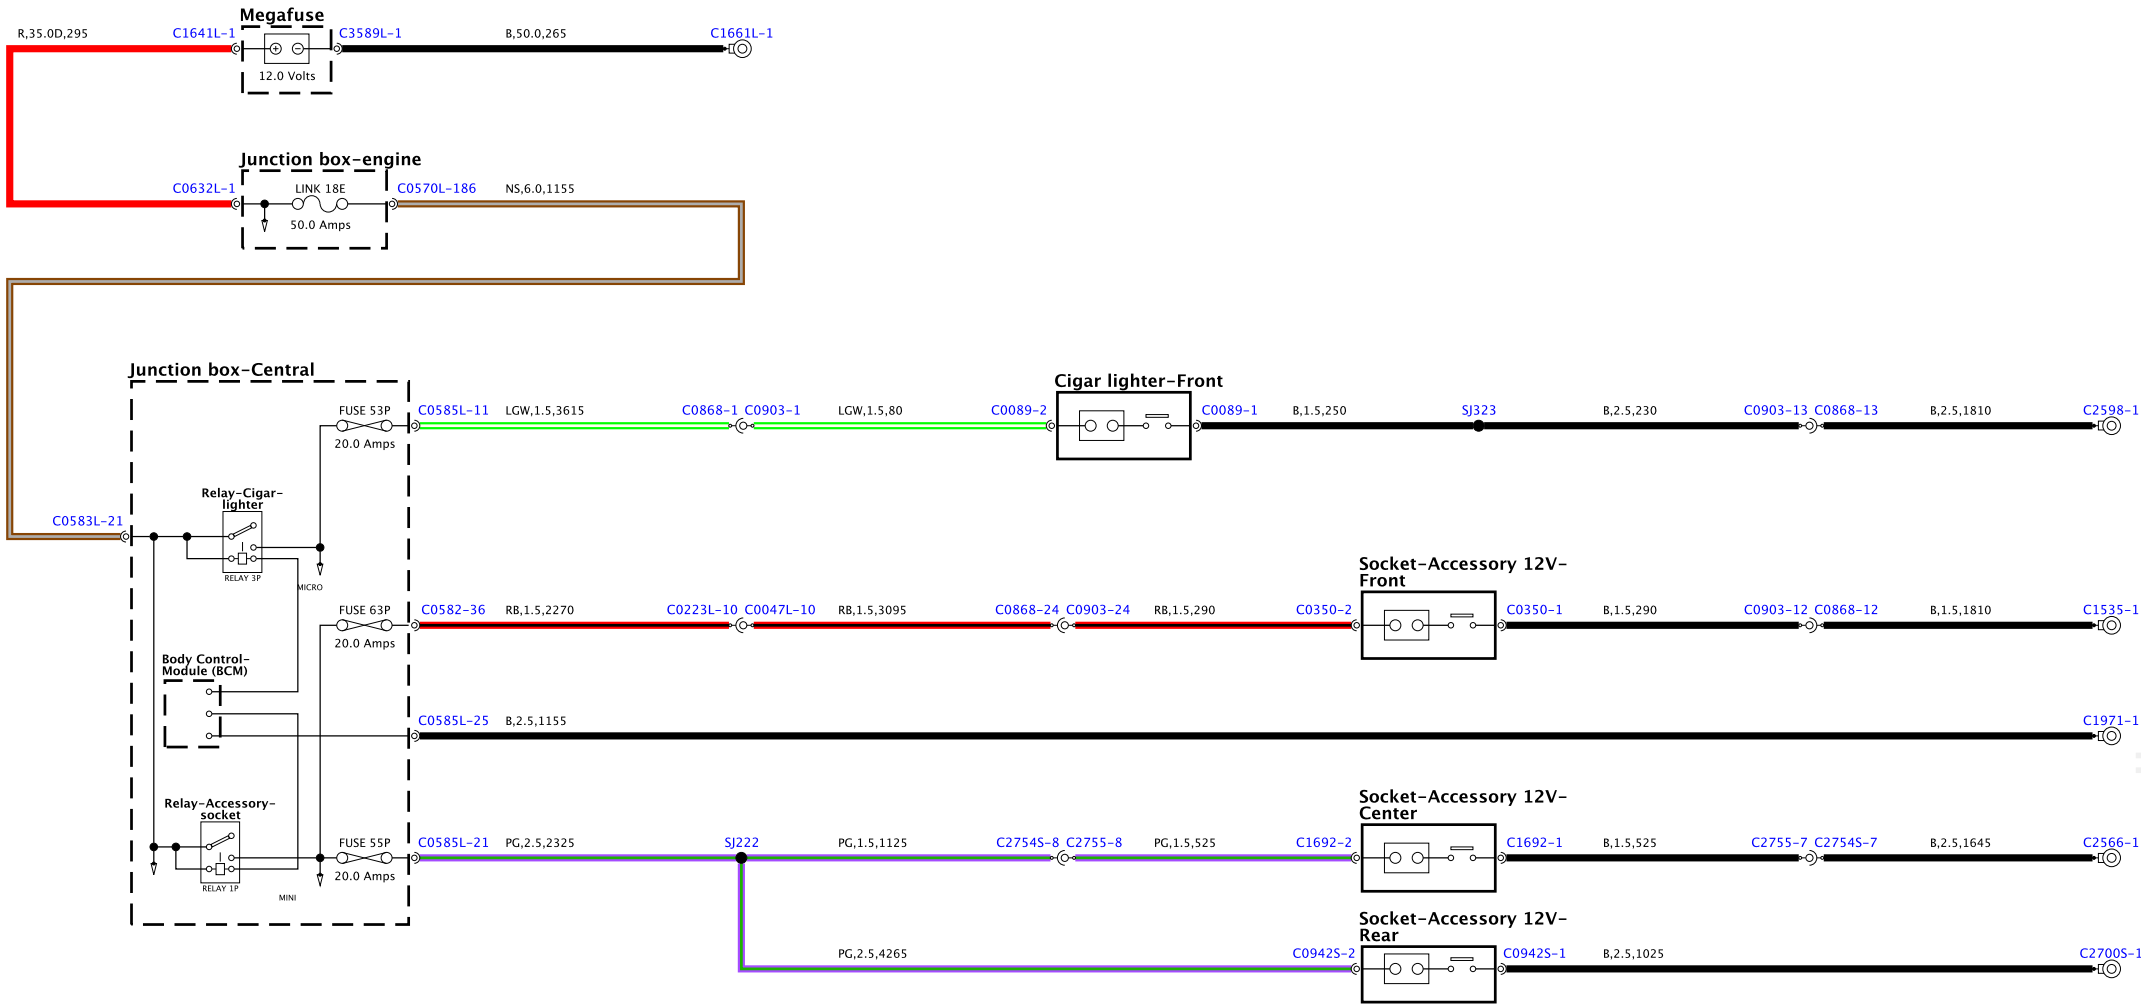

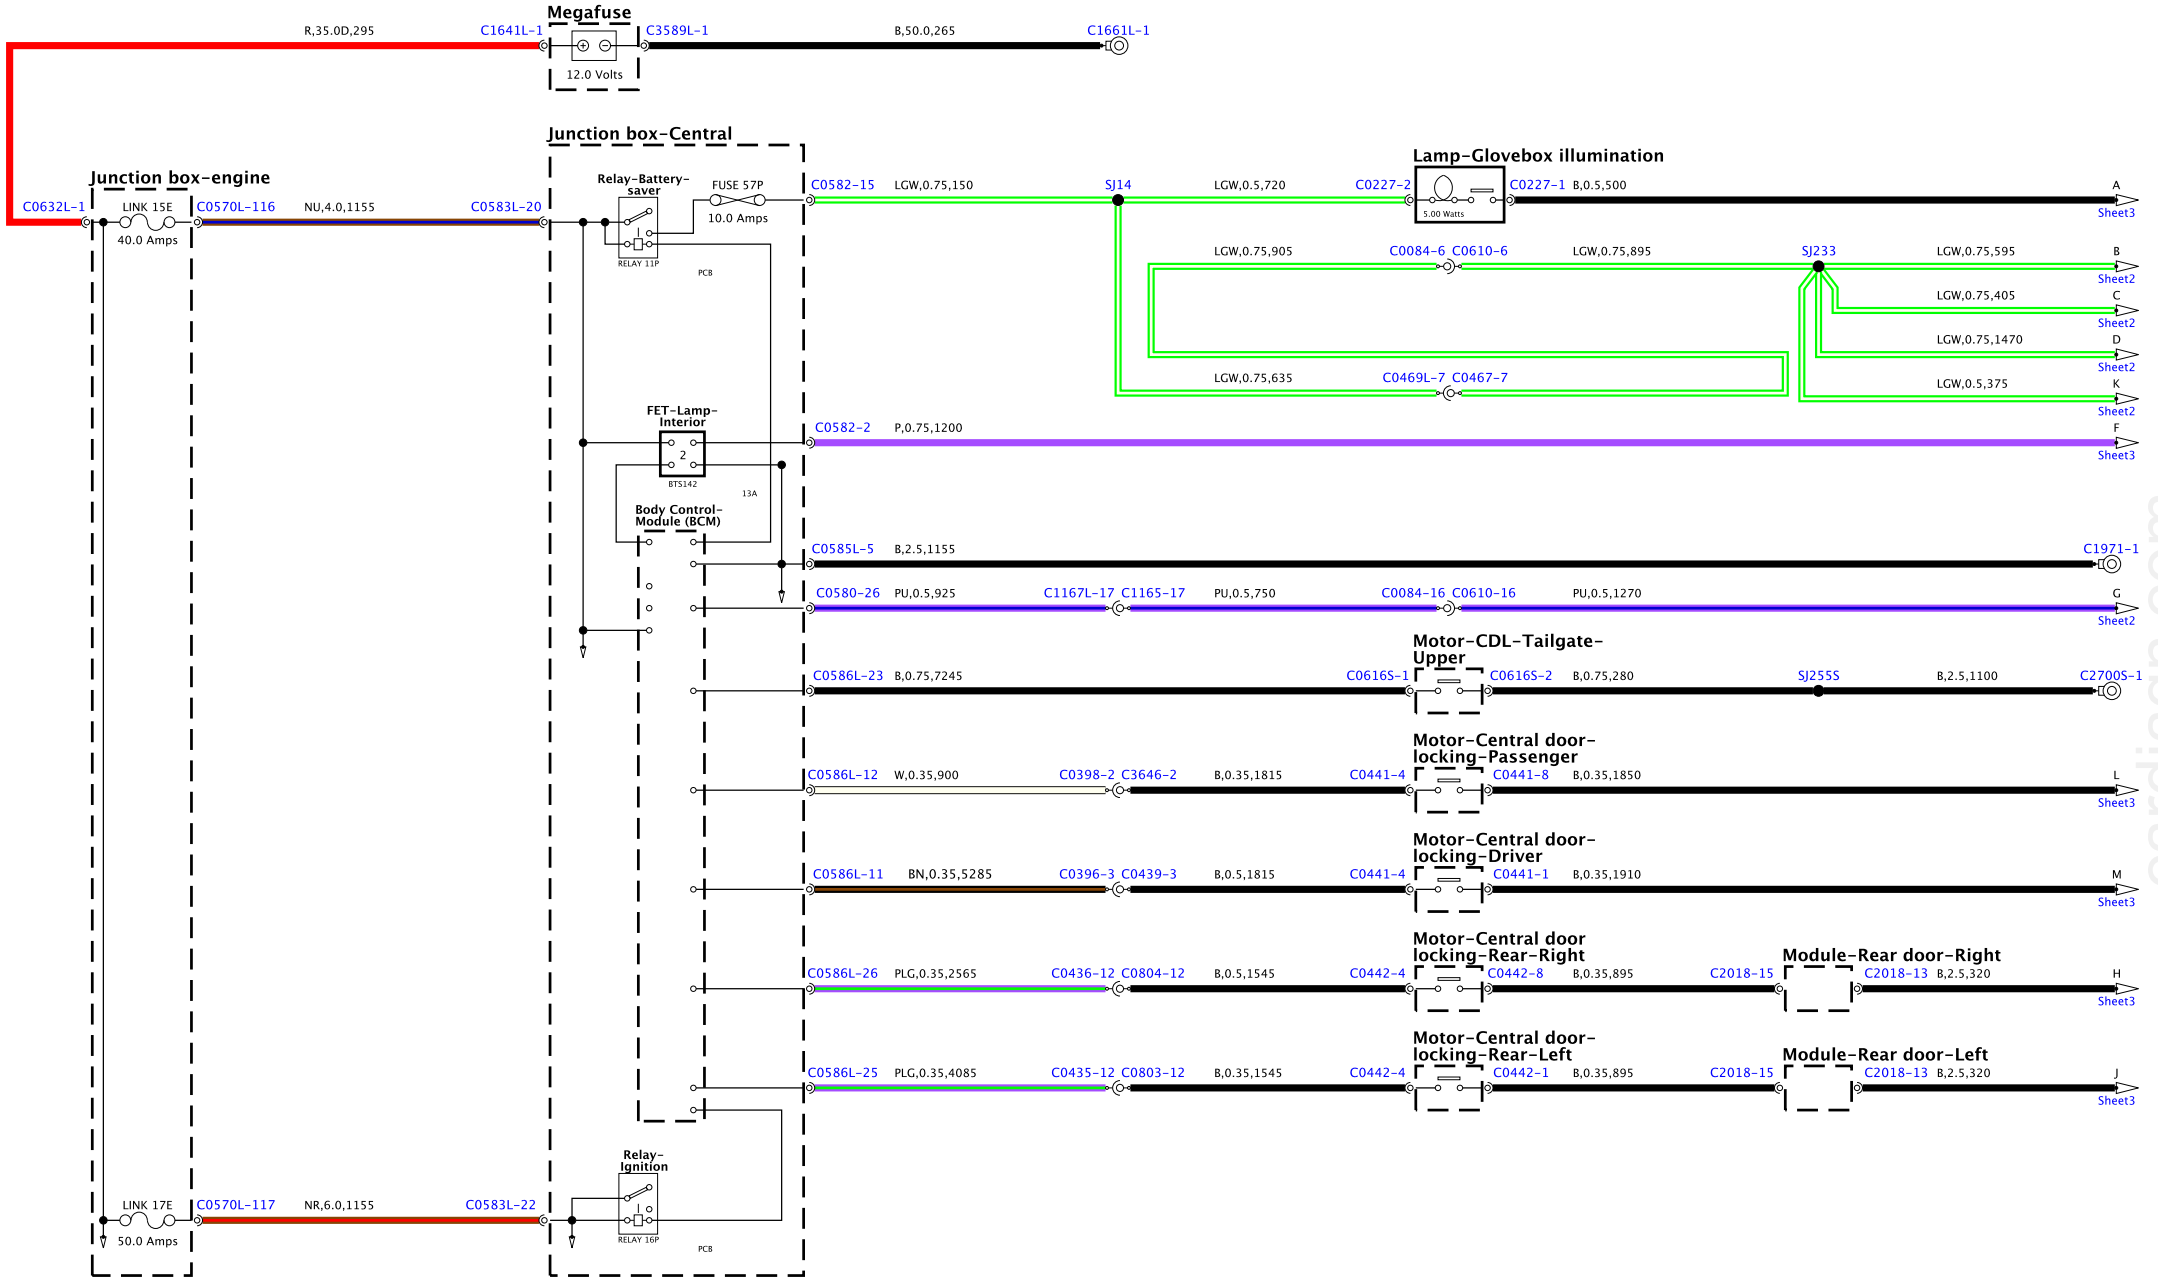




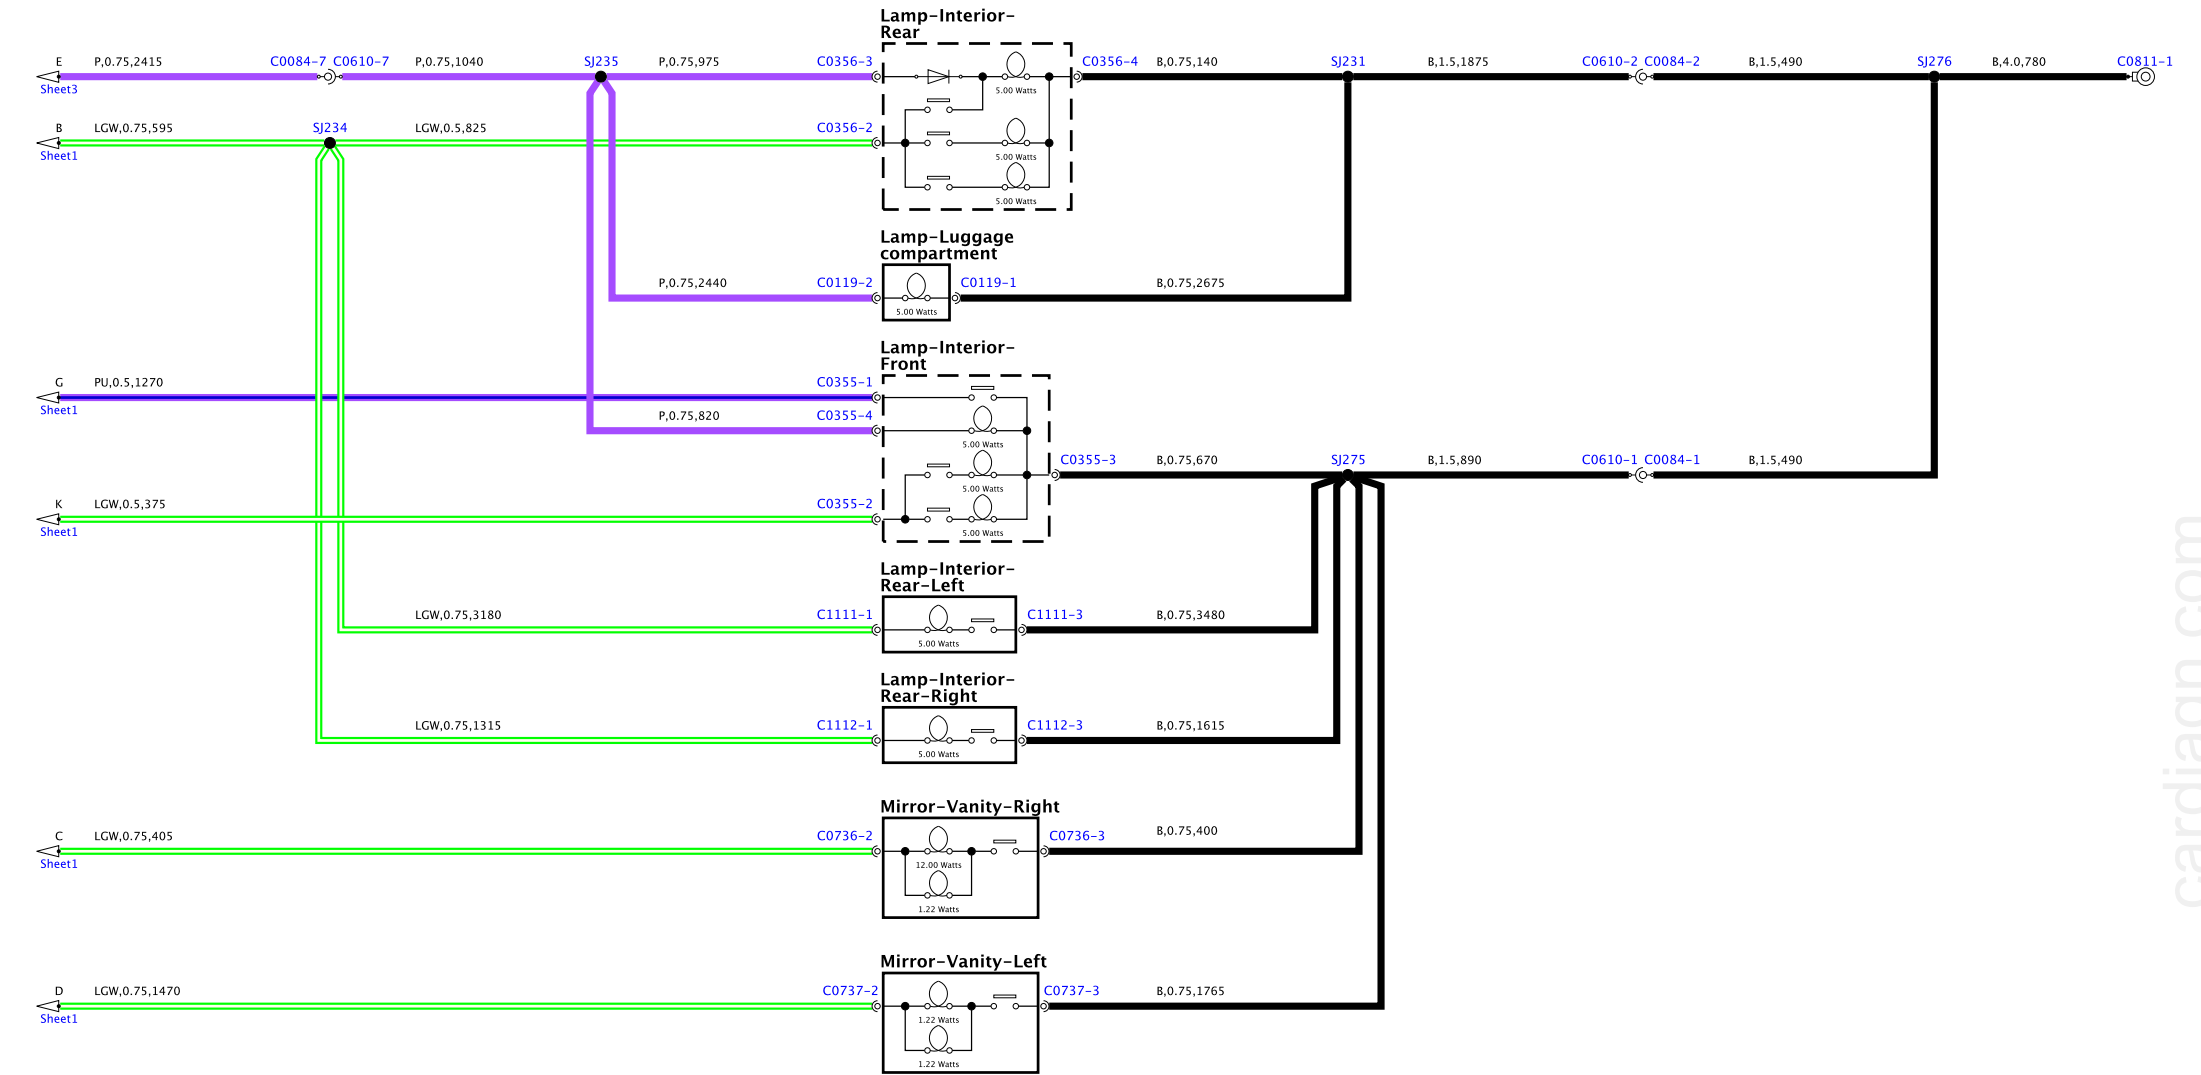


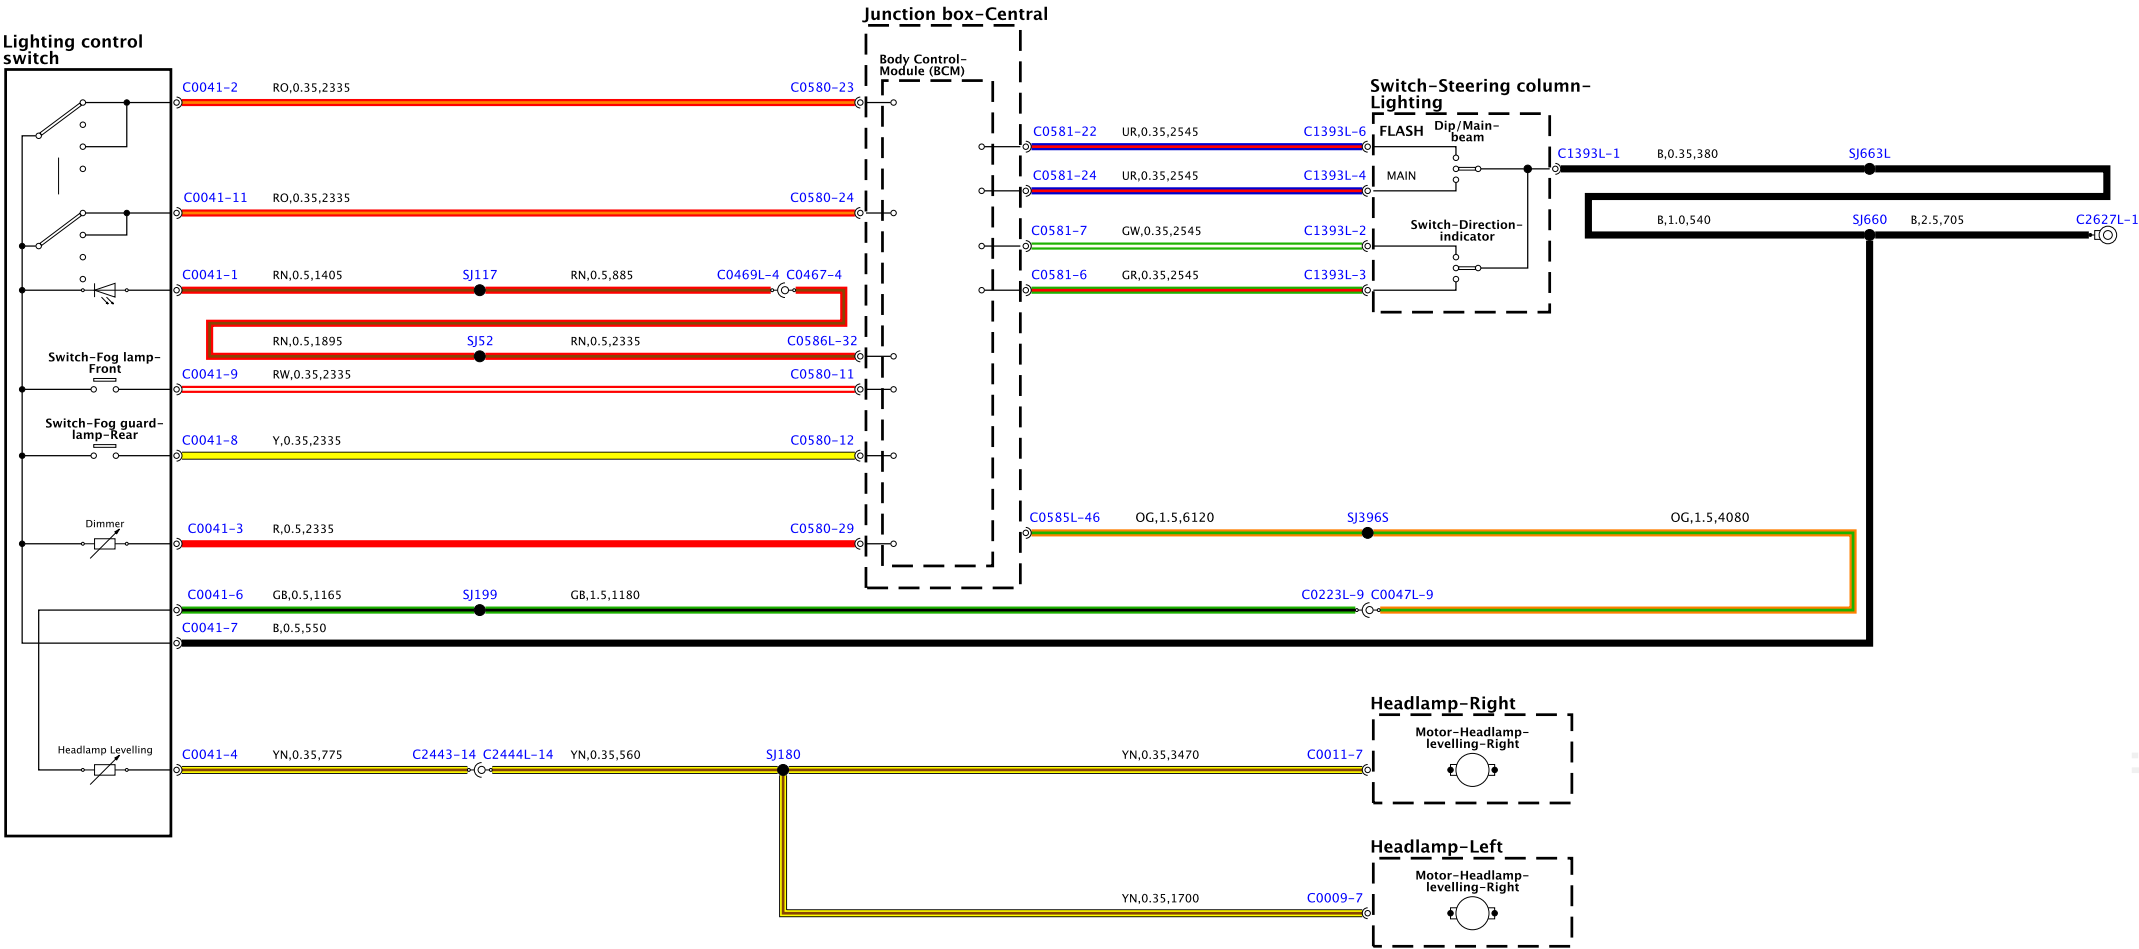


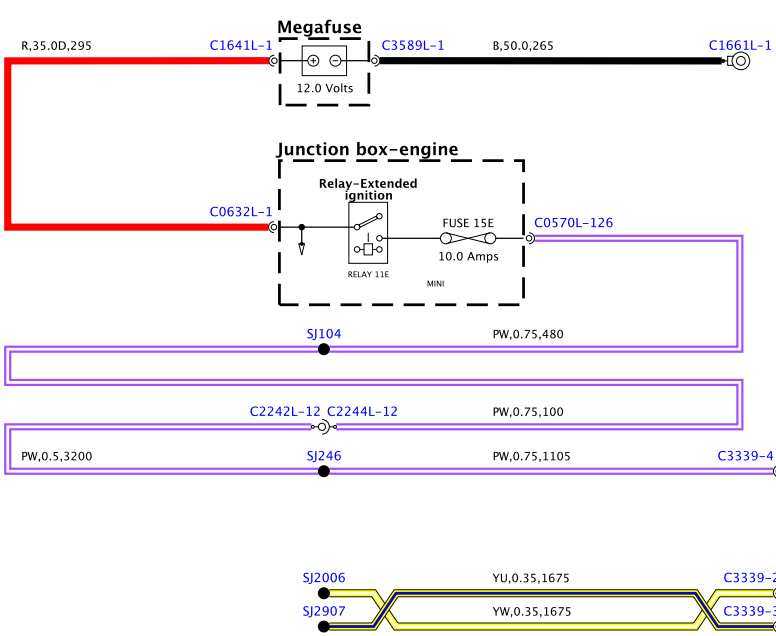



Module-
Image processing

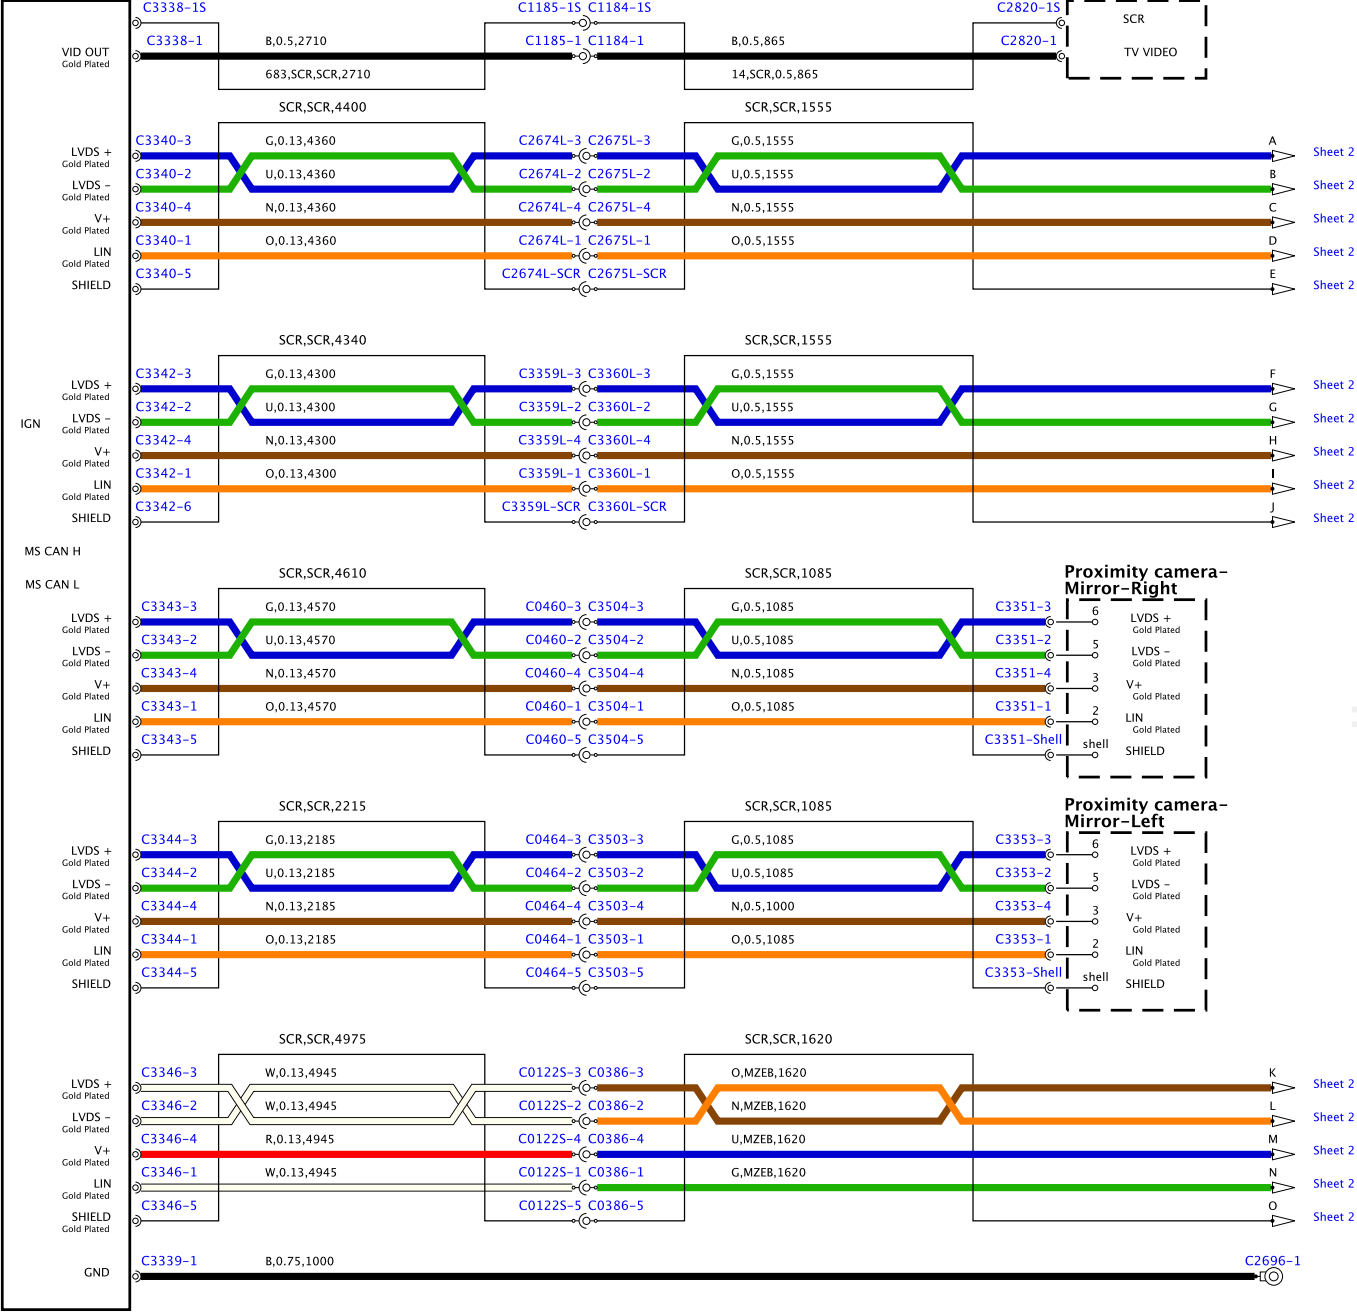

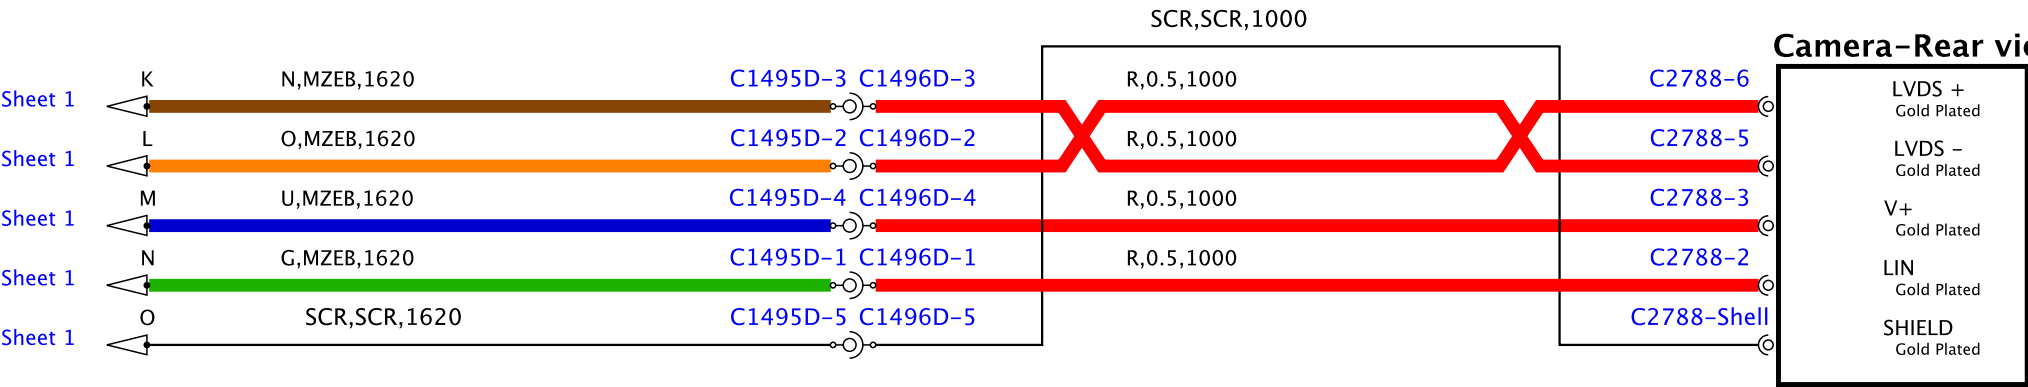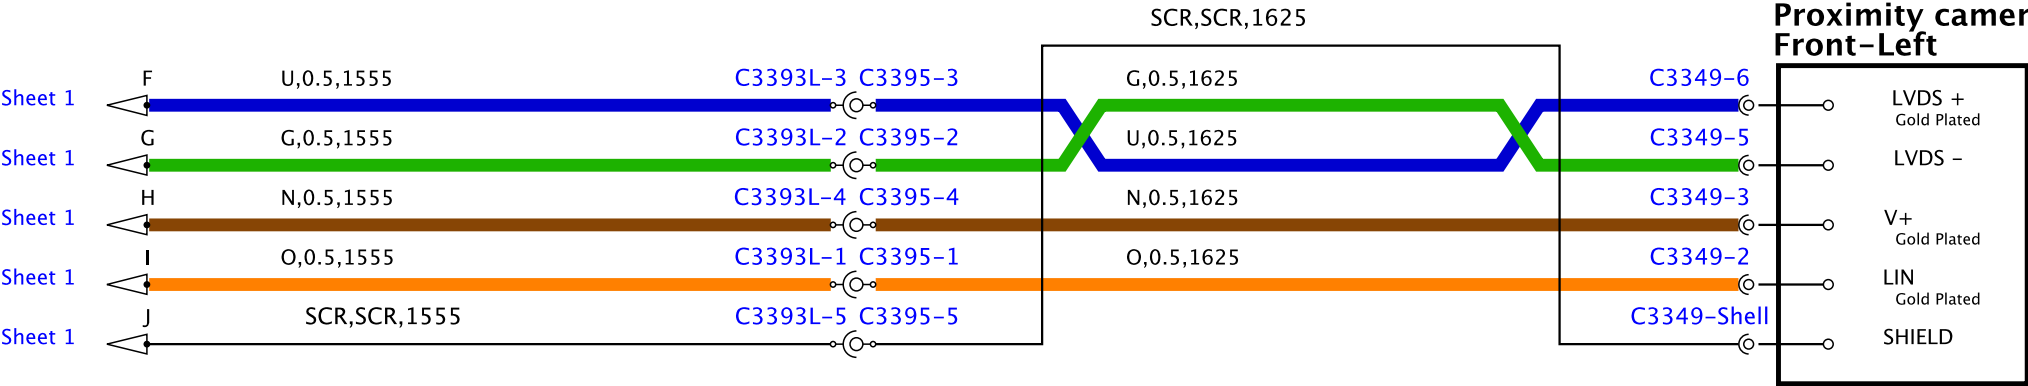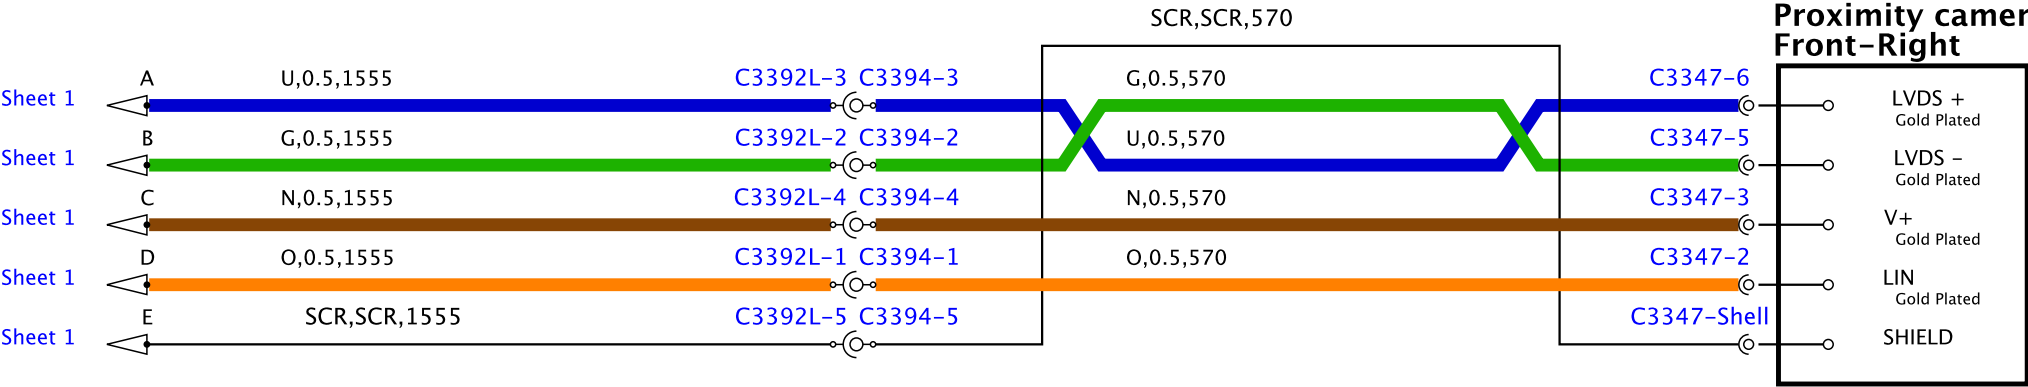

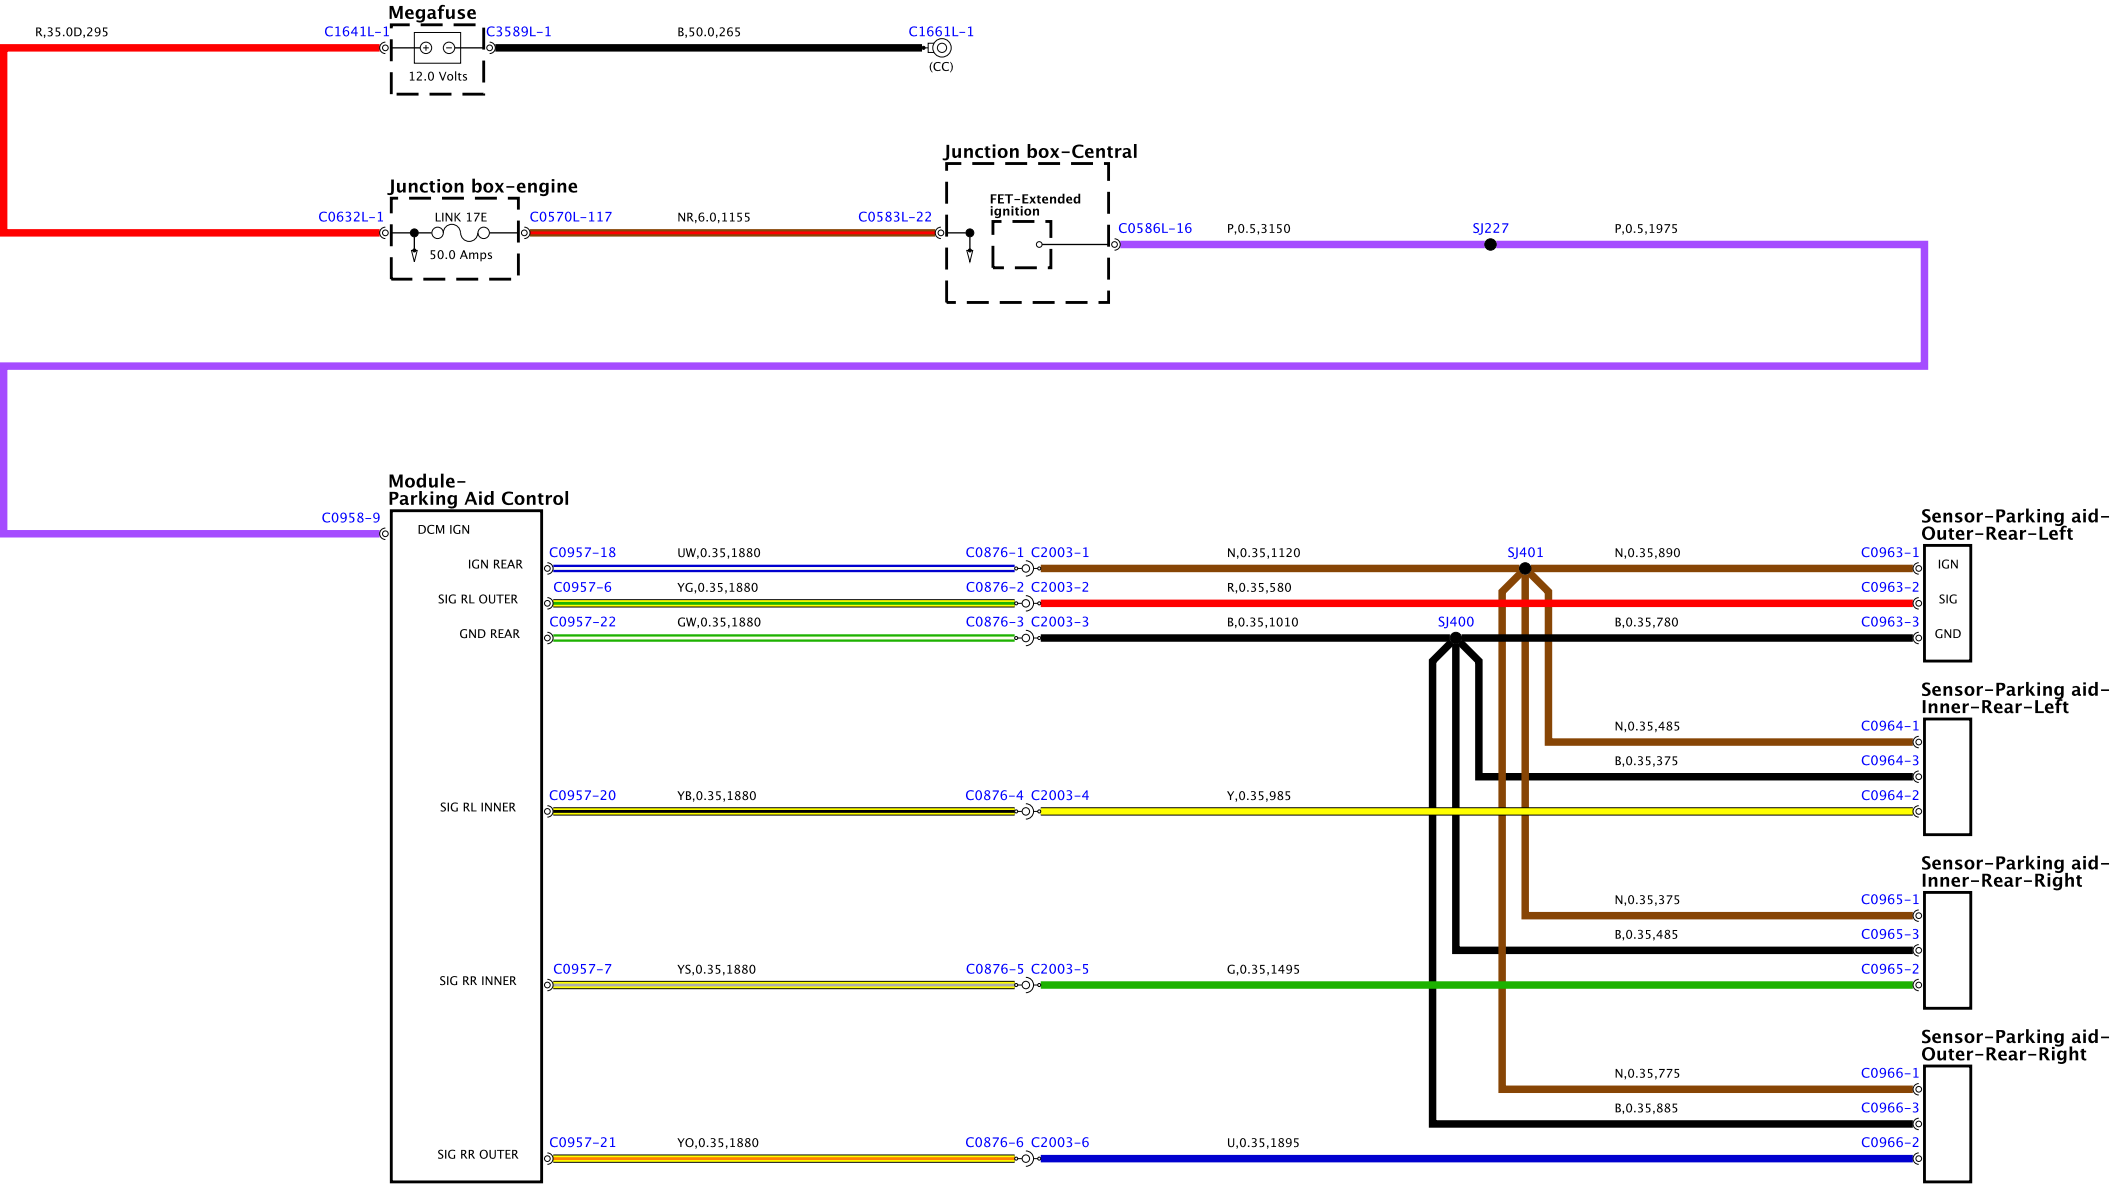

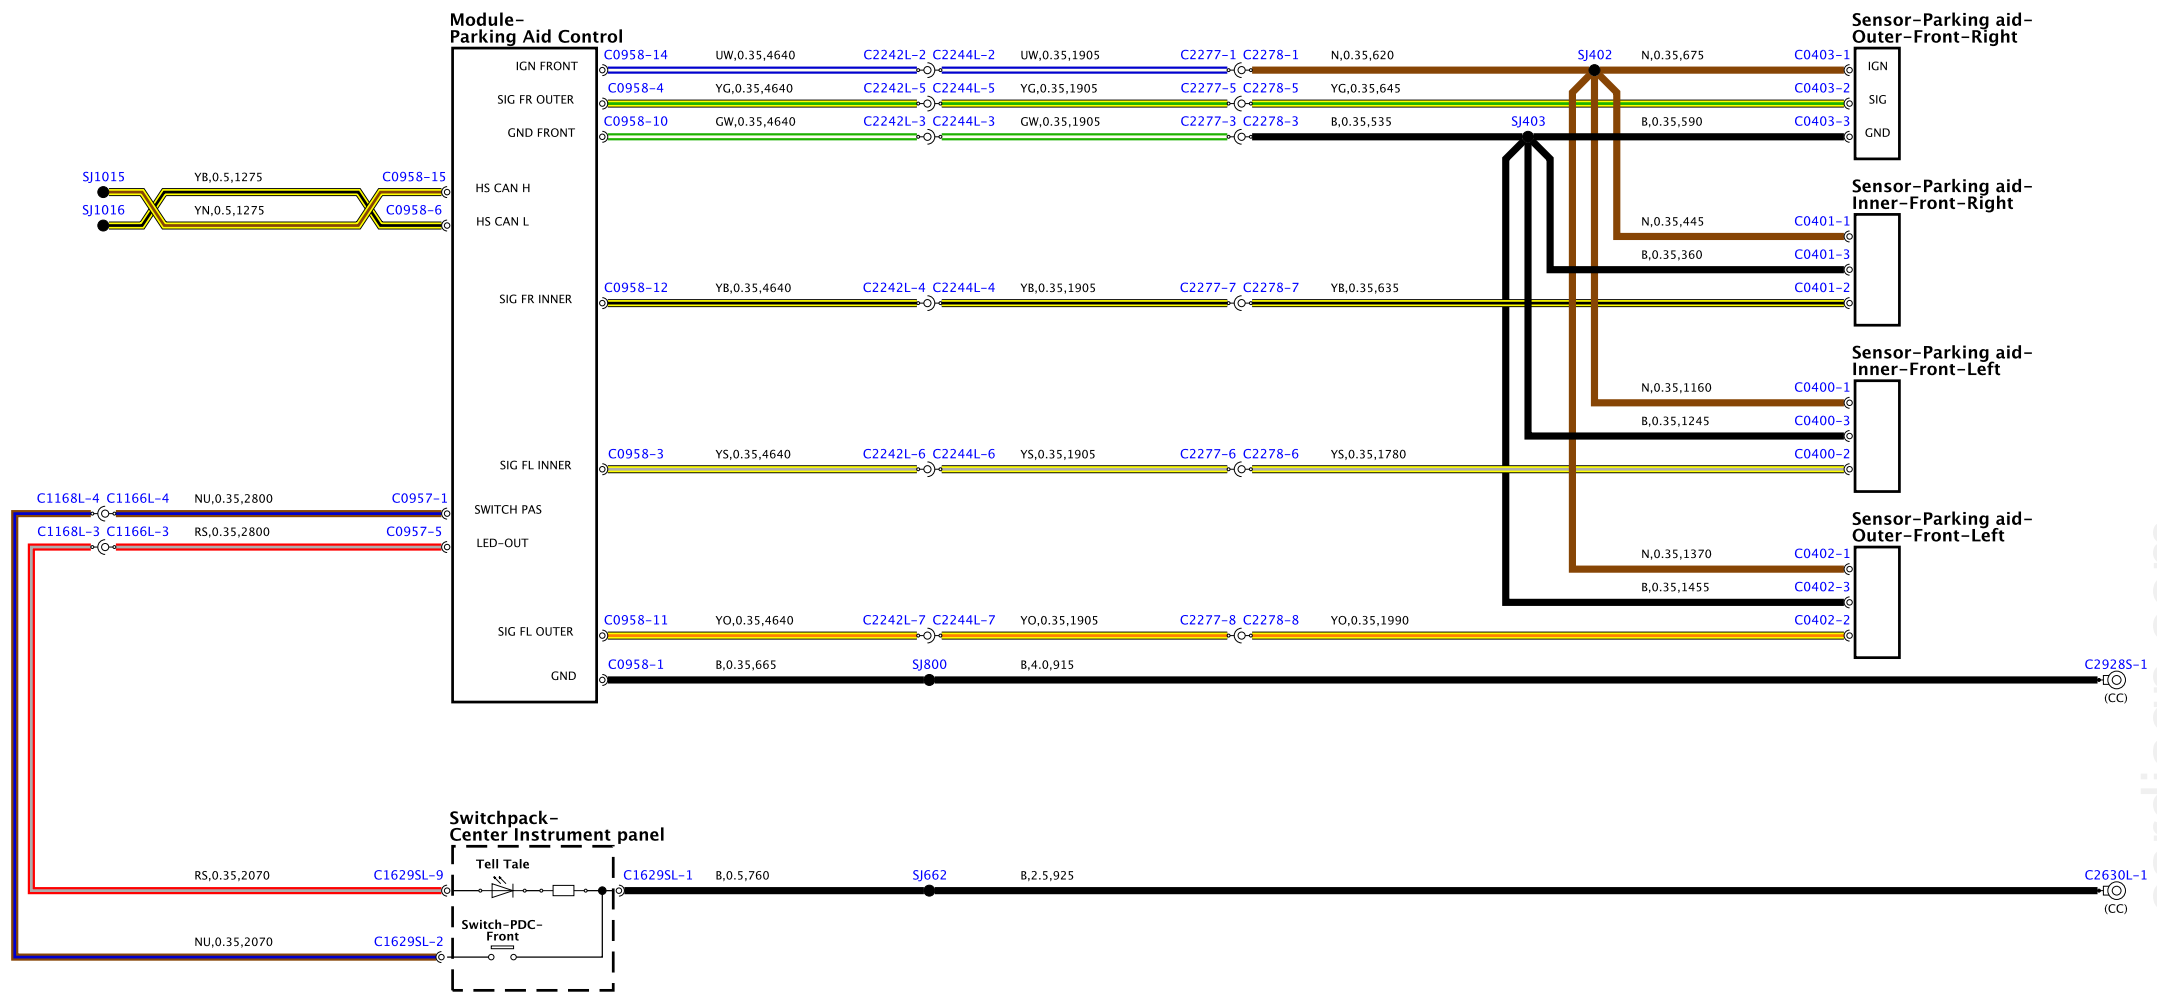

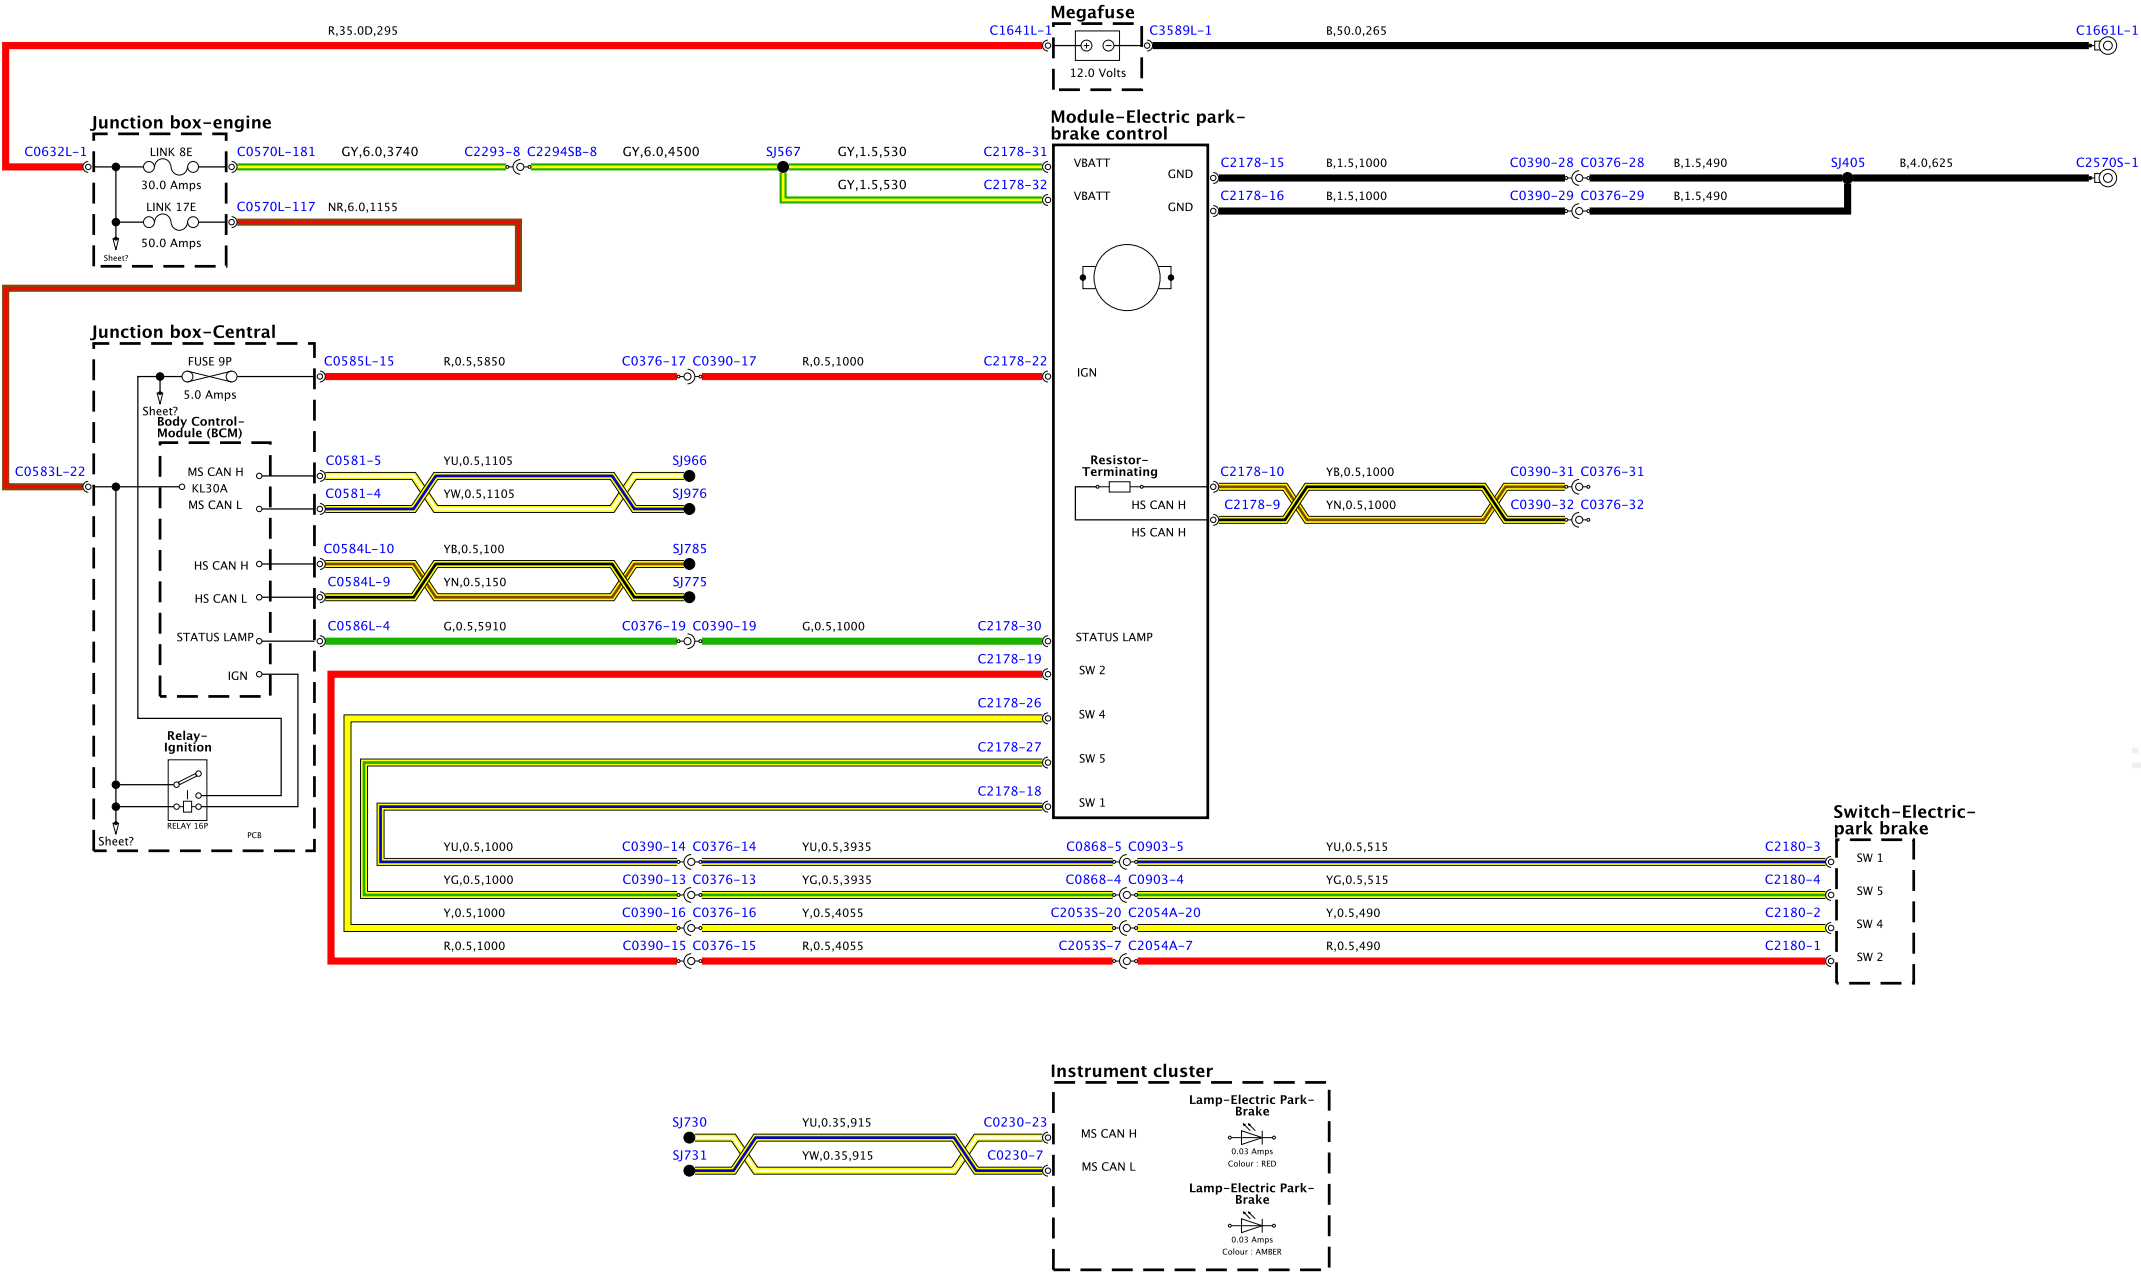






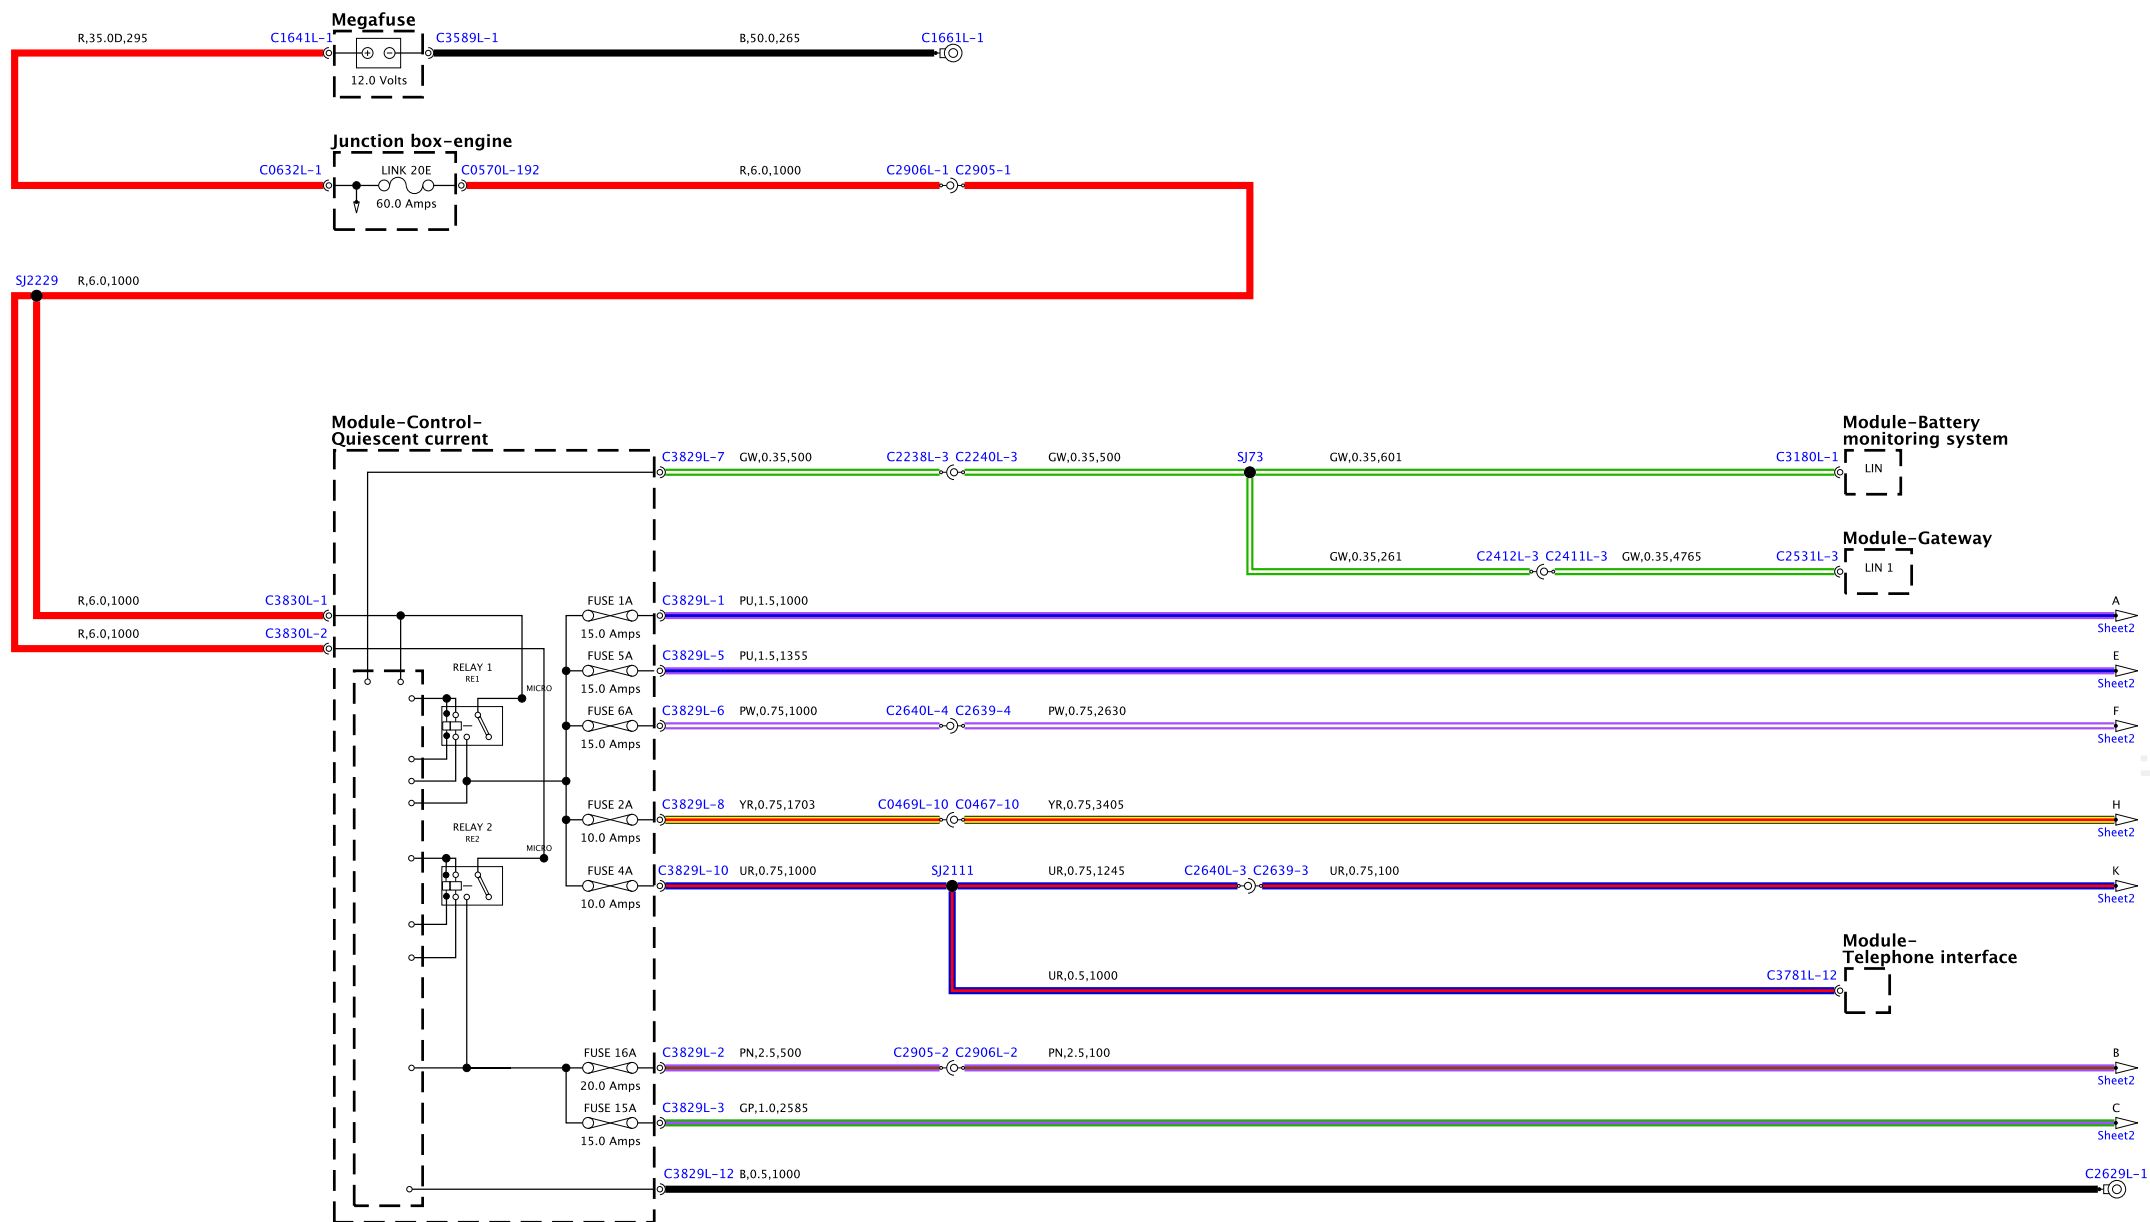



FIG21-70010-J-A-02-02-Service (313-15MY-PJ3)

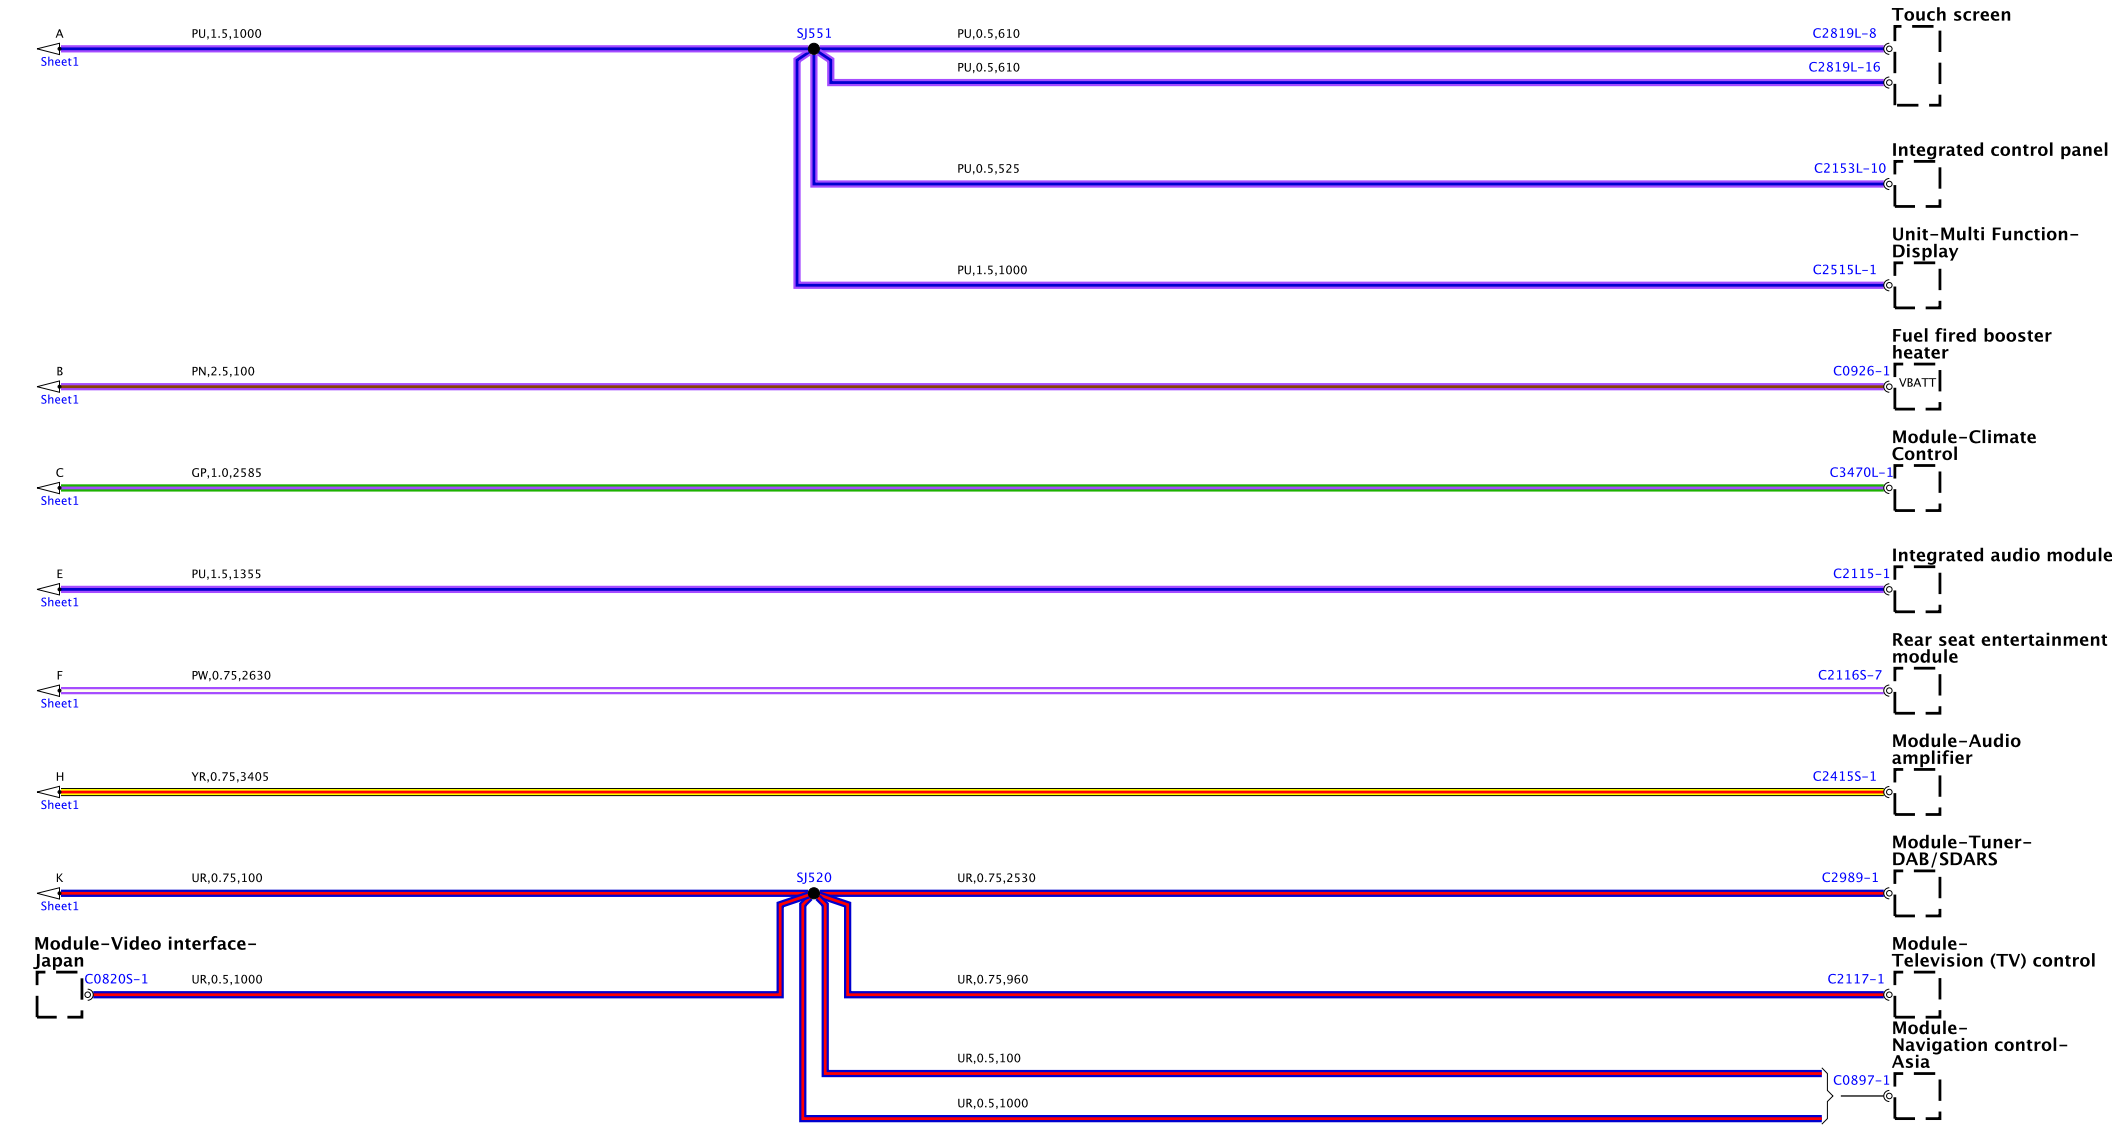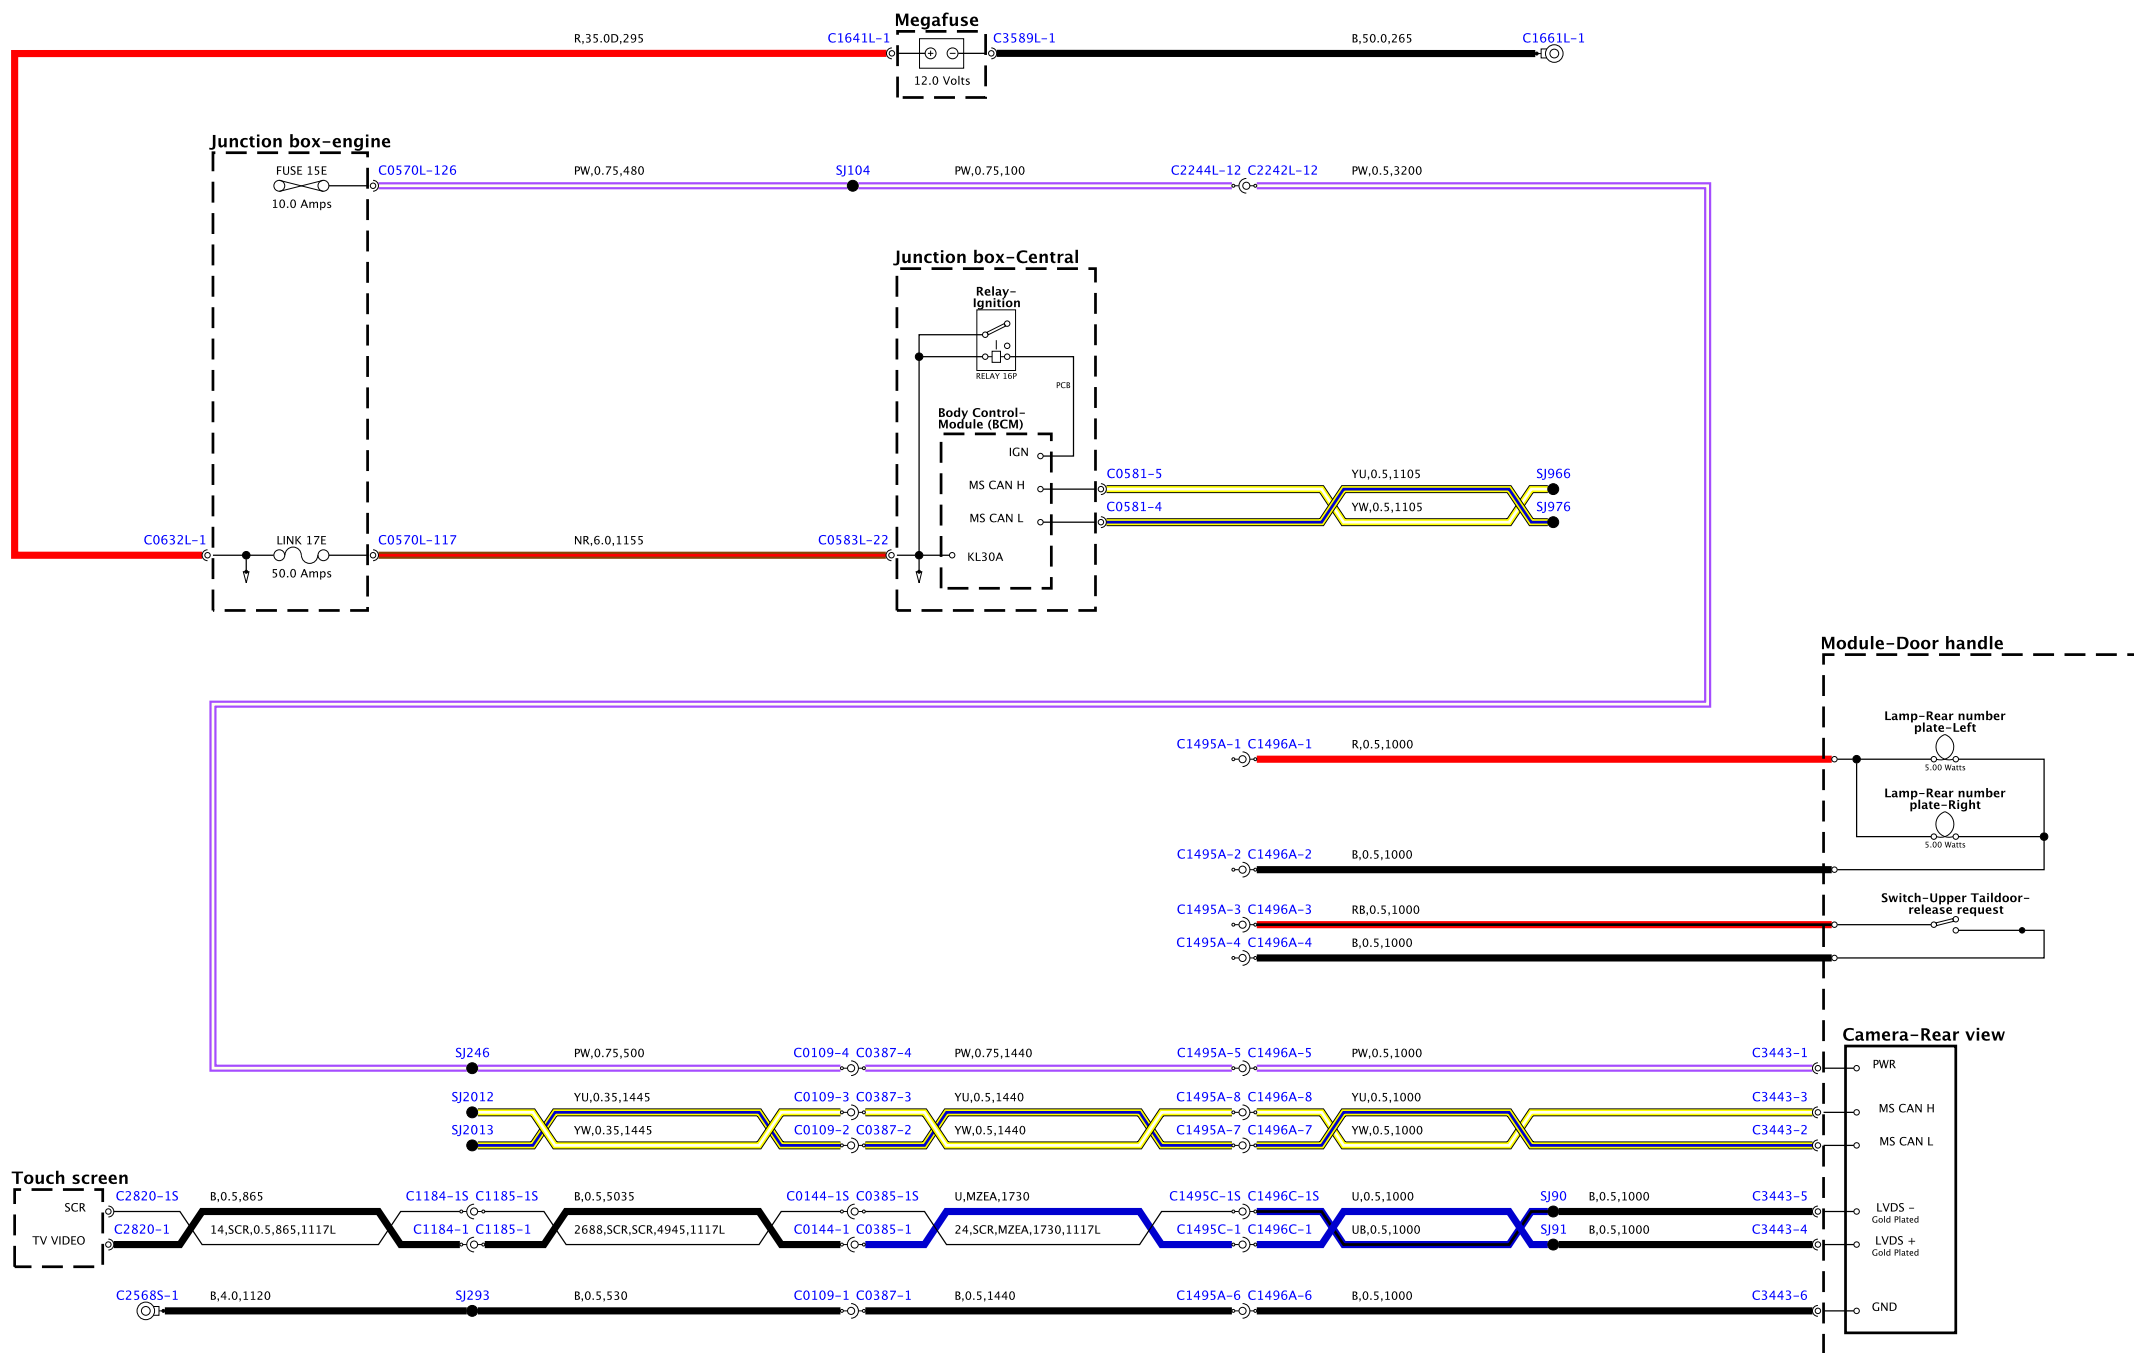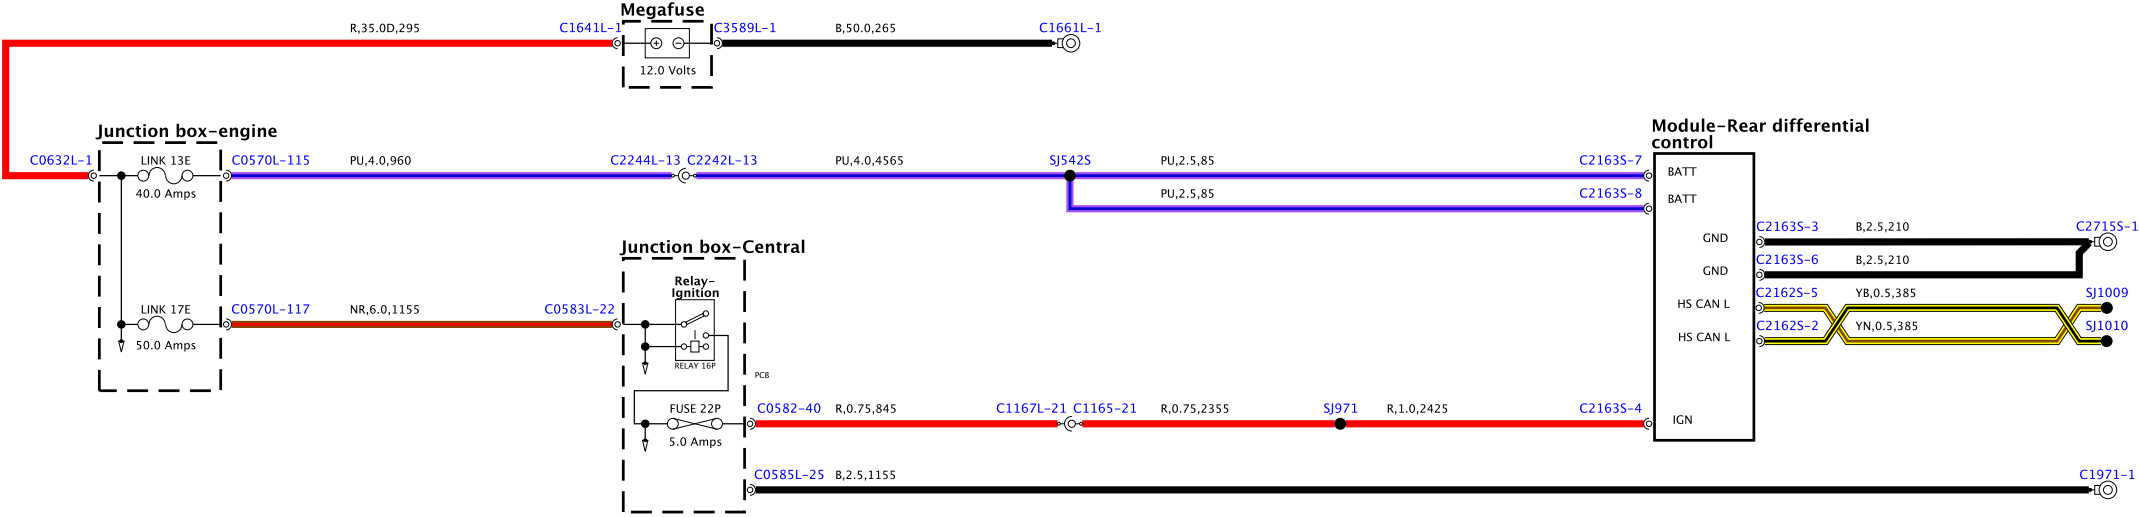


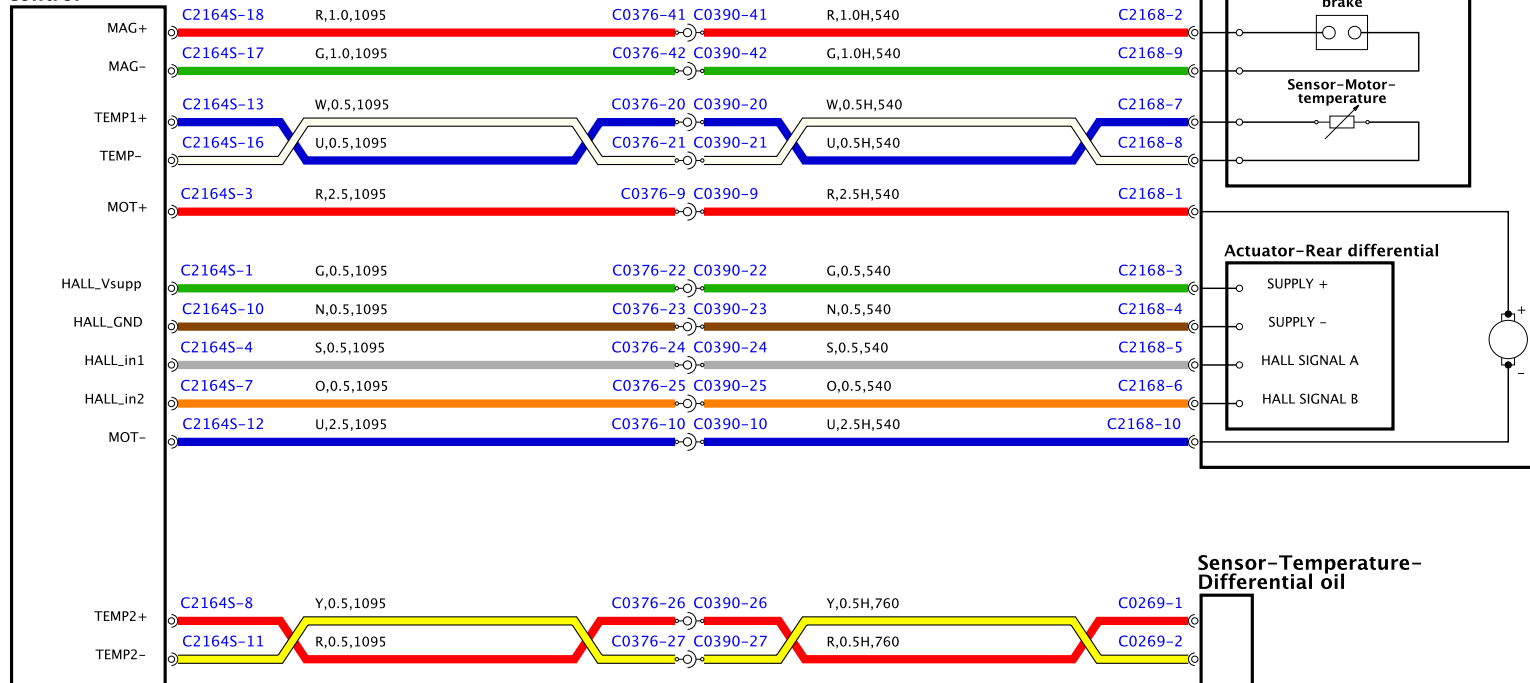


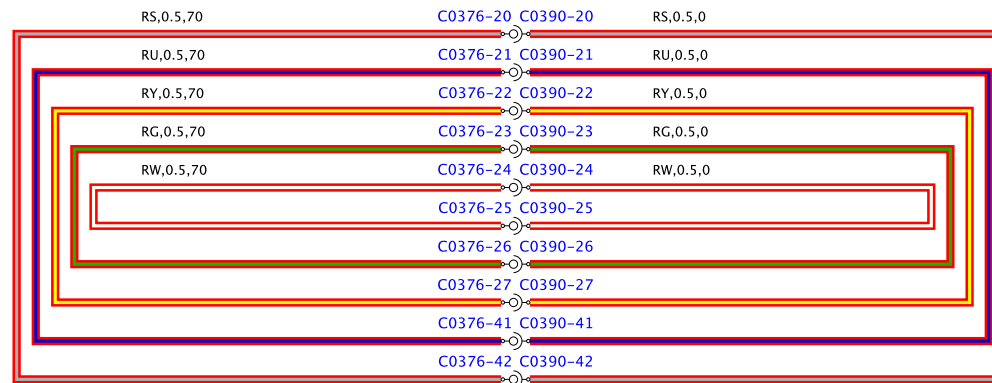



Module-Rear differential control**FOR NON REAR DIFFERENTIAL**

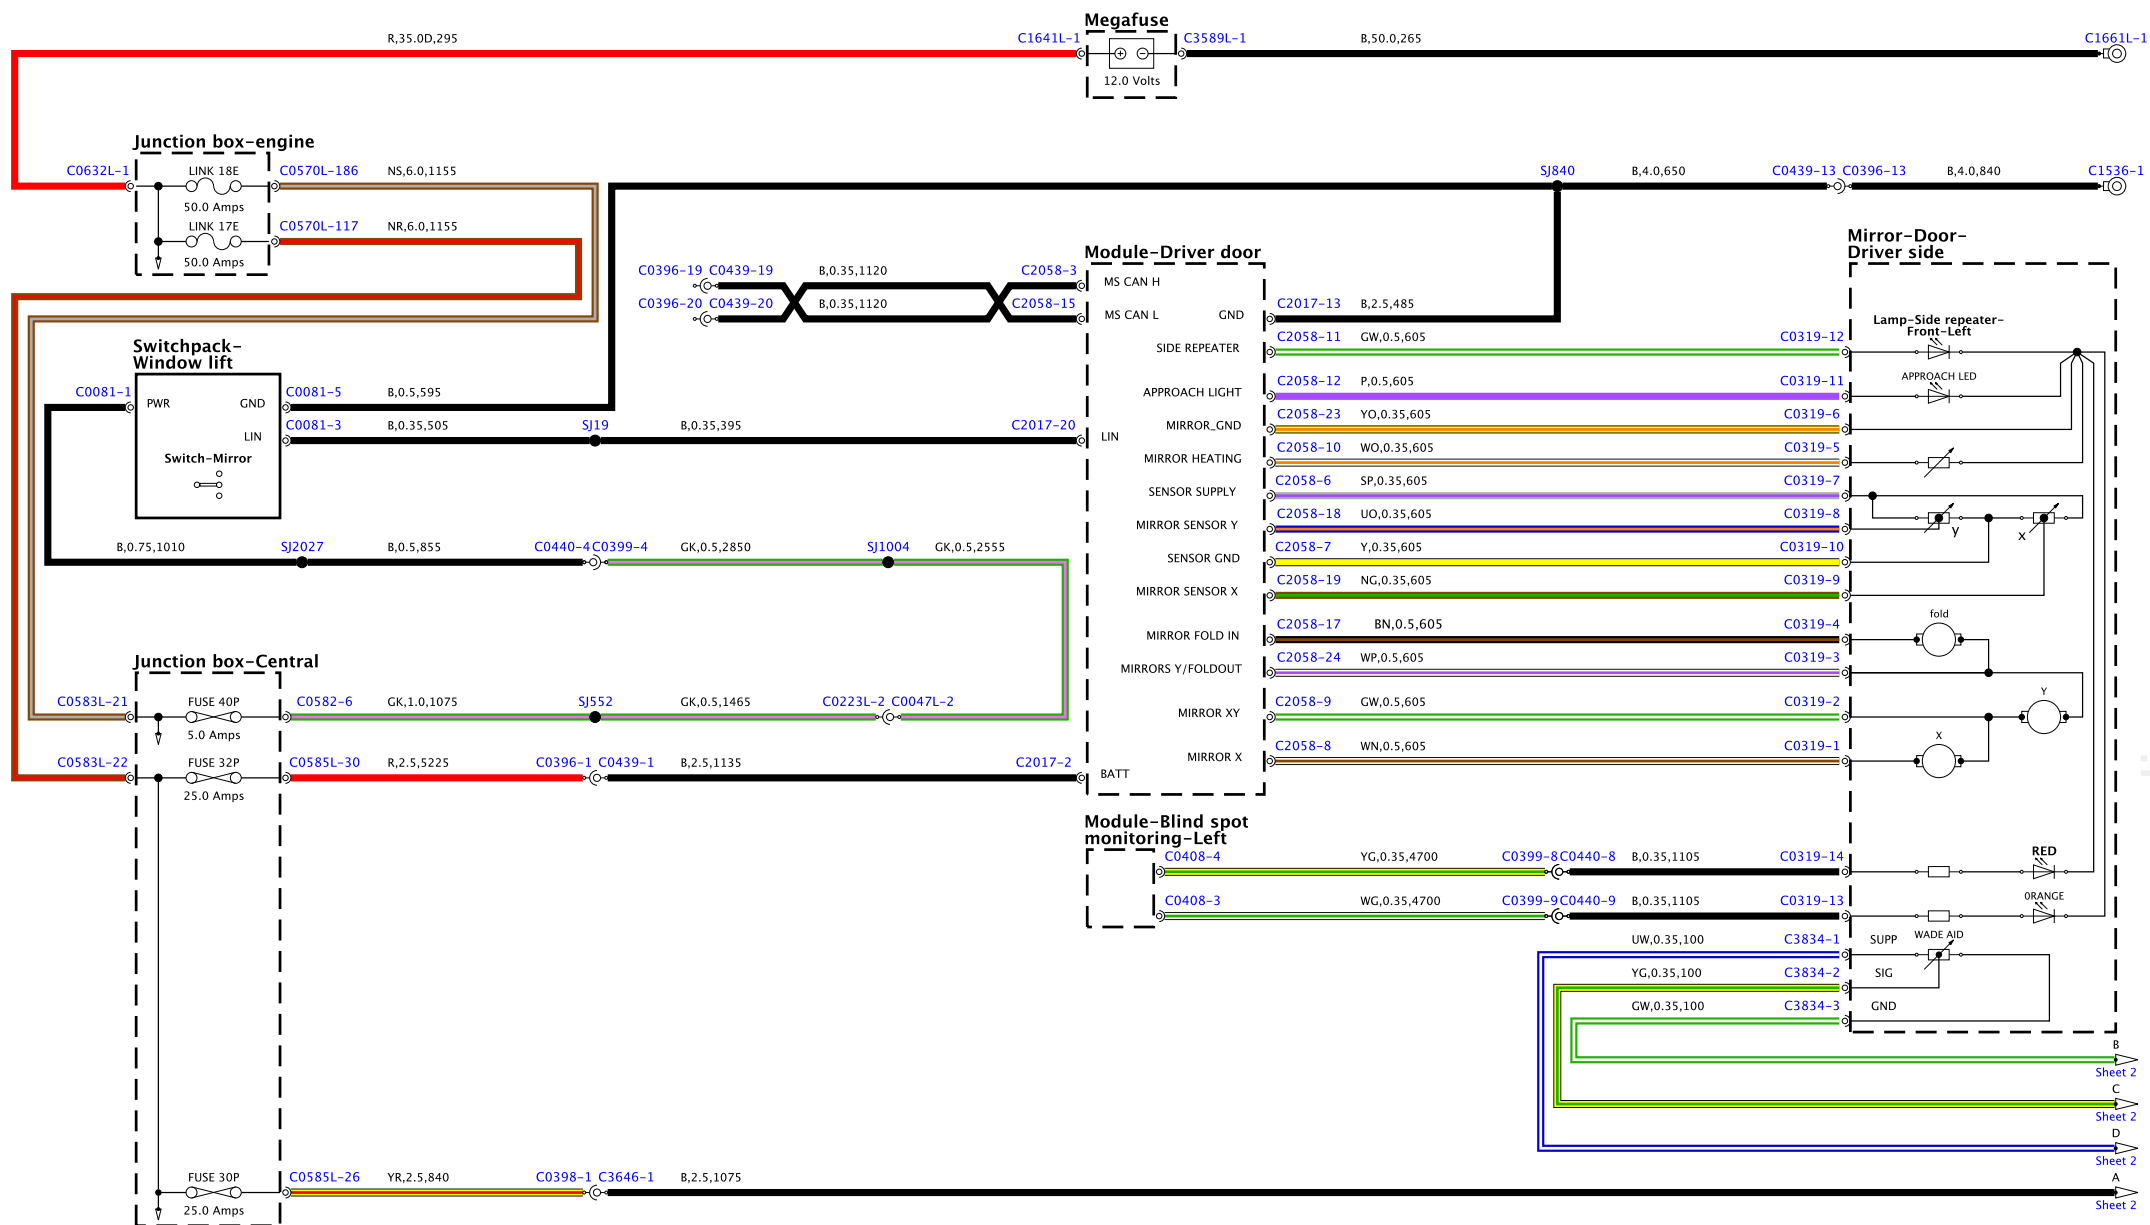

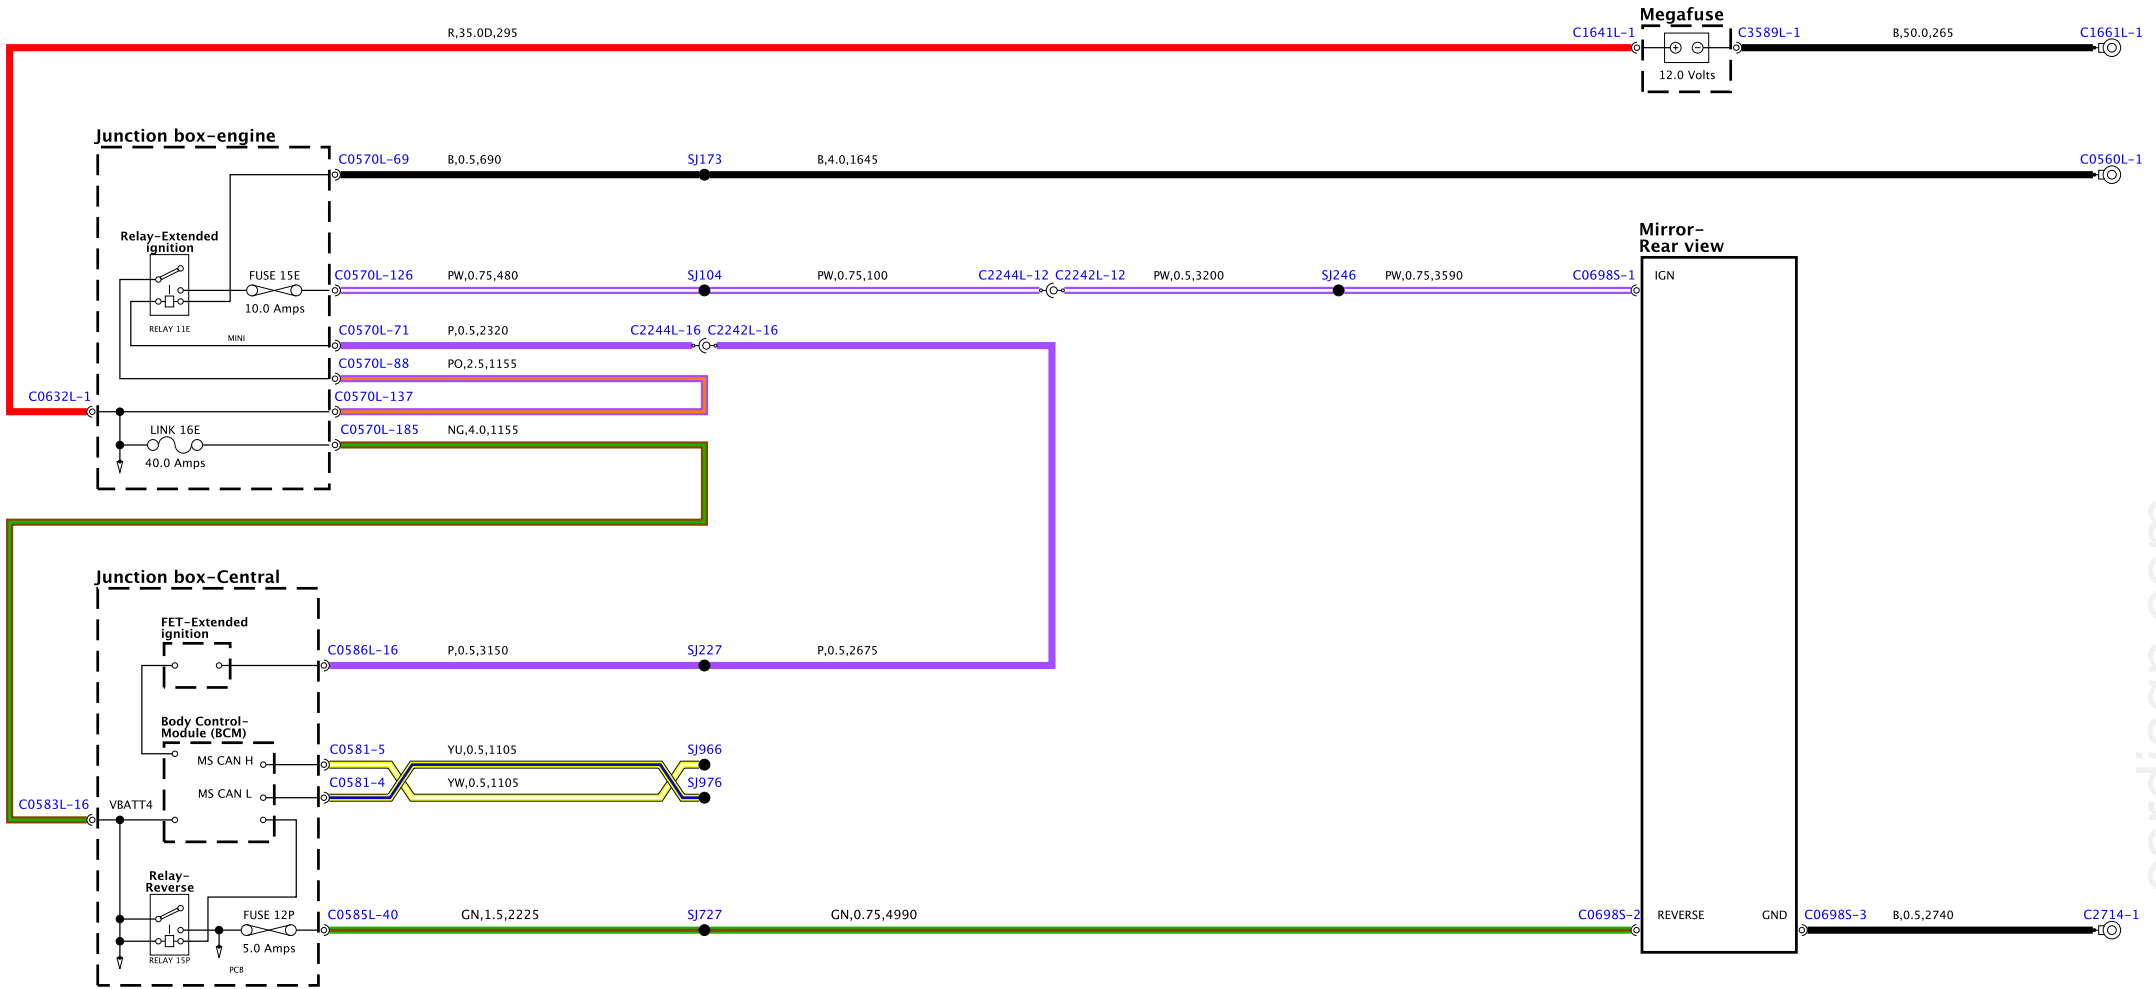


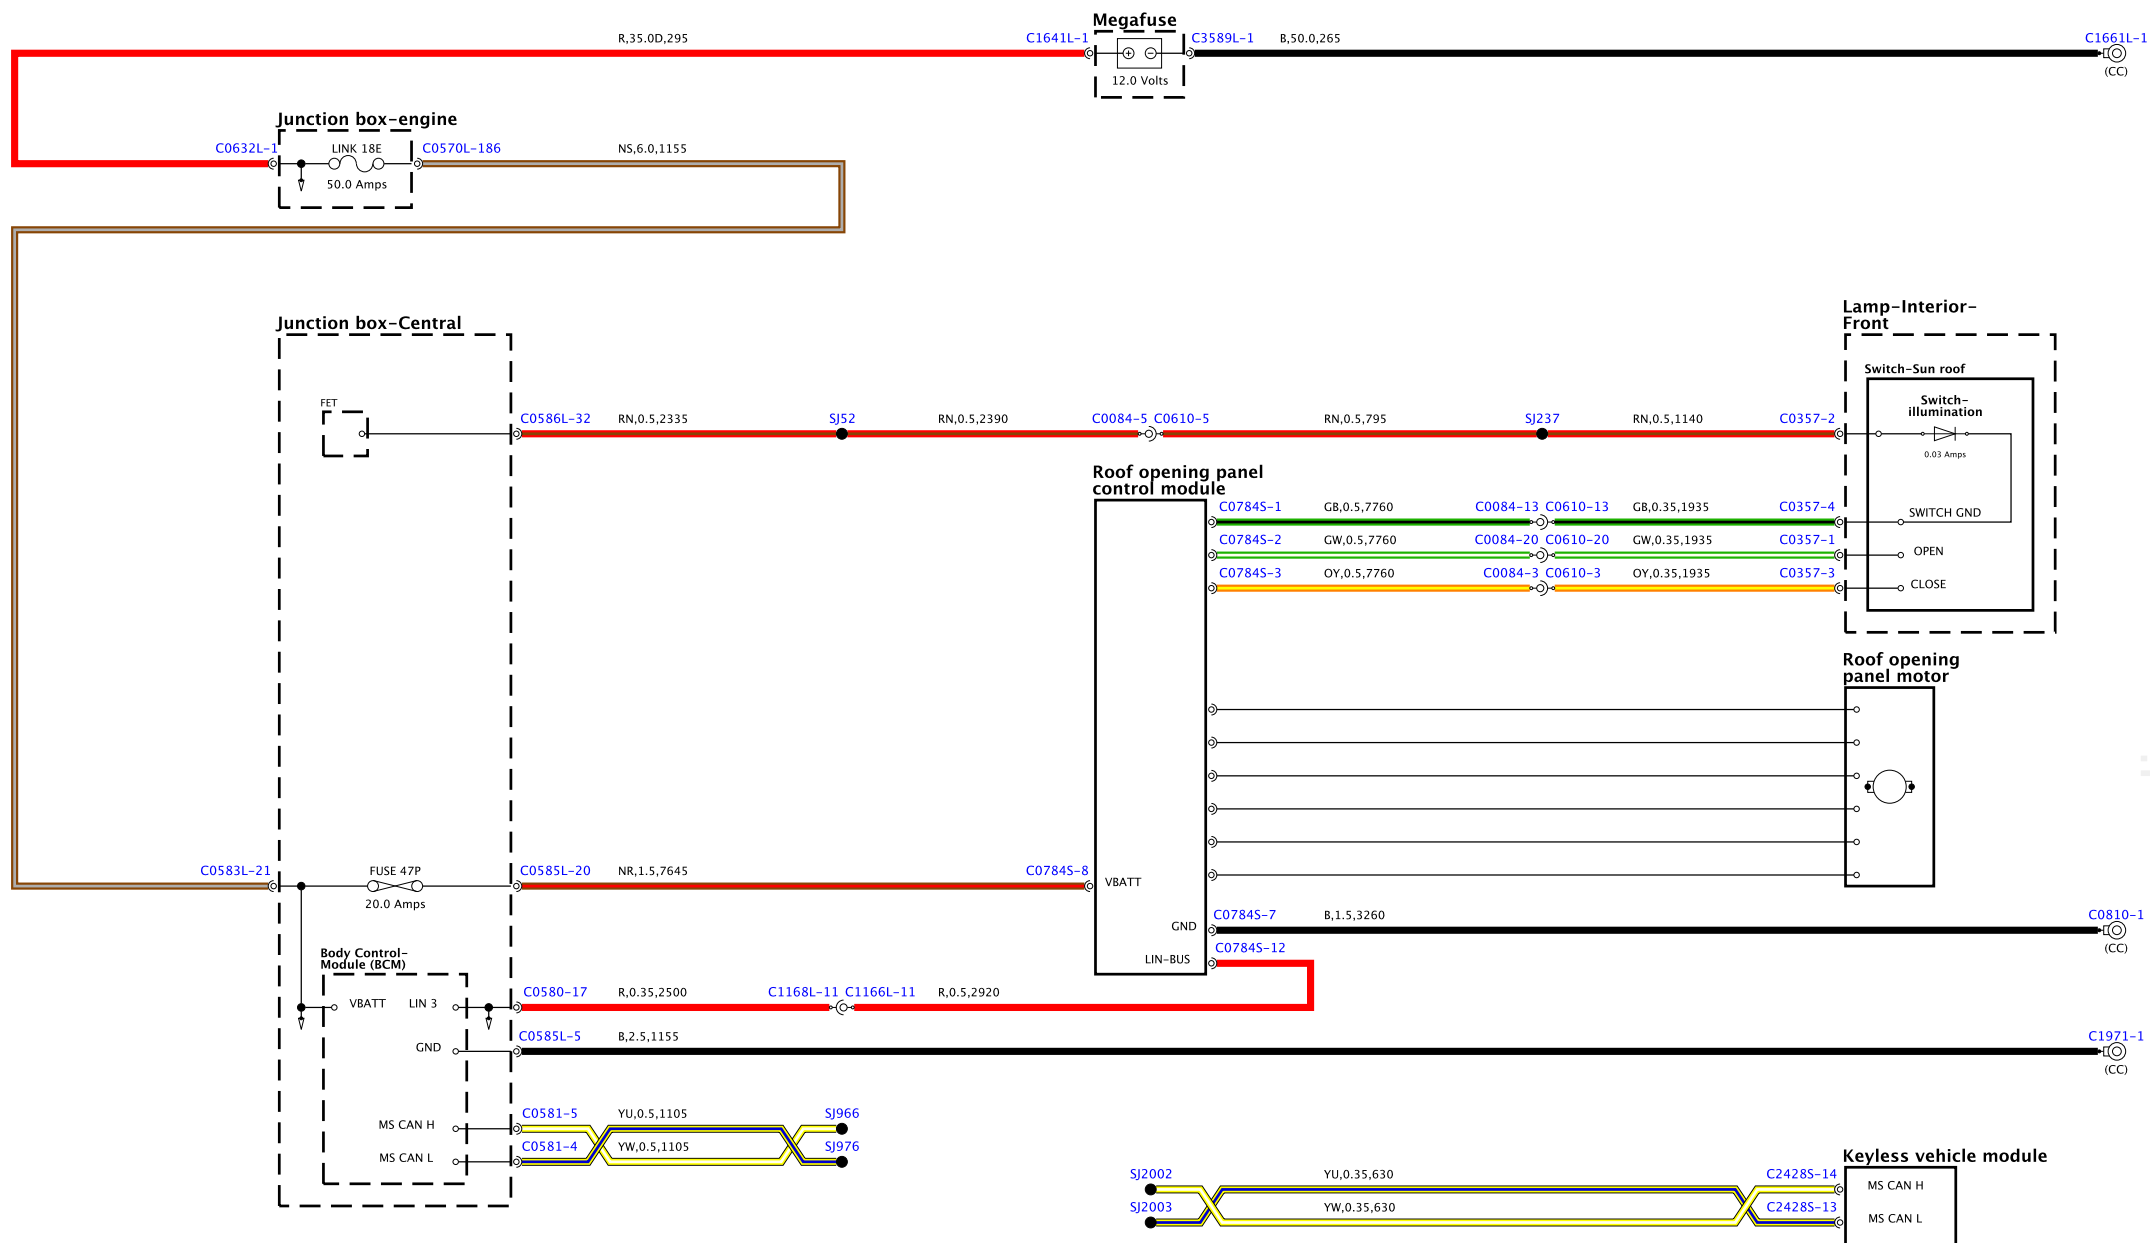


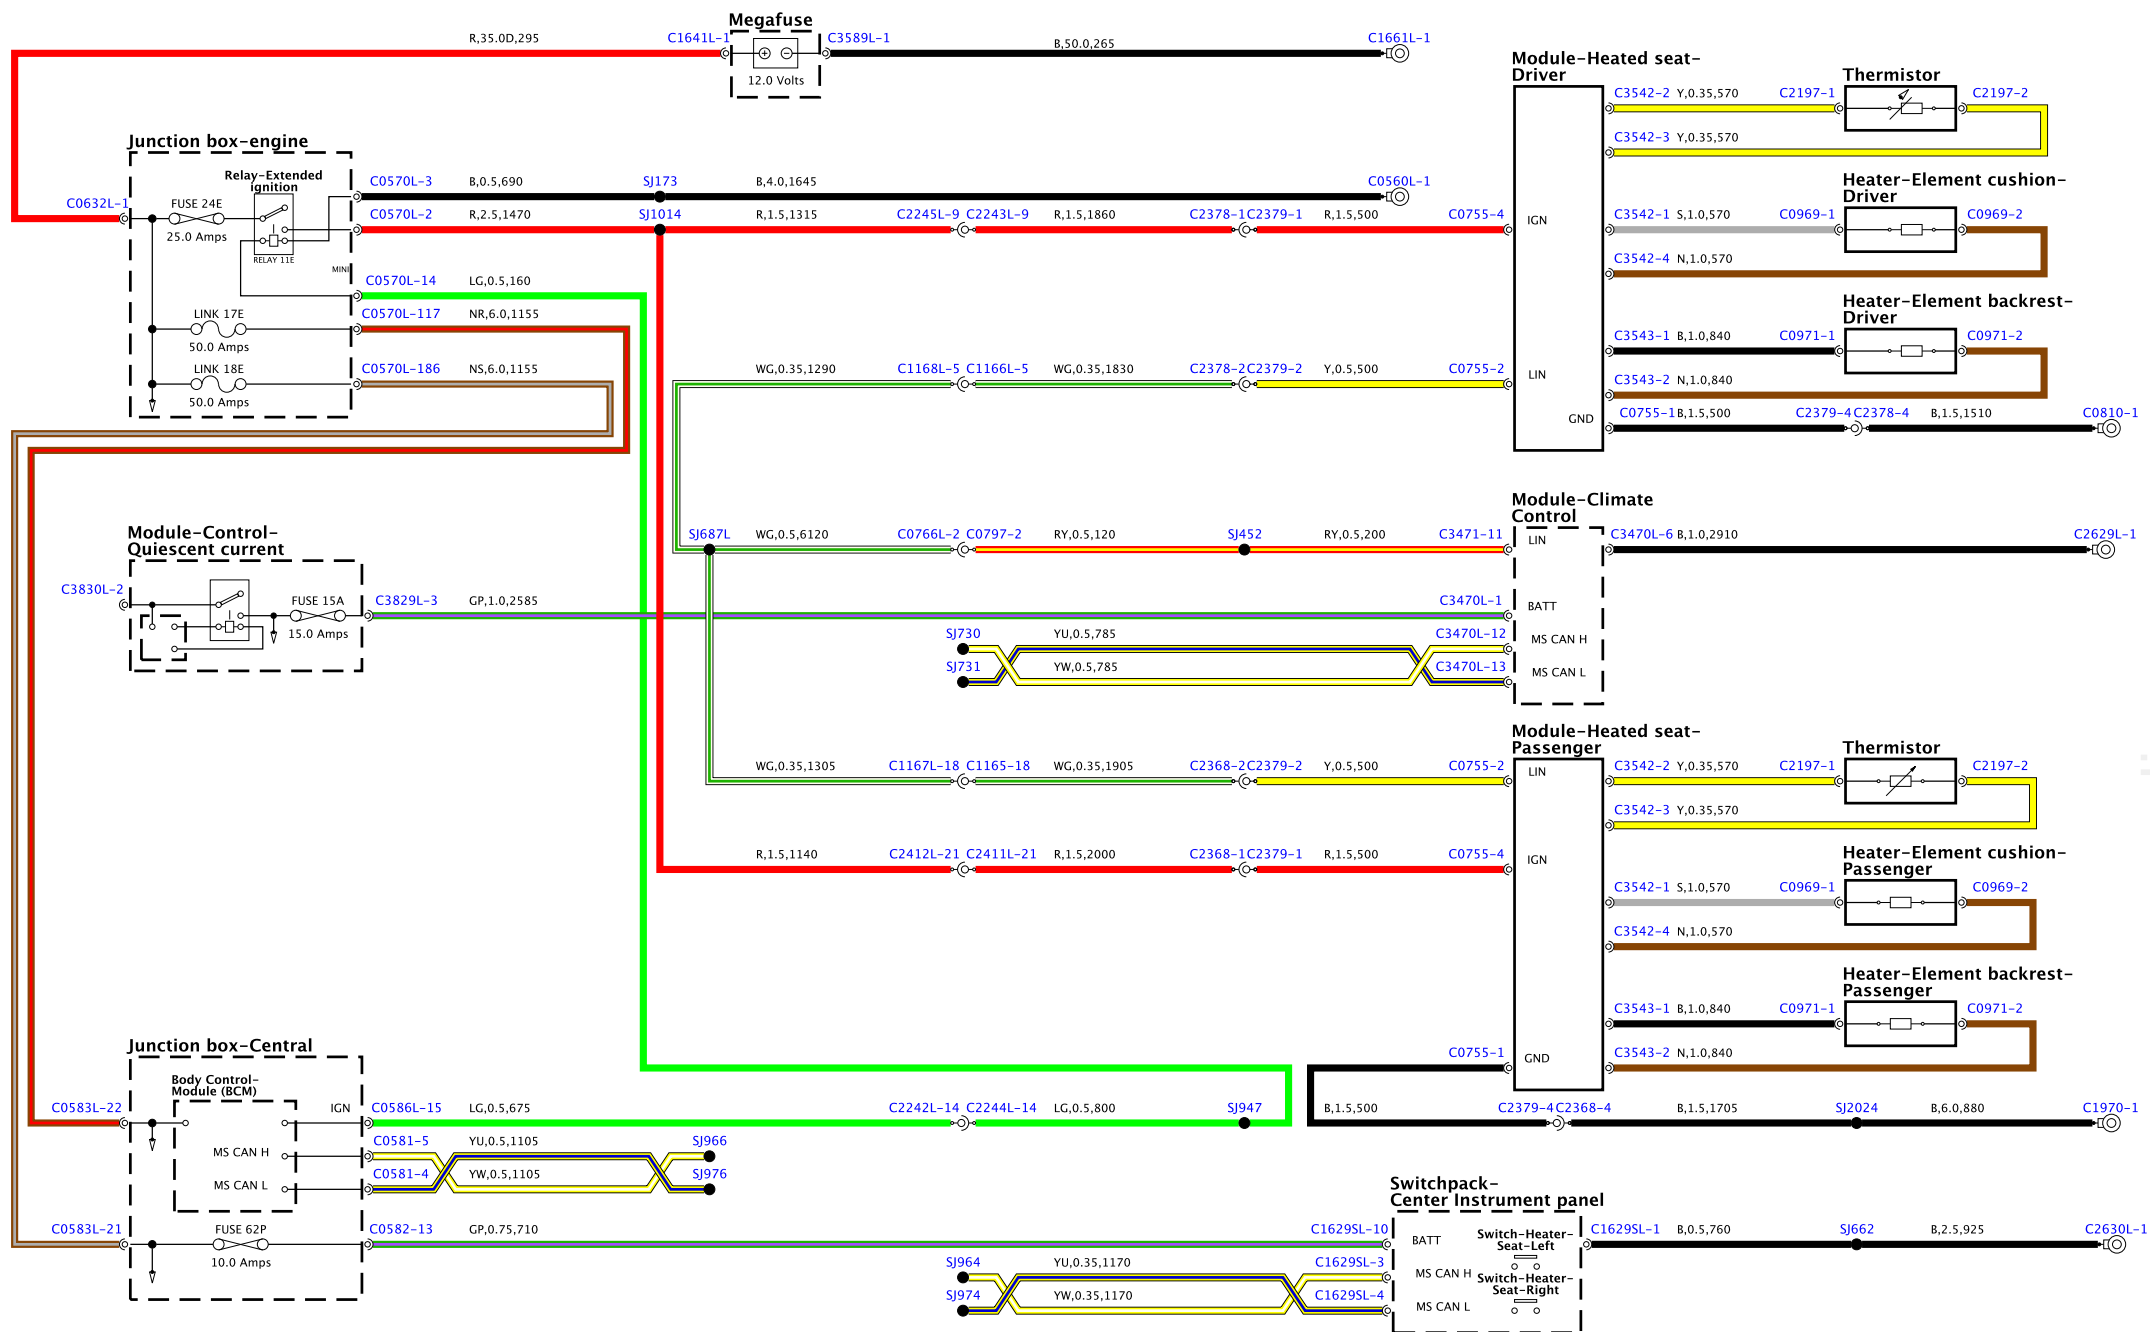


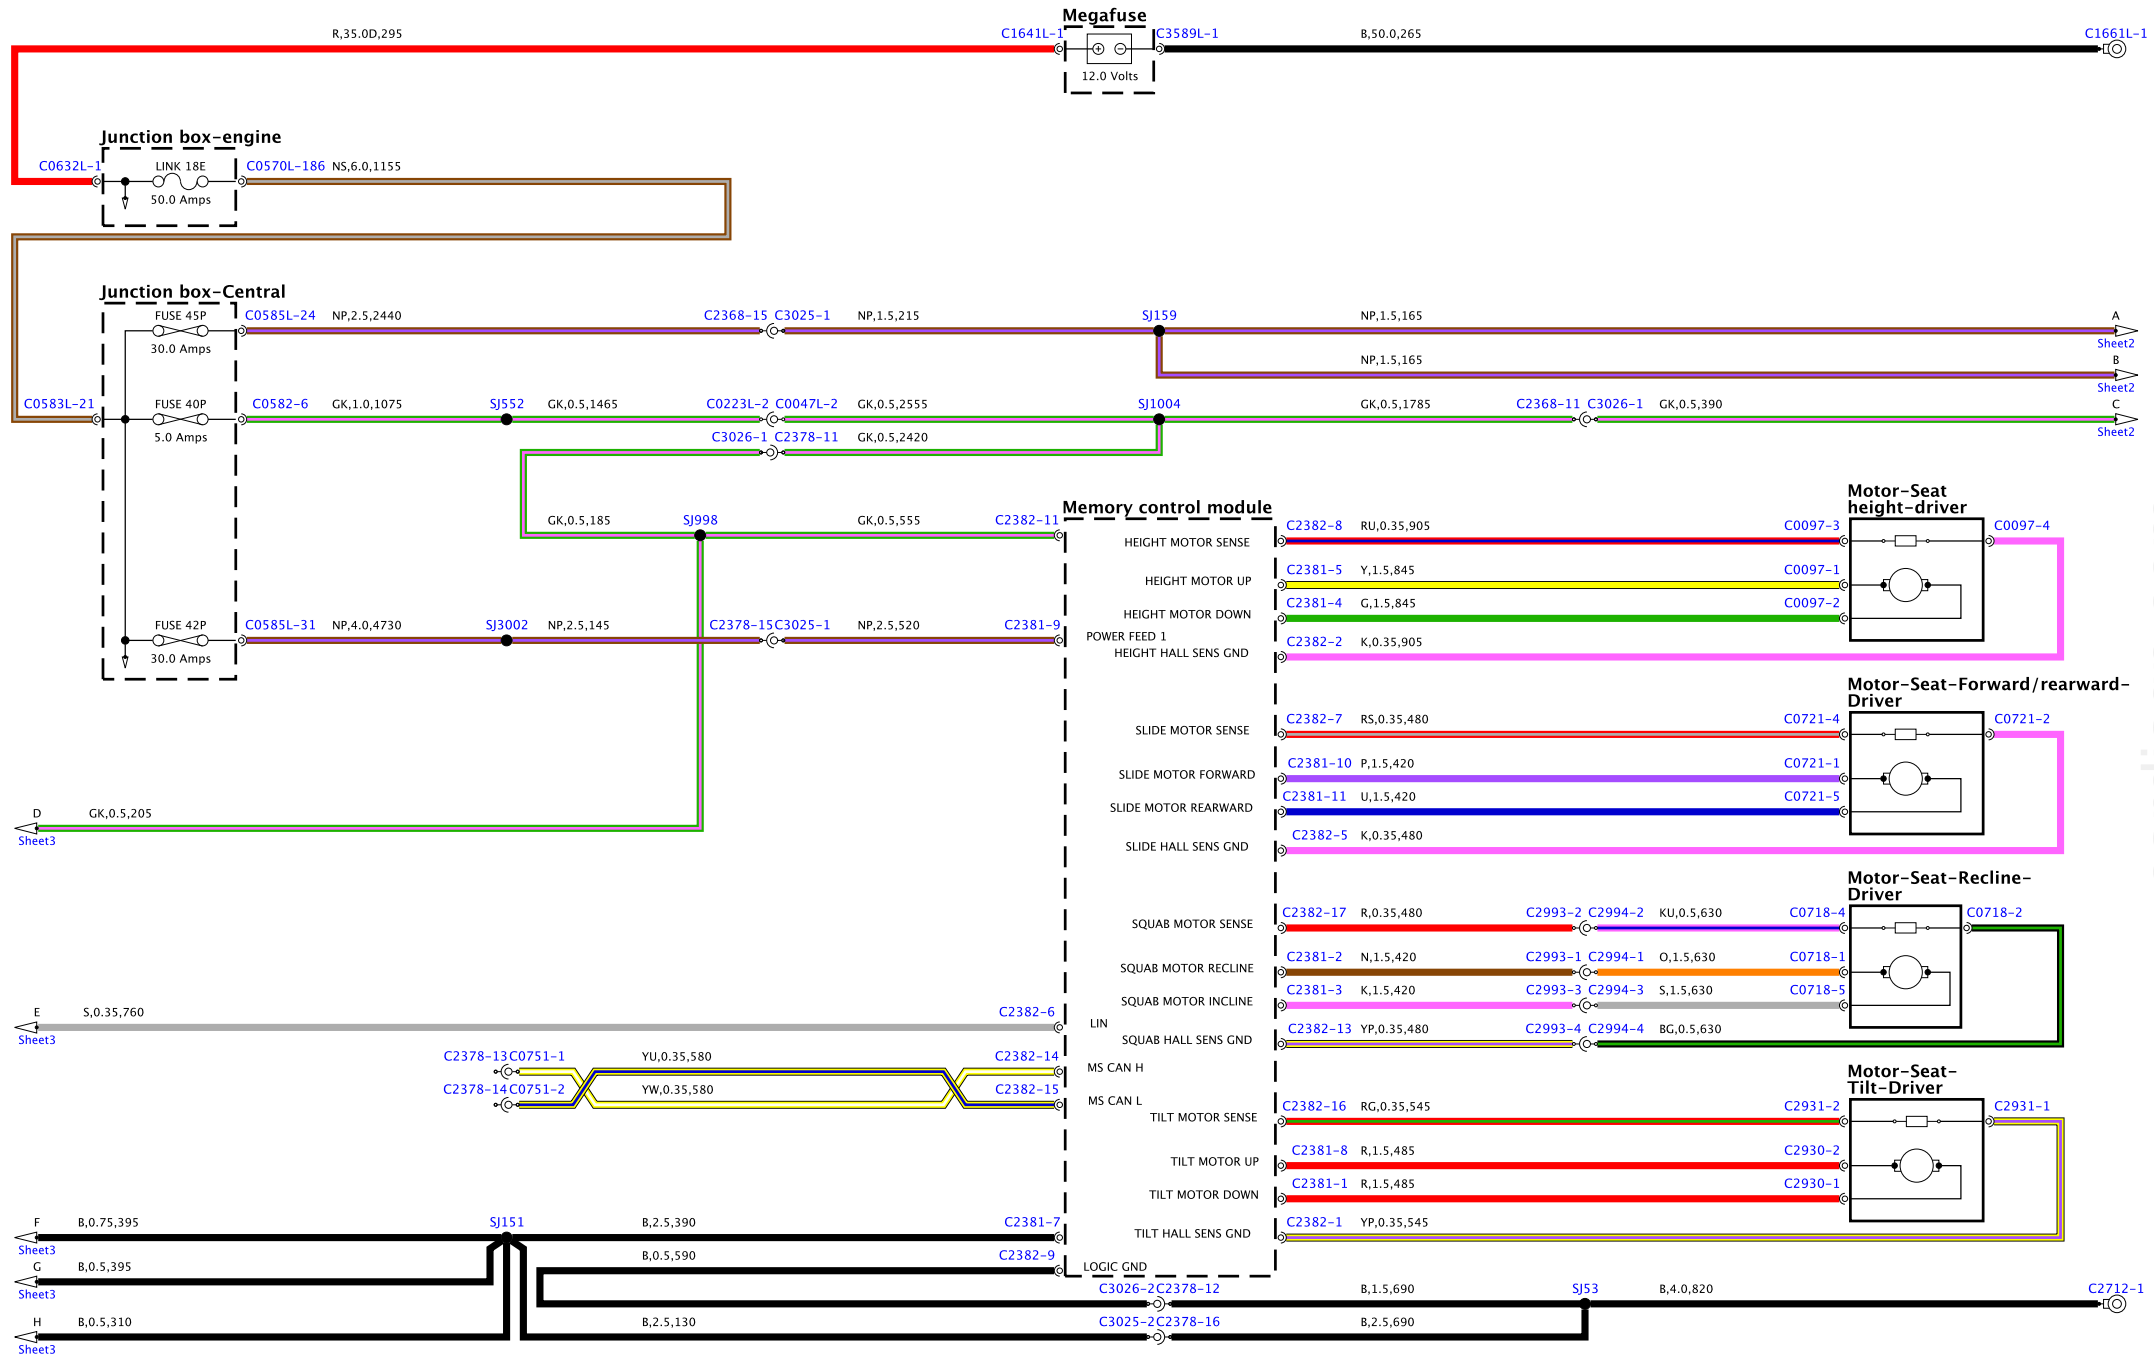





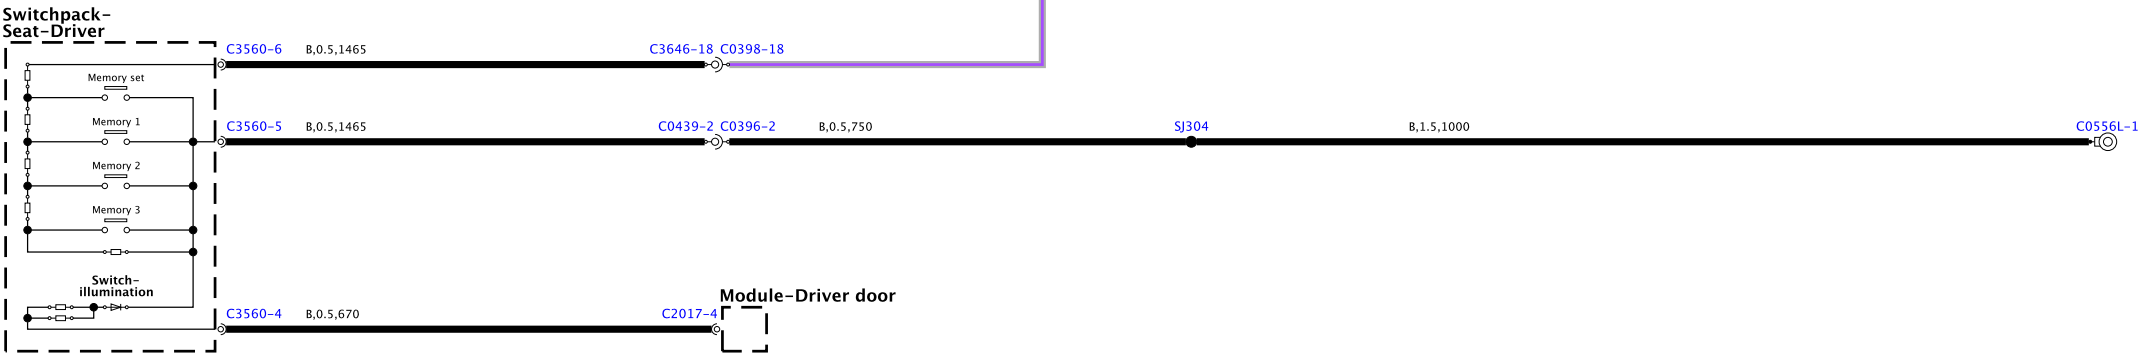


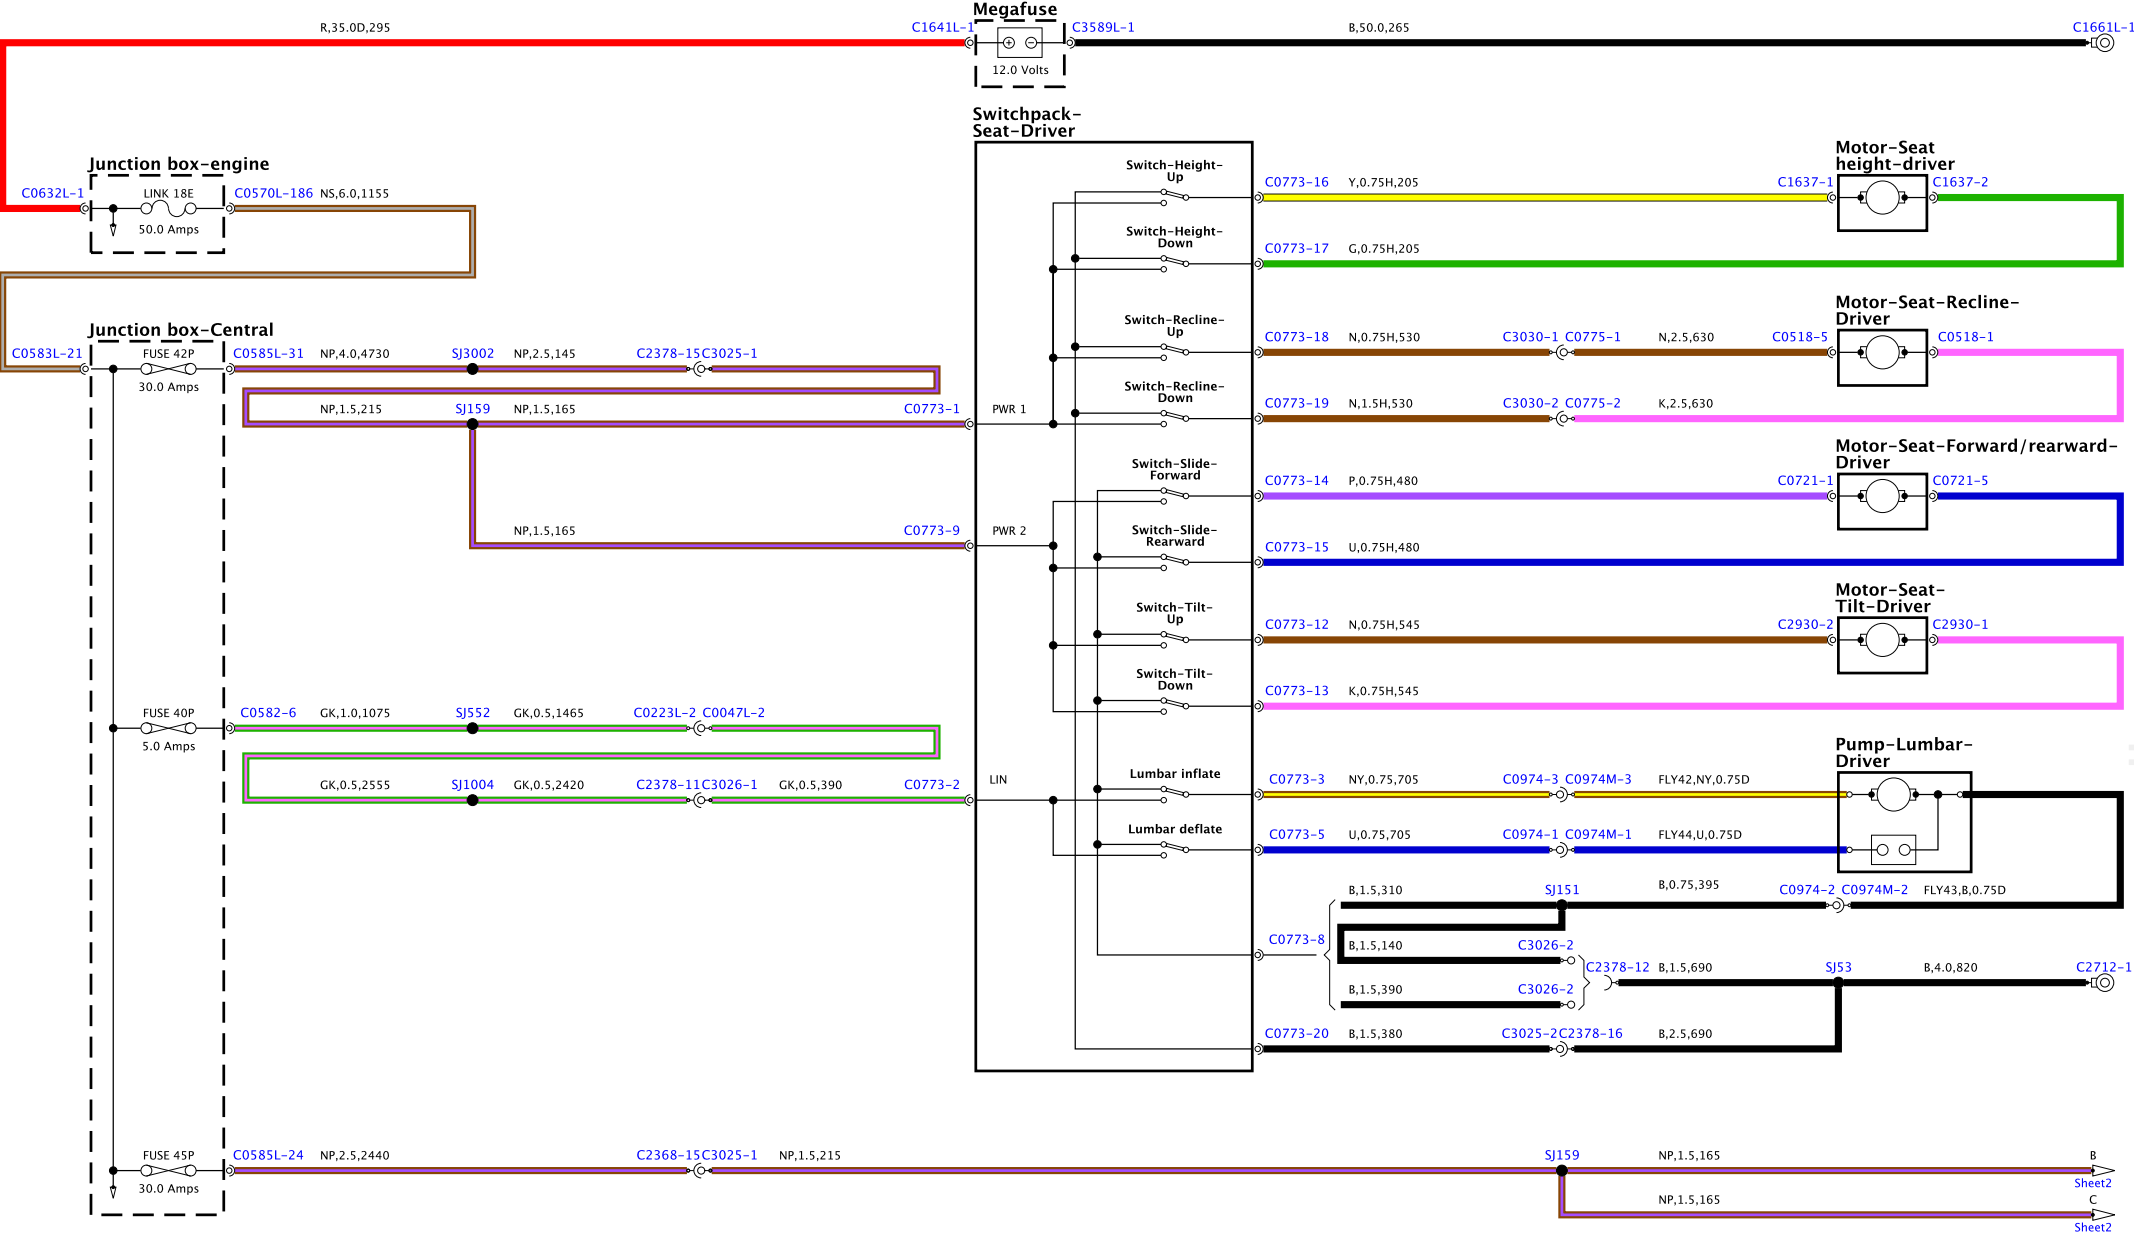


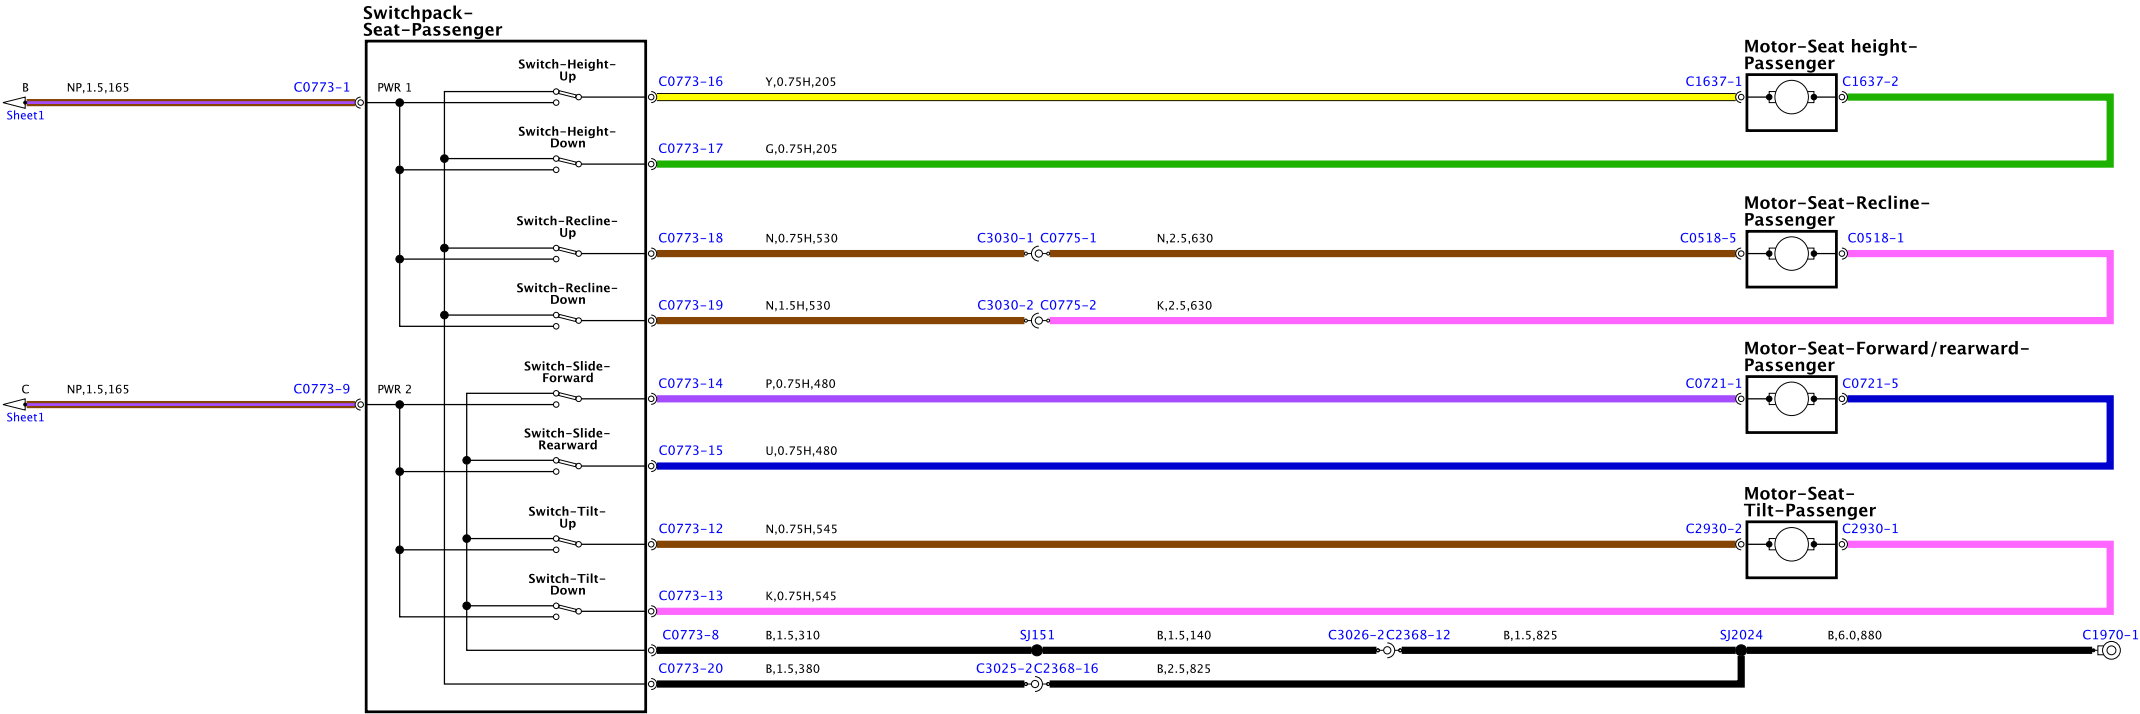


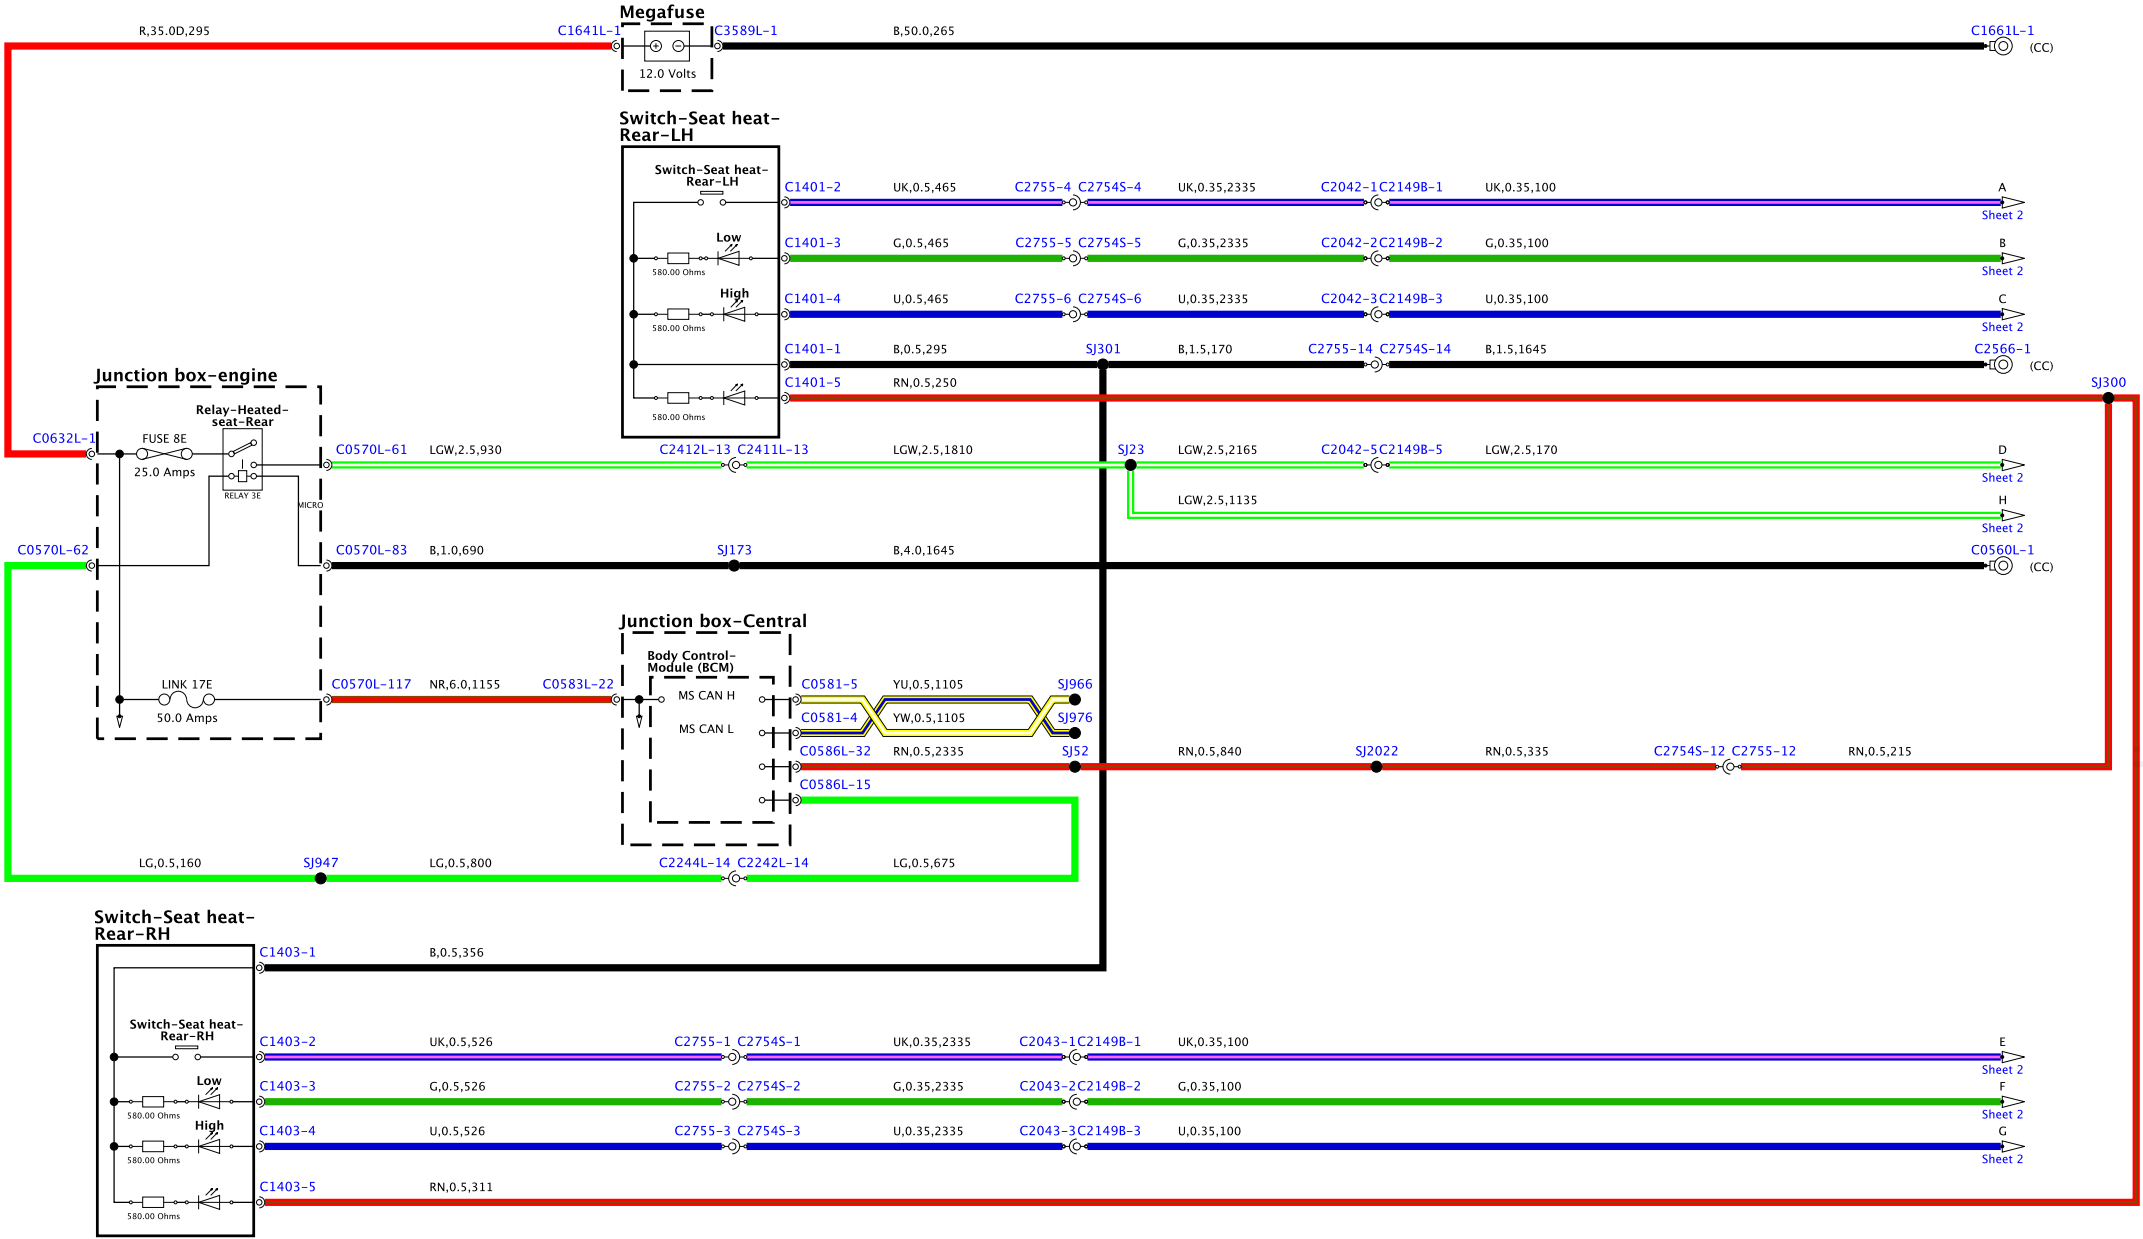


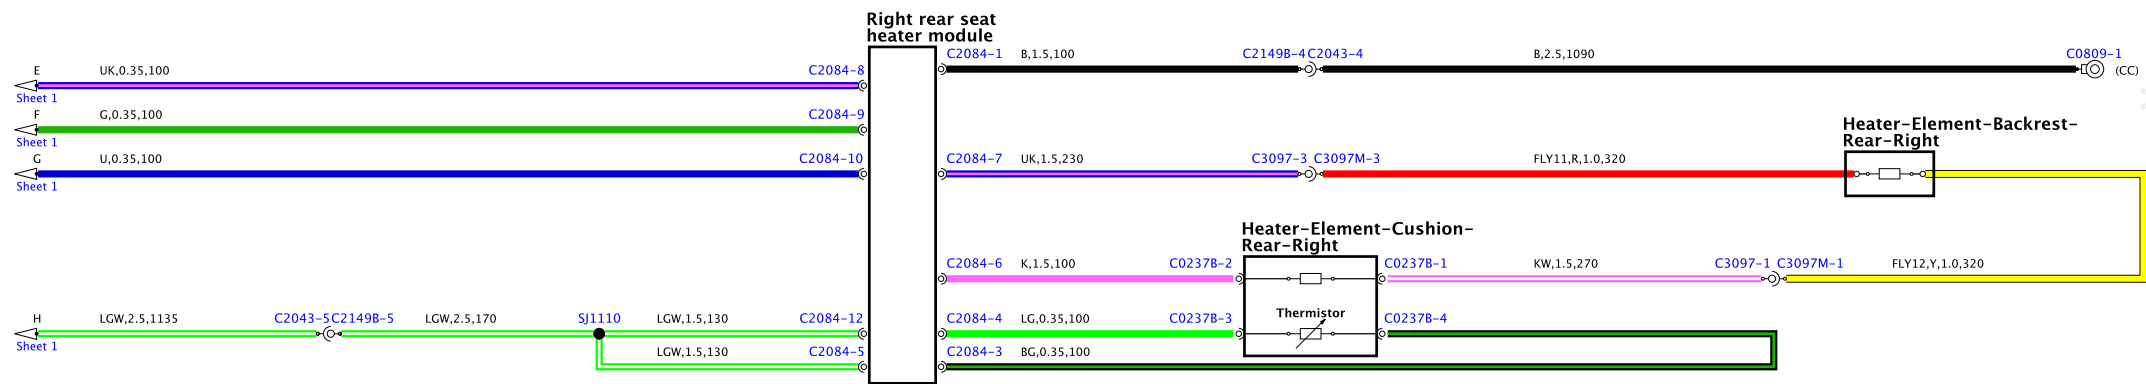


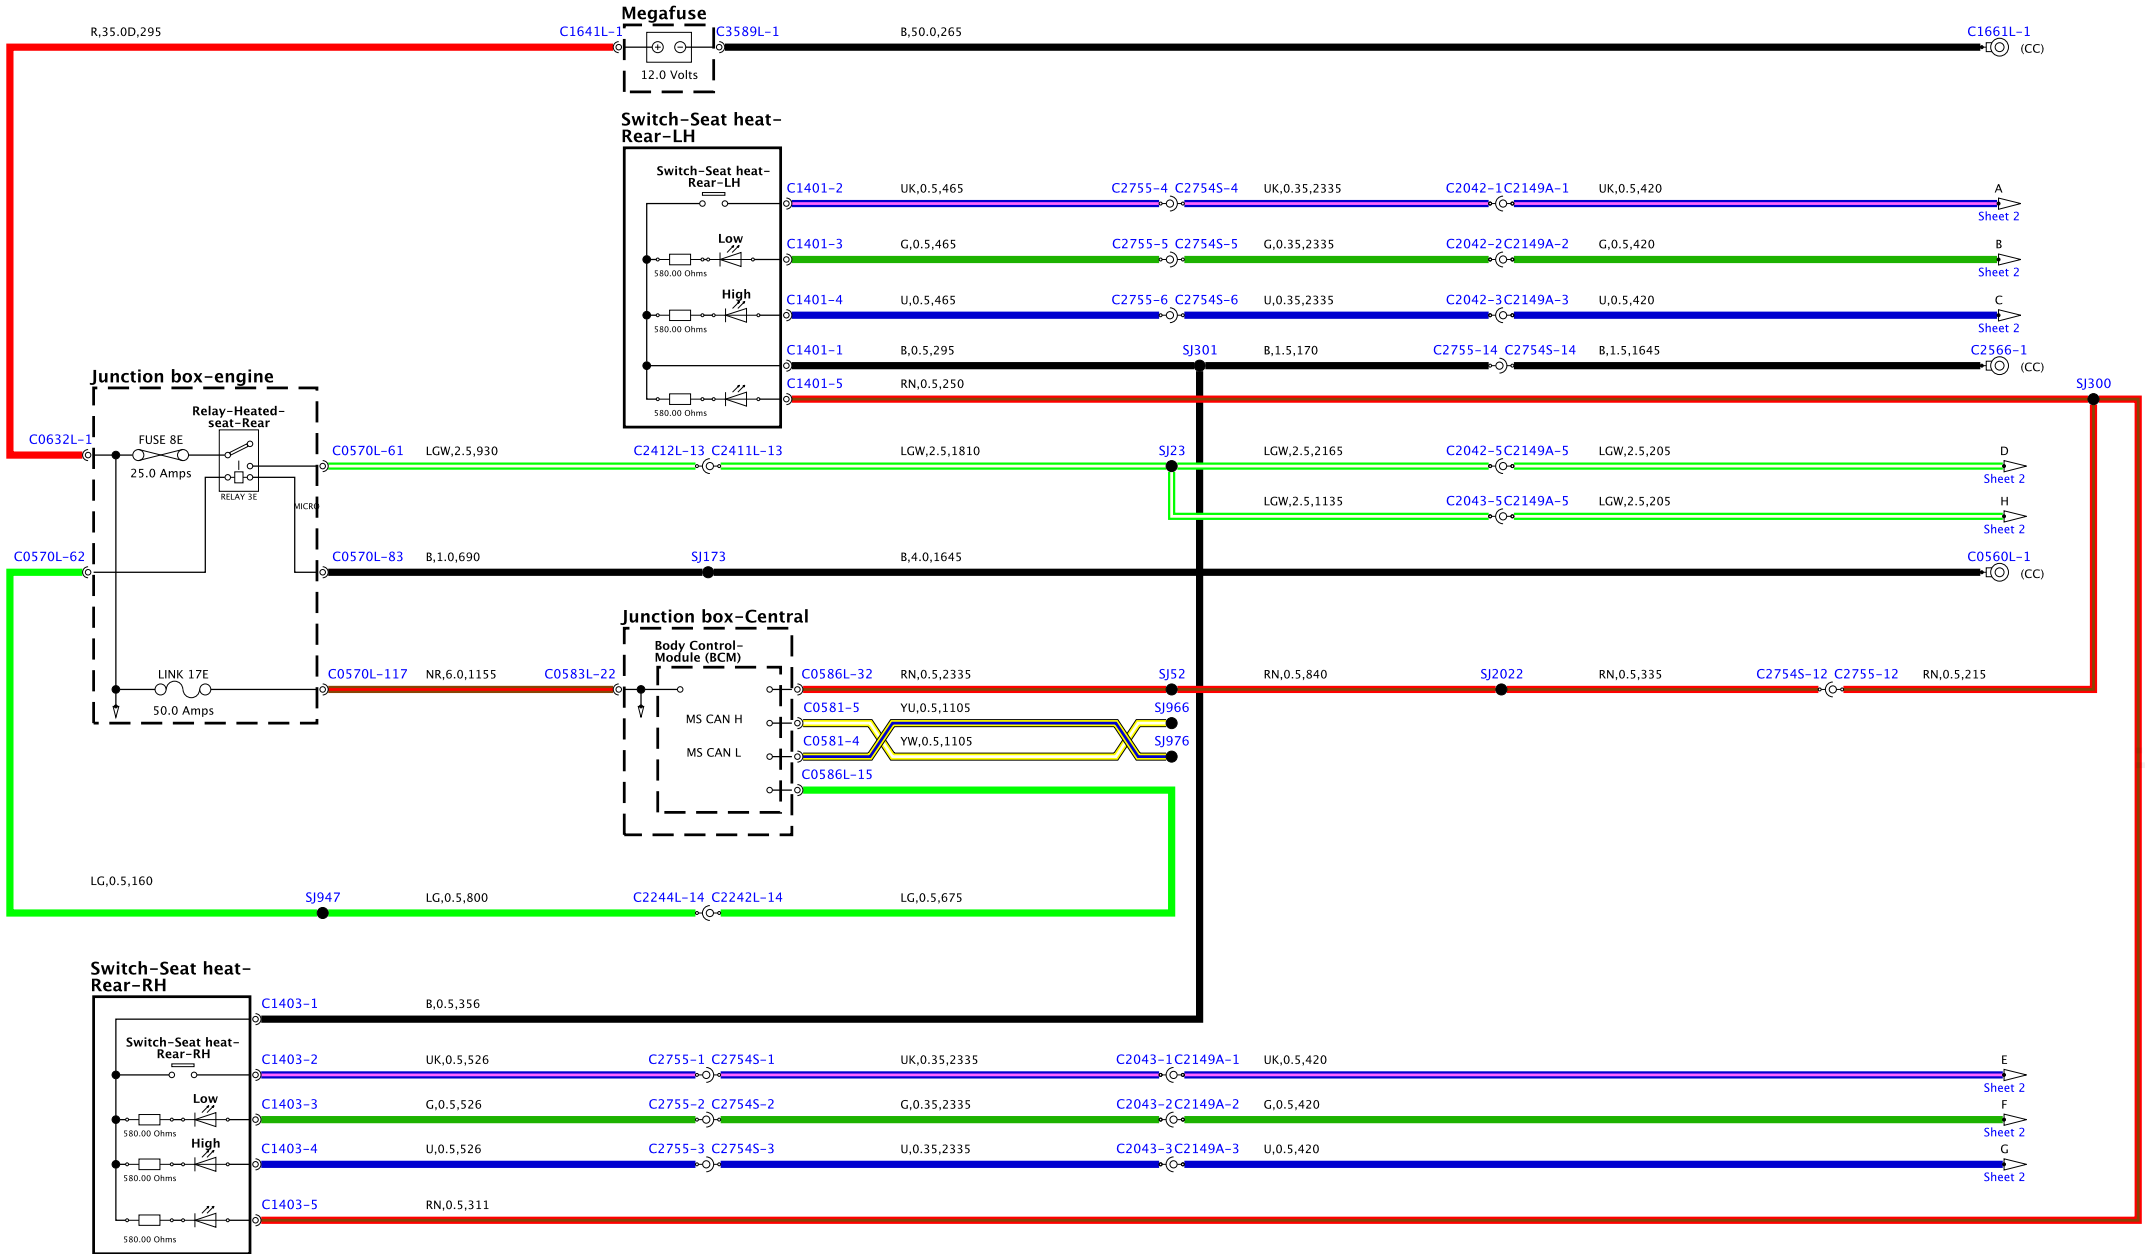


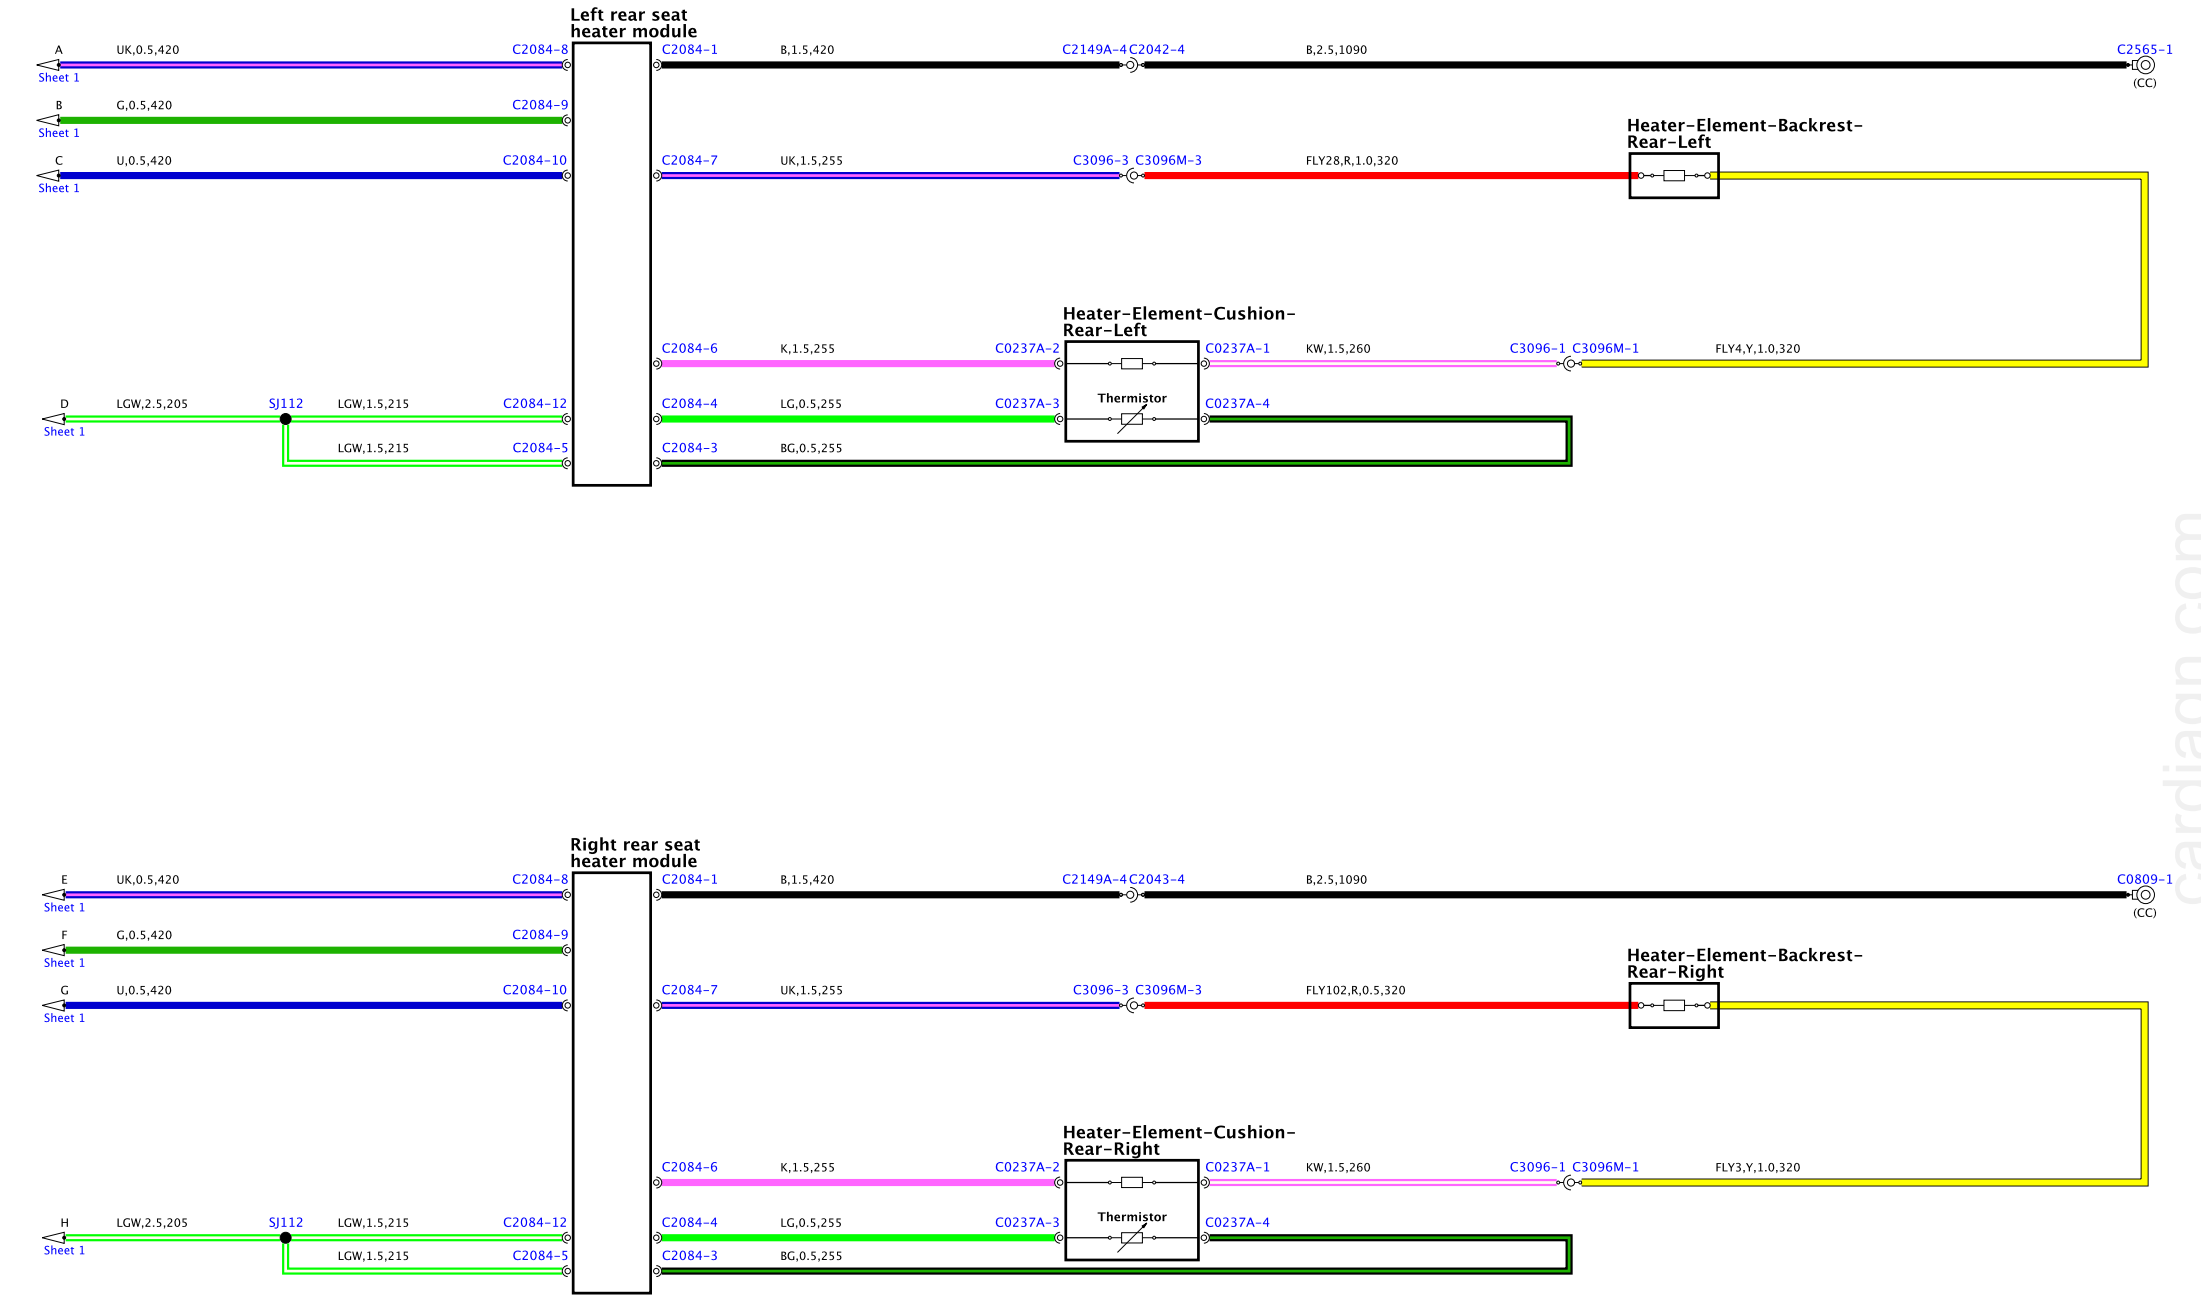


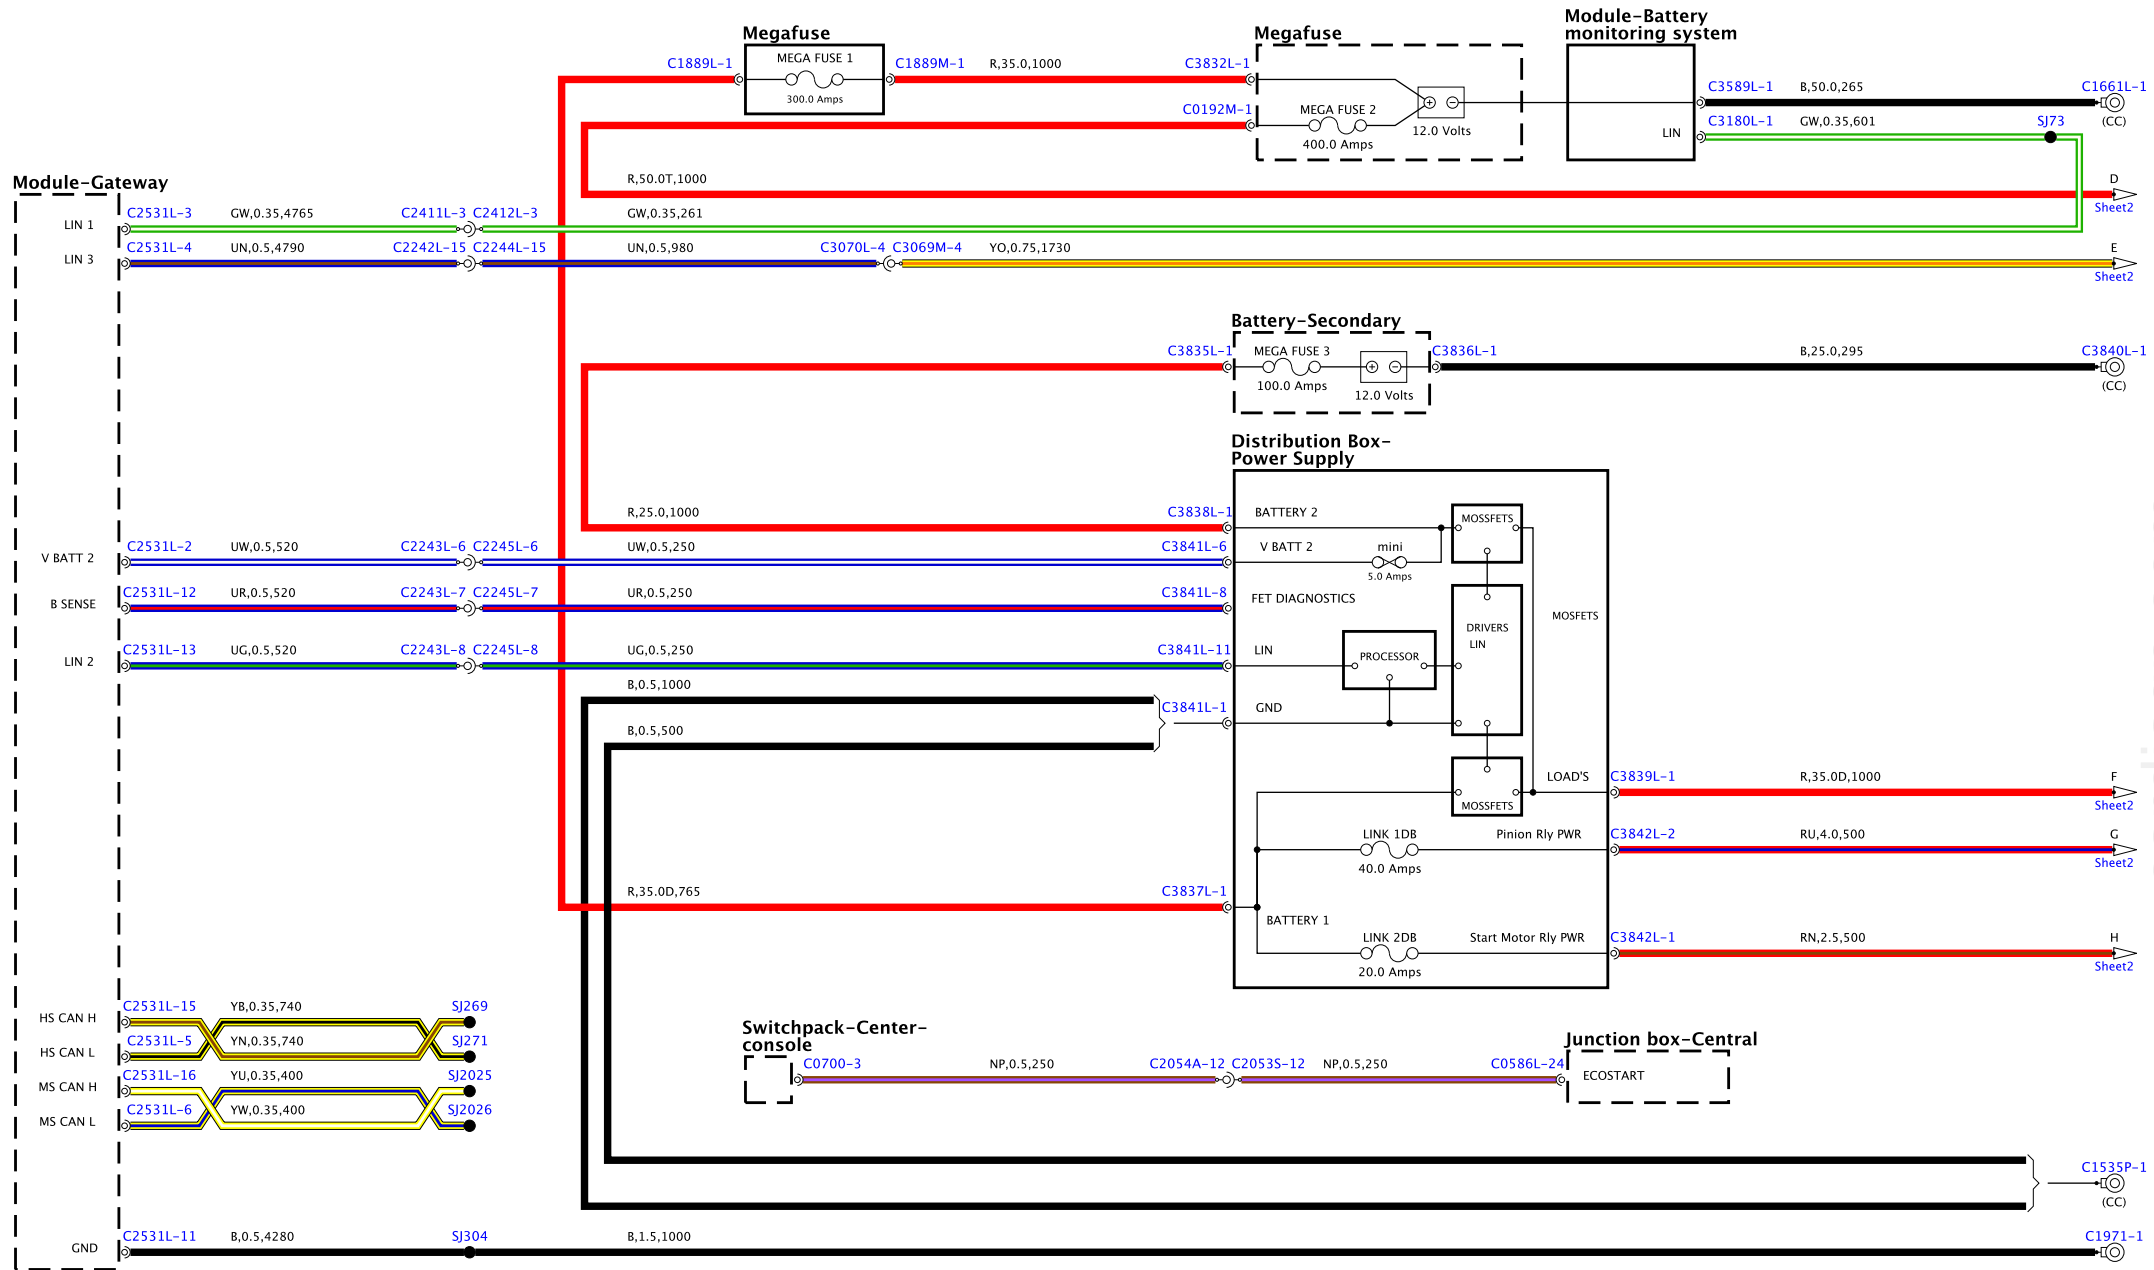


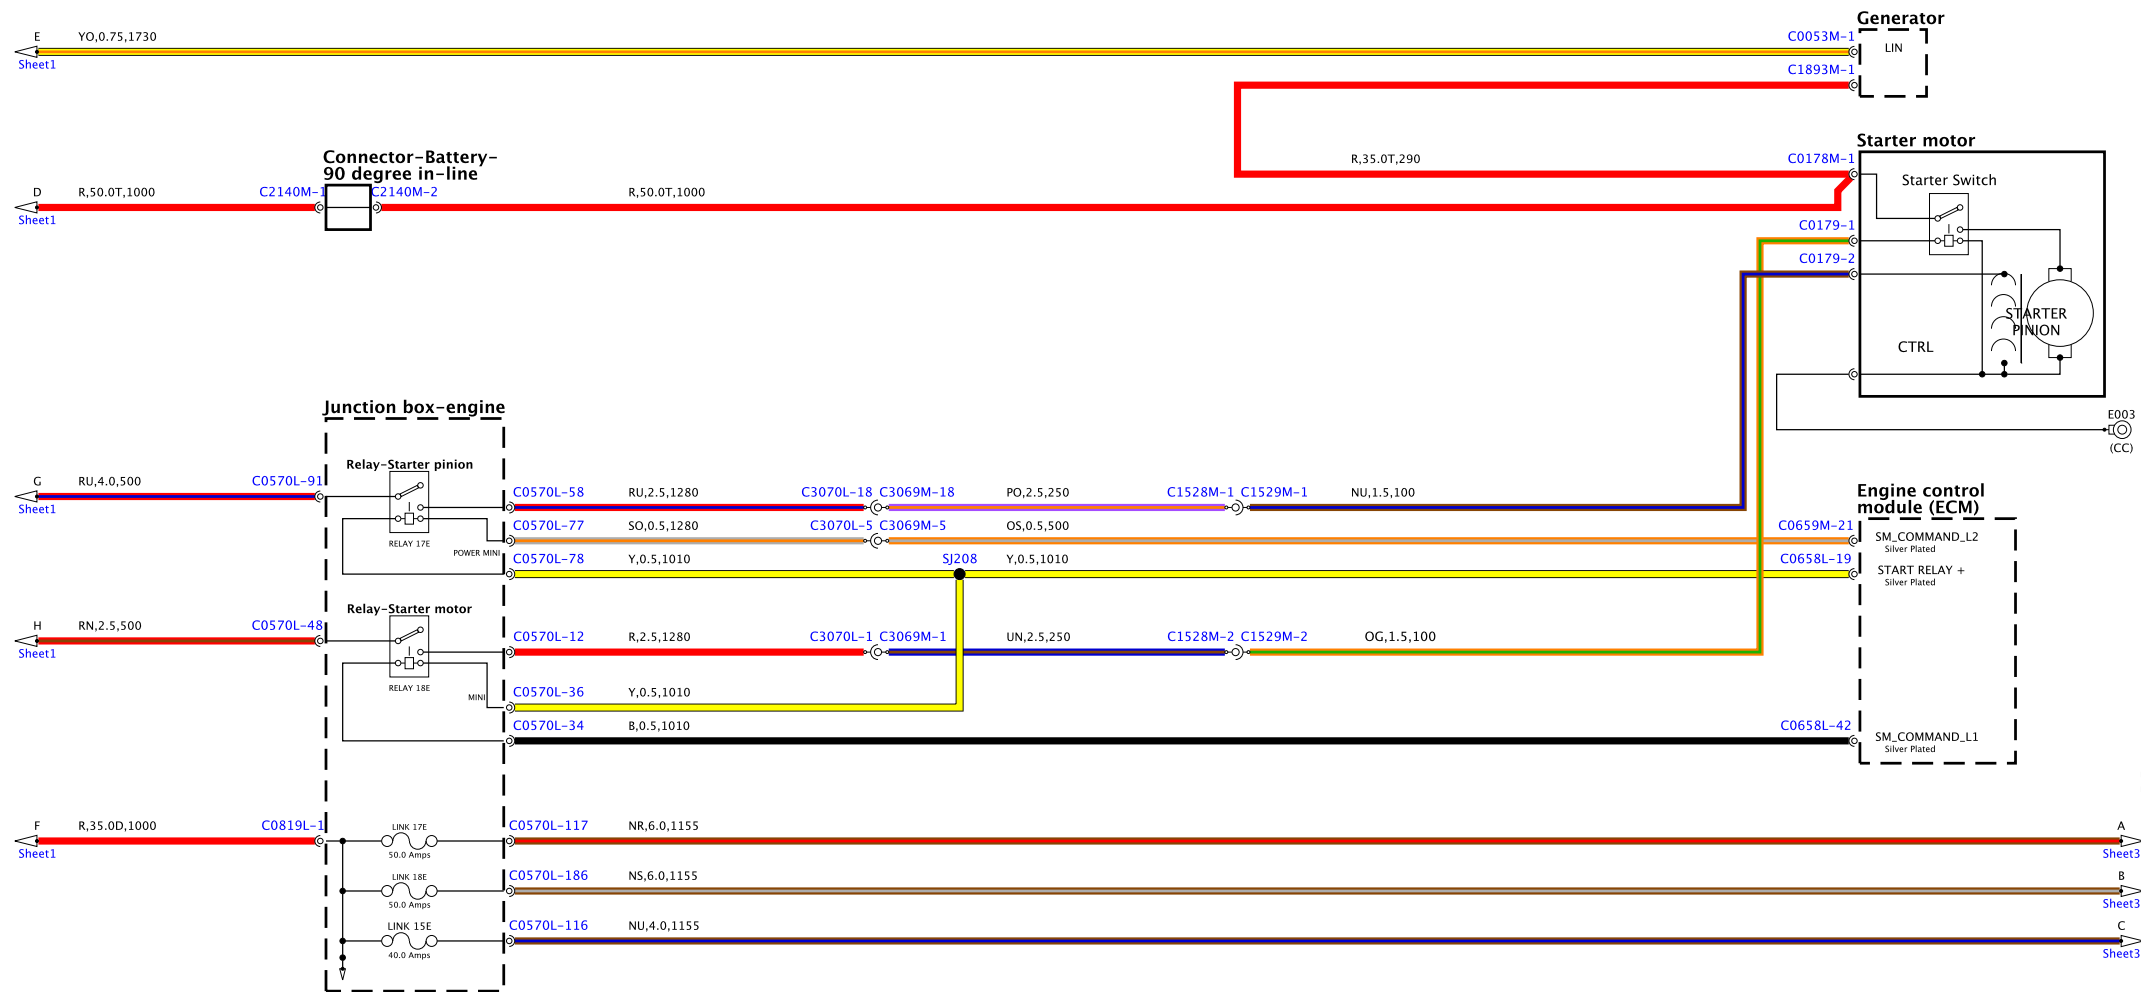


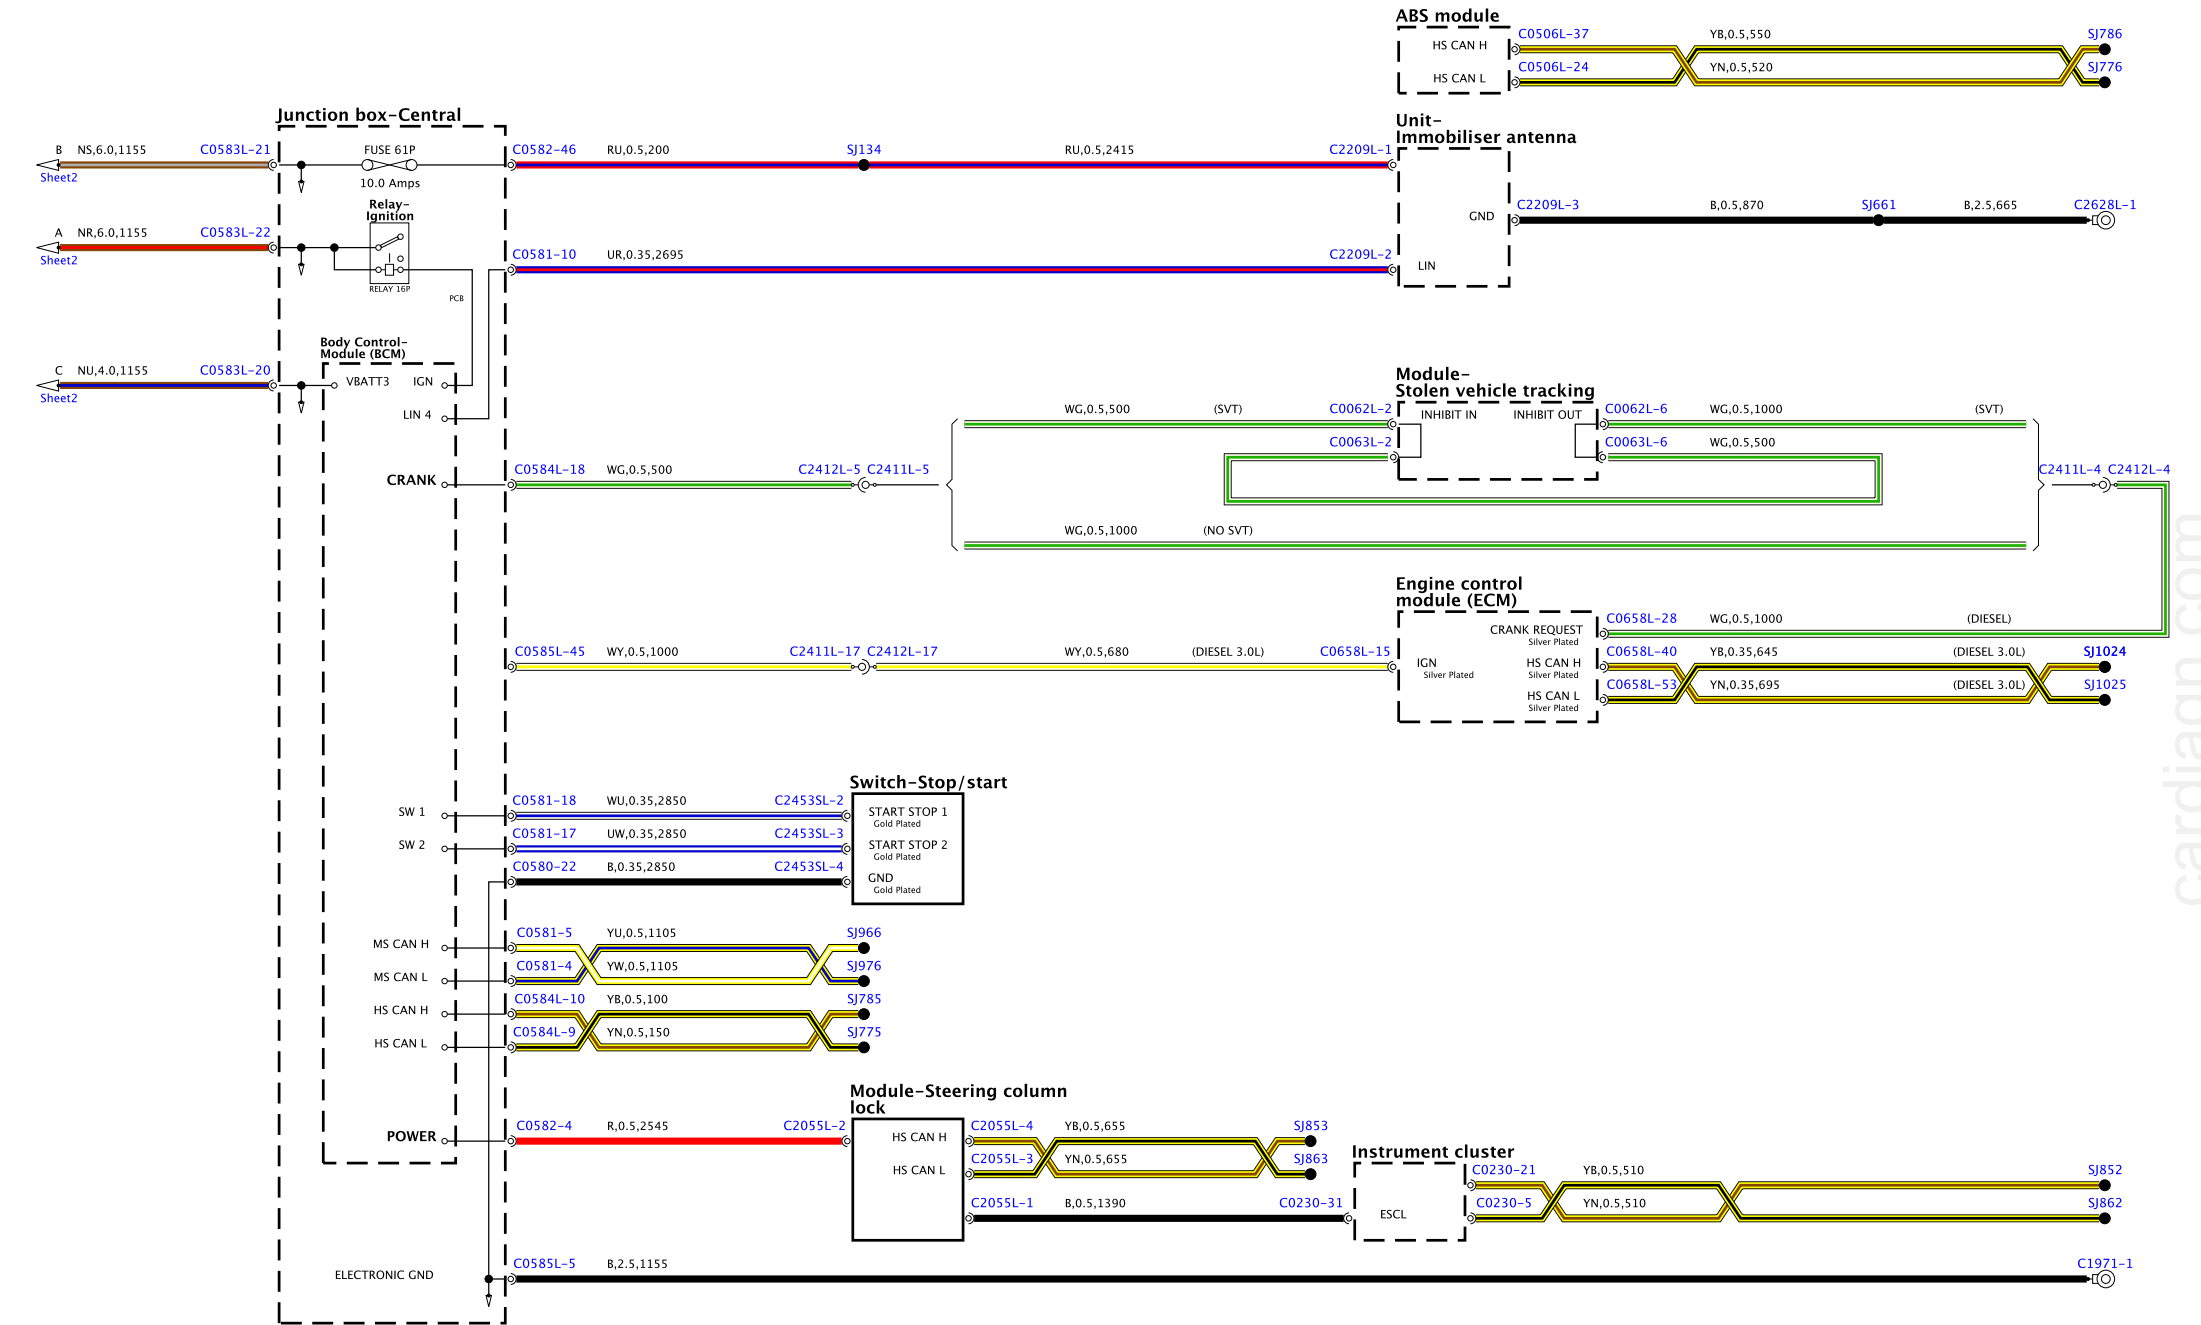


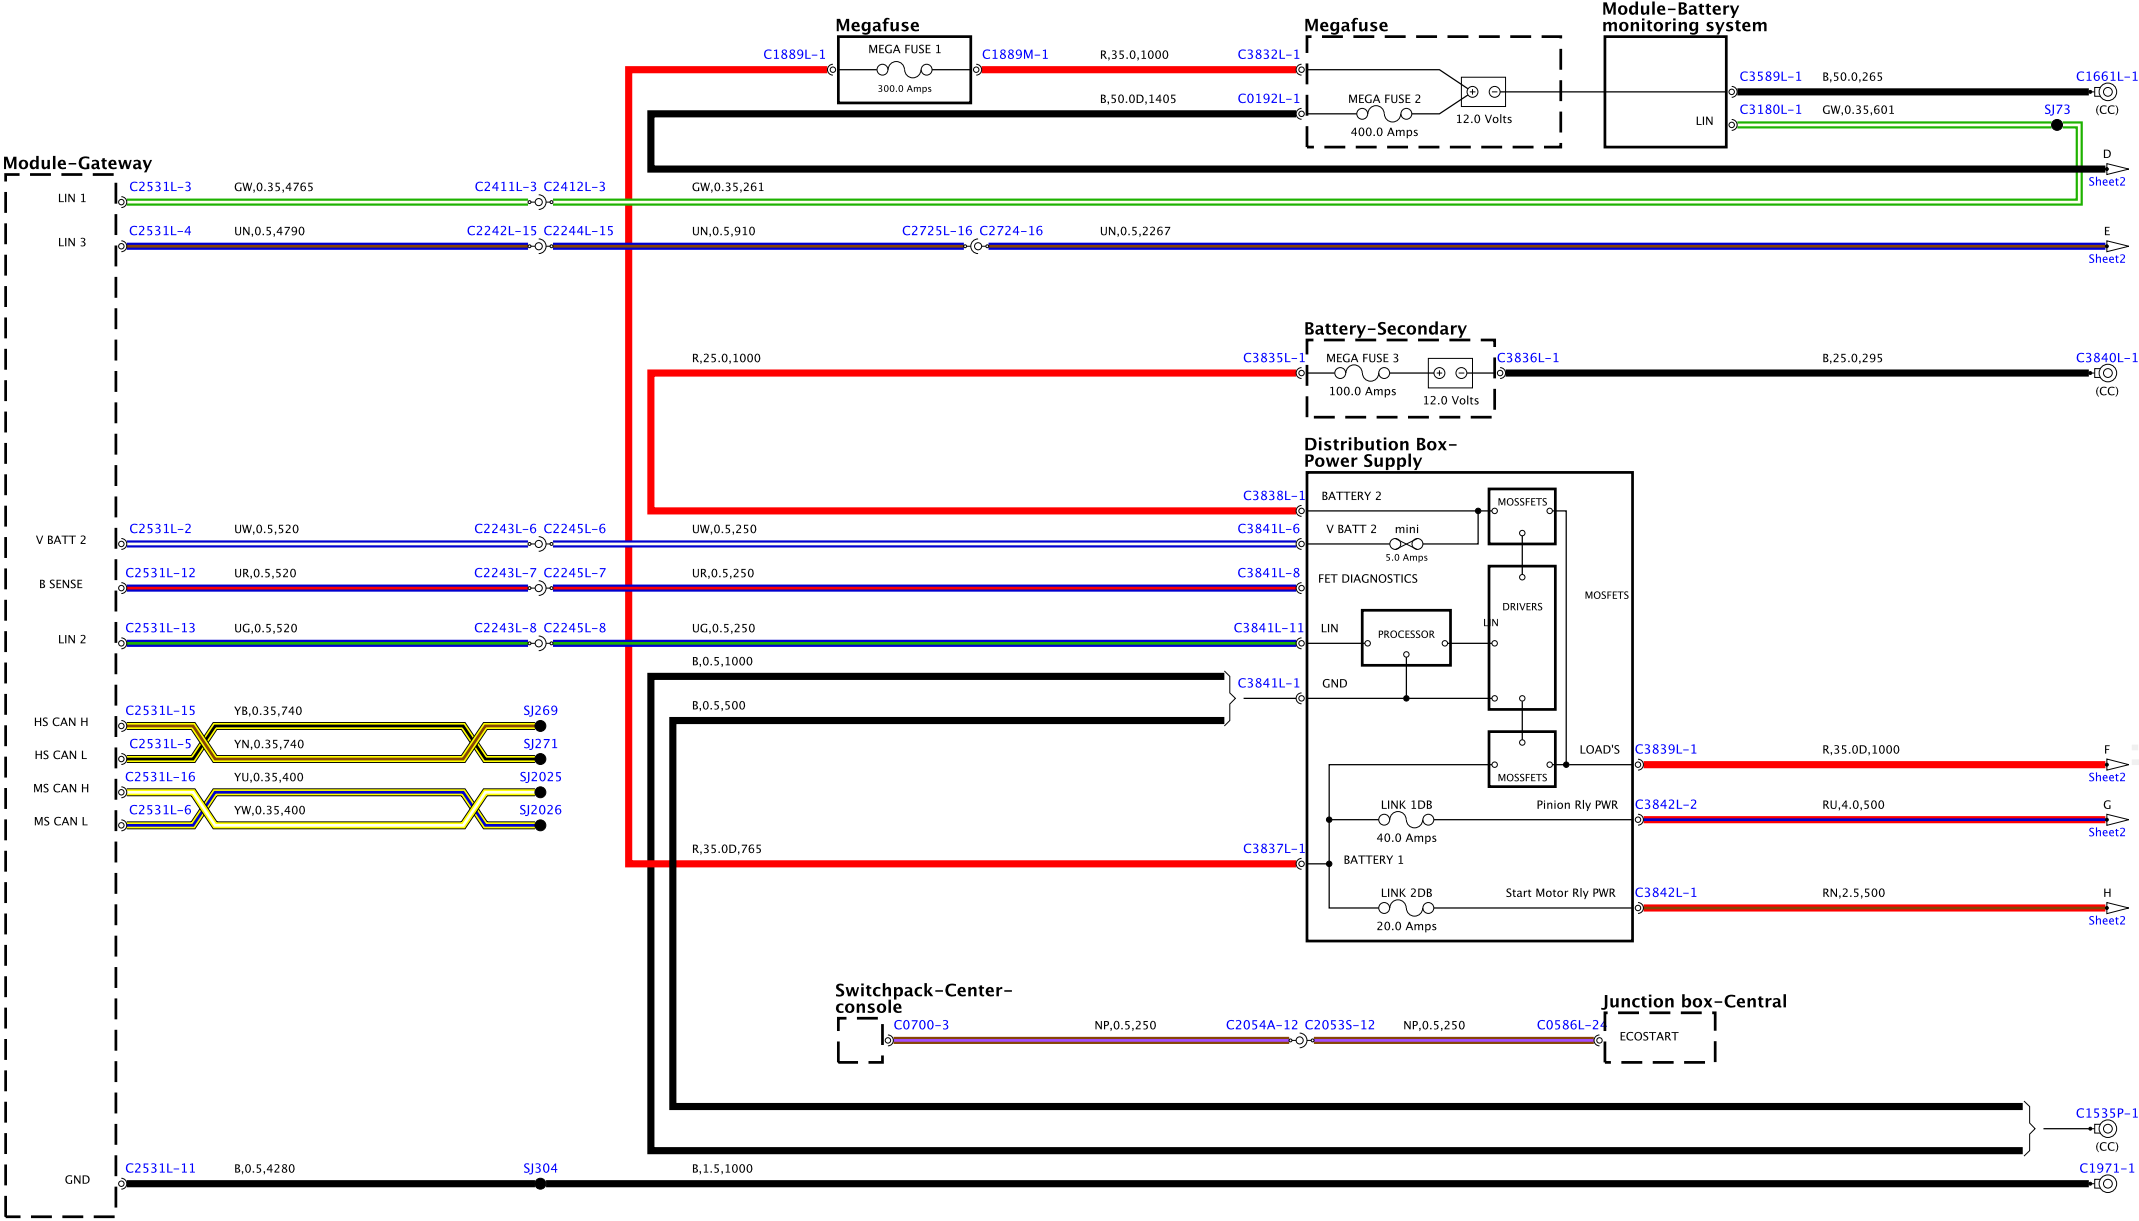


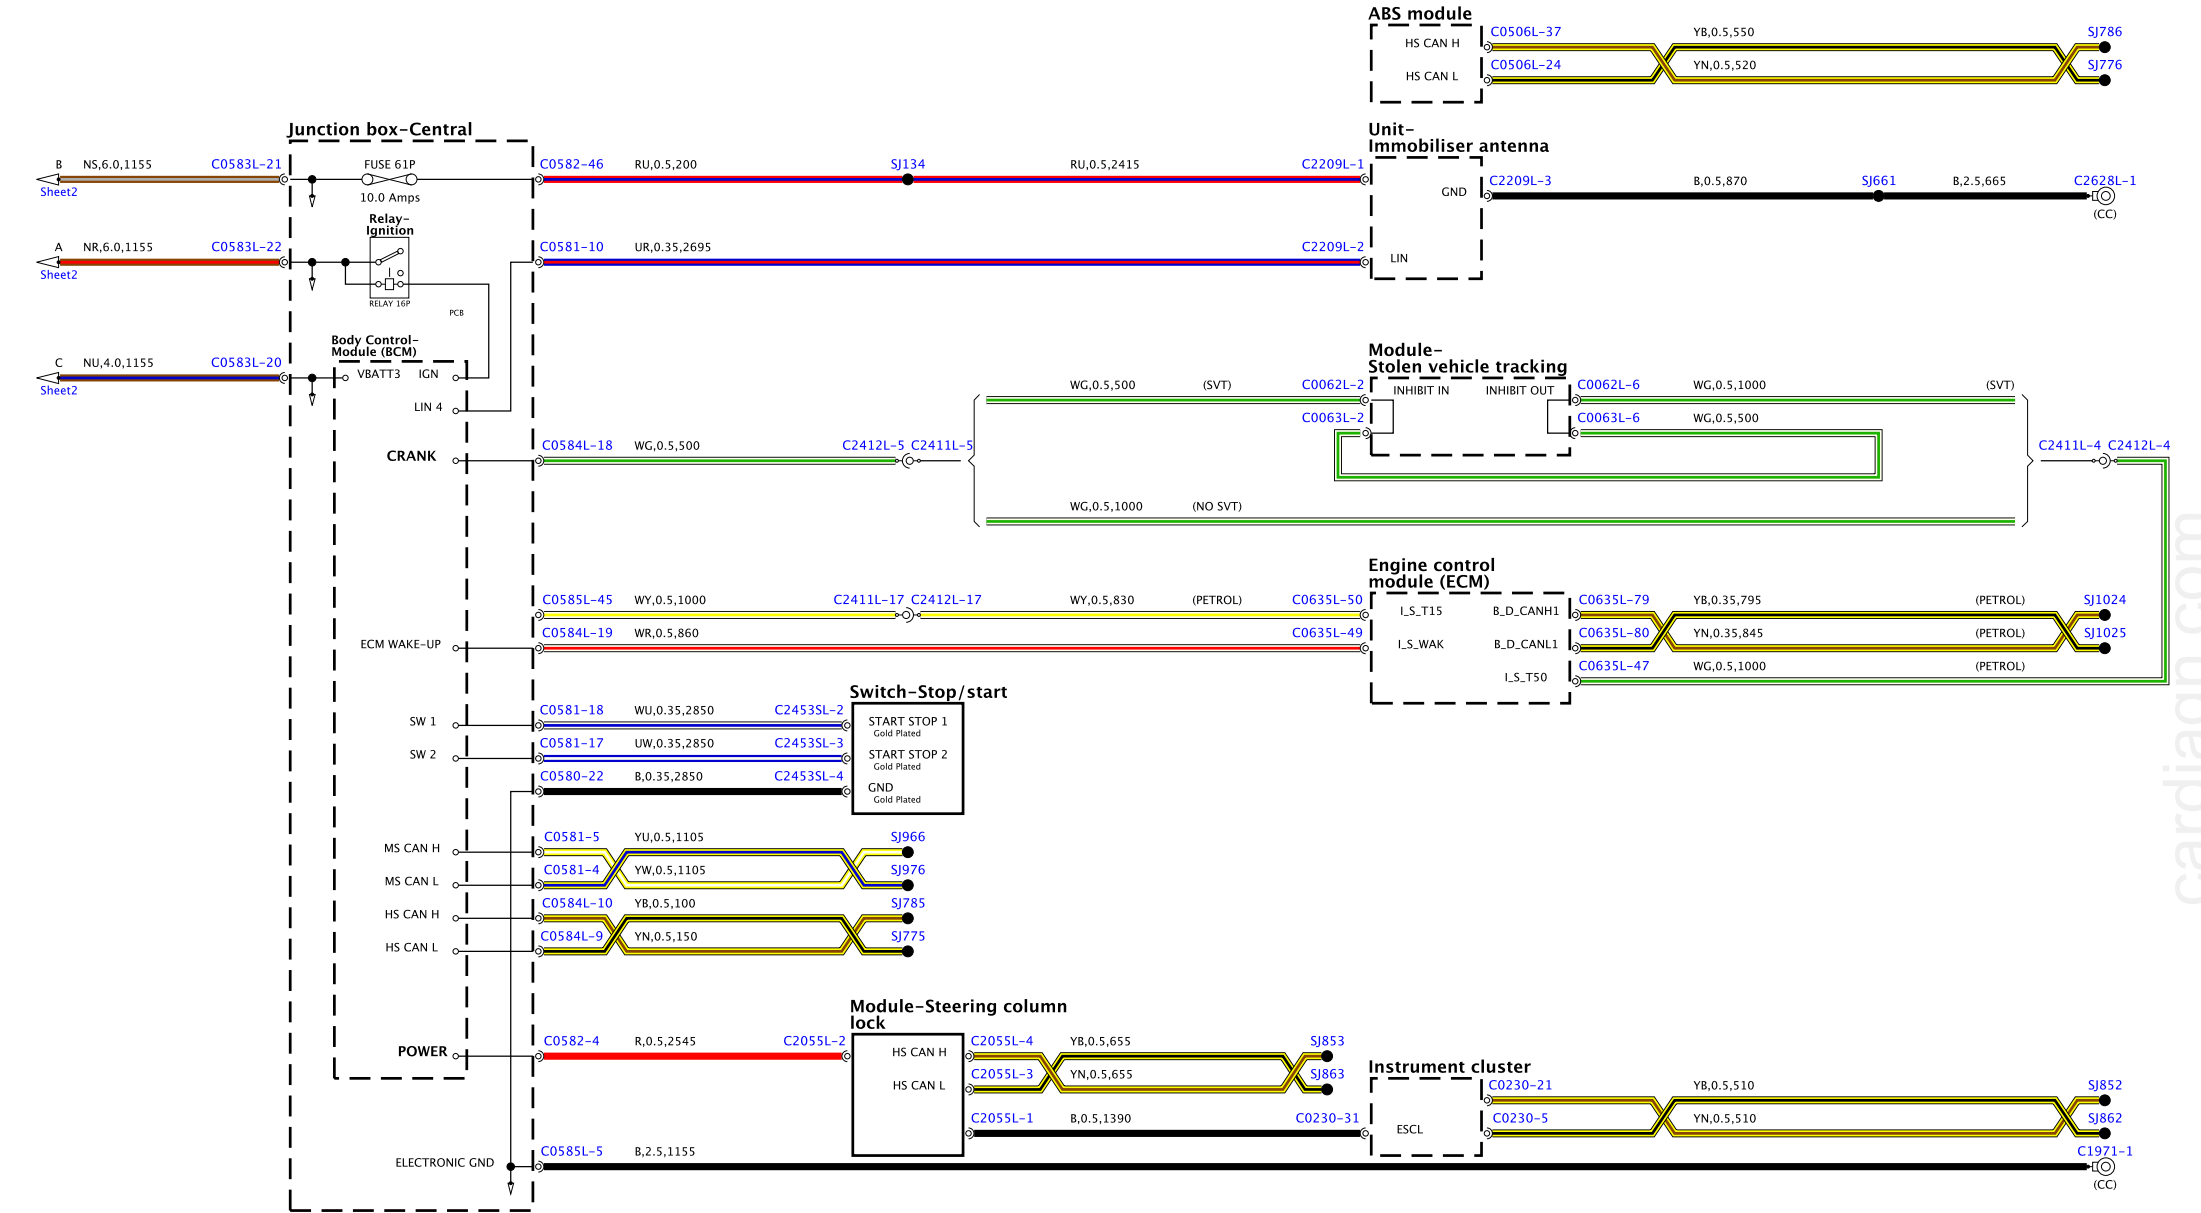


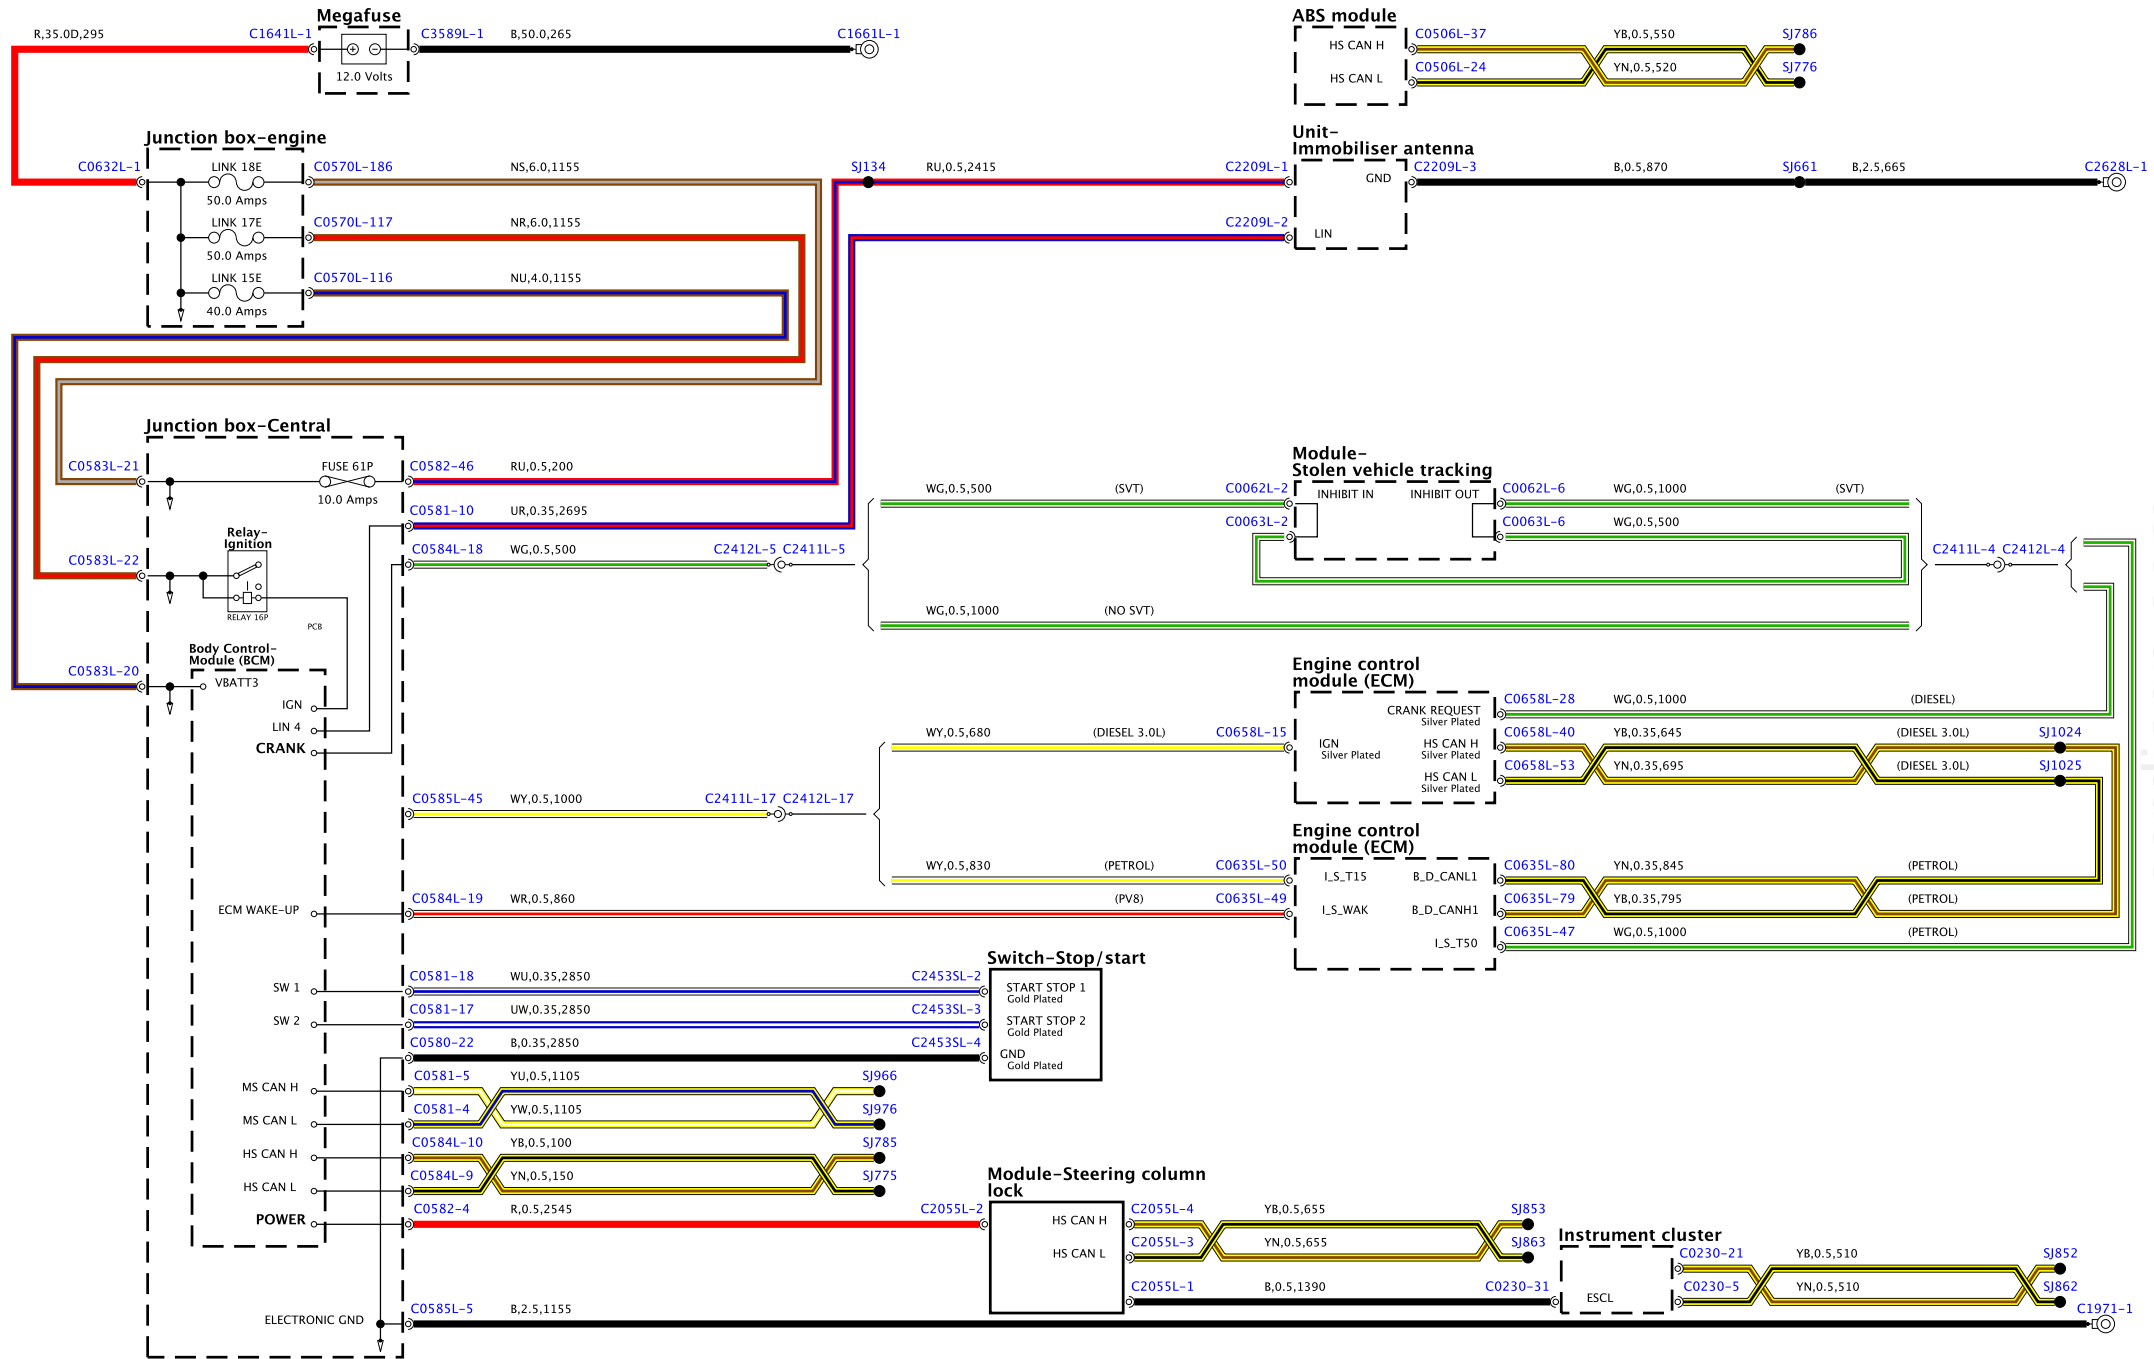

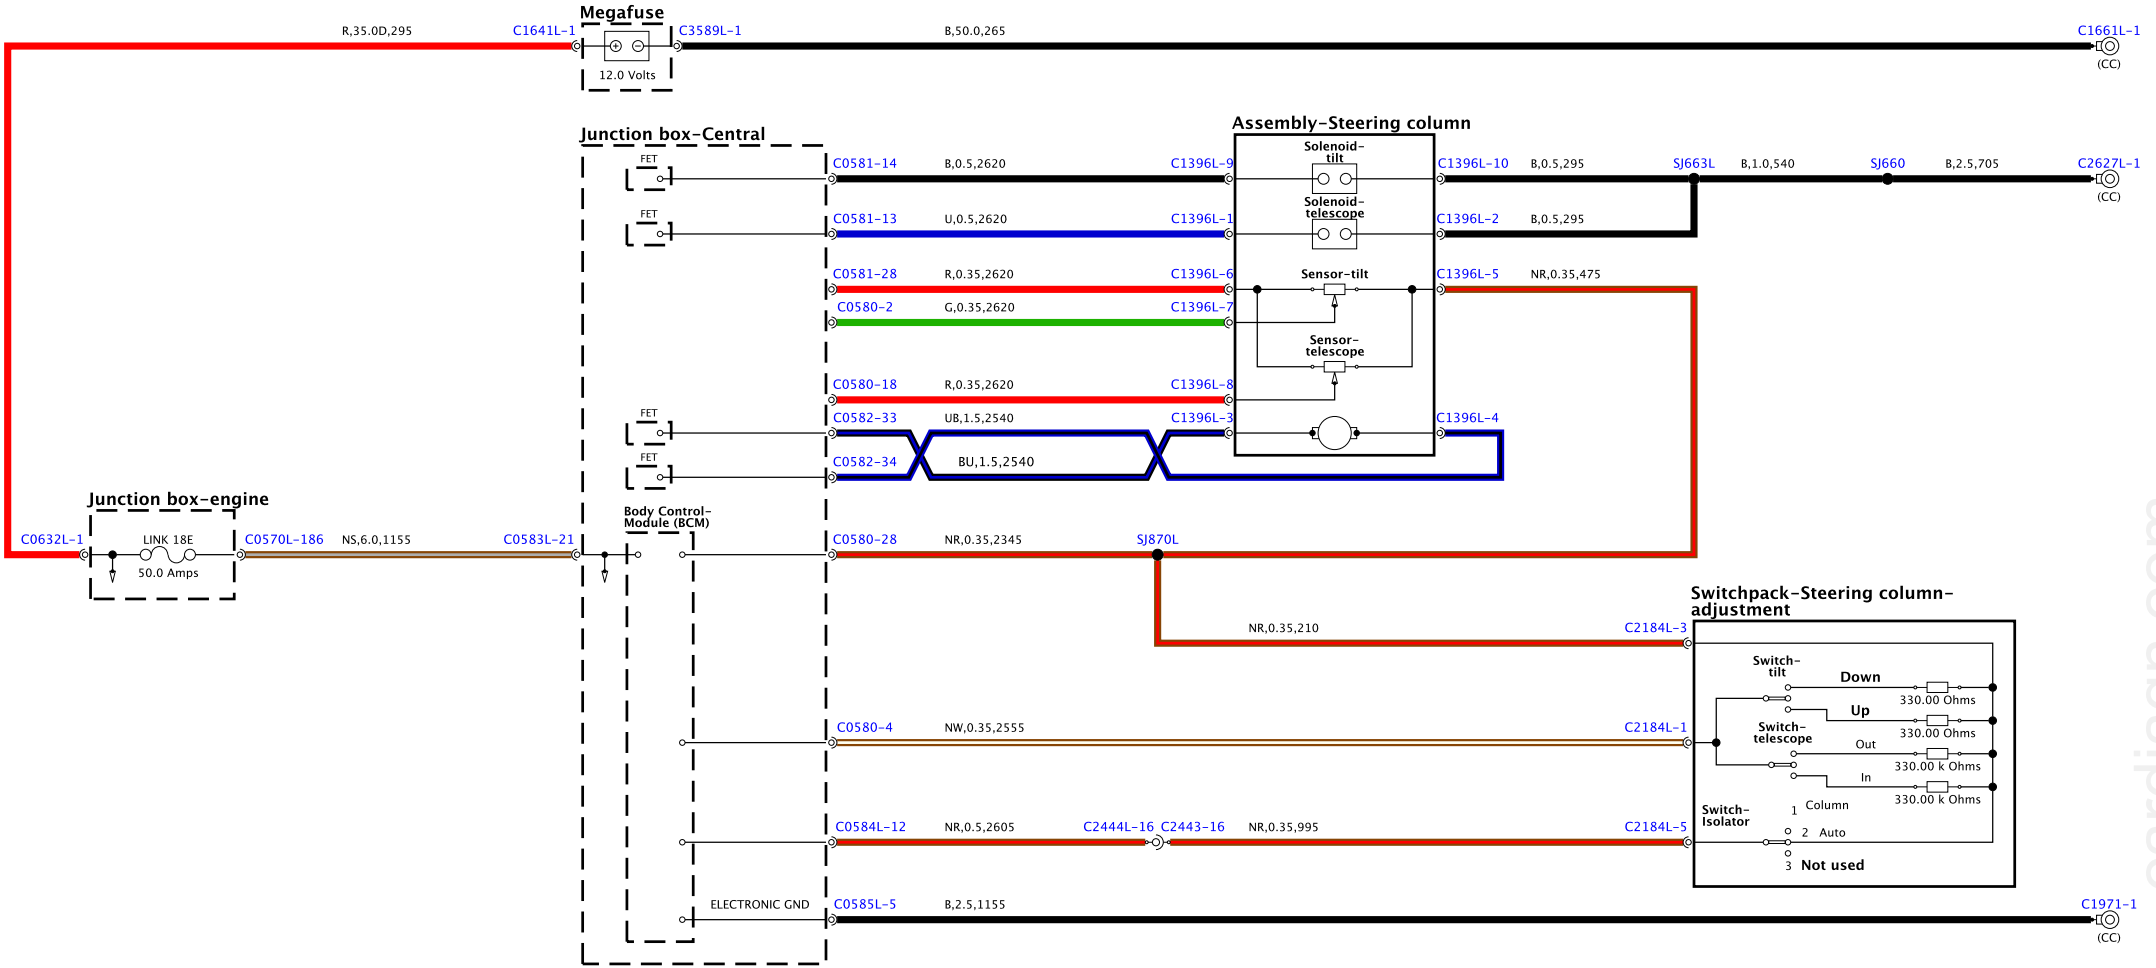


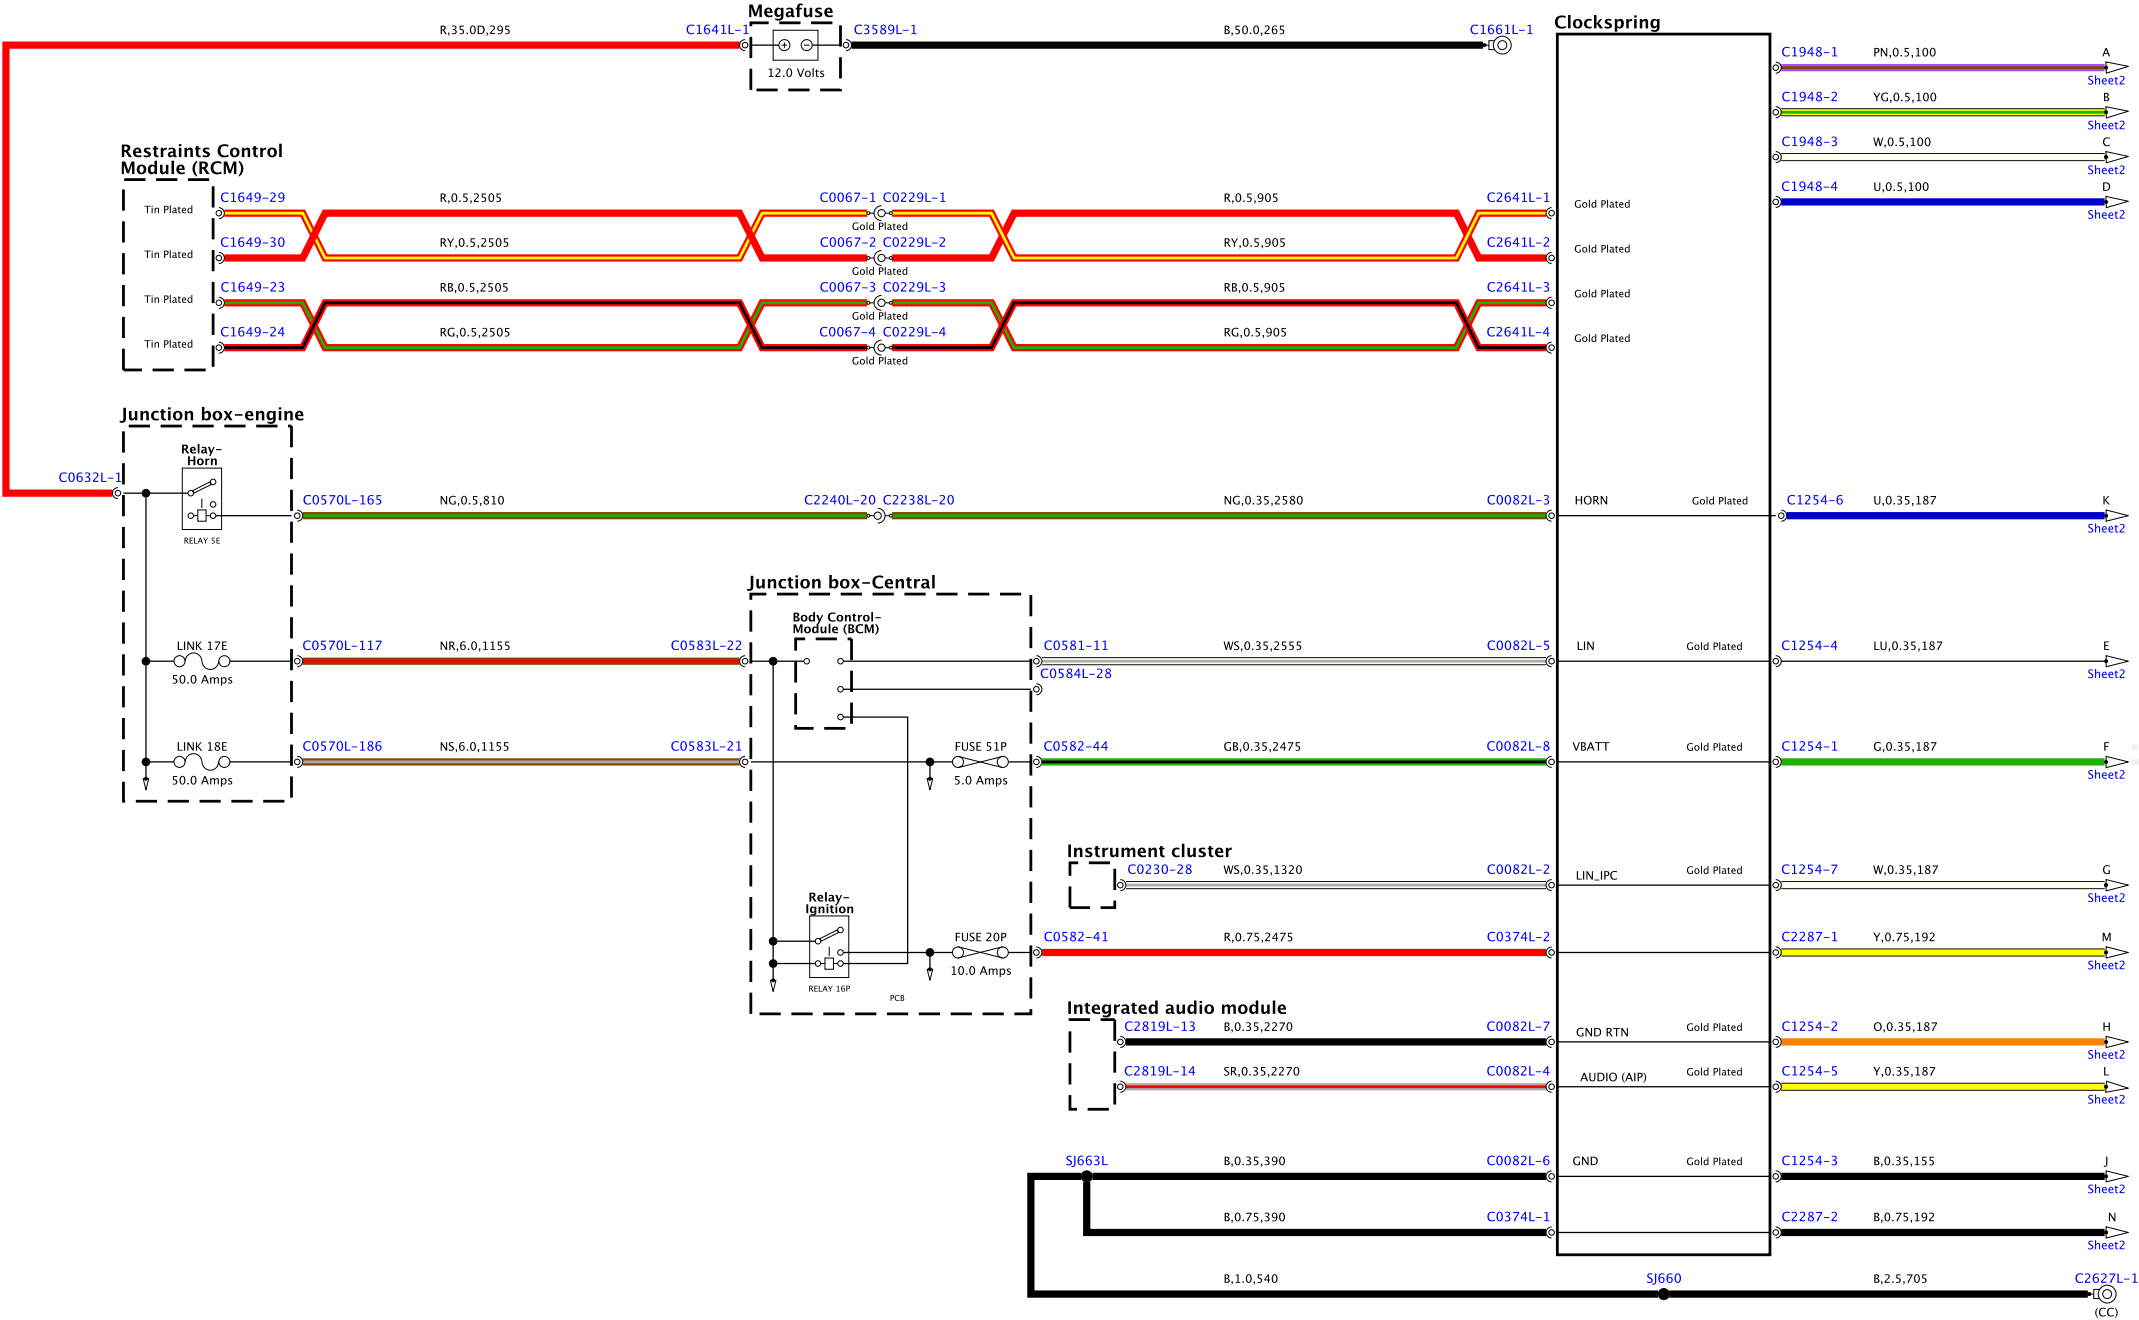

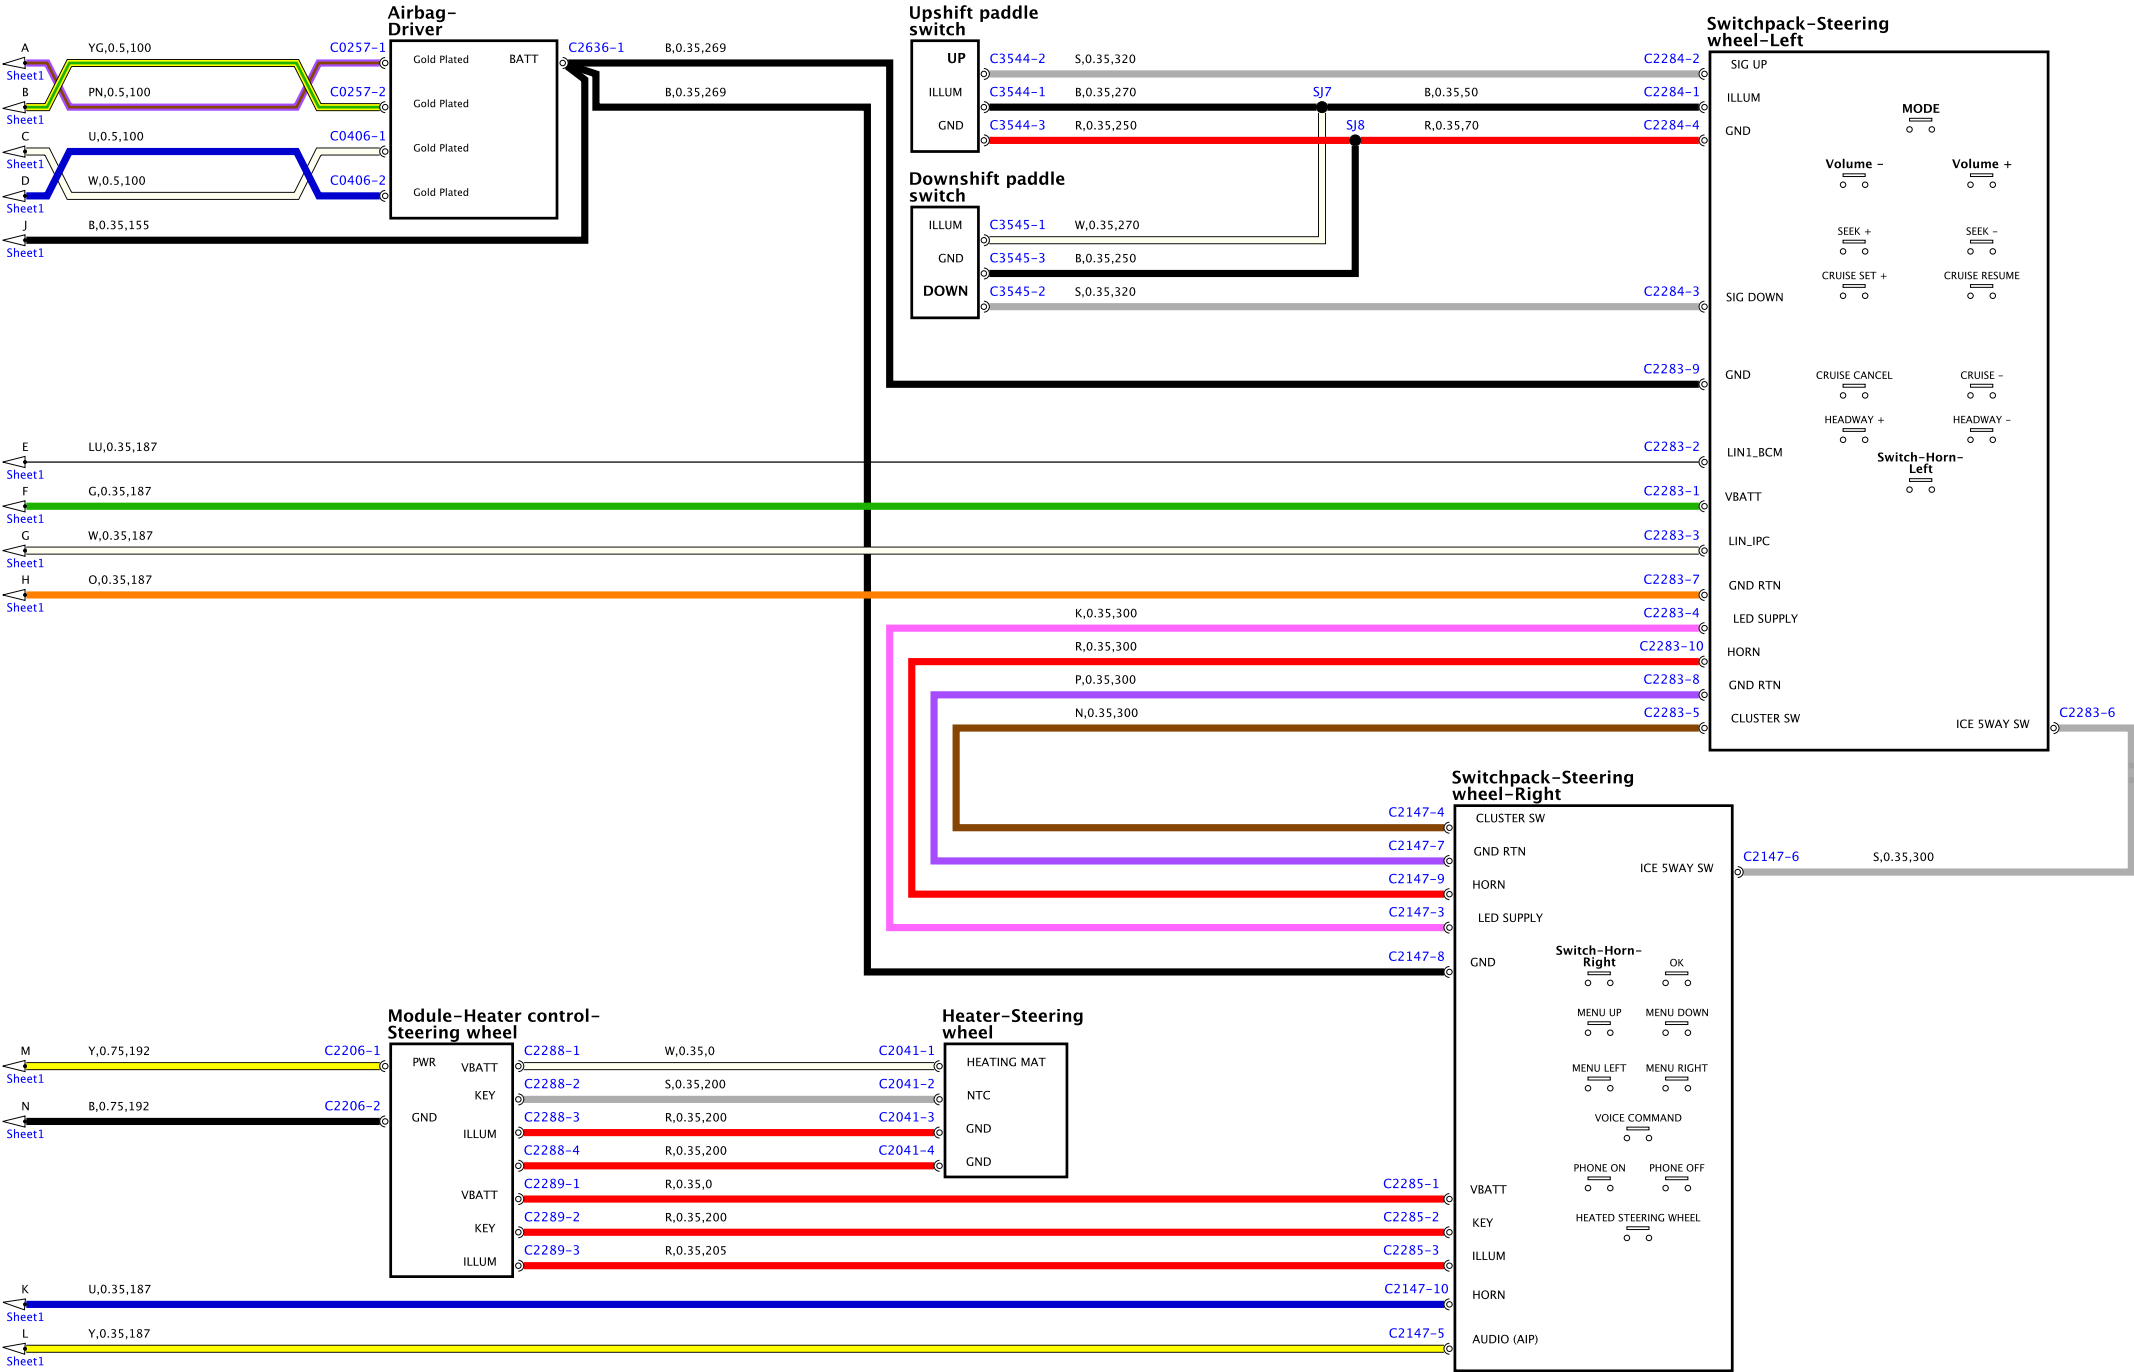


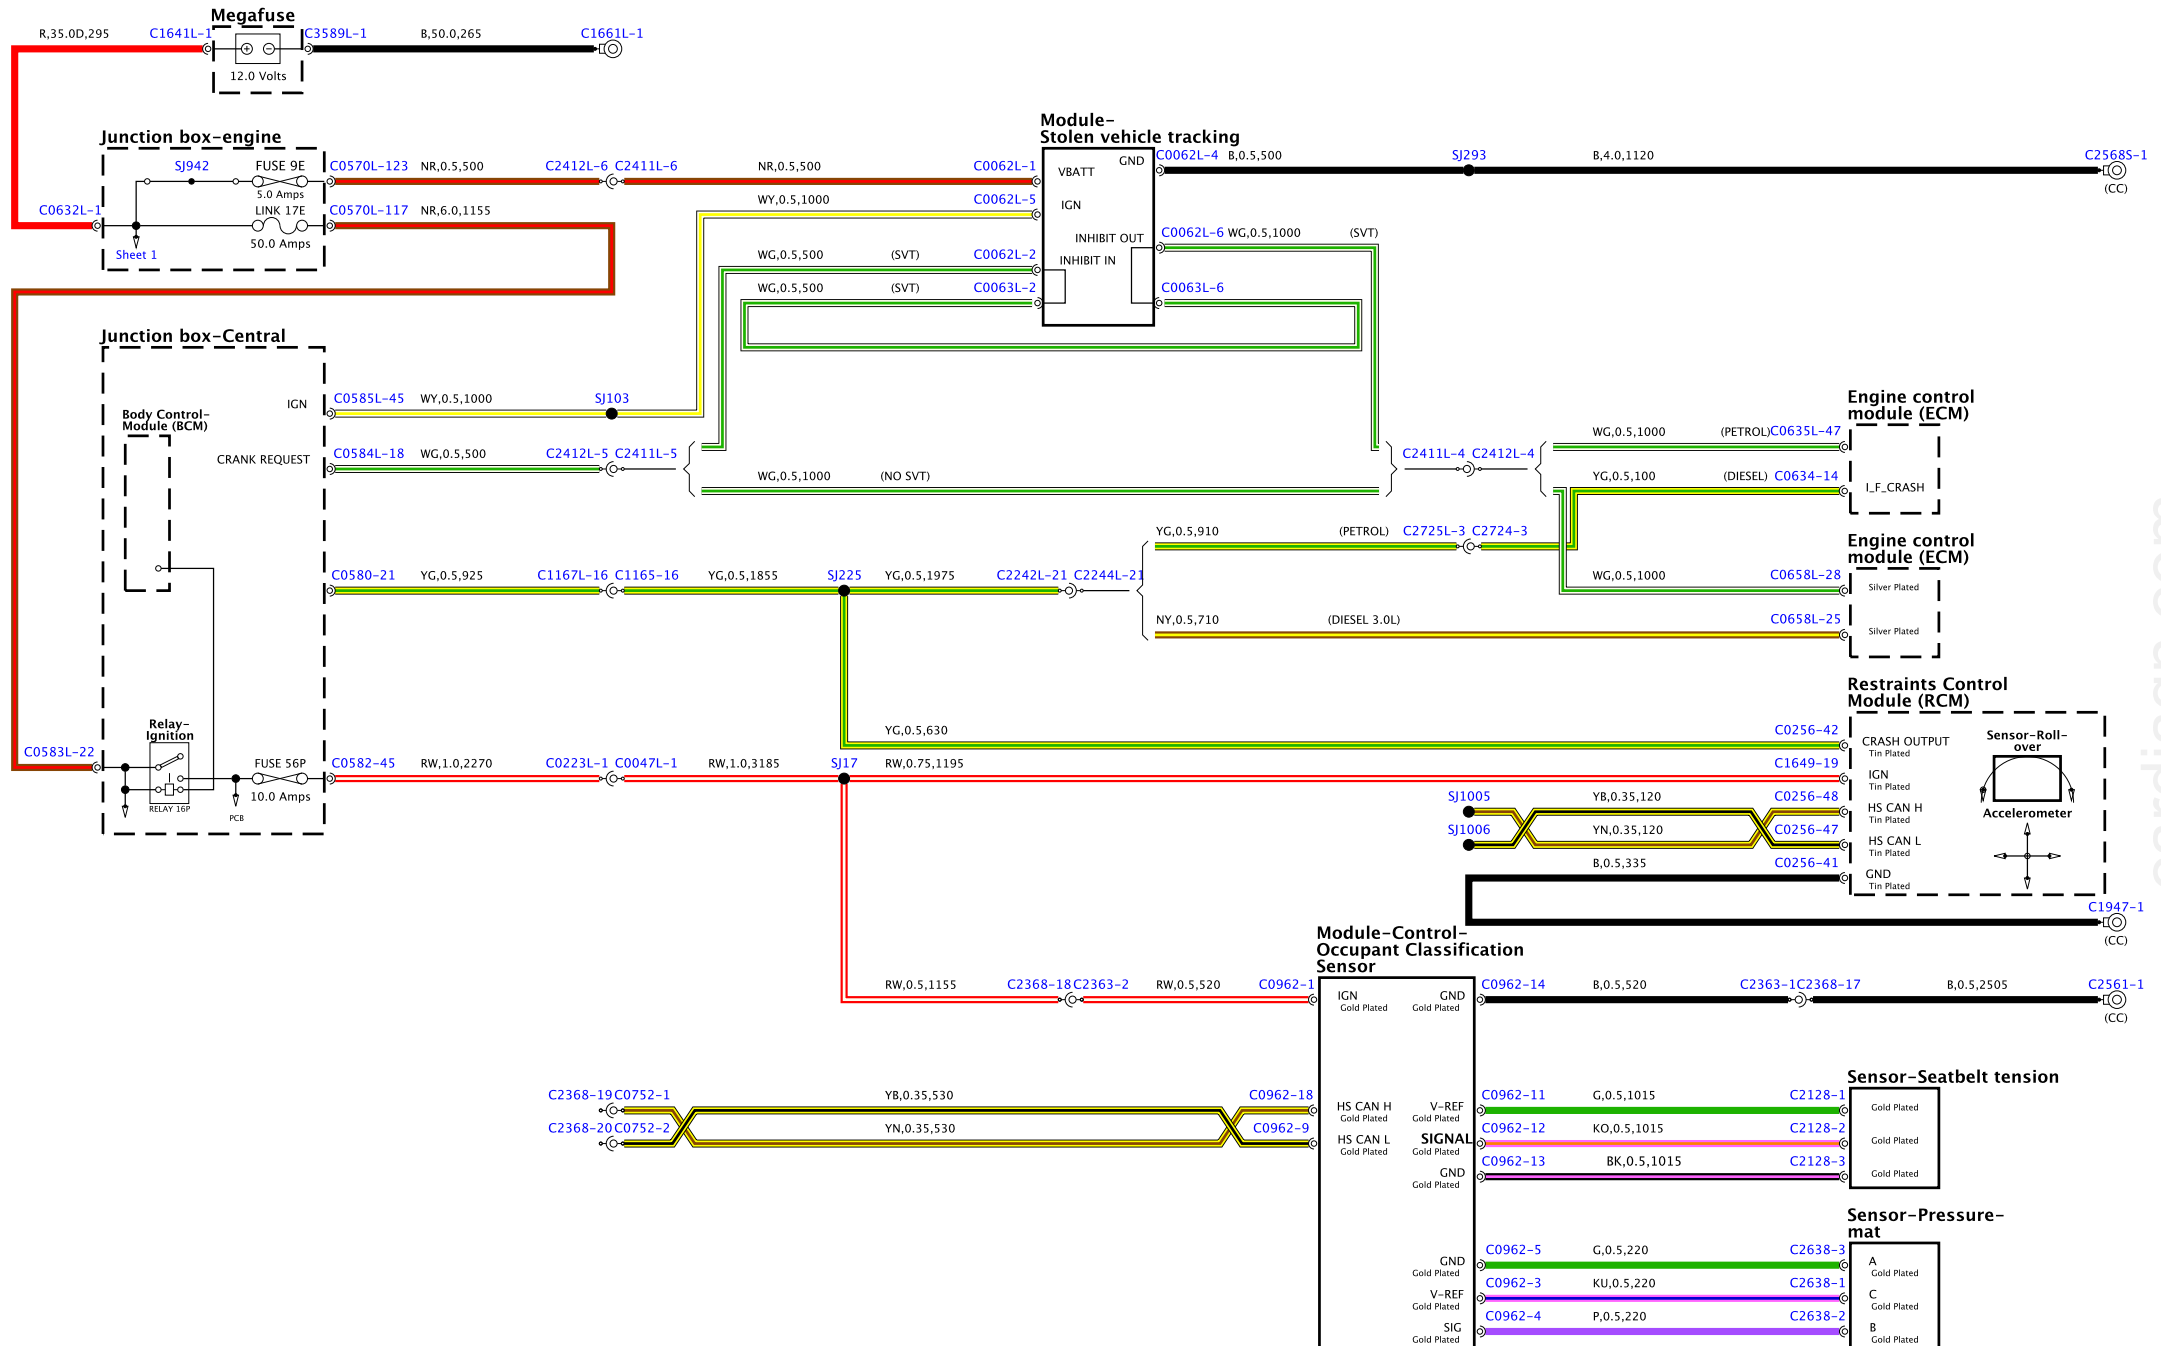

Sensor-Front impact-Left side




Sensor-Side impact-Rear-Left




Sensor-Side impact-Rear-Left




Air bag-Side-Left




Air curtain-Side-Left




Air curtain-Side-Left





Pre-tensioner-Driver



ABS module



Restraints Control Module (RCM)

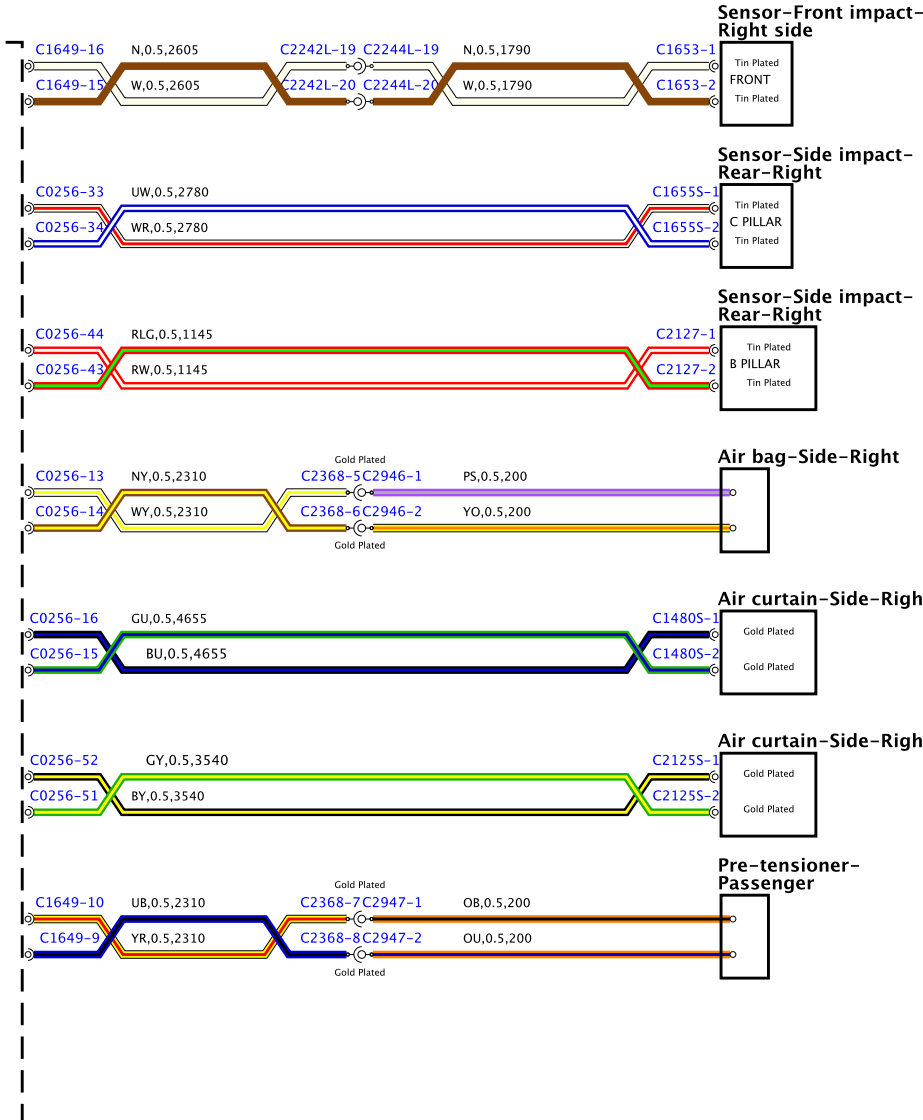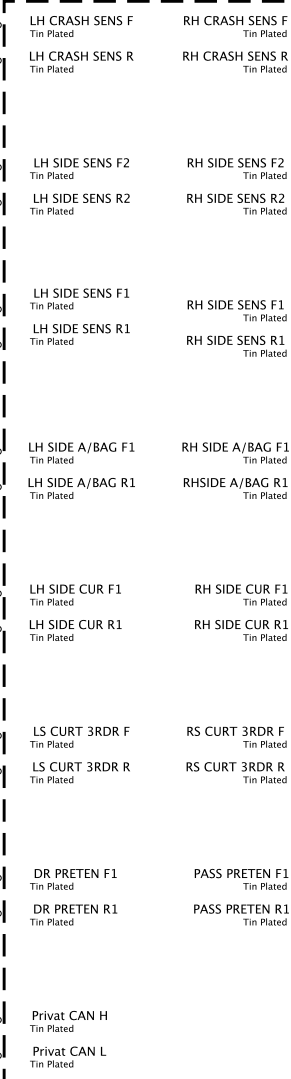

Sensor-Front impact-Right side




Sensor-Side impact-Rear-Right



Sensor-Side impact-Rear-Right



Air bag-Side-Right




Air curtain-Side-Right





Air curtain-Side-Right




Pre-tensioner-Passenger



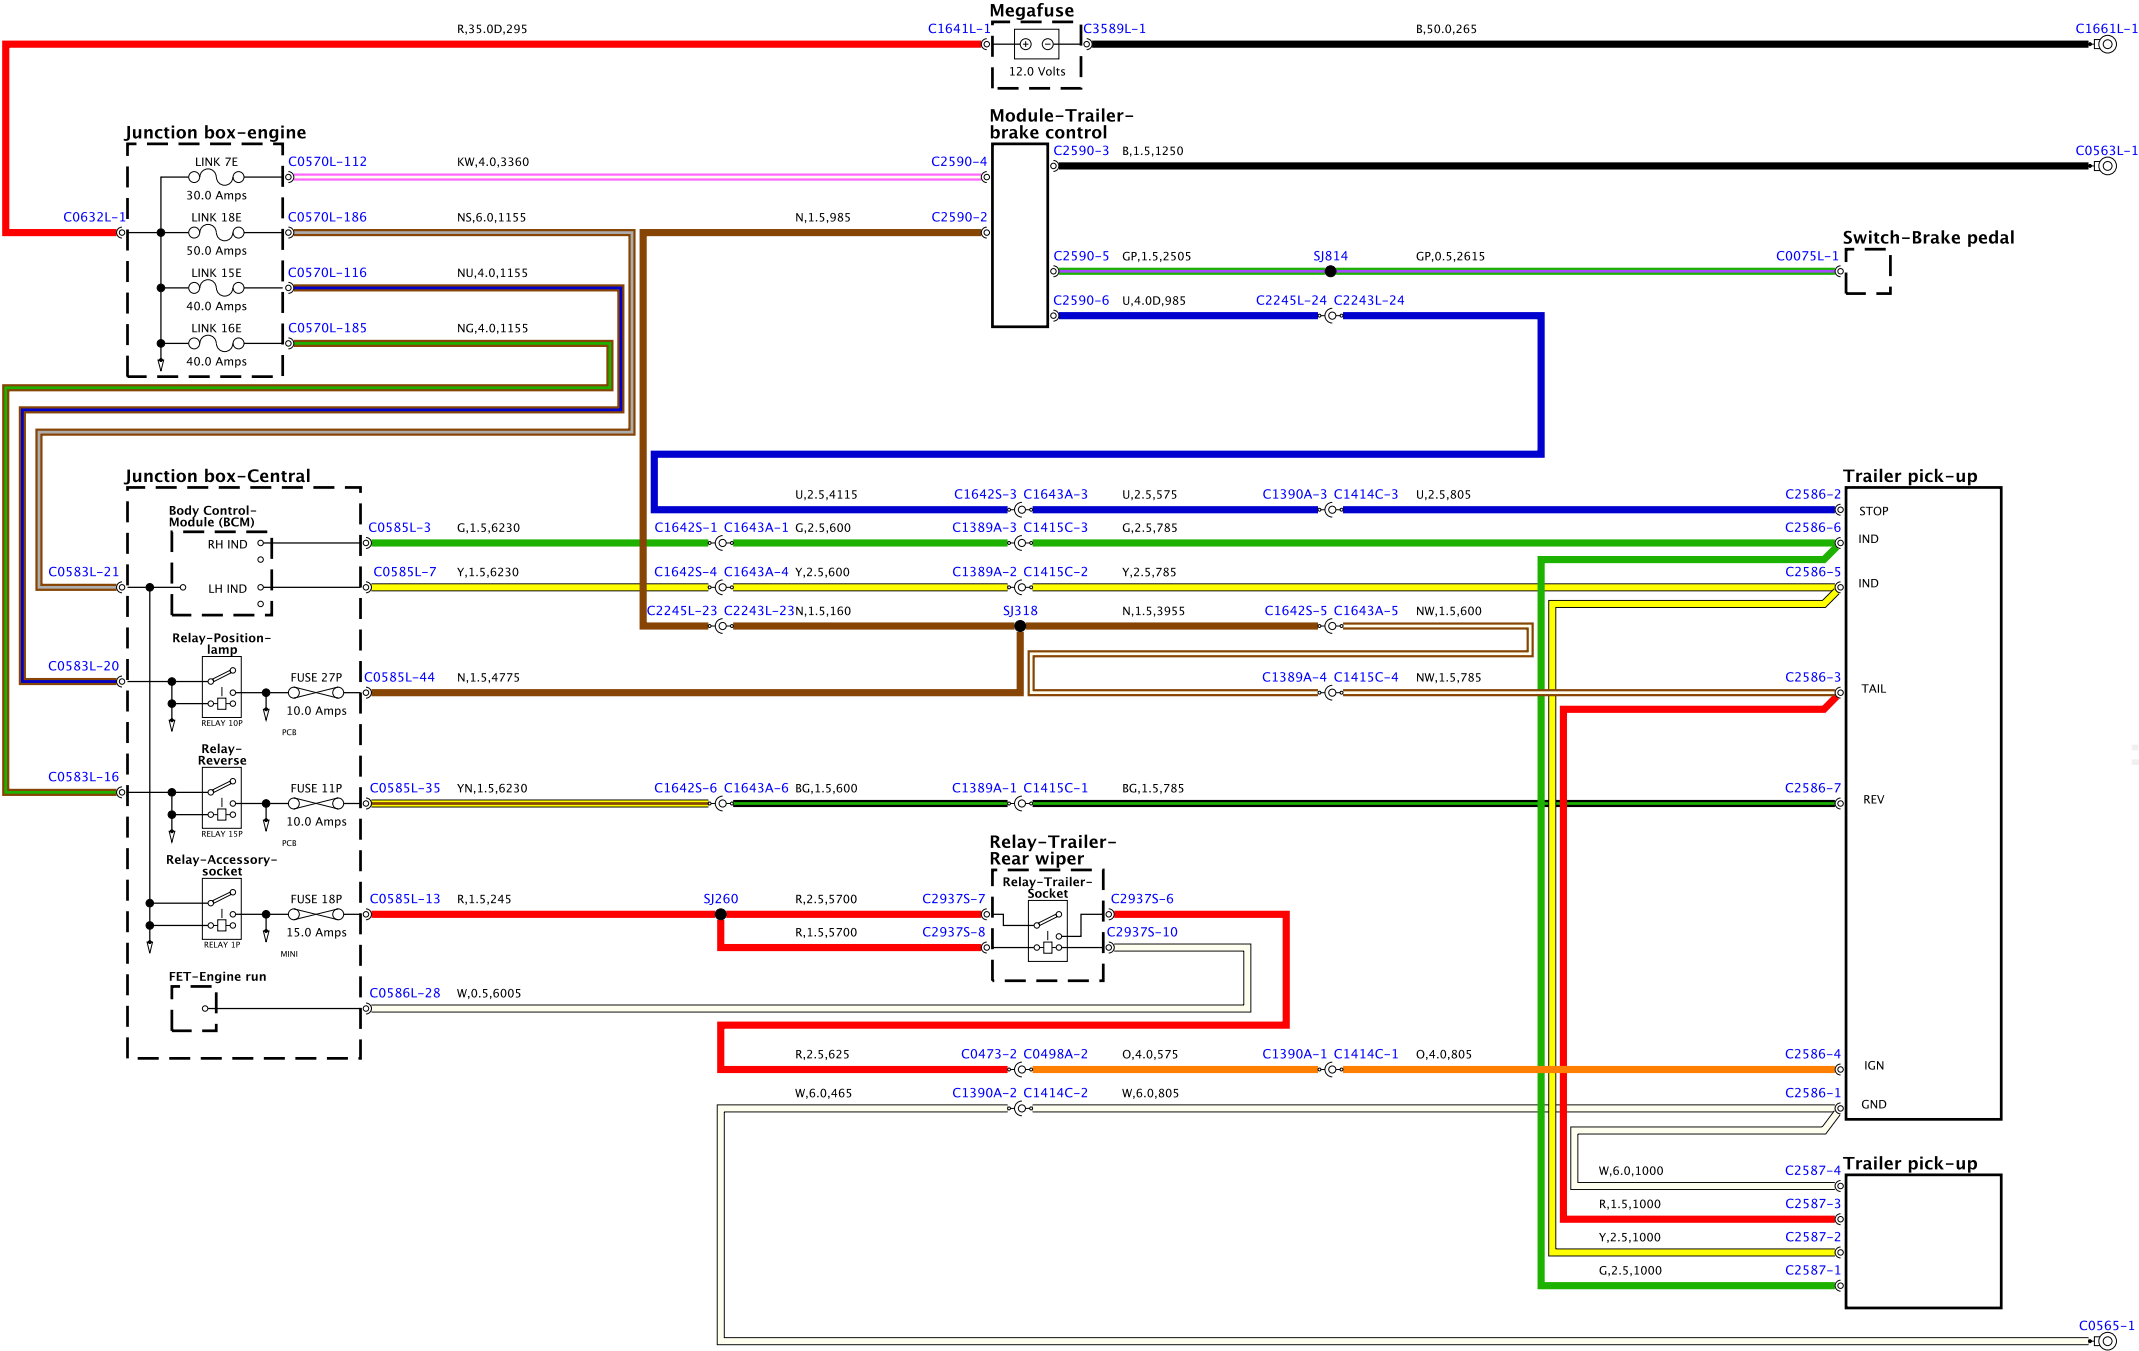

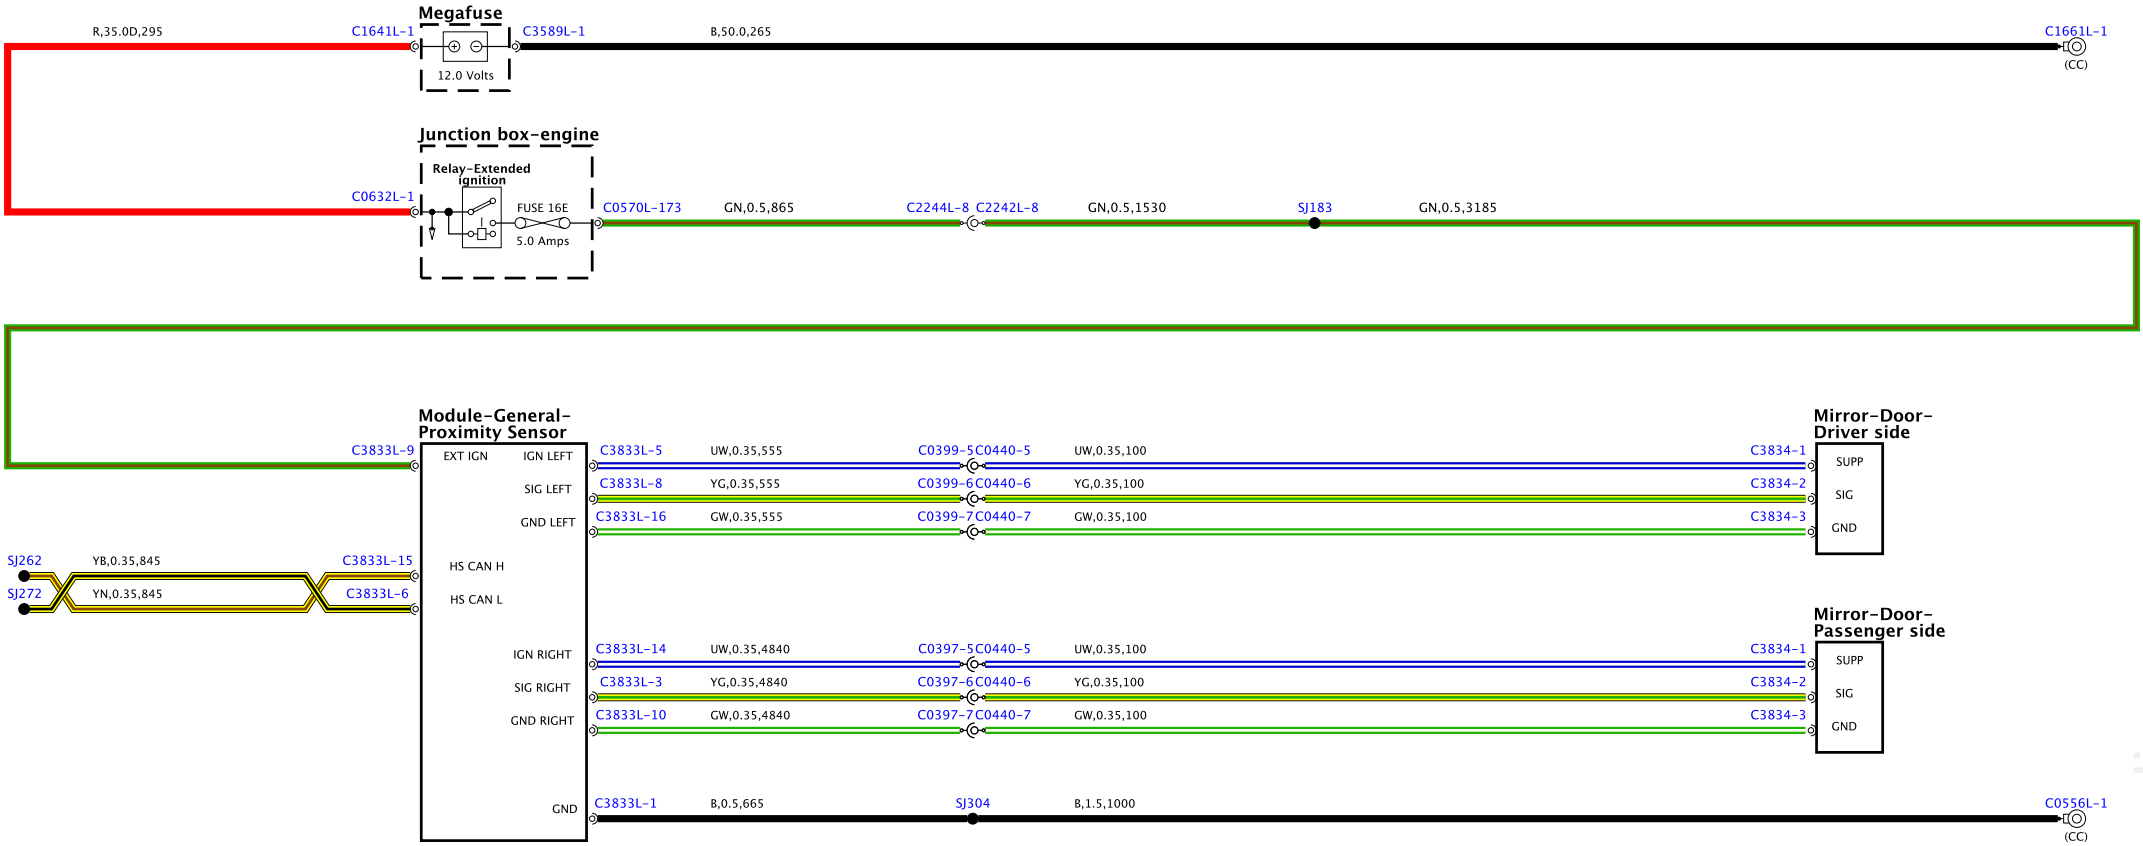

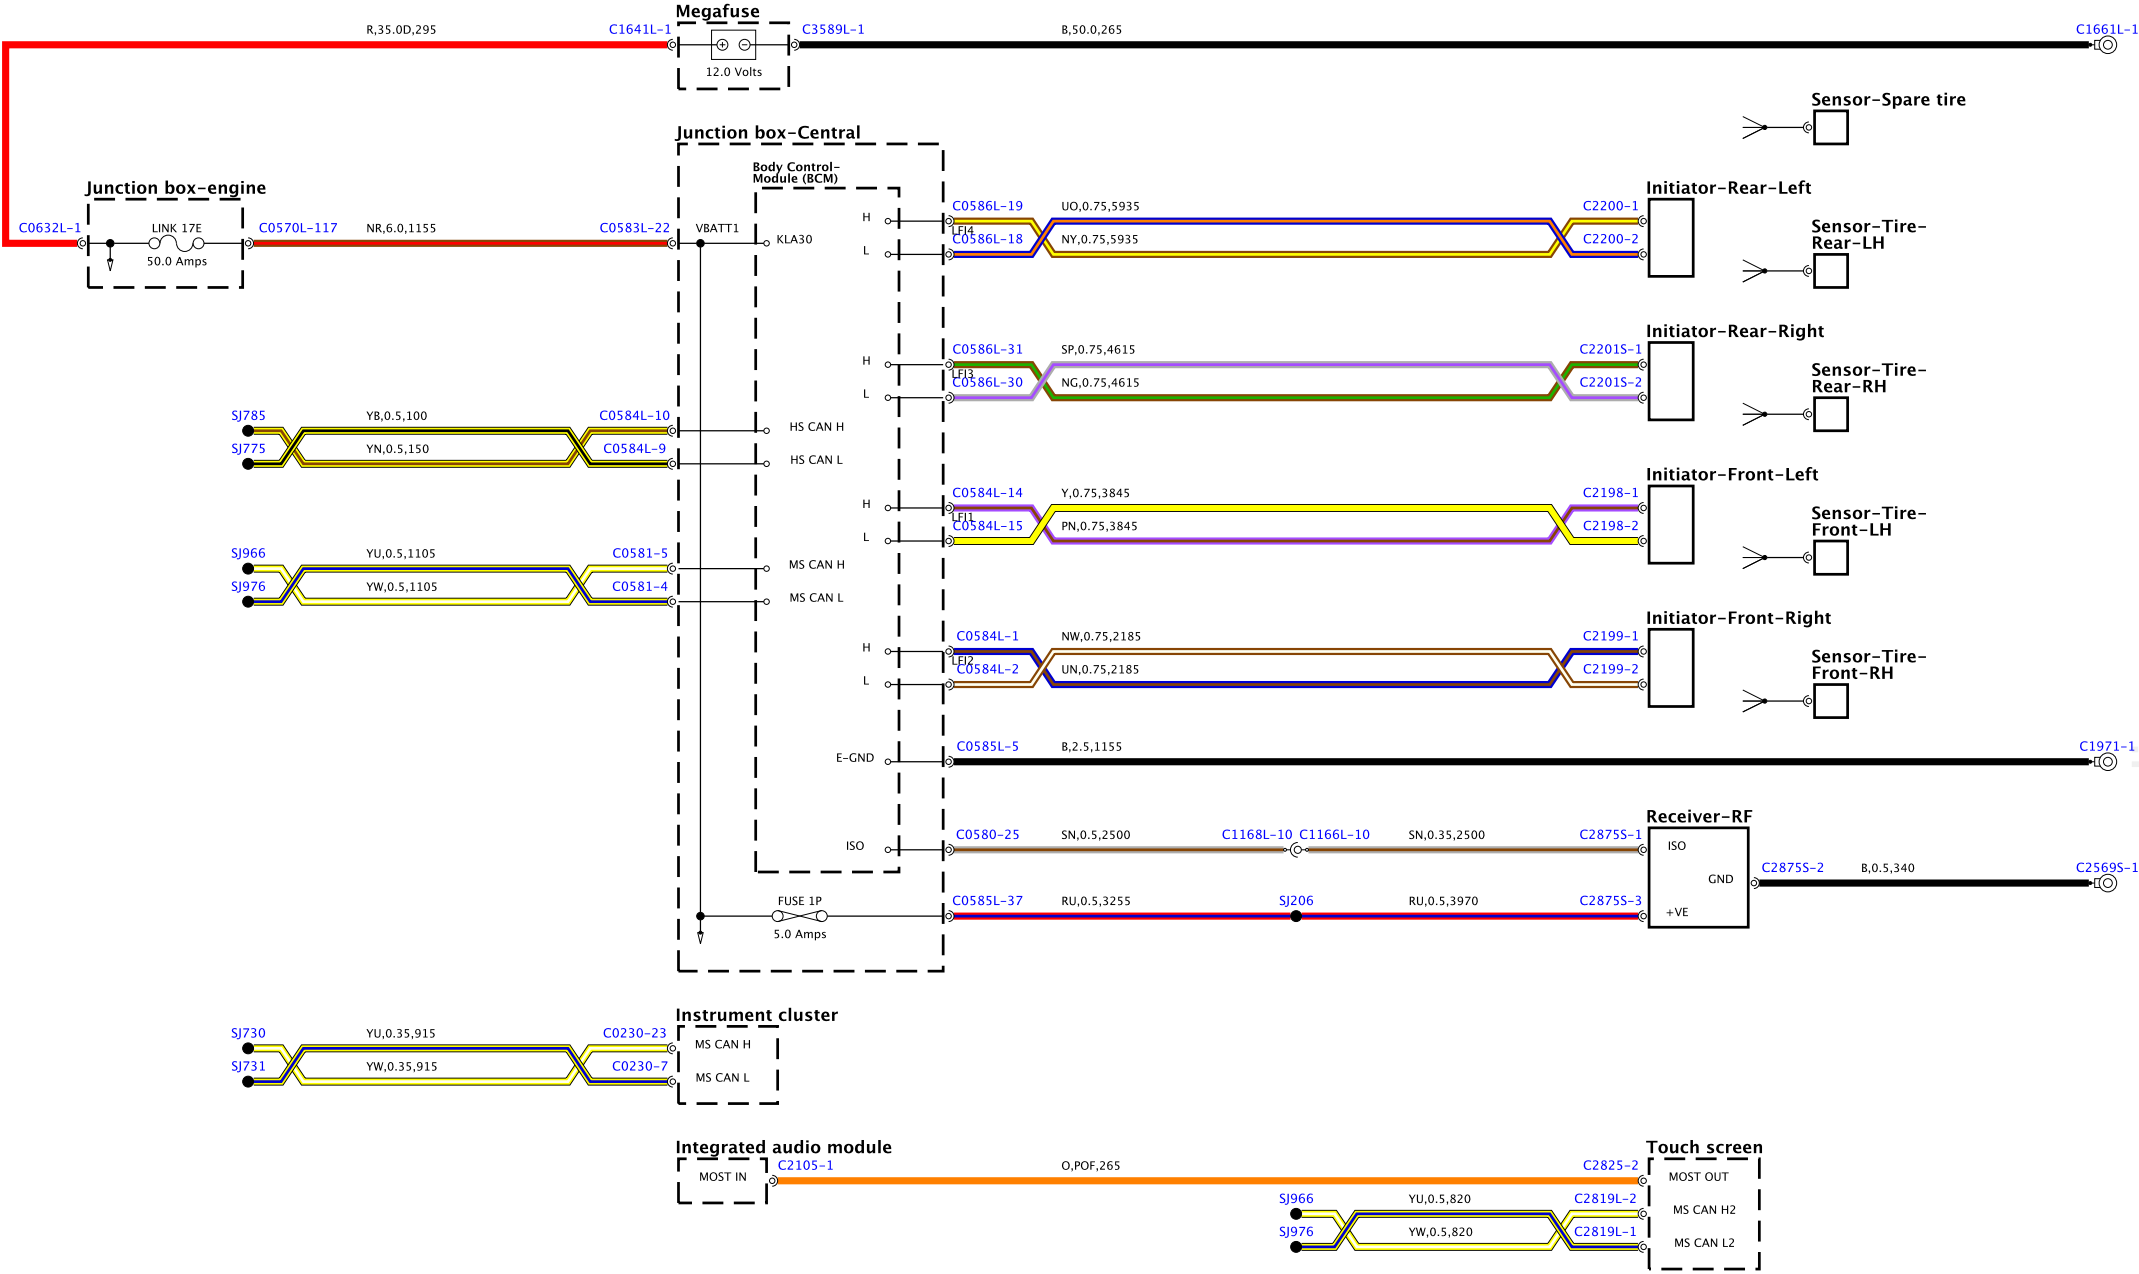

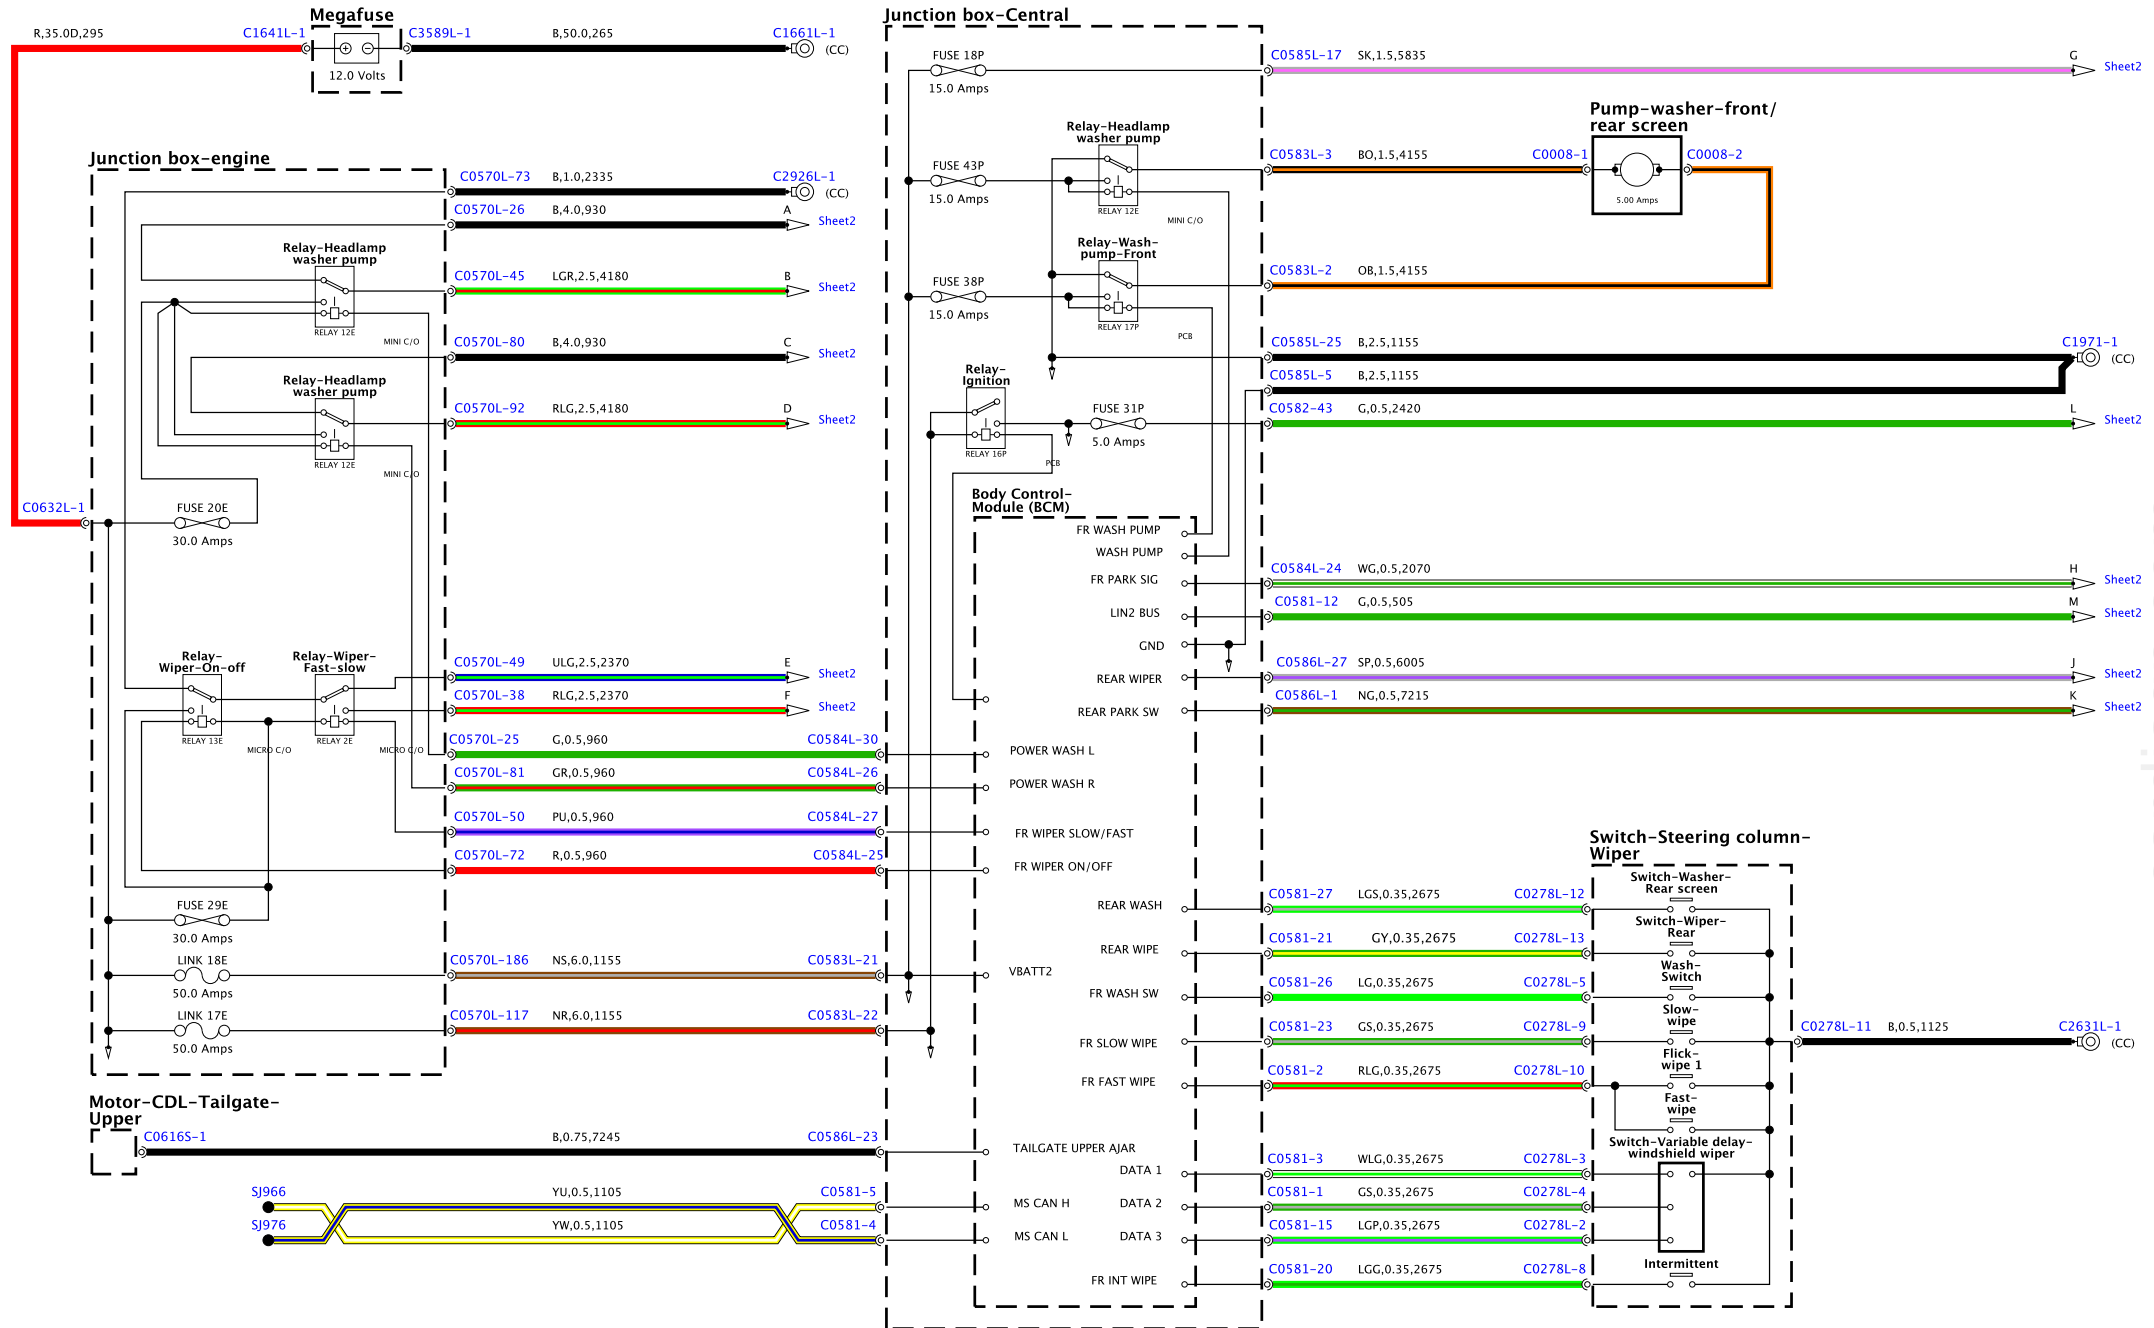


FIG22-70133-A-A-02-02-Service (0.310-15MY-RD)

